 
 
 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	MyChoi ce		Di spl ay / Medi a
	Cl ock		Sl eep / Ti mer
	Theme Tv		Shi ft + Di spl ay / Medi a
	Channel GRI D		Shi ft + D. Menu / Top Menu
	Gui de		Gui de / EPG / - / -
	Smart TV		Smart / Li st
	Source		AV / Input / RDS
	TV		TV/ Radi o /
	Format		Pi ctur e / Form at
	Home		Menu / Home
	Pl ay		Pl ay / Sl ow
	Pause		Pause / Step / Freeze
	Li st		Shi ft + Smart / Li st
	Up		Up
	I nf o		I nf o / Angl e
	Left		Left
	OK		OK
	Ri ght		Ri ght
	Adj ust		D. Menu / Top
	Down		Down
	Opt i ons		Set up / OPT /
	Back		Back / Ret ur n
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol -		Vol -
	Mut e		Mut e / Di mmer
	Vol +		Vol +
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yel l ow		Yel l ow / You Tube / Repeat
	Bl ue		Bl ue / Pri ne Vi deo / Random
	1		1
	2		2



