

KMT说明书 折页 128g双铜 尺寸: 89*127mm

anko

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1 . Rated 5V d.c. 1A .
- Marking information is located at bottom of the unit.
- Please note the product working temperature is : 0-40 °C .
- This TWS earphones shall be charged by the supplied charging unit only.

EARPHONE TWS


Operating instructions

Includes:

- TWS earphone
- Charging cable
- User manual



Function overview:

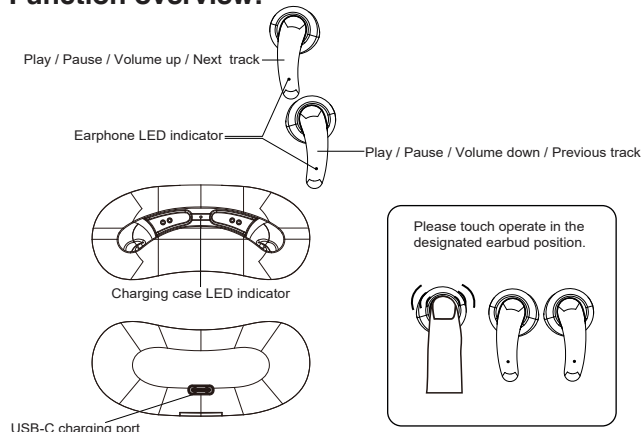

How to use the earphone : Specifications:

Model No : 43277414

Bluetooth Version: V5.3

Function Operation

Play / Pause : Touch either L/R earbud

Siri : Triple-touch either Left or Right earbud

Previous : Long touch Left earbud

Next : Long touch Right earbud

Volume up : Double-click Right earbud

Volume down : Double-click Left earbud

Power ON / OFF

Power ON : Removing Earphones from charging case will automatically turn them on

Power OFF : Placing Earphones into charging case will automatically turn them off

Note :

The earbud will automatically turn off in 3-5 mins without any connection.

Pairing the Earphones with Bluetooth® devices

- ◆ Go to "Bluetooth" Settings on your Bluetooth device (phone, tablet, etc.)
- ◆ Turn the Bluetooth ON at your device. Open the charging case and remove the earphones, they will automatically turn on. The LED indicators on the left earbud flash blue and red as they already automatically sync to each other and a voice prompt "Connected" alerts, and they're ready for connection with your device.

On your Bluetooth Device, select the pairing name on the list of available devices, select pairing name : **KM 43277414**.

- ◆ The Earphone LED indicator will slowly flash blue once connected, and a voice prompt "Connected" will alert again when connected successfully.

- ◆ Trouble shooting tip: if the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.

Pairing between left and right earphones

If the connection between the left and right earphones is lost, put both earphones back inside the charging box, close it and wait a few seconds before reopening. The earphones will automatically re-connect to each other.

If the process just described does not work, disconnect the earphones from your device, wait a few minutes then reconnect them (the earphones must be placed inside the charging box). For both procedures, it is necessary that the earphones inside the charging box are charging, so make sure that the charging box has a sufficient charge level to ensure the charging of the earphones.

Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, double-click the earphone . To end a call, double-click the earphone when finished. To decline an incoming call, press and hold either earbud for 1 seconds.

Playing music

Click either the left or right earphone once to pause playback, click either earphone once again to resume playback. Long Press the Left earbud for 2 seconds to play previous track. Long Press Right earbud for 2 seconds to play next song.

Battery Charging

When using for the first time, charge the battery to maximum capacity. To recharge, plug the charging cable into the charging port. The flashing Red light at the top of the charging box indicates that charging is in progress. When the Red light turn solid, charge is completed for charging box. When the earphones are placed inside the charging box, charging will begin and a Blue light indicates the charging case and a red flashing light will light up on each earphone. When the light off, the earphones will be fully charged.

Charging voltage: D.C 5V

Earphone charge time: 1.5 hours

Charging case battery capacity: 250mAh

Charging case charge time: 2 Hours

Frequency response: 20Hz-20KHz

Rated power: 3mW

Working Distance: 10 meters

Max power: 5mW

Music Time: 4 Hours

Charging port: Type-C

Talk time: 3.5 Hours

Standby time: 40 Hours

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license