 


Fanttik

Fold V10 Ultra Deluxe

Cordless Handheld Vacuum Cleaner

 
User Manual

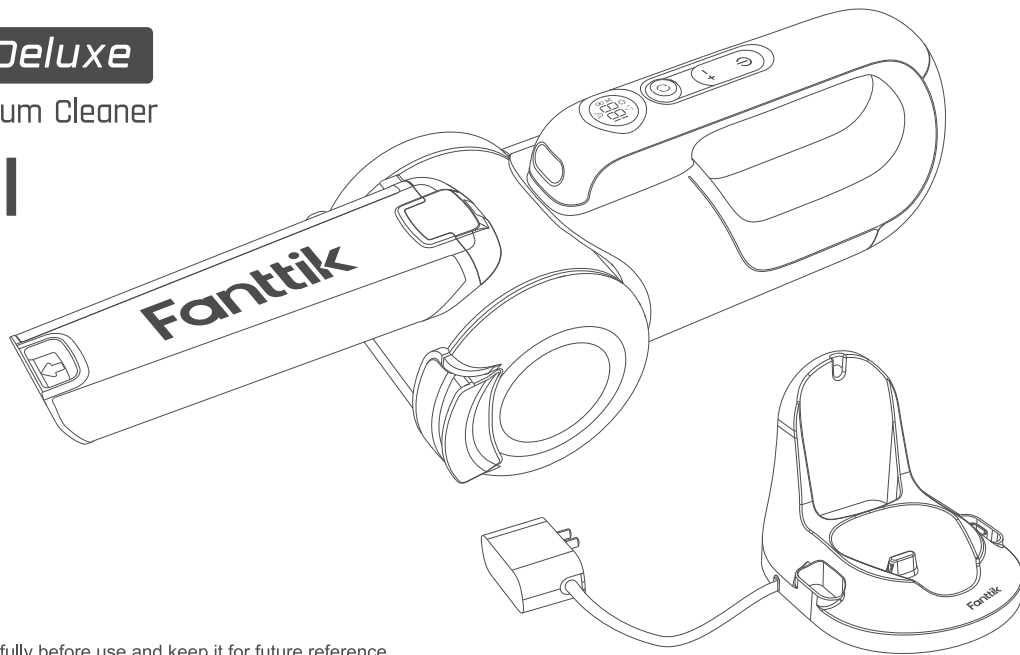


Please read this instruction manual carefully before use and keep it for future reference

Quick Start Guide


How to assemble

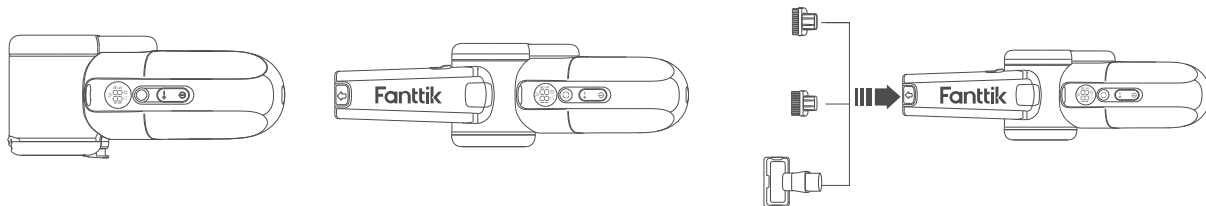

Cleaning

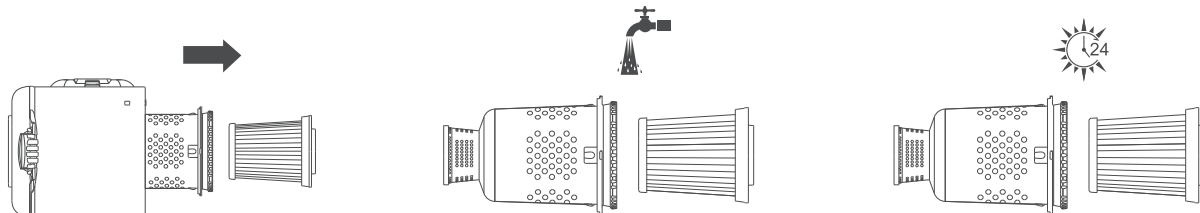 


Charge

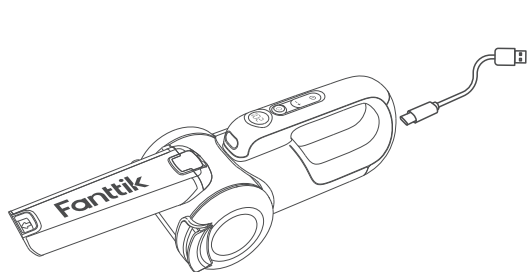 


USB-C INPUT: 5V \Rightarrow 3A / 9V \Rightarrow 2A / 12V \Rightarrow 1.5A(PD18W)

 CHARGING BASE INPUT: 9.5V \Rightarrow 1.5A

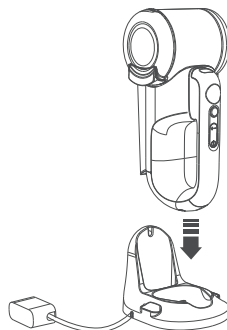

Charging Base

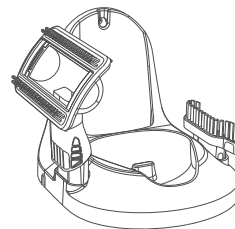 

Thank you for choosing Fanttik

Thank you for purchasing Fanttik vacuum cleaner. This is a cordless handheld vacuum cleaner with strong suction and multi-functional brush

CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	03
2.PRODUCT OVERVIEW	05
3. PACKAGE CONTENTS	06
4. HOW TO USE	07
5. CLEAN AND MAINTENANCE	11
6. WALL MOUNTING	12
7. LED INDICATOR	13
8. TOXIC AND HAZARDOUS SUBSTANCES	15
9. TROUBLESHOOTING	16
10. SPECIFICATIONS.....	17

1. IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire or injury:

All the safety and operating instructions should be read before use and should be followed to avoid injury, fire, electric shock, property loss, and other risks.

 
1. These appliances are intended for household use only.
2. This product has an internal battery. Do not put the device into fire or heat it. Do not charge, use, place it under high temperature conditions, and do not store it in the car in case of overheating, ignition or explosion.
3. It is recommended to charge, use or store the device between 32°F and 104 °F.
4. People with physical, mental or sensory disabilities should not use the device for your safety.
5. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
6. Do not use the device with wet hands to avoid injury.
7. Do not use this device to vacuum up any liquid such as water and cola.
8. Do not vacuum smoking or burning things such as cigarette butts, matches, or hot ashes.
9. Do not vacuum hard or sharp objects to avoid injury when cleaning the dust bowl.
10. Do not use scented products on this equipment to avoid fire caused by the flammable chemicals in them.
11. Do not modify or repair the internal battery.
12. Do not use it in heated or moist places such as heating room and bathroom.
13. When the vacuum cleaner's service life is over, please give it to the recycling location designated by the government because the internal battery cannot be taken out.
14. If the charging wire is damaged or broken, please stop using it immediately.
15. If you don't use it for a long time, please unplug the charging cable after full charge and place it in a cool dry place. Charge it at least once every 3 months to avoid battery loss.
16. If the device needs to be transported, it is recommended to use the original packaging box and keep it in the "OFF" state.
17. Unplug from outlet when not in use and before servicing.

18. Do not allow to be used as a toy. Close attention is necessary when used near children.
19. Use only as described in this manual. Use only manufacturer's recommended attachments.
20. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
21. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
22. Do not put any object into openings. Do not use with any opening blocked.
23. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
26. Do not use without dust bag and/or filters in place.
27. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
28. Recharge only with the charger specified by the manufacturer.
29. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
30. Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
31. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
32. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
33. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
34. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
35. Use only with Listed/Certified Information Technology (Computer) Equipment, or Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit.
36. This appliance contains batteries that are non-replaceable.



SAVE THESE INSTRUCTIONS

Please save the safety and operating instructions. We assume no responsibility for your property loss caused by improper use.


2.PRODUCT OVERVIEW

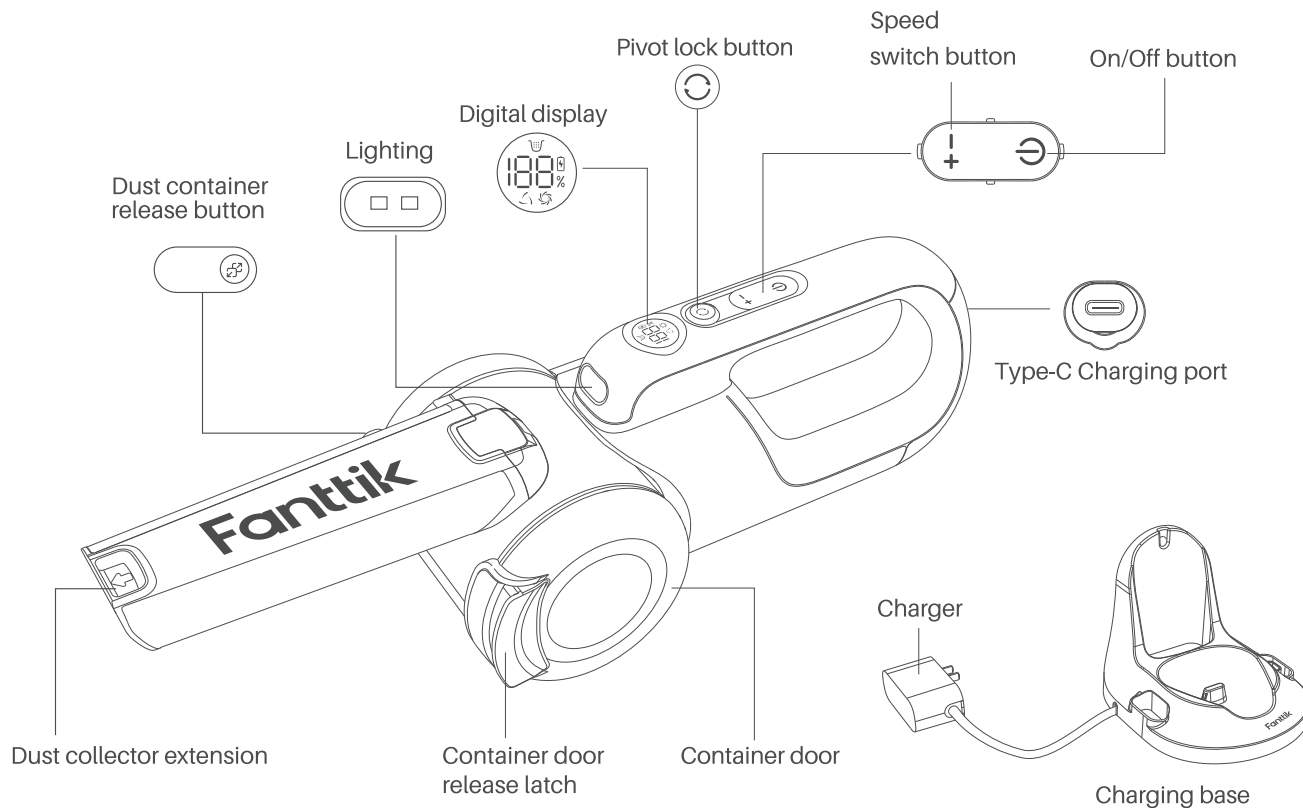

  
3. PACKAGE CONTENTS

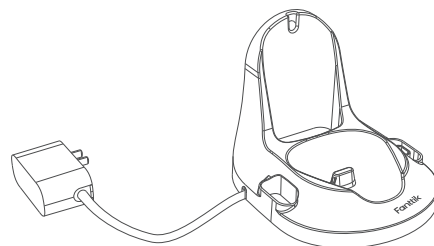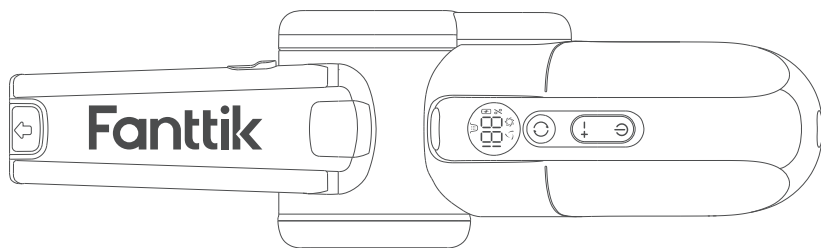


Charging base

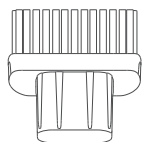 

Soft Bristle Brush × 1

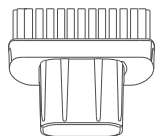 

Hard Bristle Brush × 1

 


Replacement Filter × 1




Filter Brush × 1



 
USB-C Cable × 1



User Manual × 1

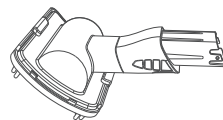 


2in1 Multi-Surface Brush × 1

 

Wall Plug/Screw x2

4. HOW TO USE

 
● How to assemble

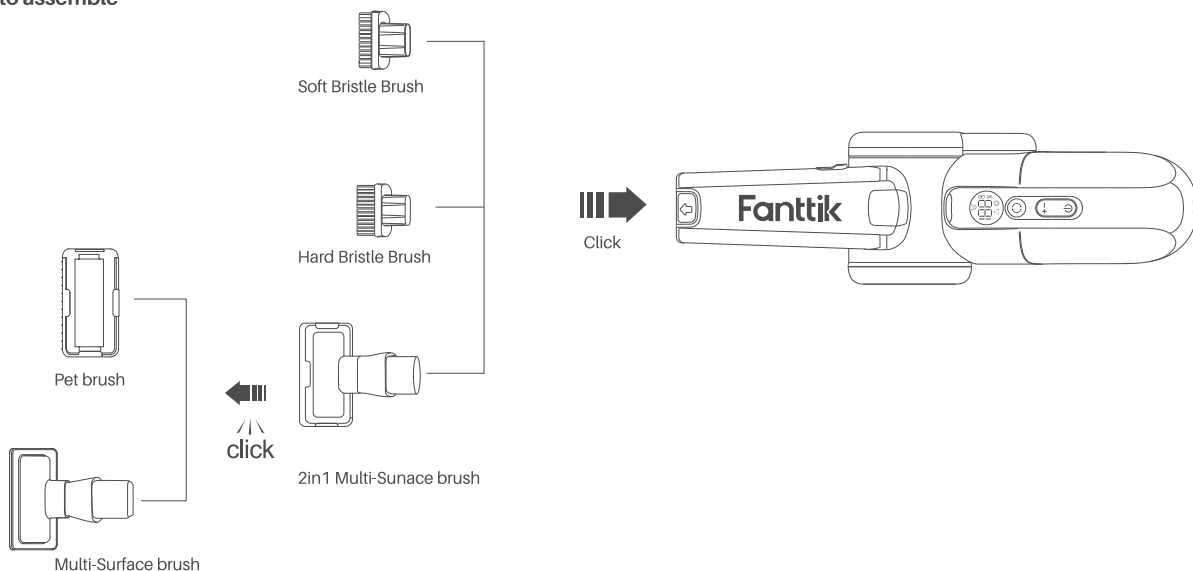

Take out the main machine and press the Pivot lock button to adjust the dust collector to the desired angle. Select the accessories(hard bristle brush and soft bristle brush) as required and install it on the front port.

● How to charge

 
1. Open the silicone cap on the rear housing.
2. When using TYPE-C charging, please prepare a 5V 3A/9V 2A/12V 1.5A(PD18W) power adapter(not included), and then connect the type-c charging cable (included) for charging. The type-C charging cable can only be used for charging. It takes about 2-2.5 hours to fully charge.
3. When using Charging base charging, after folding the vacuum cleaner, placed it the groove of the charging base, There is a convex pad in the groove for aligning the machine unit, and you can start charging after you put it down, The digital screen will display the charge. It takes about 3-3.5 hours to fully charge.
4. You can use the device in high speed mode for about 13 minutes or in low speed mode for about 35 minutes after full charge.
5. The lithium-ion battery must be FULLY charged before first use and after long-term storage.
6. If not used for a long time , It is recommended to charge the device every three months

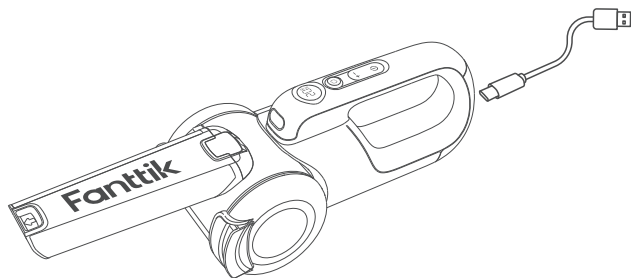


USB-C INPUT: 5V \blacksquare 3A / 9V \blacksquare 2A / 12V \blacksquare 1.5A(PD18W)

CHARGING BASE INPUT: 9.5V \blacksquare 1.5A

 
● How to use charging base

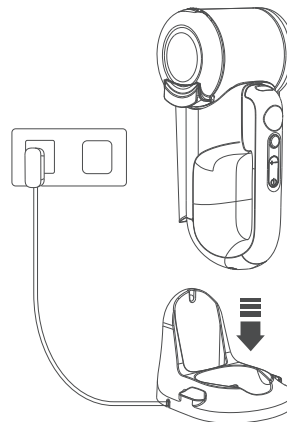


● V10 different usage states

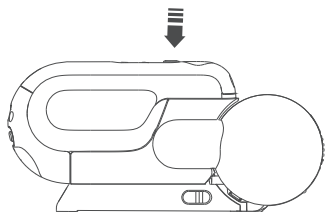 

In the storage state

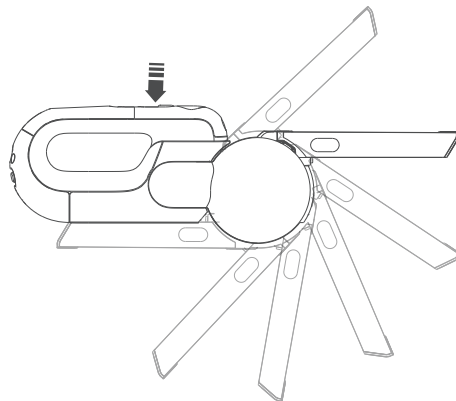 

 
In use, Dust collector angle can be adjusted as required. There are a total of seven angles to choose.

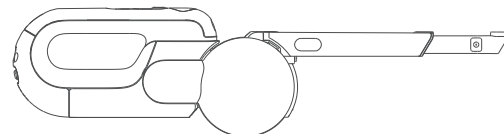

In special circumstances, the dust collector extension tube can be pulled out for use

- When using, press the Pivot lock button, rotate to the appropriate angle according to the need, and then select a different brush, and install on the port for use. If necessary, the dust collector extension tube can be pulled out for use.

 ● How to assemble

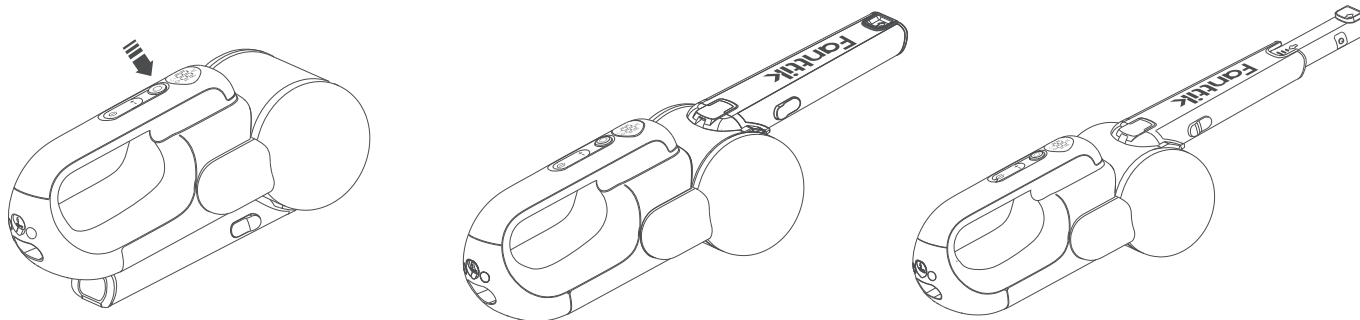

Take out the machine and press the Pivot lock button to adjust the dust collector to the desired angle. Select the brush as required and install it on the nozzle. Use a different brush to clean as dust collector.

On/Off button

 
Press to turn on (light on), then press to turn off (light off)

Speed switch button:


Short press the speed switch button to switch to high speed and press again to switch back to low speed (long press the button for 1.5 seconds to turn off the lamp).




5. CLEAN AND MAINTENANCE

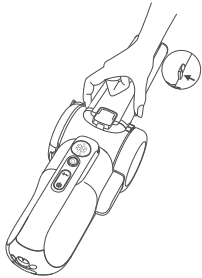

 
1. Press the dust container release button

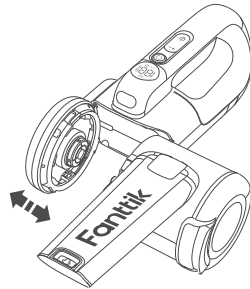

 
2. Take down the SA Bowl sub-assembly

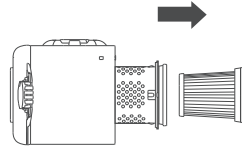

 
3. Take down the filter system

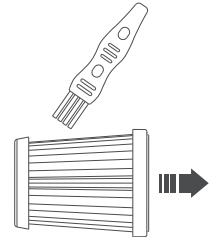

 
4. Pull out the filter and clean the filter and pre-filter with a cleaning brush.

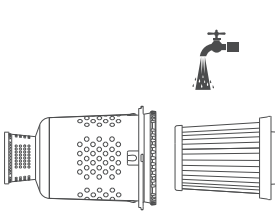

 
5. Clean the pre-filter and filter with clean water

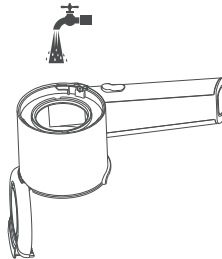

 6. Wash or clean the SA container & Dust collector

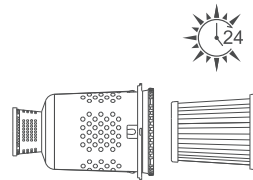

 7. Wait for the filter system dry completely before putting them back to SA container & Dust collector

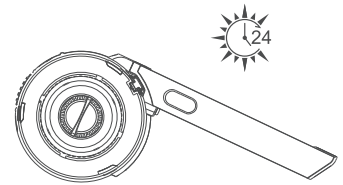

8. The SA container & Dust collector completely dry before putting it back.

Do not wash the unit or get the charging port wet. The filter element is recommended to be replaced every 3 months.

6. Wall Mounting

 
 
 
The product can be attached to a wall to provide a convenience storage and charging point for the appliance.

When fixing to a wall, make sure that the fixing method is suitable for the wall type and is appropriate to the weight of the appliance.

Mark the location of the screw holes (within reach of an electrical outlet for charging the vac while it is on the wall bracket.)





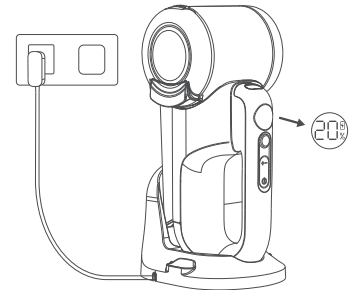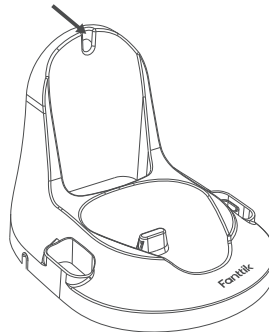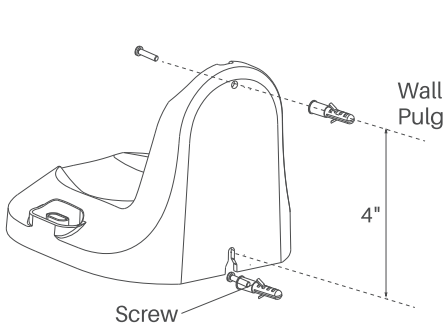




The wall-mounted charging base needs to be installed in a cool and dry place that is near a power outlet but not exposed to direct sunlight.






- The charging base is intended for indoor use only
- Use the appropriate mounting hardware for the type of wall to securely install the charging base.
- Make sure the installation area is clear of any pipes such as gas or water lines, and air ducts, electric wires and cables, or drainage lines.
- It is recommended to hire a professional to install the docking station and to use protective clothing, goggles, and other protective materials where necessary.
- Measure the distance between the two screw holes on the wall mounting
- Use a 6mm drill bit to drill two holes in the wall at this distance, and insert the wall plug into the holes
- Screw one screw into the lower wall plug but do not tighten it, then hang the charging base on the first nail, and finally tighten the charging base with the second screw



The light will go out when charging is complete.

7. LED Indicator

Vacuum Cleaner	Status	Indicator	Notes
In working	Low speed		Light ring is ice blue and the low-speed indicator
	High speed		Light ring is green and the high-speed indicator
	Low battery		Battery icon turn red and flashes (battery power less than 20%)
	Under voltage		Cell under voltage, battery indicator 0% will flashes for 3 times and then the LED goes off.
	Filter sensor		Filter Sensor Whenever a filter is blocked and needs cleaning, the filter LED in the handle will illuminate. Clean fine dust from filter (see section on "cleaning and maintenance" in this manual)
	Full sealed		The filter LED in the handle will illuminate and unit goes off when the inlet nozzle is blocked.
	Error prompt		On/off button operation error.
	Error prompt		Battery hot or cold.
	Error prompt		Motor fault or overload current.

Vacuum Cleaner	Status	Indicator	Notes
In charging	In charging (<20%)		The light ring is ice blue and running during charging. The battery indicator is red and flashing when the battery power is less than 20%
	In charging (>20%)		When the battery power is more than 20%, the battery indicator will turns white color while battery power more then 20%.
	Full battery		Digital display shows the battery power increments by 5% . Battery indictor will turns white color while battery power more then 20%, the icon stays 100% for 60 seconds and then goes off.
	Error prompt		Charger fault.
	Error prompt		Battery hot or cold.

8. TOXIC AND HAZARDOUS SUBSTANCES

PRODUCT	HAZARDOUS CHEMICALS					
Handheld Vacuum Cleaner	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
	O	O	O	O	O	O

O Indicates all homogeneous materials' hazardous substances content are below the limit specified in the Standard 2011/65/EU.

X Indicates that the hazardous substances content in at least one homogeneous material of the component exceed the limit specified in the Standard 2011/65/EU.

X Indicates that the replacement of non-environmental protection substances cannot be achieved currently due to the global technology limitations, which will be gradually improved with the technical improvement.

9. TROUBLESHOOTING

If the following operations can not solve your problems, please stop using the device and contact the manufacture with

E-mail: support@fanttik.com

Problem	Possible Reason	Solution
The device stops working, 0% battery and battery icon flashing red three times	Under Voltage	Please charge the device
The device stops working and E3 flashes three times	Full sealed	Clean the air vent and filter before turning on the device
After pressing the power button, the device cannot be turned on, and the 0% battery and battery icons are flashing red	Under Voltage	Please charge the device
No indicator light when charging	The charging cable is loose	Plug in charging cable
	Fully charged	Unplug the charging cable
E1 flashes three times during charging	The adapter is incompatible with the device	Please use a 5V/3A or 9V/2A or 12V/1.5A (PD18W) power adapter to charge for Vacuum cleaner
E1 flashing three times during when use charging base	The time interval between charges is too short (take out and place down too quickly)	Reinstall the vacuum cleaner on the charging base
F4 flashing three times during when use charging base	There was a communication failure while charging	Reinstall the vacuum cleaner on the charging base

10. Technical Data

Items	Parameter
Model	Fold V10 Ultra Deluxe
Rated voltage	18.5V
Noise	79dBA
Size	304*135*145mm(folded)
	451*135*139mm(unfolded)
Weight(g)	1220
Battery capacity	5*2000mAh
Rated power	165W
Runtime	High speed≈13min/Low speed≈35min
Charging voltage	USB-C mode:5V/9V/12V DC(PD18W)
	Charging Base mode: 9.5V
Dust cap capacity	500mL

WARRANTY CARD

⦿ Your Warranty Includes

- 12-Month Coverage

Within 12 months of purchase, we will provide timely and effective online after-sales service. We will repair or replace any defective product (due to manufacturing fault) within the warranty period.

⦿ How to Return Your Fanttik Product

- Contact support@fanttik.com with your order number.
- We will issue you a return label for your return.
- Tear off the 'Return Details' page and fill in the details. Include this inside your return package.
- We will issue your replacement/refund on receiving the return package.

✉ support@fanttik.com

⦿ Return Details

In order to process your return as quickly as possible, we require the following information. Please fill out this form and include it in your return package.

Purchase Name:	
Order Number:	
Date of Purchase:	
Your Email Address:	
Place of Purchase:	

- ⦿ If your purchase was fulfilled by Amazon, please use Amazon's 30-day return service.

929-693-6066 MON-FRI 9AM-5PM (ET)

www.fanttik.com

support@fanttik.com

METASEE LLC

5205 Broadway #634 Pearland Texas 77581

Made in China

