


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

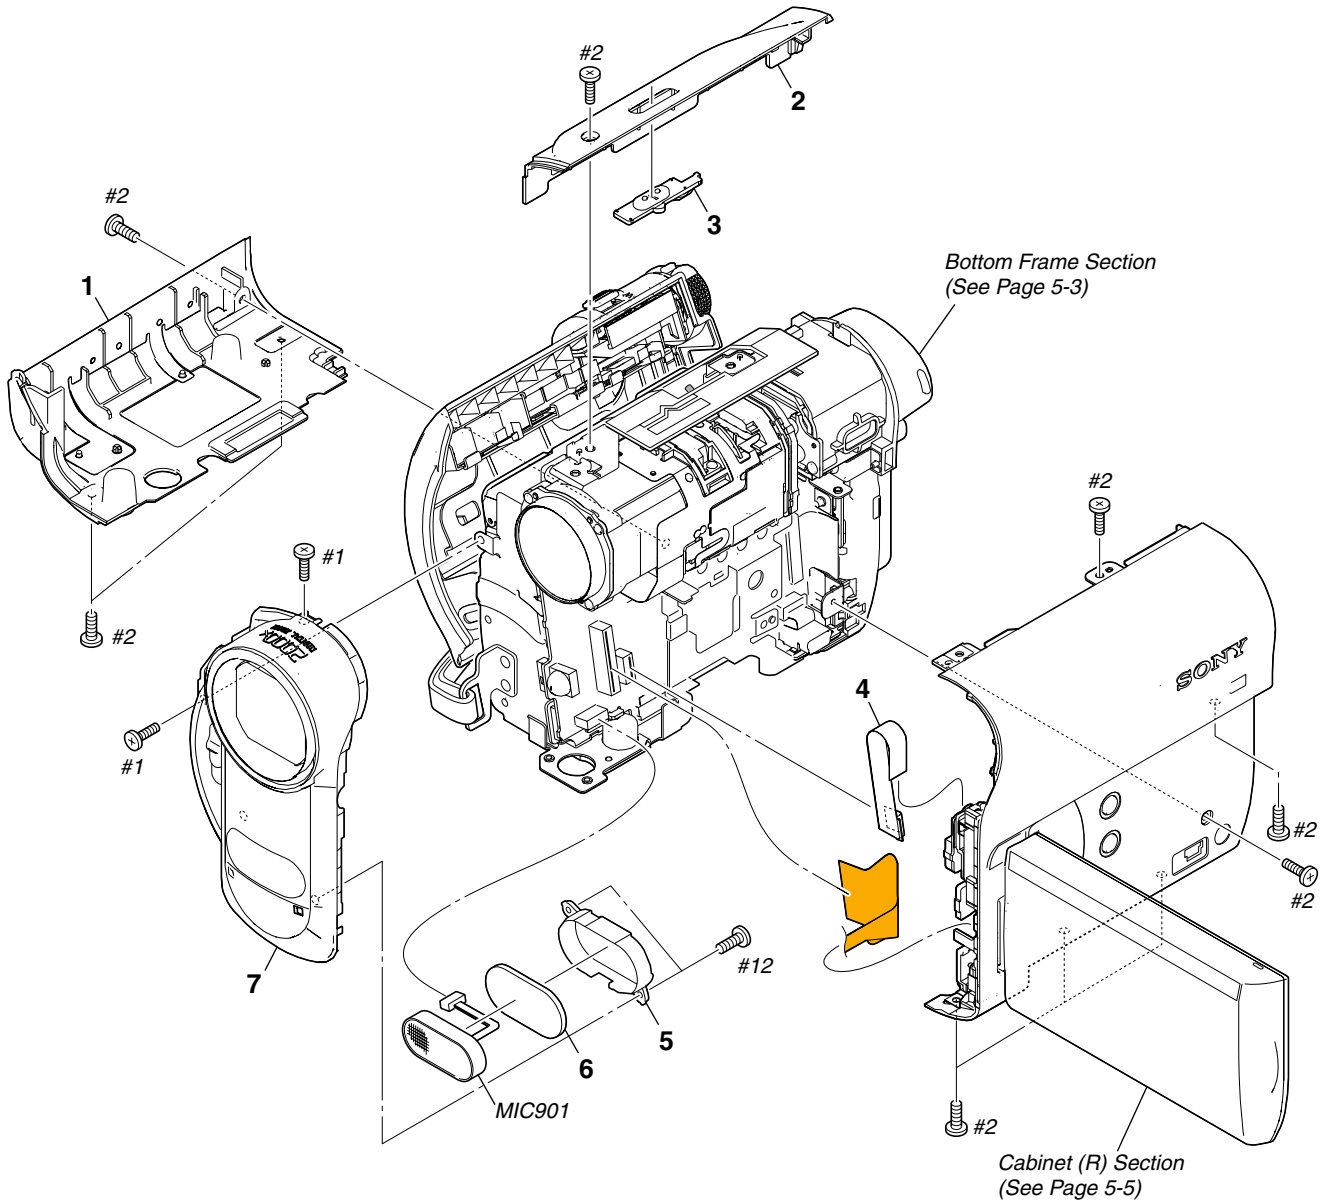


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. BOTTOM FRAME SECTION

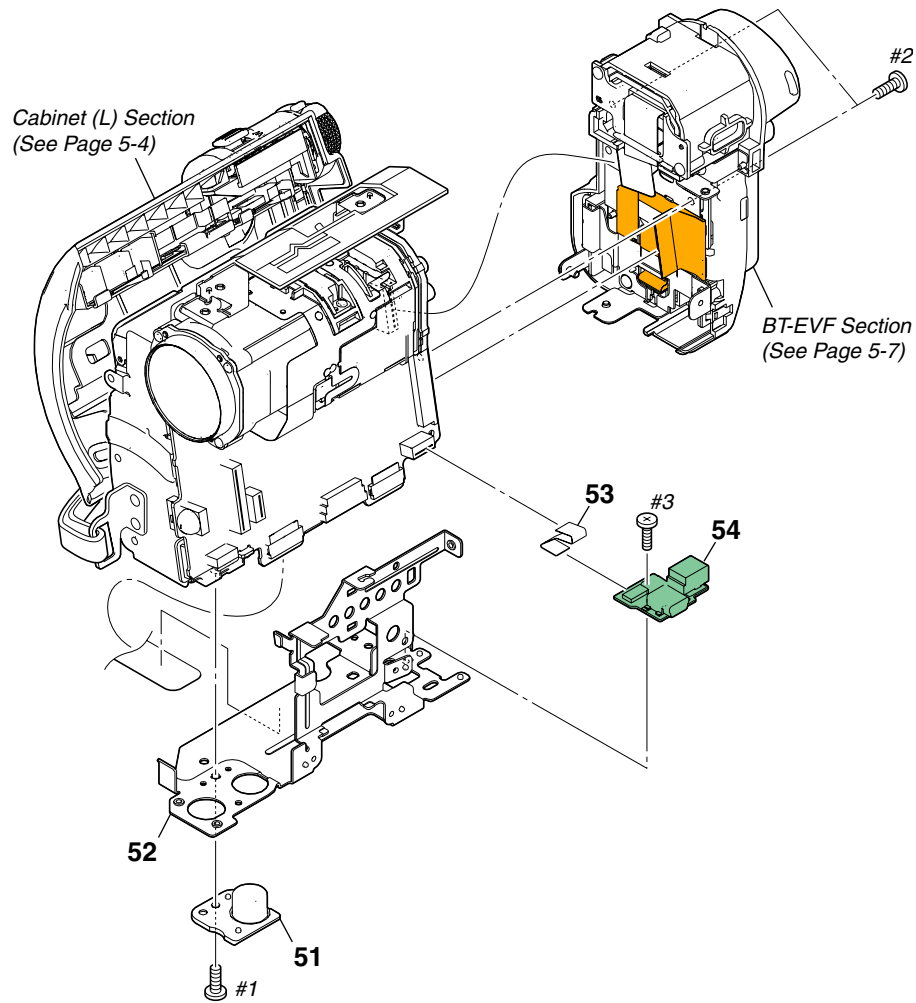


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (R) SECTION

ns: not supplied

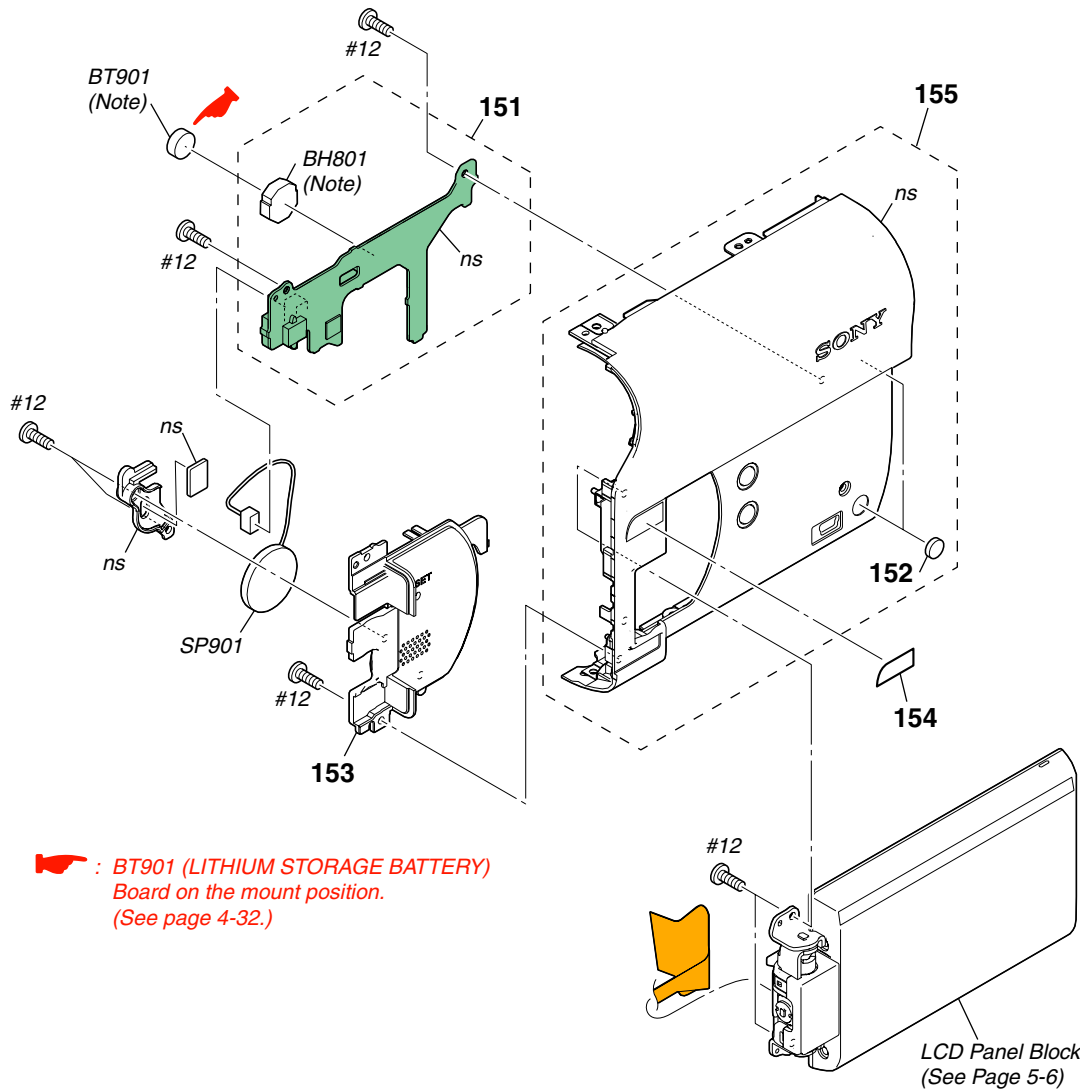


5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LCD PANEL BLOCK


ns: not supplied

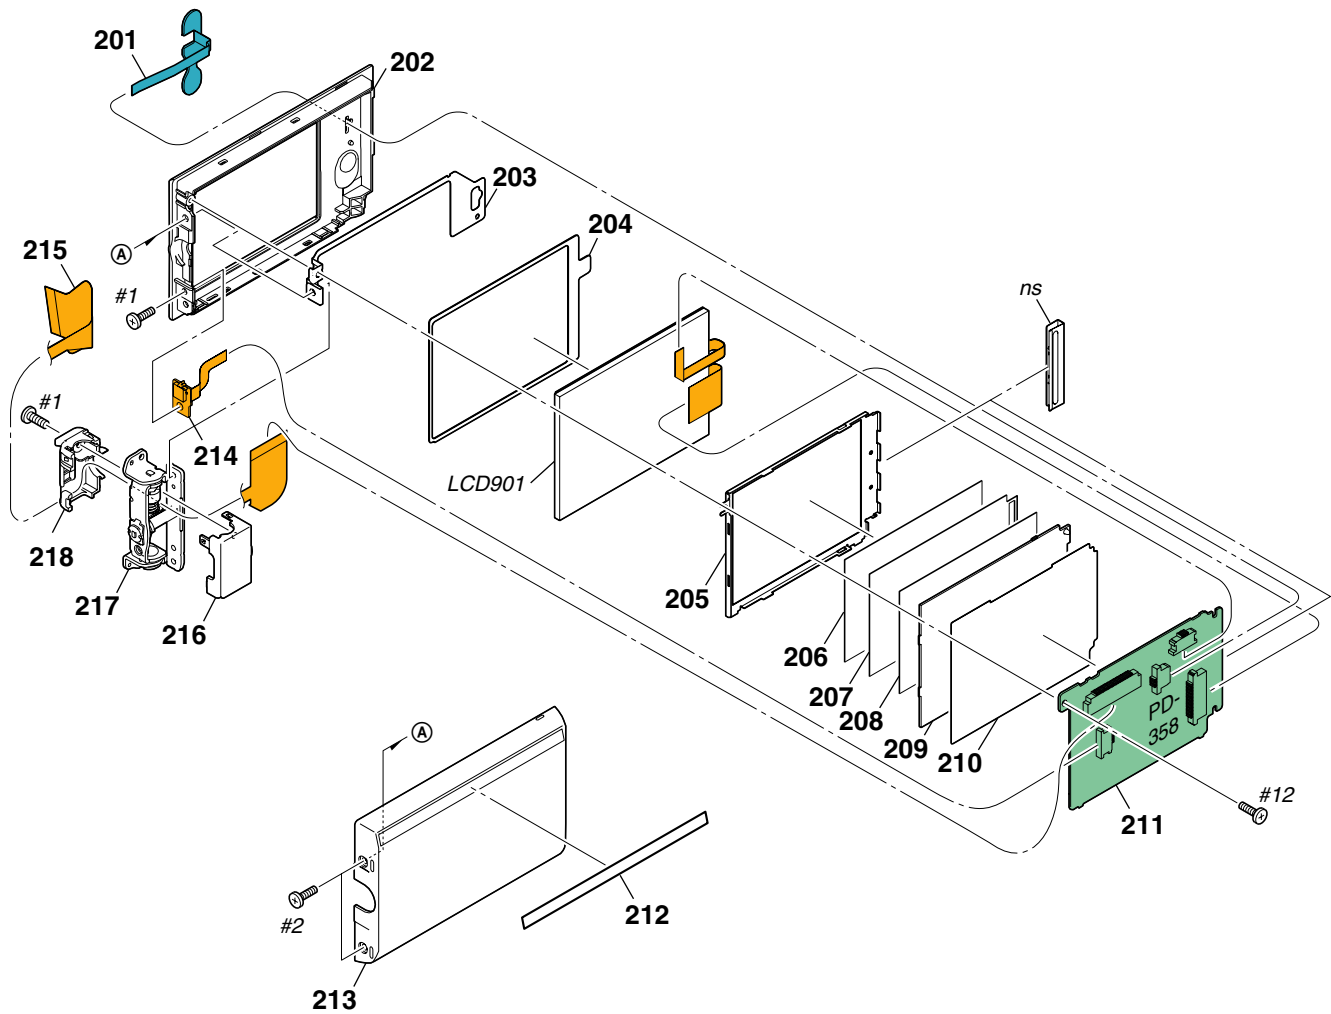

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-6. BT-EVF SECTION

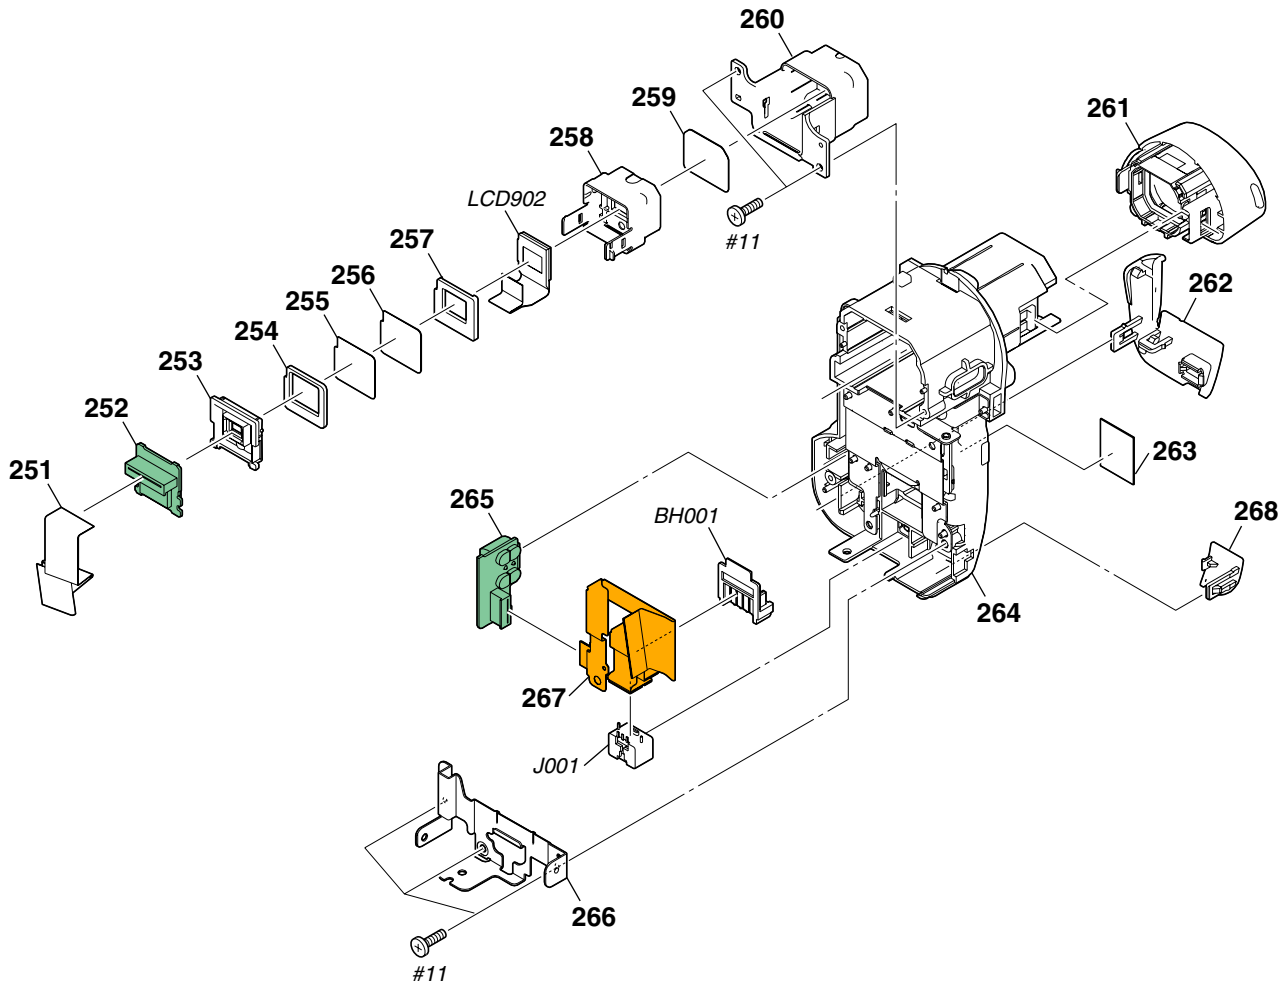


ns: not supplied




5. REPAIR PARTS LIST

5-1-8. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1





ns: not supplied

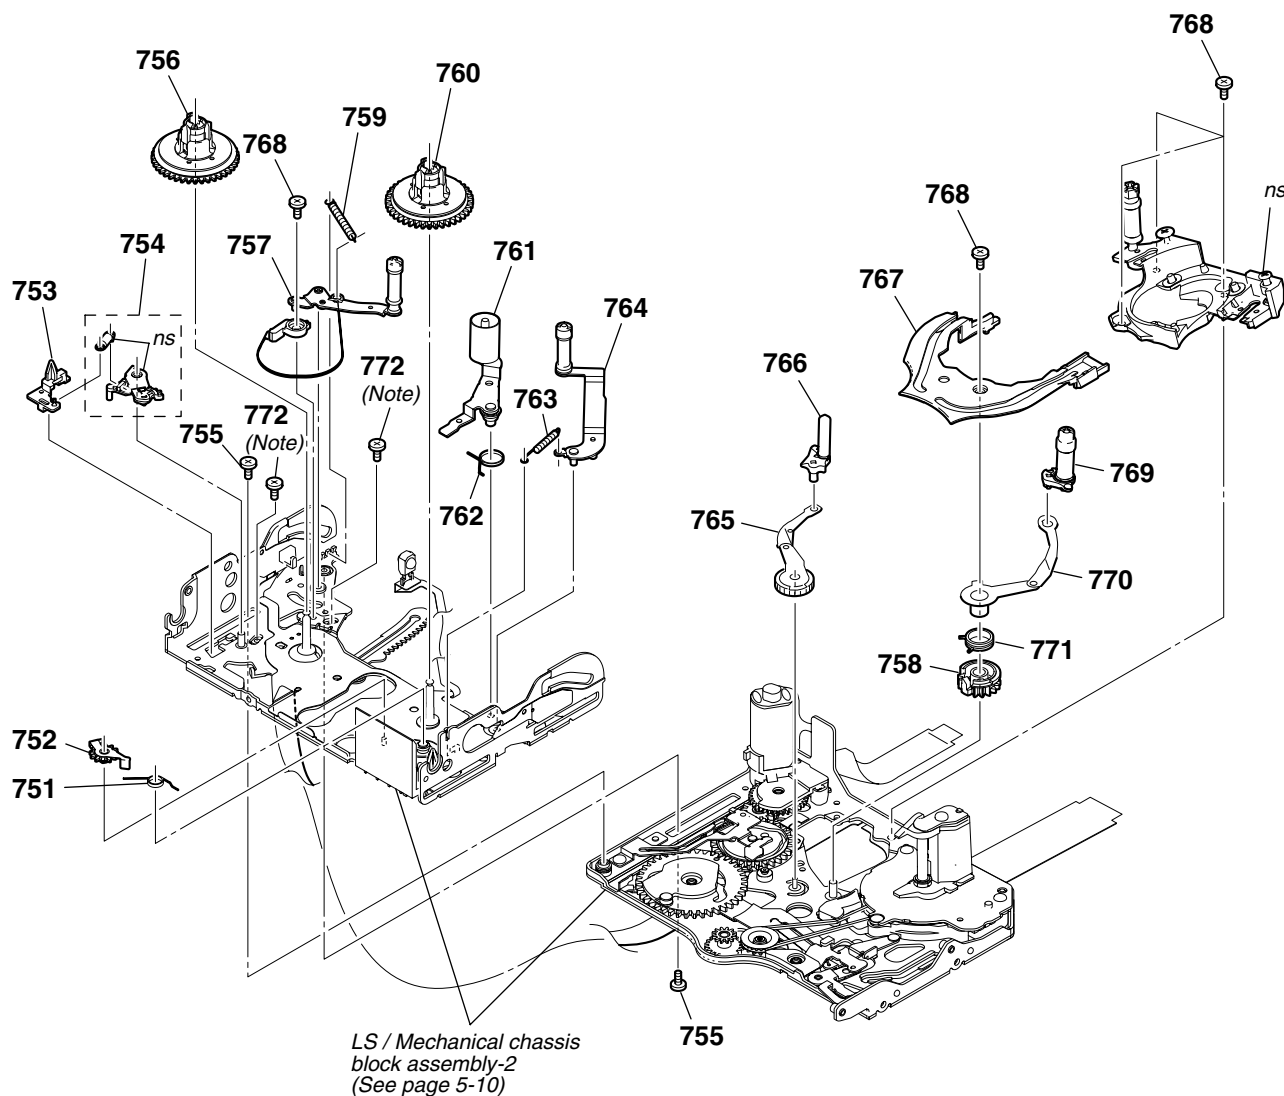




ns: not supplied

 


Checking supplied accessories.

  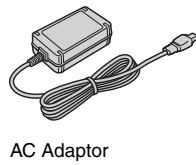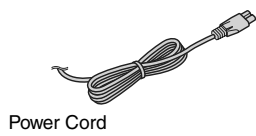

   Operating Guide
(DCR-HC51E/Hc52E/Hc53E/Hc54E)



3-286-462-71 (THAI) (TH)

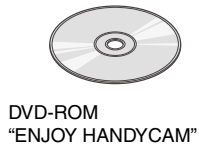

• Refer to page 5-1 for mark