

### INSTRUCTIONS FOR BEGINNERS

- When in the water, the RC boat will automatically conduct and connect to the remote controller.
- Always keep the RC boat within the range of 50 meters to avoid control loss.
- The RC boat can run for up to 20 minutes recovery fun dion. Please pay attention to keep the boat from capsizing or strike that may result in capsizing.
- Please keep the boat from objects such as waterweeds to avoid being trapped.
- You can manually adjust the direction.

### THE RC BOAT

The S series RC boat applies 2.4G remote control system to enable multiple players compete without interference. The remote controller allows for multiple functions such as racing, sailing in different directions (forward, backward, left and right) and fine-tuning, bringing you a thrilled experience.

① Hull      ④ Propeller      ⑤ Navigation rudder  
② Hatch cover      ③ Hatch cover switch

### ACCESSORIES

The RC Boat x1      Propeller x2  
Remote Control x1      USB Charger x1      Instructions

**Notes:**  
Please check the number of accessories carefully (as shown above).  
Please provide proof of purchase and contact the store for replacement if any missing parts.

### Battery Instructions

- There is a certain risk when using battery. It may cause fire, body injury or property loss. Users must be aware of the risks and take full responsibility of using battery improperly.
- If battery leakage occurs, please avoid contacting your eyes or skin with electrolyte. Once it happens, please wash your eyes with clean water and seek medical care immediately.
- Please remove the plug immediately if you sense any peculiar smell, noise or smog.

### Battery Charging

- Please use the charger from original factory to ensure your safe usage.
- Do not charge dilutant or outworn battery.
- Do not over charge battery. Please unplug the charger once fully charged.
- Do not charge the battery next to inflammables such as carpet, timber floor or wood furniture or on the surface of electro-conductive objects. Please always keep an eye on the battery when charging.
- Do not charge battery which not cool down yet.
- The charging temperature should be between 0°C to 40°C.

### Battery Recycling

- Do not dispose the battery as daily rubbish. Please familiarize yourself with the local garbage disposal method and dispose it according to the special requirement.

### OPERATION WITH REMOTE CONTROL

1. Forward / Backward      2. Turn Left / Right      3. Navigation Rudder

When it yaws left, manually adjust the direction to right, and vice versa.

### MAINTENANCE

- Remove the battery when the RC boat stops running.
- Avoid the RC boat exposure to strong sunlight to protect the paint.
- Use a piece of soft and dry cloth to clean the RC boat after every use.

① Remove the battery when the RC boat stops running.  
② Avoid the RC boat exposure to strong sunlight to protect the paint.  
③ Use a piece of soft and dry cloth to clean the RC boat after every use.

**Notes:**  
If the RC boat is left unused for a long period, remove the battery to avoid leakage.  
Use a piece of soft and dry cloth to clean the RC boat after every use. And put a desiccant pack in the boat to avoid moisture and humidity.

### BATTERY CHARGING AND ASSEMBLY FOR RC BOAT

- Battery Charging for RC Boat
- Battery Assembly for RC Boat

A Plug the USB charging cable into the computer socket at one end.  
B Connect the USB charging cable with the battery at the other end.

① Insert the battery into the RC boat, and click in the battery base with the battery connectors connected correctly.  
② Insert the hatch at a full 45 degrees and push it forward to refit it.

**Notes:**  
Caution: Charging time is about 90 minutes. Using time is about 20 minutes.  
The charging line LED light will be red when charged and red led light will be off when it is fully charged.

### IMPORTANT

- This product is not categorized as toys or playthings. It is applicable for users aged 14 and the above. For users under the age of 14, a parent or legal guardian shall company and supervise the child's use of this product at all times.
- Please do not charge batteries, which are not cool down yet.
- Ensure no people in the water before shipping the RC boat otherwise it might cause potential accidents. Be aware if there are any plants, objects or obstacles in the water body, since they might be sucked or caught up in the rotating propellers and cause damages to the RC boat.
- Please operate the RC boat within a range 50 meters in distance in case of control loss.
- This product includes small and tiny components, which might cause suffocation if swallowed. Please do not swallow any included components.
- Please keep distance from the propellers particularly when they are rotating at to avoid injury.
- Please do not touch the motor in operation or soon after it stops to avoid severe burns.
- According to electromagnetic environment requirements for aviation radio (station), this product is strictly prohibited by the airport runway as the center of a circle with radius of 5,000 meters.
- Please do not use this product where and when the radio communication is regulated by the authority.
- Please inspect the USB cable and other components regularly. If any damages are found, please stop using and restore or replace with a new one.

## FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.