
ASSEMBLY INSTRUCTION ITEM NO: 194840333722 POWER LEFT SIDE RECLINING CHAIR WITH POWER HEADREST AND CHARGING PORTS

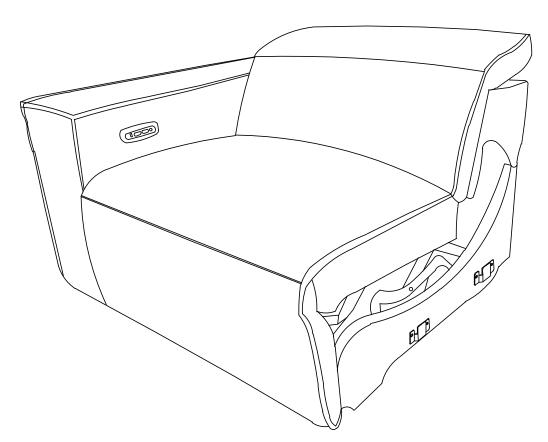


NOTE: Do not use power tools for assembly. The use of power tools increases the risk of over-tightening, which can result in wood splitting or cracking.





Component list

| component use | | | |
|---------------|---------|-----|--------------------------|
| No | Drawing | Qty | Description |
| А | | 1 | SEAT |
| В | | 2 | PLASTIC LEGS Ø60*40mm |
| С | | 1 | PLUG |




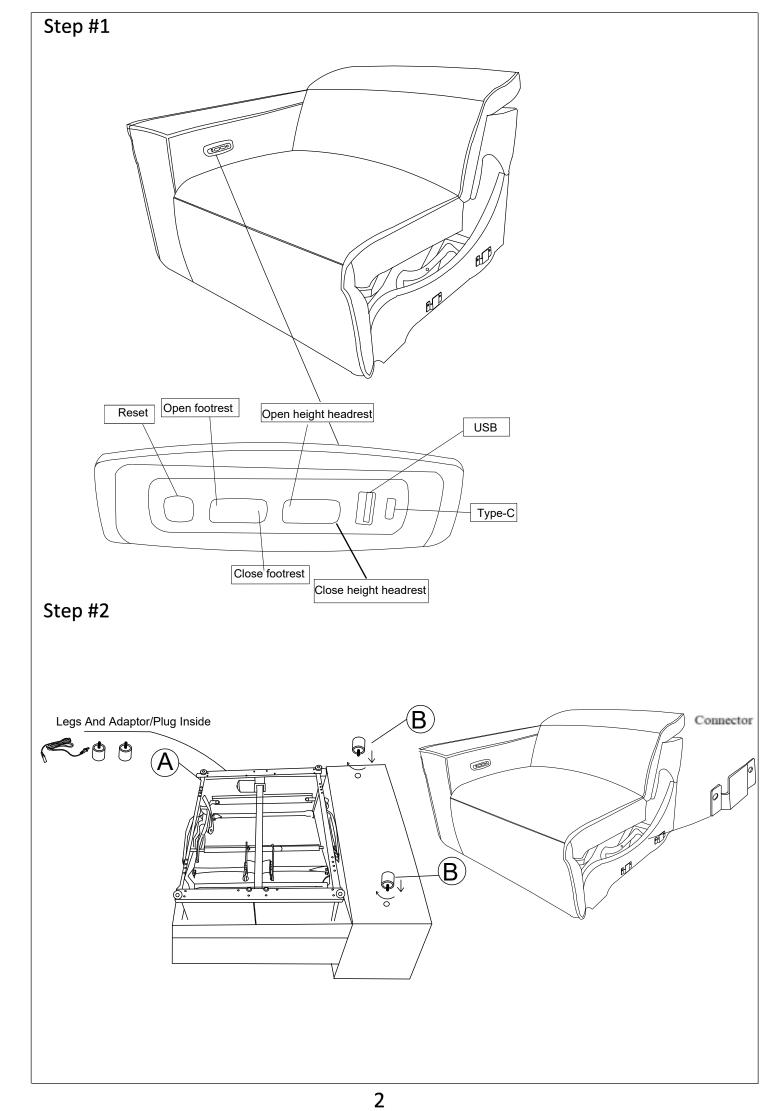

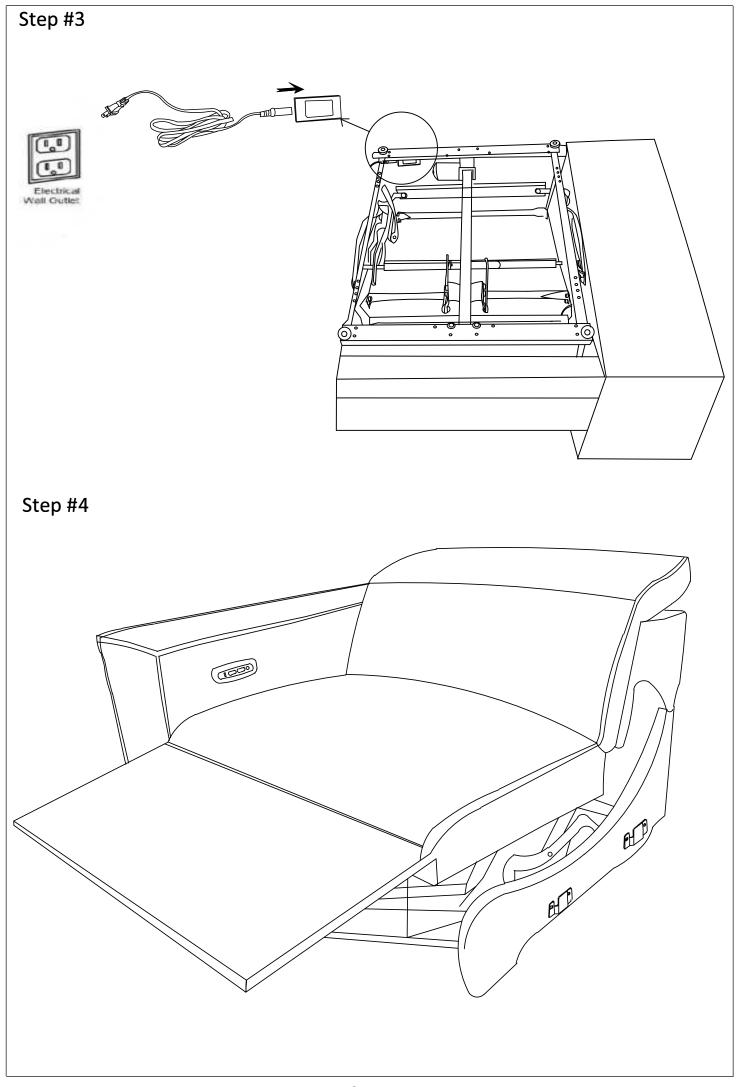

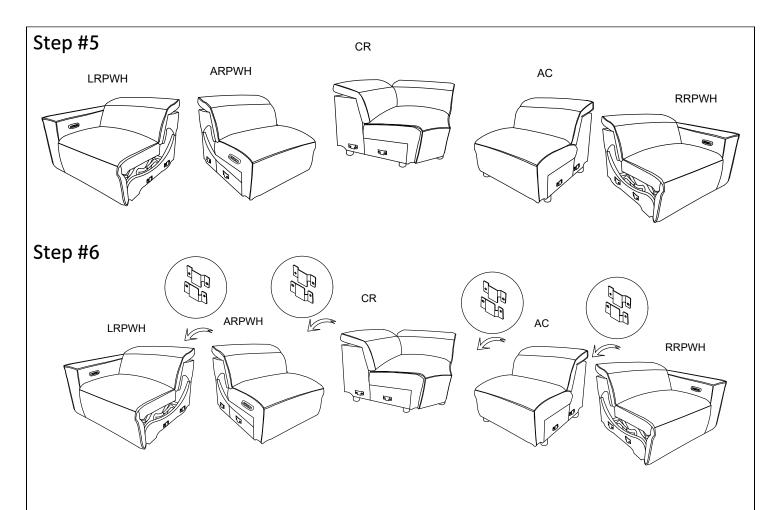

Step #7

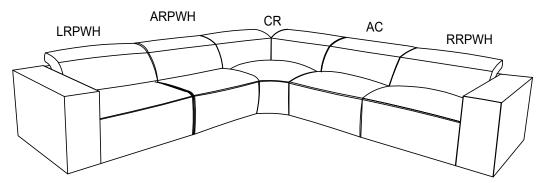

Care Instruction for Textured Fabric Furniture:

In order to maintain the original appearance of your textured polyester Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage textured fabric.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.