



# Grand Gourmet Corner Kitchen

## Assembly Instructions

 
**Item #53185A**

© 2010 KidKraft, LP

Please retain this information  
for future reference

To order replacement parts,  
please visit [www.kidkraft.com](http://www.kidkraft.com)

### PARTS LIST

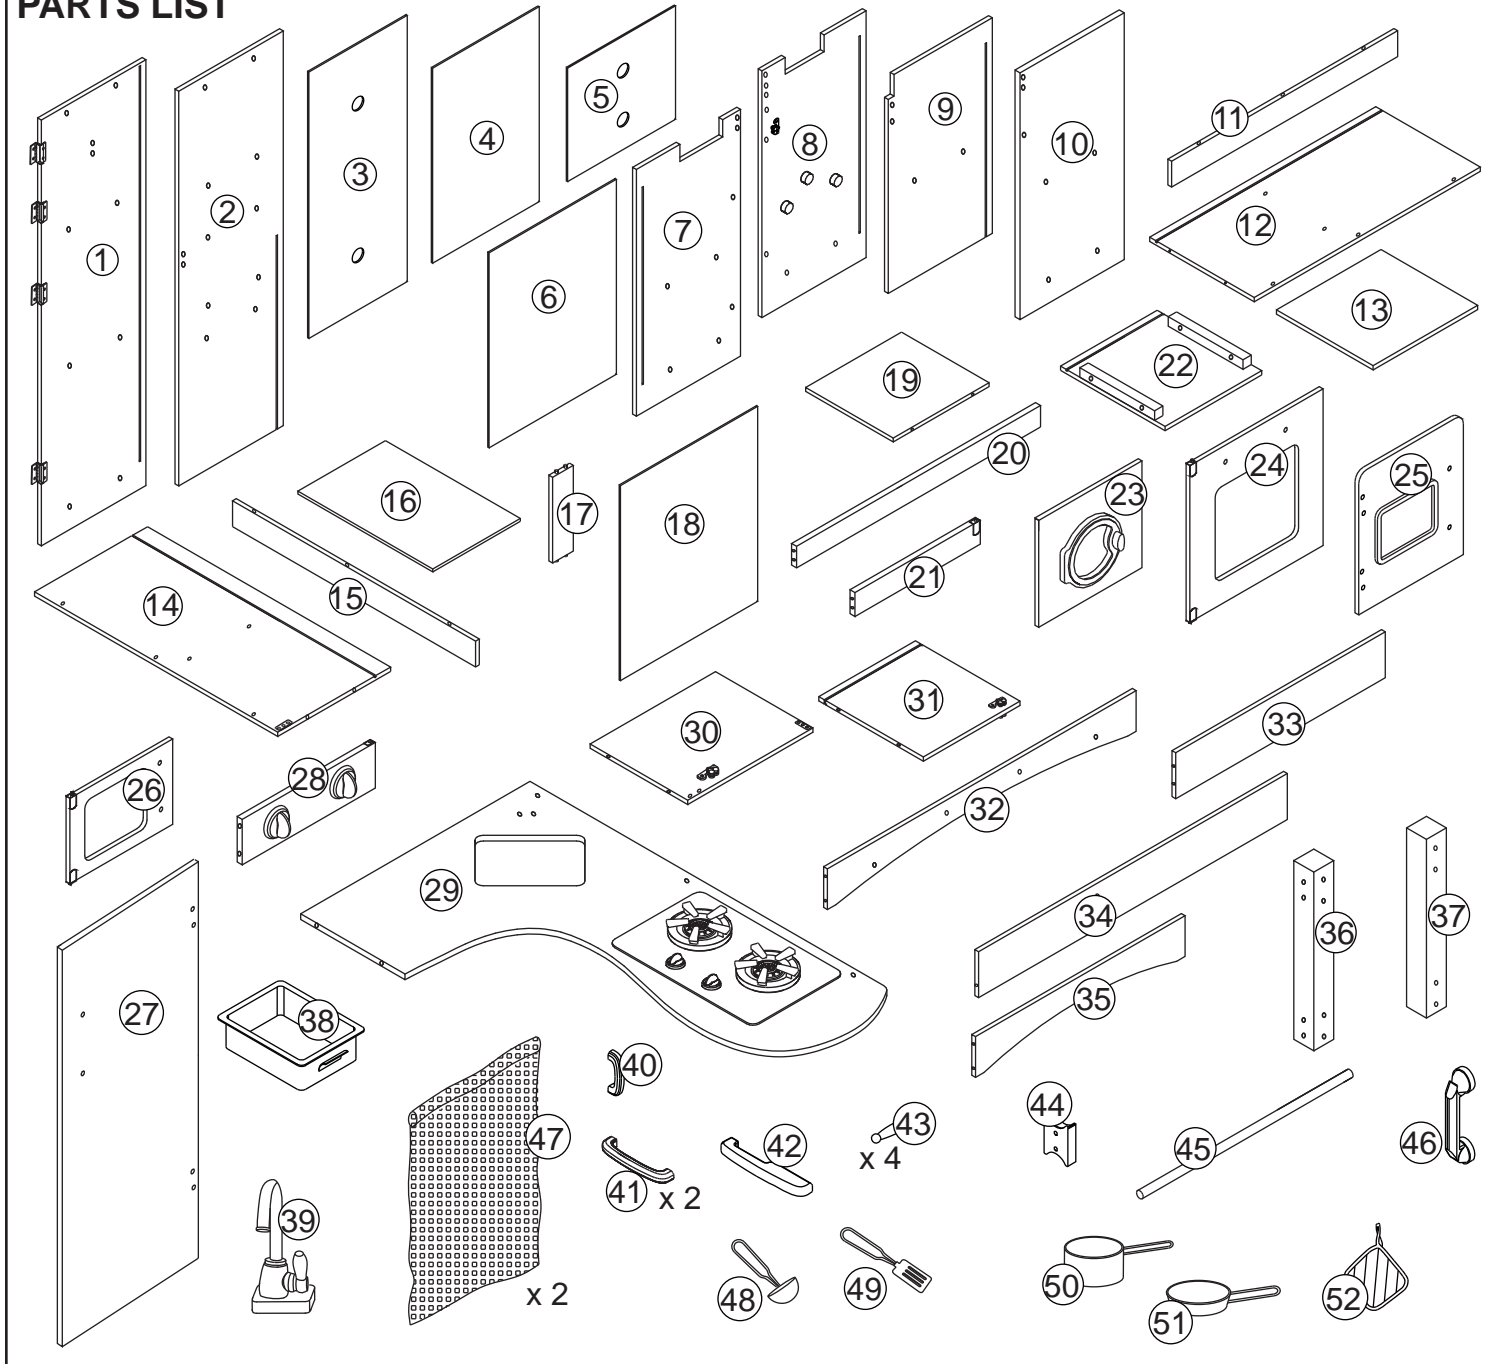

### ⚠ WARNING:

**ADULT ASSEMBLY REQUIRED.**

Product includes small parts, sharp points, and sharp edges in unassembled state. Keep unassembled parts away from children under 3 years of age.

### USE AND MAINTENANCE:

-Use on level surfaces only

-Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

### ⚠ WARNING:

**CHOKING HAZARD.** Small parts and sharp points, not suitable for children under 3 years.

### ⚠ WARNING:

If used improperly, your kitchen may be pulled over or fall, creating risk of injury or damage. To minimize this risk, we recommend that you use the enclosed wall anchor kit, which gives you the option of attaching the kitchen to a wall. In addition, children should not be permitted to climb or pull on the kitchen.

**Customer Service**

**1-800-933-0771**


















 

 


**[www.kidkraft.com](http://www.kidkraft.com)**



# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A

HARDWARE			
A. Cross Dowel Bolt x 30 pcs  2 1/8 in / 53 mm	B. Cross Dowel Bolt x 2 pcs  2 5/16 in / 58 mm	C. Hex Screw x 2 pcs  2 in / 50 mm	D. Cross Dowel Nut x 30 pcs 
E. Cross Dowel Nut x 2 pcs 	F. Silver Screw x 2 pcs  1 in / 25 mm	G. Pink Screw x 6 pcs  1 in / 25 mm	H. White Screw x 42 pcs  1 in / 25 mm
	I. Screw x 8 pcs  5/16 in / 8 mm	J. Screw x 13 pcs  1 3/16 in / 30 mm	K. Round Head Screw x 2 pcs  3/4 in / 20 mm
	L. Round Head Screw x 4pcs  3/8 in / 9 mm	M. Screw x 8 pcs  5/16 in / 8 mm	N. Washer x 4 pcs 
	O. Silver Flat Screw x 2 pcs  1 3/16 in / 30 mm	P. Small Nylon Lock Nut x 2 pcs 	Q. Hex Bolt x 2 pcs  1 1/8 in / 27 mm
		R. Latch x 4 pcs 	
		S. Bracket x 2 pcs 	
		Wrench x 1 pc 	
		Allen Wrench x 1 pc 	
		The following tool (not included) is required for assembly:  Phillips® Screwdriver	

## Step 1

Helpful Hint: Check all predrilled holes for excess sawdust and clean out the holes with a flathead screwdriver if necessary.

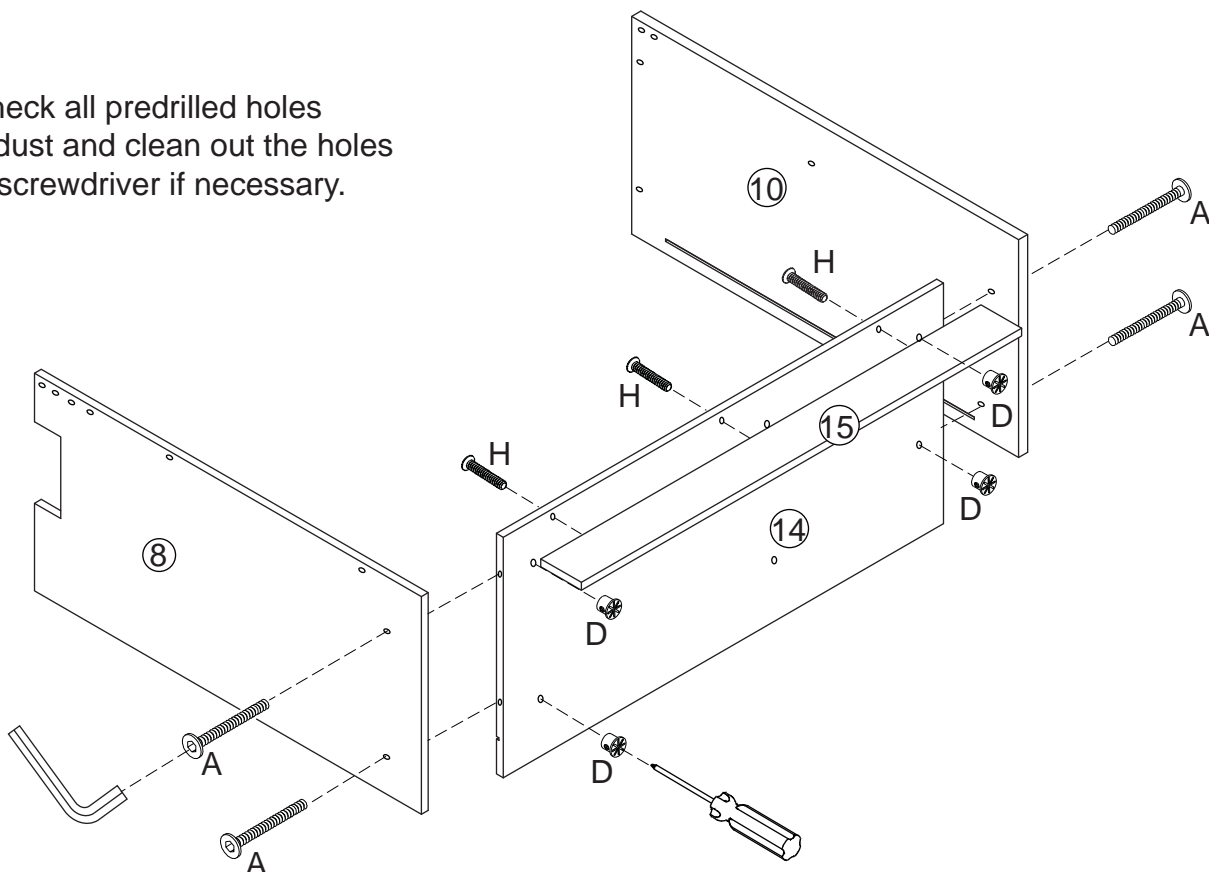

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

**Customer Service**  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




© 2010 KidKraft, LP



# Grand Gourmet Corner Kitchen Assembly Instructions

 Item #53185A

## Step 2

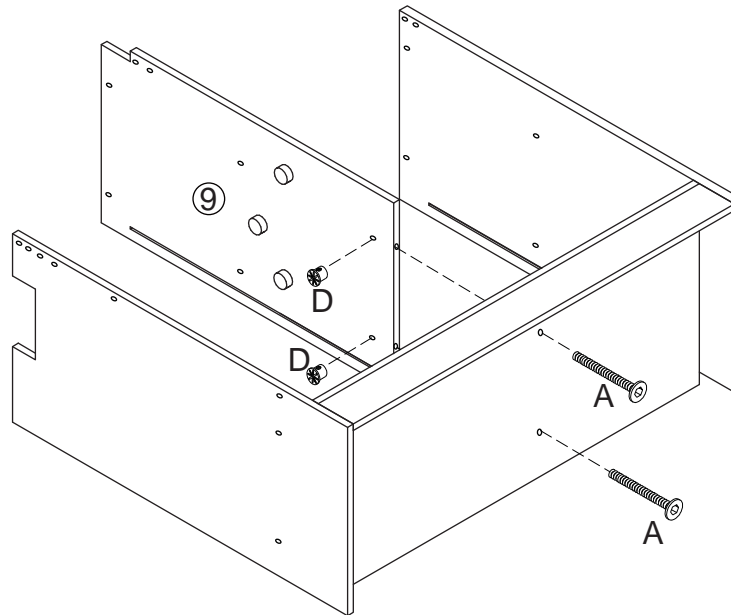

## Step 3

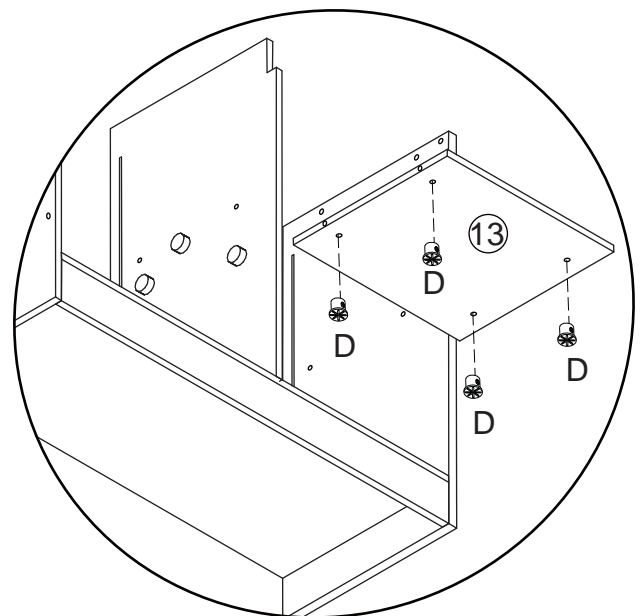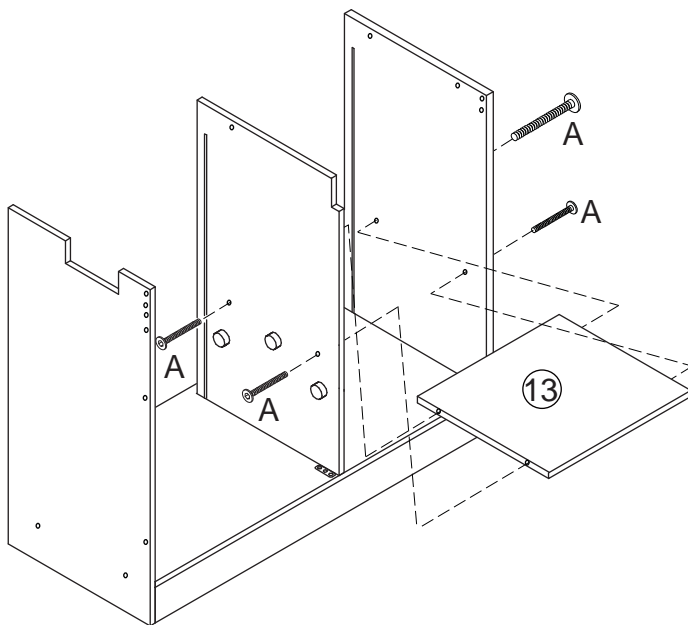  

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




© 2010 KidKraft, LP

# Grand Gourmet Corner Kitchen


 
## Assembly Instructions

Item #53185A

### Step 4

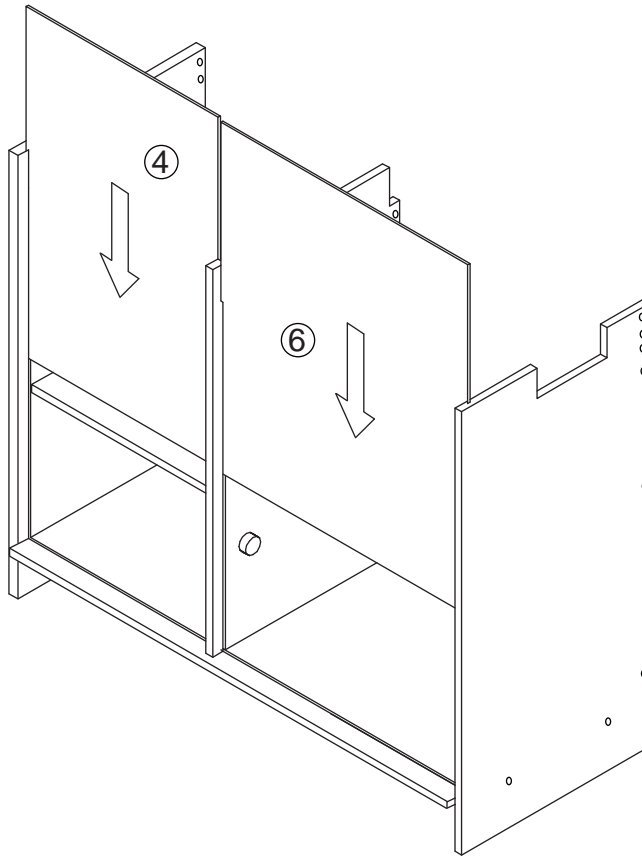

### Step 5

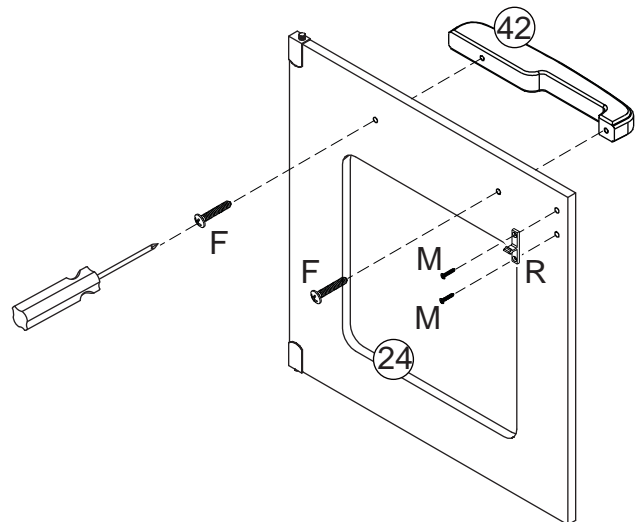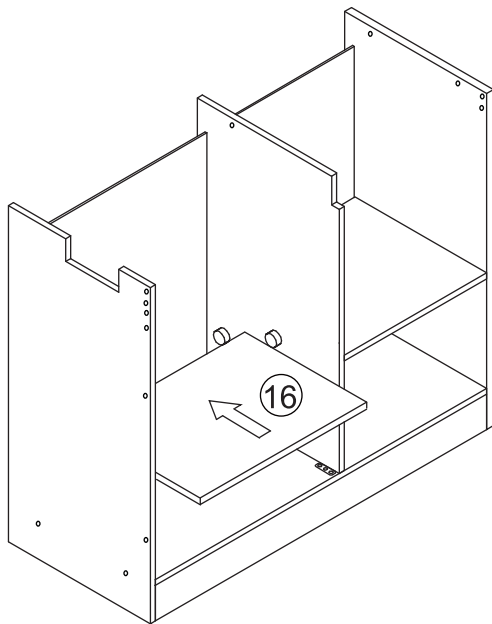  

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




© 2010 KidKraft, LP


# Grand Gourmet Corner Kitchen Assembly Instructions

 Item #53185A


## Step 6

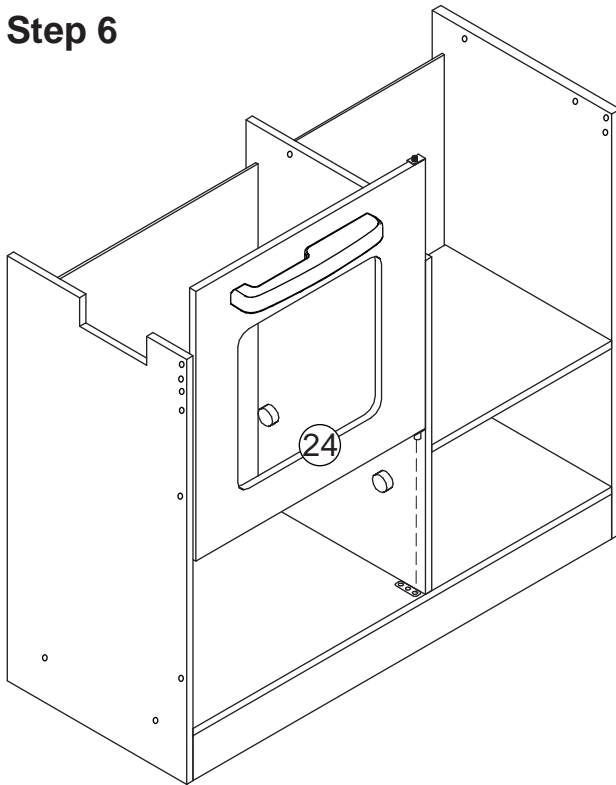

## Step 7

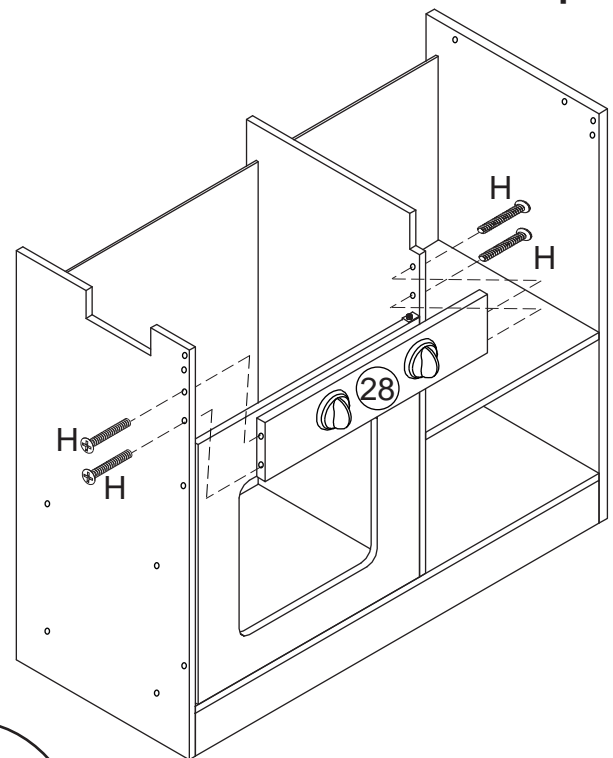 

## Step 8

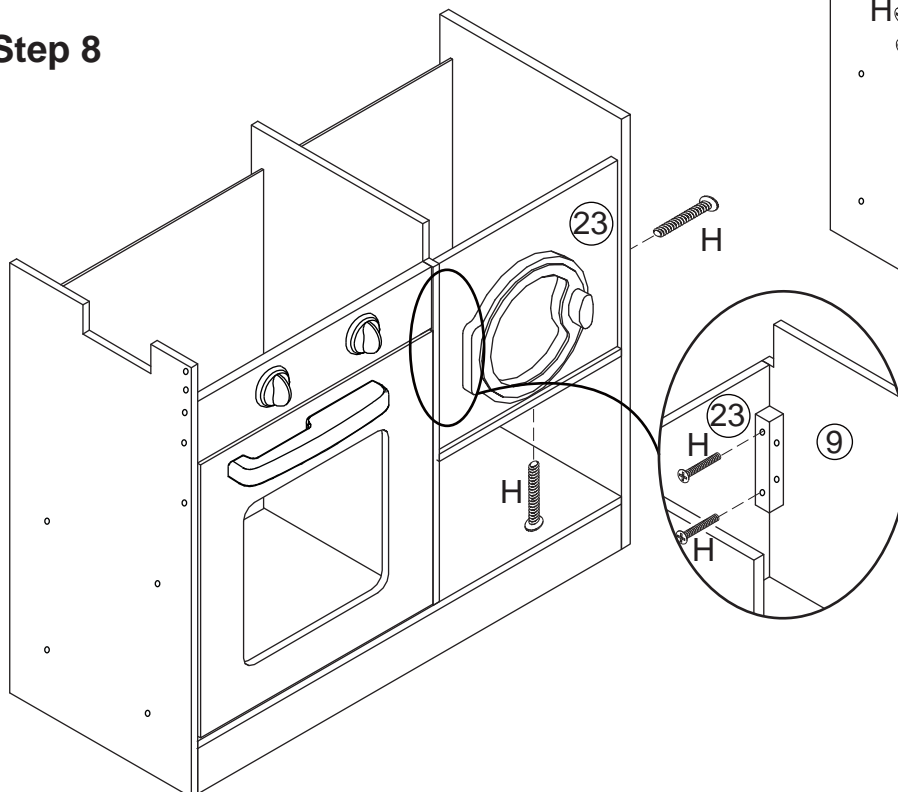 

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




© 2010 KidKraft, LP


# Grand Gourmet Corner Kitchen Assembly Instructions

 Item #53185A


## Step 9

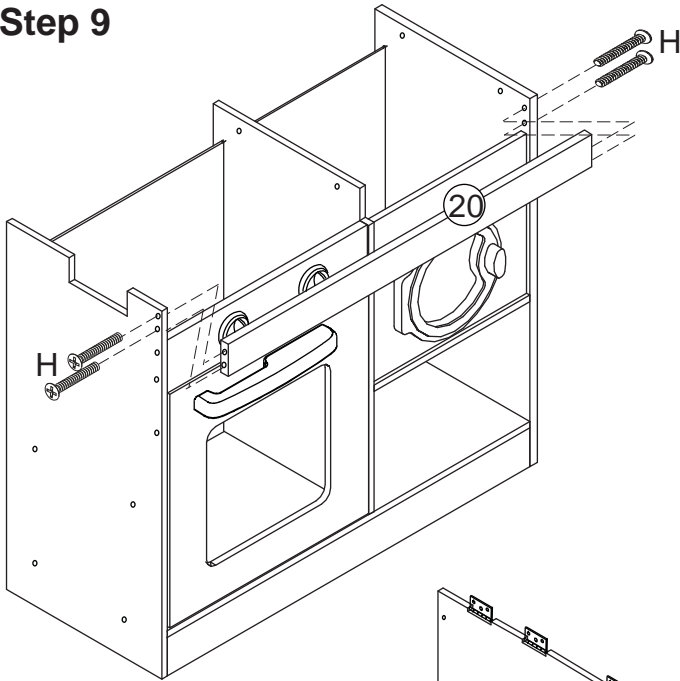

## Step 10

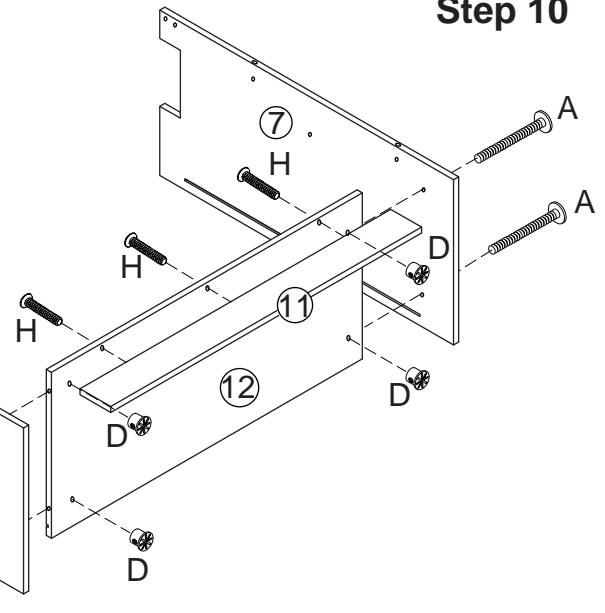 

## Step 11

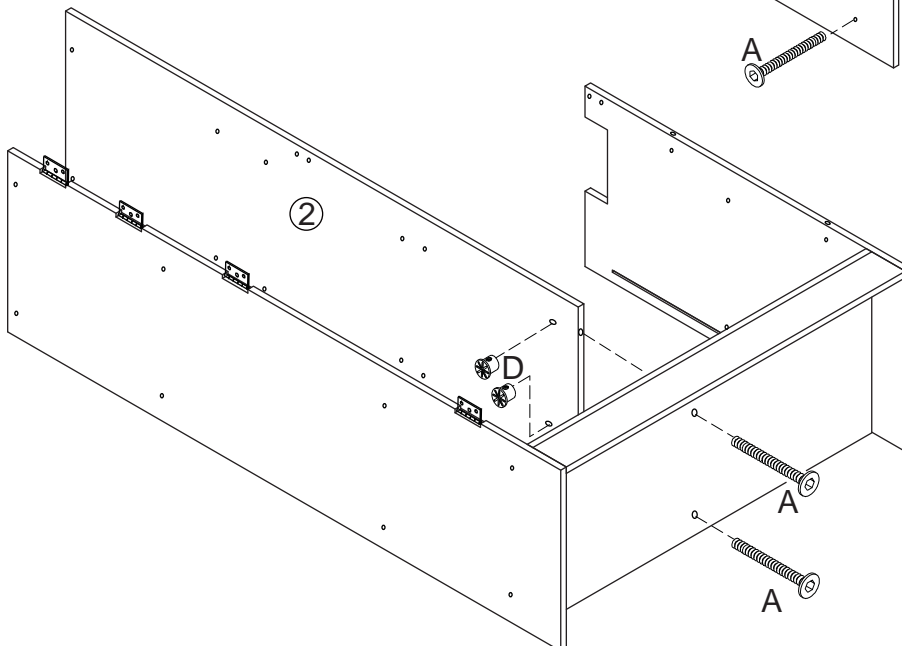 

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A


## Step 12

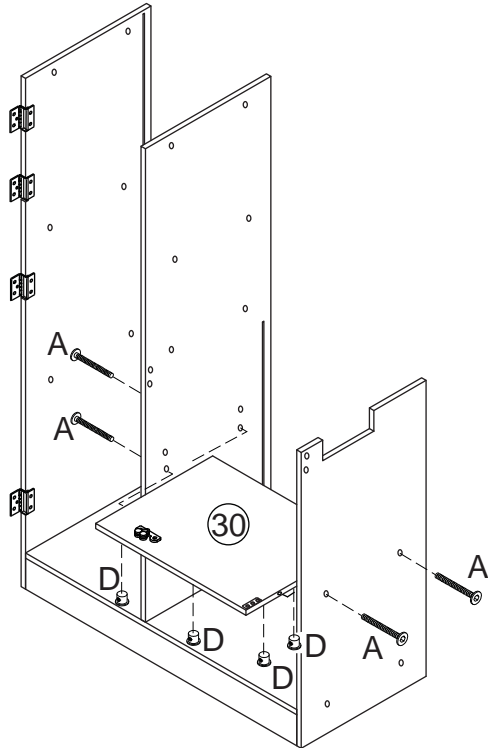

## Step 13

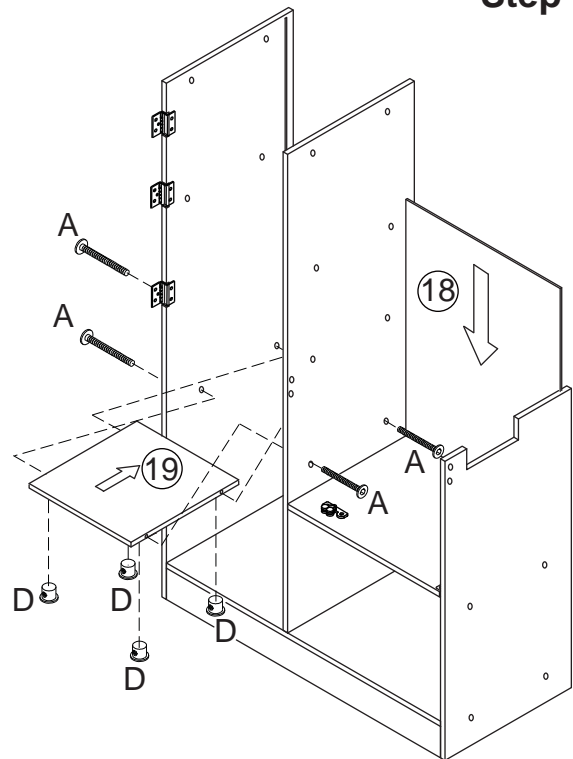 

## Step 14

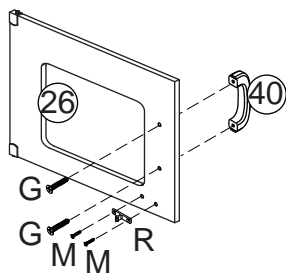 

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




© 2010 KidKraft, LP


# Grand Gourmet Corner Kitchen Assembly Instructions

 Item #53185A

## Step 15

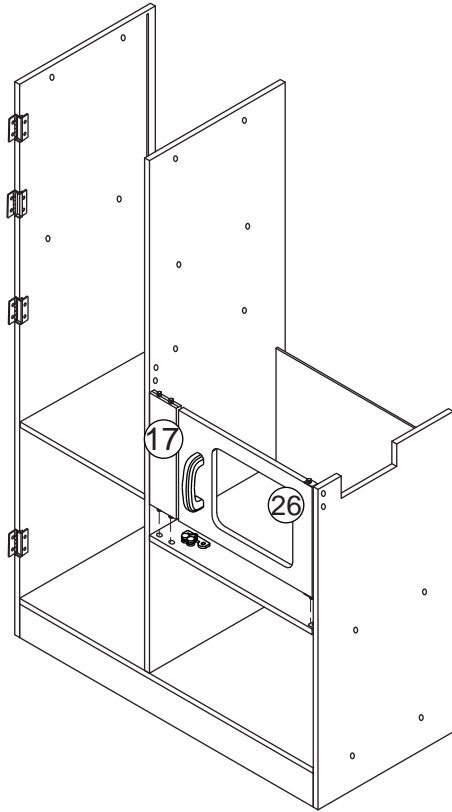

## Step 16

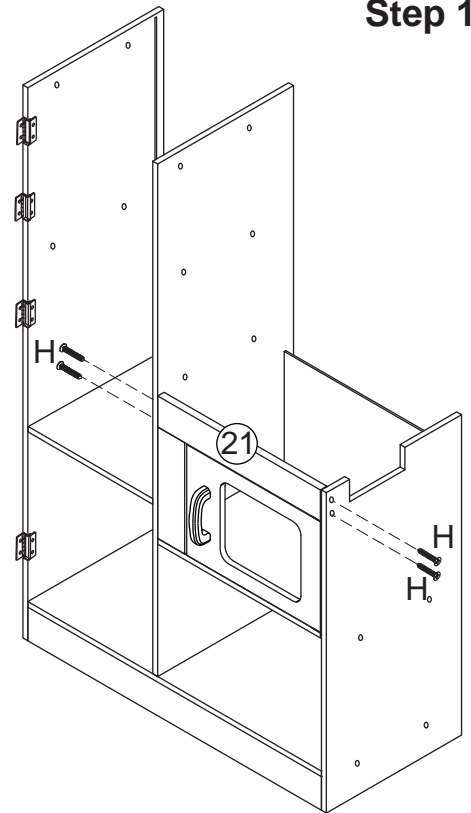 

**Customer Service**  
**1-800-933-0771**  
**[www.kidkraft.com](http://www.kidkraft.com)**






# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A


## Step 17

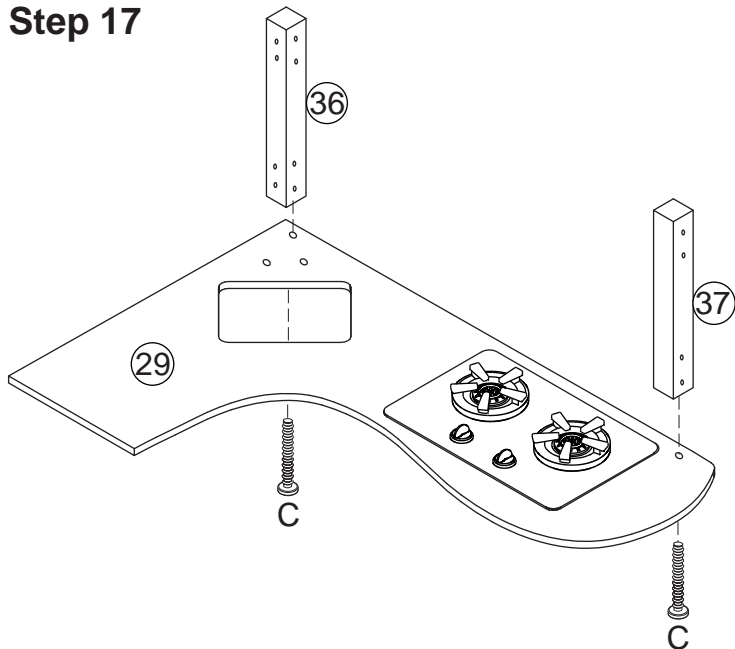

## Step 18

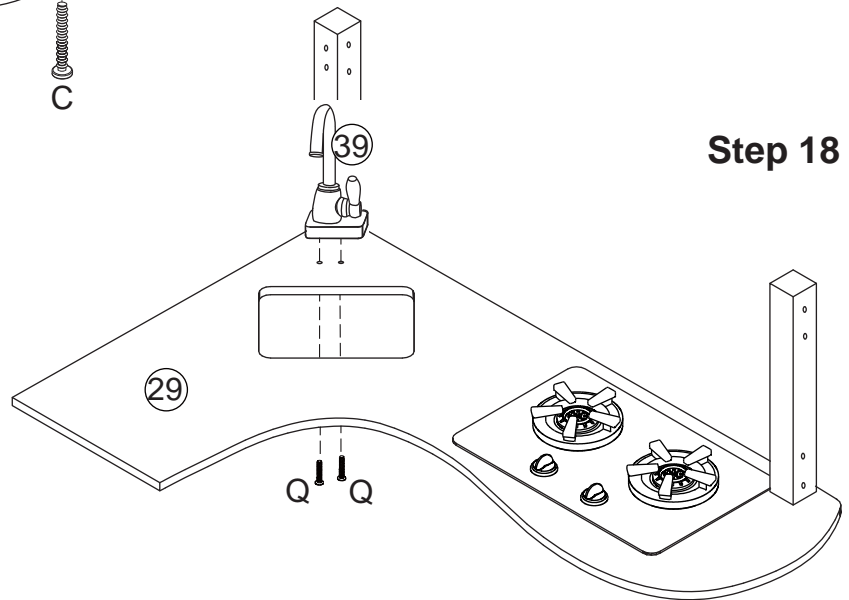 

## Step 19

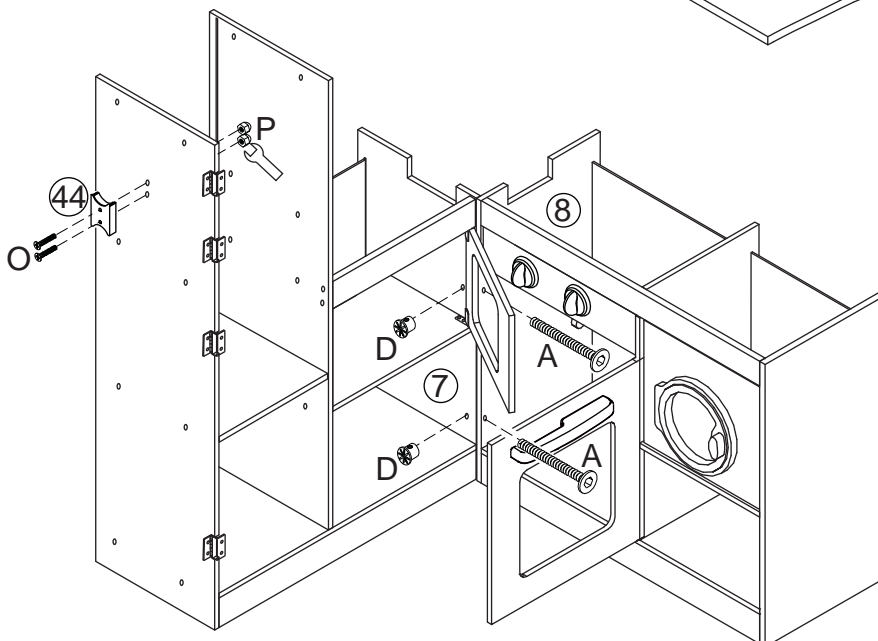 

After step 19, do not move the kitchen until part 29 is assembled in step 20 & 21.

**Customer Service**  
**1-800-933-0771**  
**www.kidkraft.com**




# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A

## Step 20

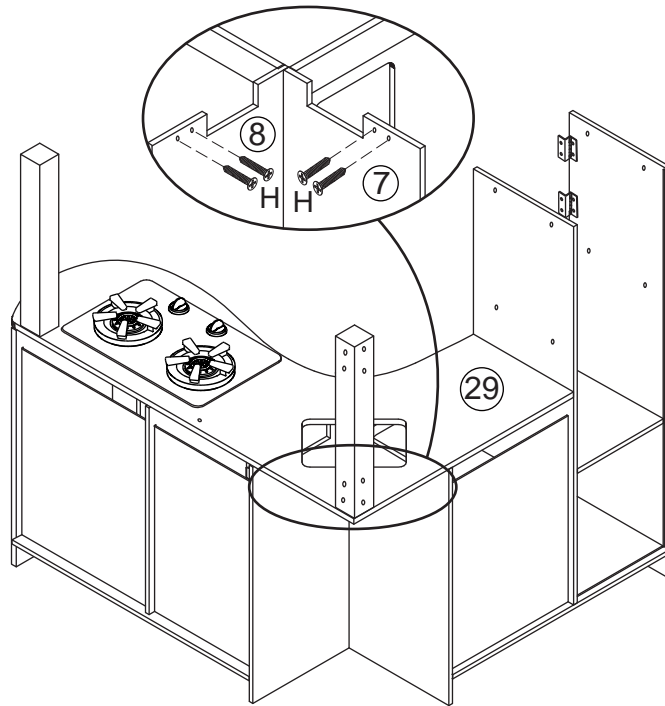

## Step 21

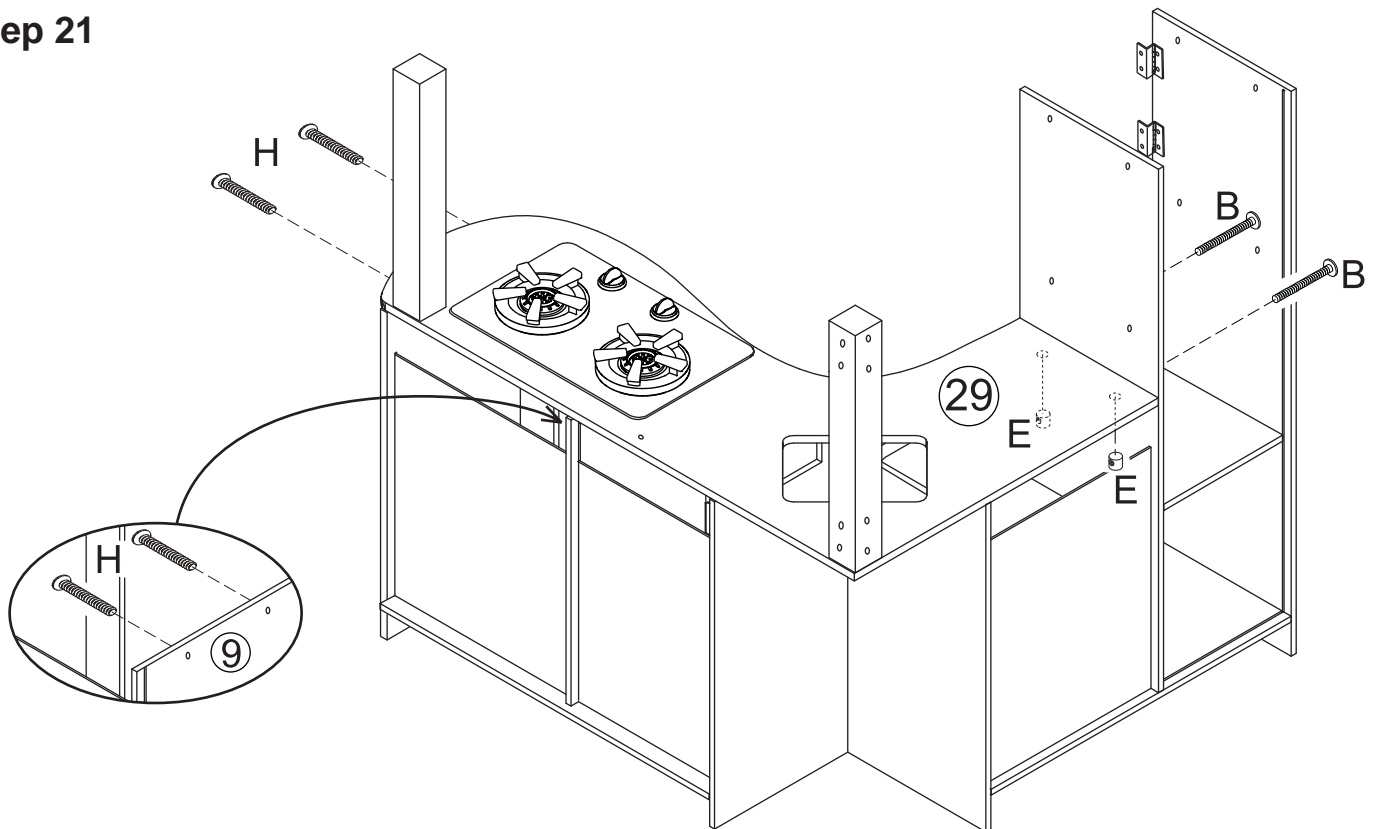 

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A


## Step 22

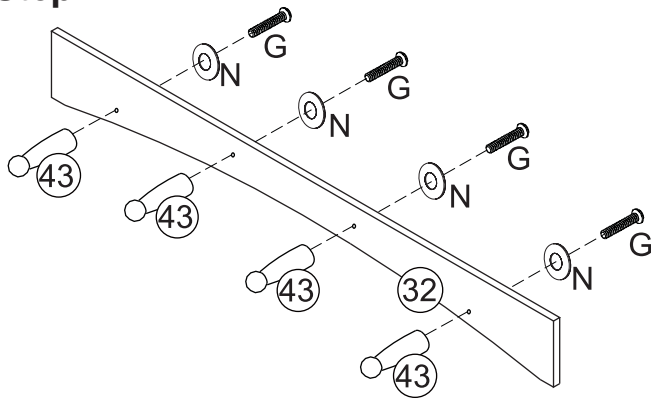

## Step 23

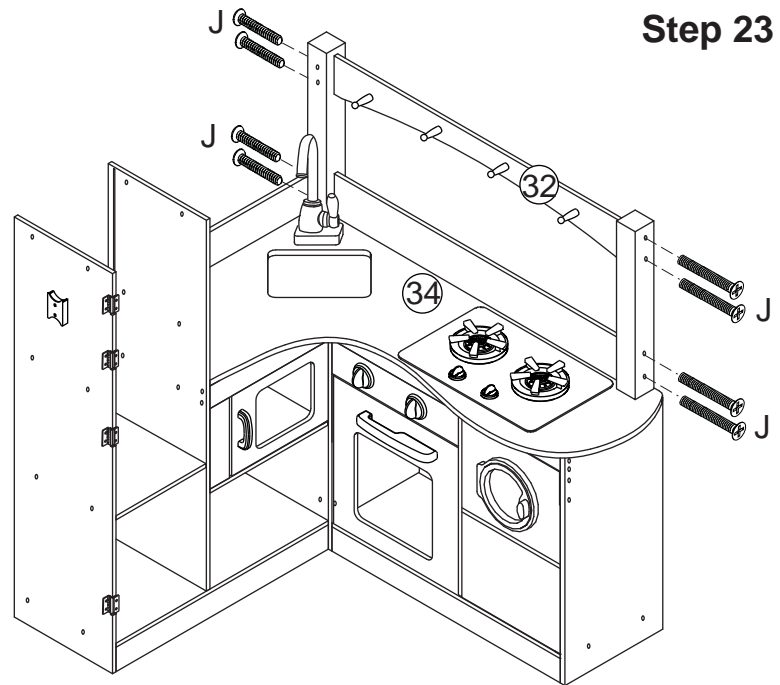 

## Step 24

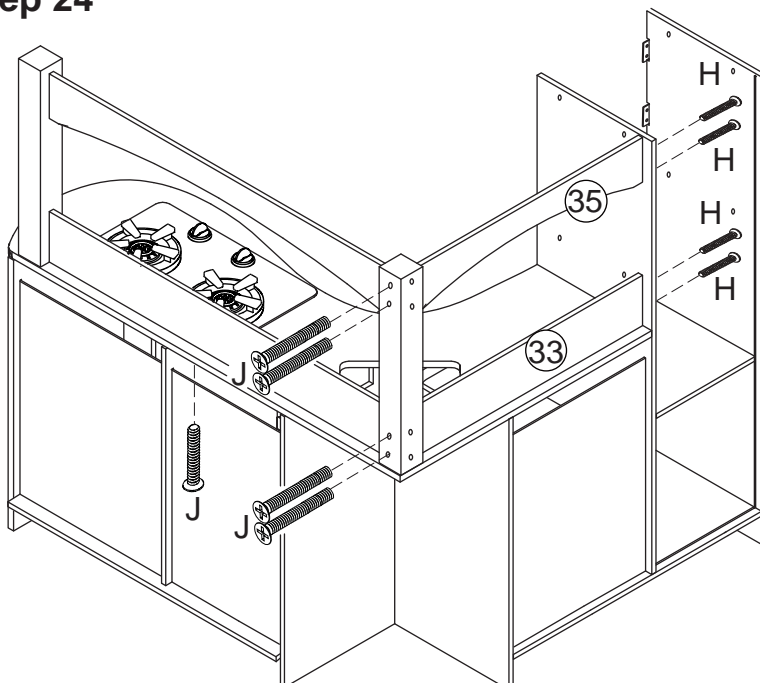 

Customer Service  
1-800-933-0771  
[www.kidkraft.com](http://www.kidkraft.com)




# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A


## Step 25

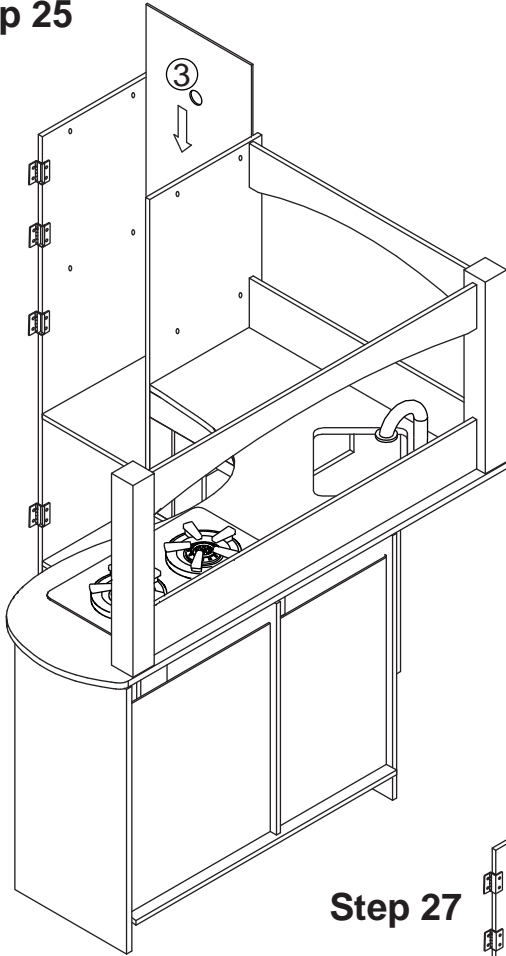

## Step 26

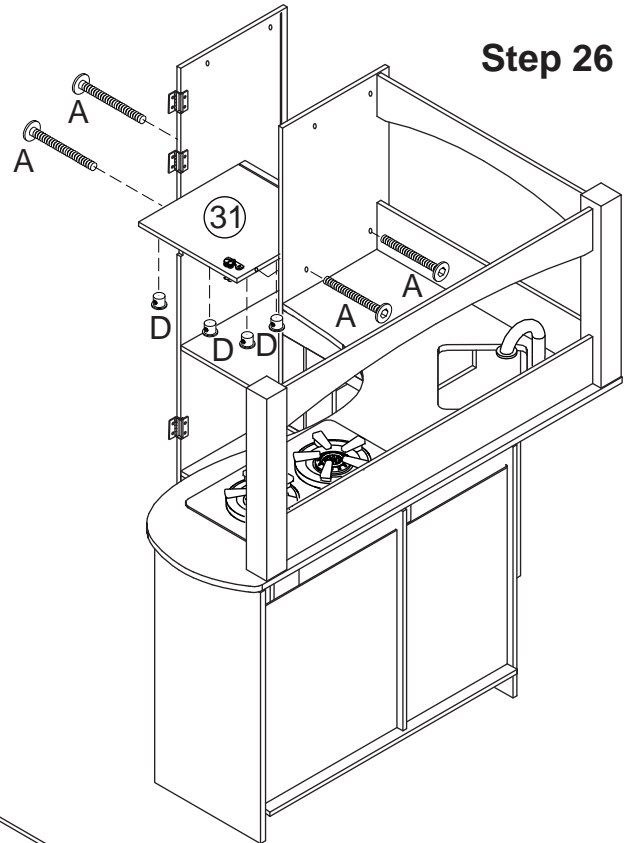 

## Step 27

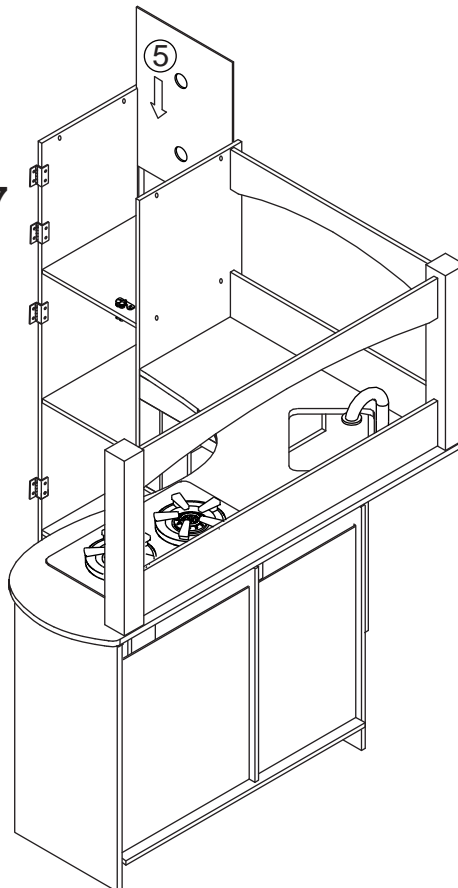 

**Customer Service**  
**1-800-933-0771**  
**www.kidkraft.com**




# Grand Gourmet Corner Kitchen Assembly Instructions

 
© 2010 KidKraft, LP

Item #53185A


## Step 28

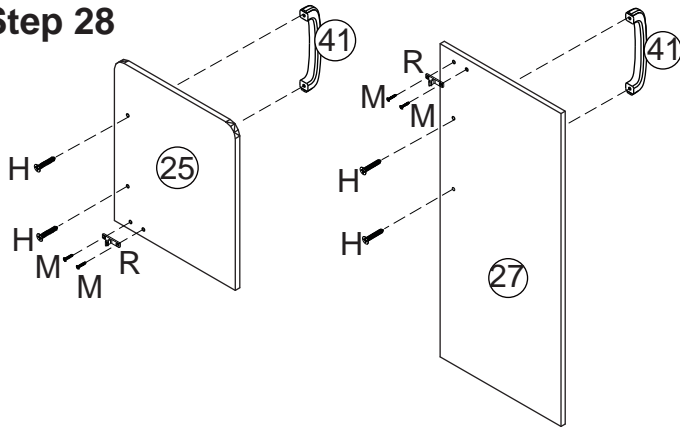

## Step 29

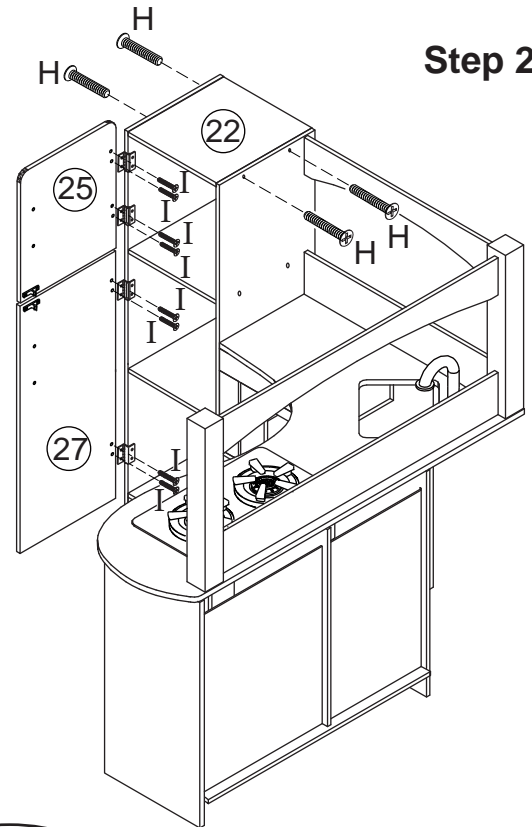 

## Step 30

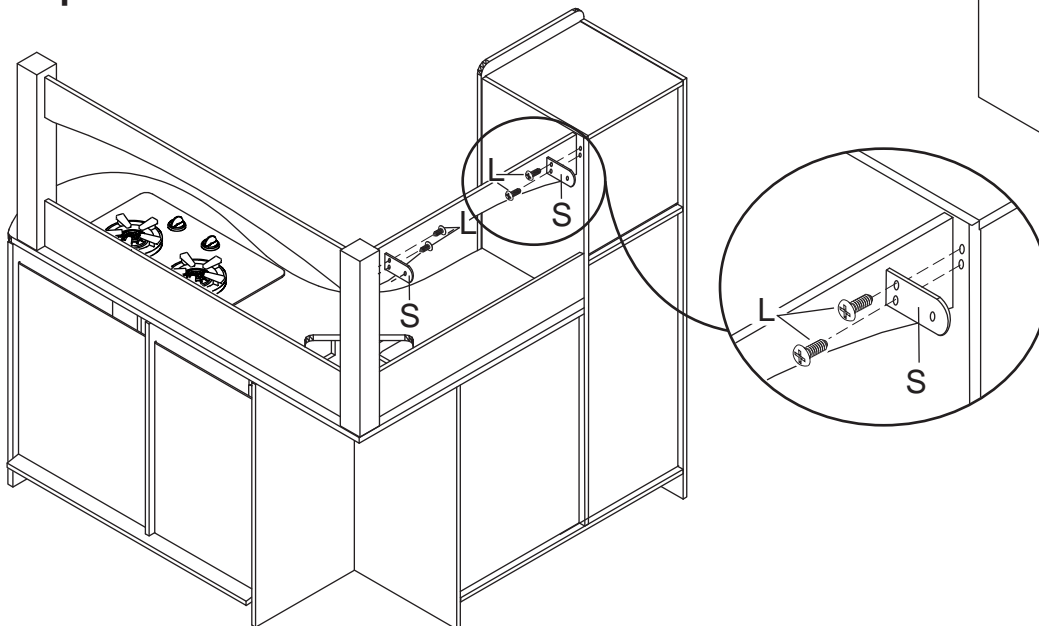 

**Customer Service**  
**1-800-933-0771**  
**www.kidkraft.com**




# Grand Gourmet Corner Kitchen Assembly Instructions


 
© 2010 KidKraft, LP

Item #53185A


## Step 31

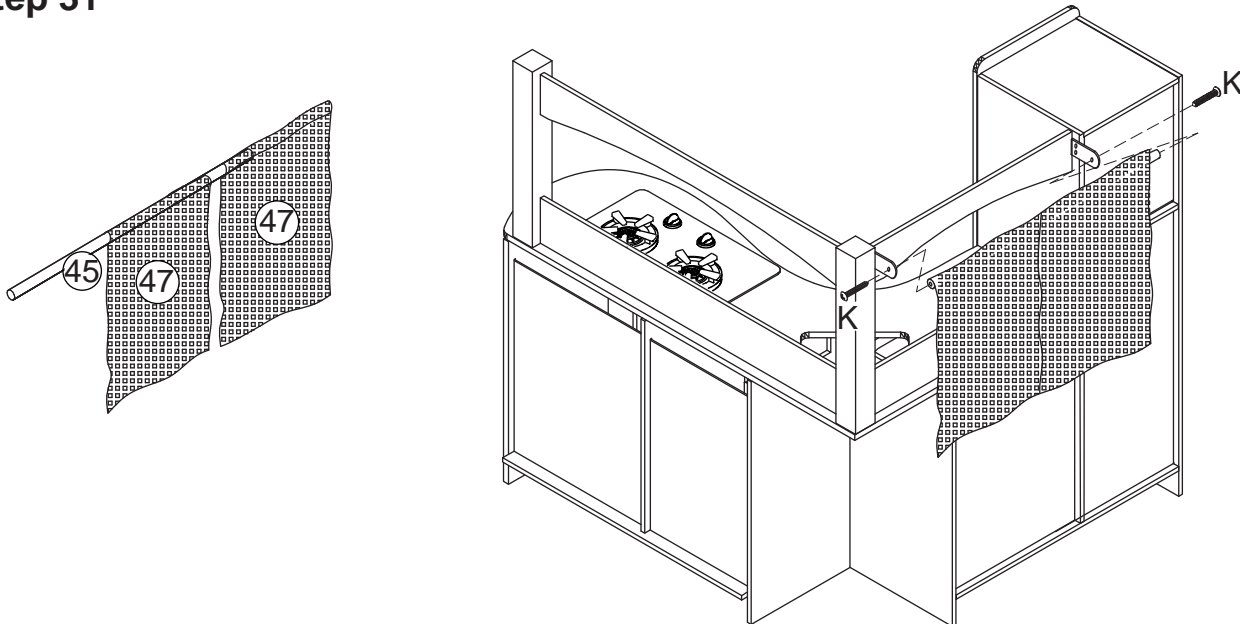

## Step 32

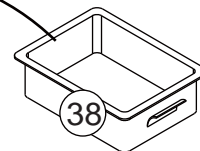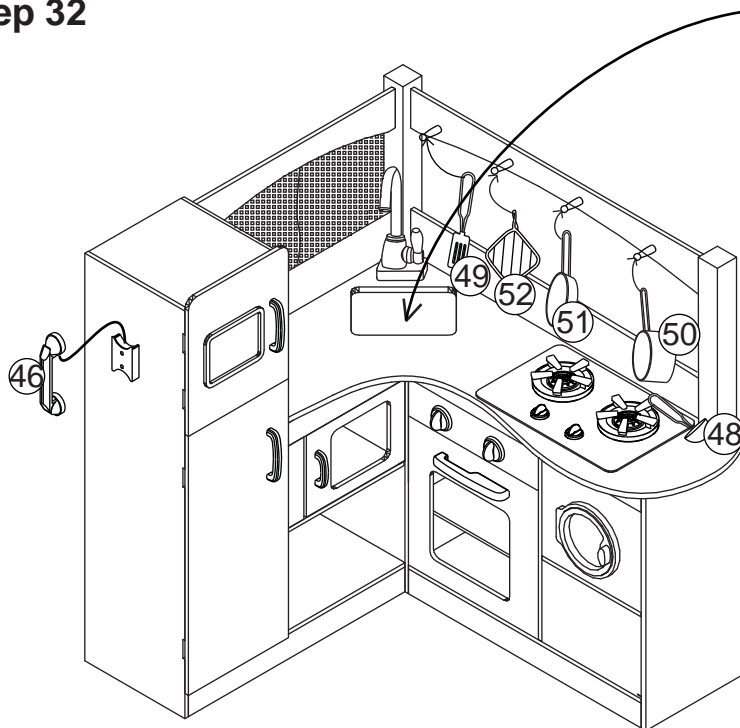  

 Push sink (part 38)  
down until it clicks  
into place.

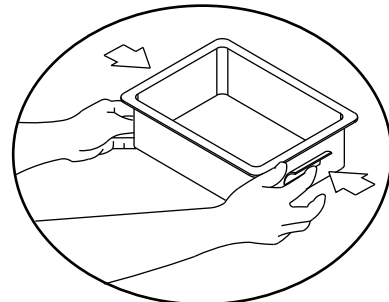

To Remove Sink: The sink may  
only be removed by an adult.  
Hold the tabs and lift through the  
hole to release.

**Customer Service**  
**1-800-933-0771**  
**www.kidkraft.com**

**Parental supervision required.**

This toy is intended for children of a specific age or above. Parents should supervise the play area so that children younger than the intended age range do not interact with this toy. Use this toy on the floor. Do not allow children to climb on or around or in the toy.

**IMPORTANT INFORMATION - PLEASE READ FIRST**

ALL OF OUR WOODEN ITEMS ARE HANDCRAFTED, HAND ASSEMBLED, AND HAND PAINTED. EACH ONE IS UNIQUE. SLIGHT IMPERFECTIONS MAY OCCUR AND ARE NOT MANUFACTURING DEFECTS.

PLEASE NOTE THAT WE DO NOT WARRANTY AGAINST THE USE OF PERMANENT MARKERS, NON-WATER-BASED PAINTS, CRAYONS, OR WASHABLE MARKERS. SOME OF THESE ITEMS CONTAIN PERMANENT COLOR DYES THAT COULD DAMAGE THE SURFACE.

**CLEANING INSTRUCTIONS**

CLEAN THE SURFACE USING A SLIGHTLY DAMP CLOTH AND MILD DISH WASHING LIQUID IF NECESSARY. DO NOT USE ANY CLEANING PRODUCT CONTAINING ALCOHOL OR AMMONIA. THESE WILL DULL THE SHINY SURFACE OF THE PRODUCT. FURNITURE POLISH WILL ALSO WORK TO CLEAN AND DUST OFF THE SURFACE.

**ADULTS: WASH ALL FOOD/DRINK PLAYTHINGS THOROUGHLY BEFORE USE. NOT DISHWASHER, OVEN OR MICROWAVE SAFE.**

WE RECOMMEND THAT YOU TEST ALL CLEANING MATERIALS ON THE UNDERSIDE OF ANY SURFACE THAT WOULD NOT BE SEEN DURING NORMAL USE OF THE PRODUCT. IF YOU HAVE QUESTIONS REGARDING THE MAINTENANCE OF THIS PRODUCT PLEASE FEEL FREE TO CALL US.

**SOLE AND LIMITED WARRANTY**

THIS TOY IS WARRANTED SOLELY AGAINST MANUFACTURING DEFECTS FOR A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, WHICH RUNS ONLY TO THE ORIGINAL USER OF THE TOY. IN THE EVENT OF A MANUFACTURING DEFECT, PARTS WILL BE REPLACED OR THE ENTIRE PRODUCT WILL BE REPLACED OR THE PURCHASE PRICE WILL BE REFUNDED, AT THE ELECTION OF THE MANUFACTURER. TO ACTIVATE AND PROTECT THIS WARRANTY, PRESERVE EVIDENCE OF ORIGINAL PURCHASE AND CAREFULLY INSPECT THE CONDITION OF THE TOY PRIOR TO AND AFTER ASSEMBLY, LOOKING FOR MISSING, DEGRADED, BROKEN OR HAZARDOUS PARTS, INCLUDING PARTS WHICH CAN BE SWALLOWED BY A CHILD, CAUSE A CHILD TO CHOKE, OR OTHERWISE CAUSE INJURY. SUCH PARTS MAY INCLUDE FASTENERS AND CONNECTORS. SHOULD YOU OBSERVE ANY DEFECTS, DO NOT USE THE TOY AND IMMEDIATELY NOTIFY THE MANUFACTURER. FAILURE TO DO SO SHALL CONSTITUTE MISUSE. MISUSE, IMPROPER ASSEMBLY, FAILURE TO HONOR A WARNING, FAILURE TO SUPERVISE, INSPECT OR MAINTAIN THE TOY, OR DAMAGE TO THE TOY, WHETHER INTENTIONAL OR INADVERTENT, SHALL INVALIDATE THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

TO SUBMIT A WARRANTY CLAIM PLEASE CONTACT KIDKRAFT CUSTOMER SERVICE AT 1-800-933-0771 FOR INSTRUCTIONS ON HOW TO PROVIDE PROOF OF PURCHASE AND HOW TO RETURN THE ITEM FREIGHT PRE-PAID.