





 

 



 

 



 

 

 

 

 
 
 
 
 


 
 
 














 

 

 
 


 
 

 
 
 














 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / - -	 Shift + Guide / - / - -
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 Source	 AV / Input / RDS
 Vol +	 Vol +
 Vol -	 Vol -
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Audio	 Audio / Lang 1/11
 Aspect	 Eject / Surround
 Display	 Display / Media
 Tv/ Radio	 TV/ Radio /
 Rec	 Rec / Rec Mode
 Up	 Up
 Left	 Left
 OK/CH List	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home





Originale		Sostituto		Originale		Sostituto	
	Exi t		Exi t / Cancel / Clear		>> / Subpage		>> / Preset +
	EPG		Gui de / EPG / - / - -				
	P. Mbde		Pi ct ure / Format				
	S. Mbde		Sound / Ti tle				
	Sl eep		Sl eep / Ti ner				
	Text		Text / Got o				
	PVR/ Hol d		Set up / OPT /				
	Si ze		Zoom / Si ze				
	FAV		Fav / Marker / PC				
	Pl ay		Pl ay / Sl ow				
	Pause/ Ti meshi ft		Pause / Step / Freeze				
	St op/ Aut o		St op / Hol d				
	Reveal		D. Menu / Top				
	Subt itle		Subt itle / EQ				
	<< Ni cam		<< / Tune-				
	>> Freeze		>> / Tune+				
	I << / I ndex		I << / Preset-				

