
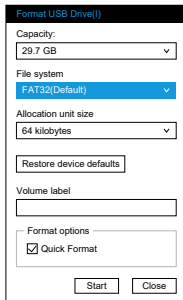


## 01 | Format SD Card

### (1) 32G and below



Must format the microSD card on computer by [FAT32](#).

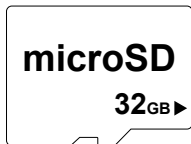

### (2) 64G and above

For microSD card over [64G or above](#), which can not be formatted by FAT32 on computer, please use APP to format. When use large capacity card, the card maybe can not be recognized by the cam, but after formatting, the SD card will be OK.

## 01 | Format SD Card

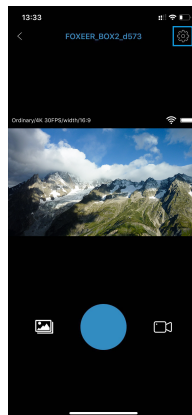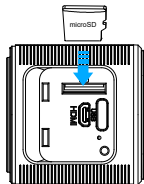


FOXEEER APP



CHOOSE A NETWORK

FOXEEER\_BOX2\_XXXX

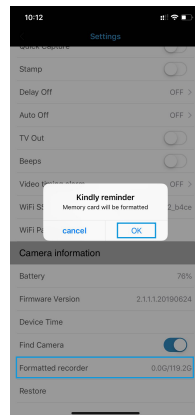

## 02 | Firmware Download and Extract

Please go to Foxeer website product page to download the latest firmware, extract and put all 11 files into the root of the SD card.


### Firmware Download:

<http://www.foxeer.com/Foxeer-BOX-2-4K-HD-Action-Camera-Super-Vision-g-222>

### APP Download:

<http://www.foxeer.com/Foxeer-BOX-2-4K-HD-Action-Camera-Super-Vision-g-222>


You also can search Foxeer HD in IOS and GogglePlay.

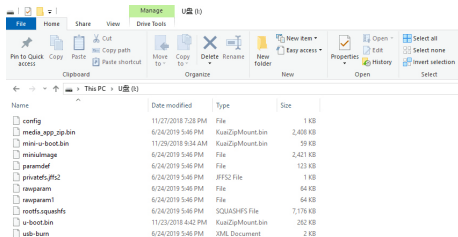

## 03 | Firmware Upgrade

### Insert microSD card

Open the top cover, Insert the SD card, label upward.


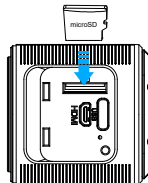


Use brand name memory cards that meet these requirements:

- MicroSD, microSDHC, or microSDXC
- UHS-I rating, U3 video level

### Upgrade

Ensure that the camera has more than 50% of the power, press the shutter and the power button for about 5 seconds simultaneously, until the front status light flashes.

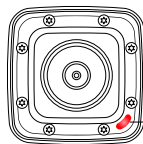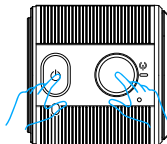

Status Light


\*Status LED flashes continuously

## 03 | Firmware Upgrade

### Upgrade successfully

Wait for two minutes, after the upgrade is complete, the buzzer beeps once and the three indicators are on simultaneously.

Suggest using 32G or below SD card to upgrade.

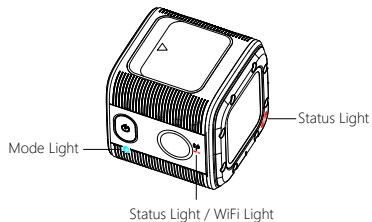

## 04 | Check firmware version

After upgrade, open Wifi, connect with APP to check the current firmware version.



FOXEEER APP



## 04 | Check firmware version

