 


bopmen

bopmen

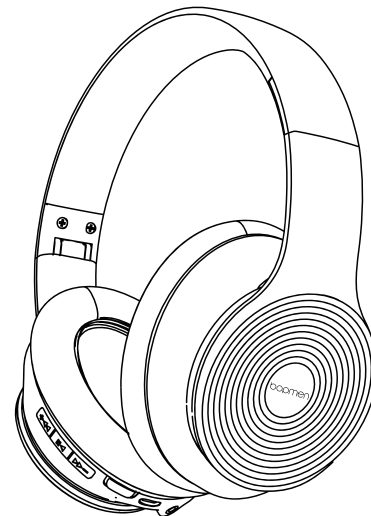

S40

Wireless Active Noise Cancelling Headphones

User Manual

Safety Instructions

 
Hearing Safety:

1. To avoid hearing damage, please do not listen for a long time at high volume.
2. Please cautiously use or stop using in potentially dangerous situations.
3. Do not use the headphones while driving.
4. For your safety, please do not turn the volume too high while running outside, so that you can hear your surroundings.

Operation Safety:


1. Avoid dropping.
2. Do not disassemble.
3. Keep away from children to avoid danger from improper use.
4. Do not submerge in water.
5. Do not use the device outdoor during thunderstorm.
6. Avoid operate in extreme temperatures, please use the device within its operation temperature: -15°C (5°F)~55°C (131°F).
7. Use original or certified cables to charge.
8. Do not use any corrosive cleaner/oil to clean the headphones.

What's in the box?

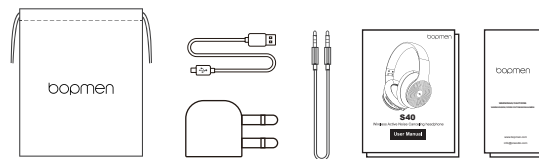


WARNING

 The In-flight plug adaptor lets you enjoy balanced sound from the in-flight entertainment system while travelling in a plane.

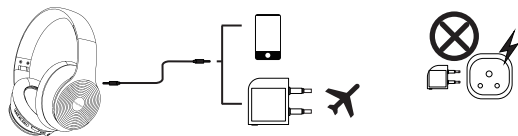

The In-flight adaptor is NOT MEANT to charge your device. Plugging the in-flight adaptor into a AC Power Socket to charge the headphones will cause severe damage to the device.

 At a Glance

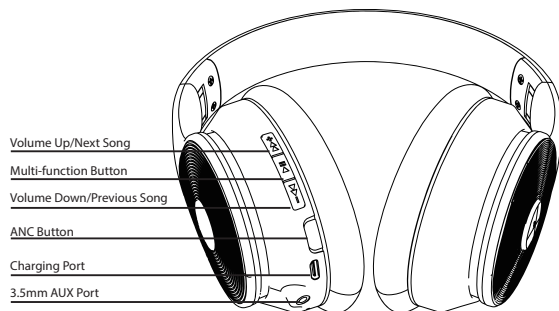

How to use?



Hold Multi-function Button for 3 seconds to turn on the headphones, and then the device enters the pairing mode. (Indication light turns blue)



Hold Multi-function Button for 3 seconds to turn off the headphones.



Press to adjust volume. Long press to skip to next/previous song.



Press and hold the volume up and down buttons simultaneously for 5 second to clear the Bluetooth pairing record.



Press Multi-function Button to play/pause music.



Hold the ANC button for one second to turn on/off Active Noising cancelling (Indication light turns green)



Press Multi-function Button to answer/end call.



Press Multi-function Button to reject coming call



Double press Multi-function Button to reject coming call / activate the Siri voice control function.

Functions

Easy Pairing

1. Hold Power Button for 3 seconds to turn on the headphones, and then the device enter pairing mode.
2. Keep the headphones and your Bluetooth device as close as possible during the pairing process.
3. Turn on Bluetooth function of your Bluetooth device. Search headphones' Bluetooth signal on your Bluetooth device, and select "S40" to pair it with your Bluetooth device. The Indicator Light slowly flashes blue when the headphones pair successfully.
4. If you are asked for the Password/PIN code during the pairing procedure, enter "0000" (four zeros).


Pair to The Second Bluetooth Device

1. Make sure the headphones have been connected to the first Bluetooth device successfully. And the headphones are not playing music.
2. Turn off the first device's Bluetooth.
3. Turn on the second device's Bluetooth, find the "S40" model name and select it to pair with your device.
4. Turn on the first device's Bluetooth and select "S40" pair it again.

Restore factory setting

Press and hold the volume up and down buttons simultaneously for 5 seconds to clear the Bluetooth pairing record.

NOTE: bopmen S40 only has one audio channel, if you want to play music from another Bluetooth device, please pause the current device's music first.

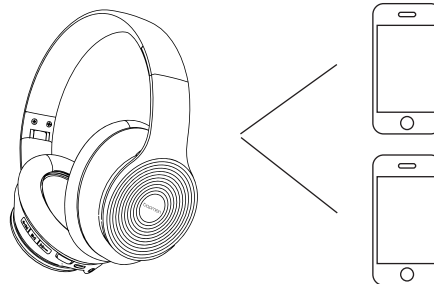

ANC-Active Noise Cancelling :

Turn on ANC: Push ANC button to "on" side and the ANC Indicator light on green.



Turn off ANC: Push ANC button to "off" side and the ANC Indicator turns off.

AUX Wired Connection:

The headphones supports AUX input for wired external audio source connection. Simply Power Off the headphones and plug in the audio cable.(**Note : Wired mode is not available when the headphones ran out of battery**)

NOTE: The buttons and microphone on bopmen S40 will not work when connected as wired headphones.

Collapsible Design

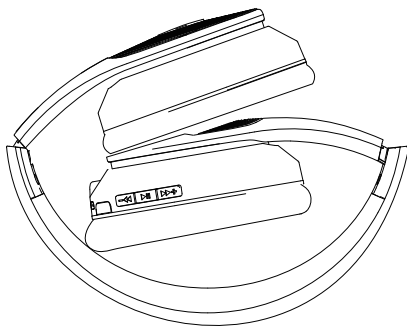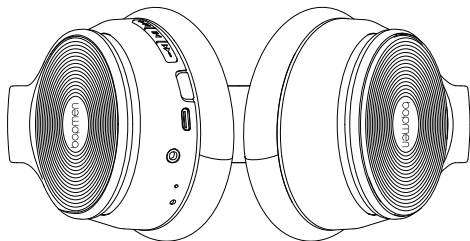

Specification

Indicator Light

- Pairing: Red and blue light flash alternately
- Paired: Blue light flashes
- Playing: Slow flashes blue light
- Charging: Red light on
- Full Charge: Red light turns off
- Battery Low: Red light flashes with voice prompt
- ANC Working: Green light turns on

Technical Specification

- Product Name: S40
- Bluetooth Version: V5.0
- Input: 5V/220mA
- Noise Reduction Depth: 20~25dB
- Charging Time: About 2.5 hours
- Using Time 1: 15 hours (ANC+BT)
- Using Time 2: 20 hours (BT only)
- Using Time 3: 40 hours (ANC only)
- Bluetooth Profile: A2DP AVRCP HFP HSP
- Bluetooth Range: 10m/33ft
- Sensitivity: 102+/-3dB
- Impedance: 32 Ω
- Driver Diameter: 40mm
- Frequency Response: 20Hz-20kHz
- Net Weight: 230g

Q & A

Q: Why does the headphones not work when using audio cable?

A: If the battery of the headphones is completely dead, it cannot be used in the wired state. Please after charging the headphones for 10 minutes and then use the audio cable to enter wired mode.

Q: Why the headphones can't pair with my mobile phone?

A: Please check whether your headphones are in pairing mode or reconnection mode, check if Bluetooth search function of your Bluetooth device has been turned on. And then go to Bluetooth menu of your Bluetooth device, delete/forget the headphones, and reconnect the headphones.

Q: Why headphones can't be turned on?

A: Please double check battery status of your headphones.

Q: Can I replace battery for the headphones?

A: No. these headphones use built-in non detachable Li-Polymer battery. It can't be replaced.

Q: Can I use the headphones while driving?

A: For your safety, we strongly recommend you to not use headphones to avoid distraction while driving.

Q: Why the headphones sometimes disconnect with Bluetooth device within 10 meters?

A: Please check if there is any metal material within relatively close range may interfere Bluetooth connection. Because Bluetooth is a radio technology that is sensitive to objects between the headphones and its connected devices.
and its connected devices.

Q: Why I cannot hear any voice from my computer or mobile phone?

A: Please check if the output channel of your computer support A2DP profile. And please check the volume of your headphones, as well as computer/mobile phone.

Q: Why am I unable to use the headphones to control volume of select track of APP in my mobile phone?

A: Due to configuration of different application software, the headphones may not totally compatible with some applications.

Q: What can I do if the Bluetooth is crashed?
(Cannot close or open)

A: Please reset headphone Bluetooth by inserting audio cable into audio jack then removing it.

Q: Why the Bluetooth is turned off when I use the audio cable to connect?

A: This is our special set. All Bluetooth feature buttons stop working and Bluetooth should be turned off when users insert audio cable into jack. Don't worry, the Bluetooth will be available when the audio cable is moved.

Limited Warranty / Eingeschränkte Garantie

保証書 / Garantie limitée / Garantía limitada

For more detailed FAQs or suggestions, please feel free to contact our customer service team.

Für weitere FAQs oder Vorschläge wenden Sie sich bitte an unseren Kundenservice.

より詳しいFAQやアドバイスをご希望の方は、お気軽にカスタマーサービスまでお問い合わせください。

Pour plus de FAQs, veuillez contacter notre service client.

Para preguntas o sugerencias comunes más detalladas, no dude en ponerse en contacto con nuestro equipo de servicio al cliente.

✉ info@bopmen.com