


AIR COOLER

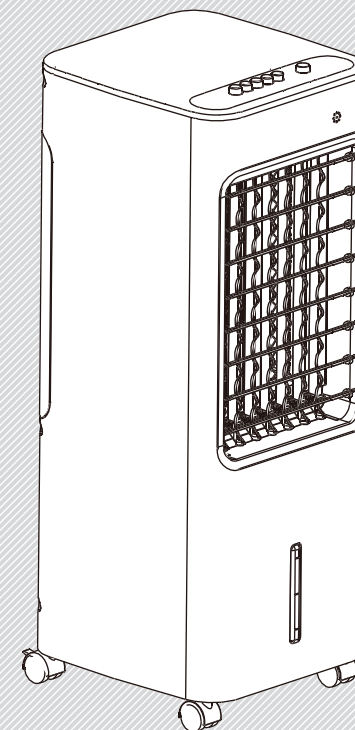

## OWNER'S MANUAL

5.7L AIR COOLER

MODEL: AC100-18B


***READ AND SAVE THESE INSTRUCTIONS***

Attention: Pictures in the IM are for reference only.

**GD Midea Environment Appliances MFG.Co.,Ltd.**


No.28, Dong Fu Road, Hesui East Industrial Area, Dong Feng Town,  
Zhongshan, Guangdong 528425 P.R.China

## SAFETY INSTRUCTION


1. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Unplug the appliance during filling and cleaning.
4. Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
5.  Correct Disposal of this product  
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# INSTALLATION INSTRUCTIONS

## ■ Name of components

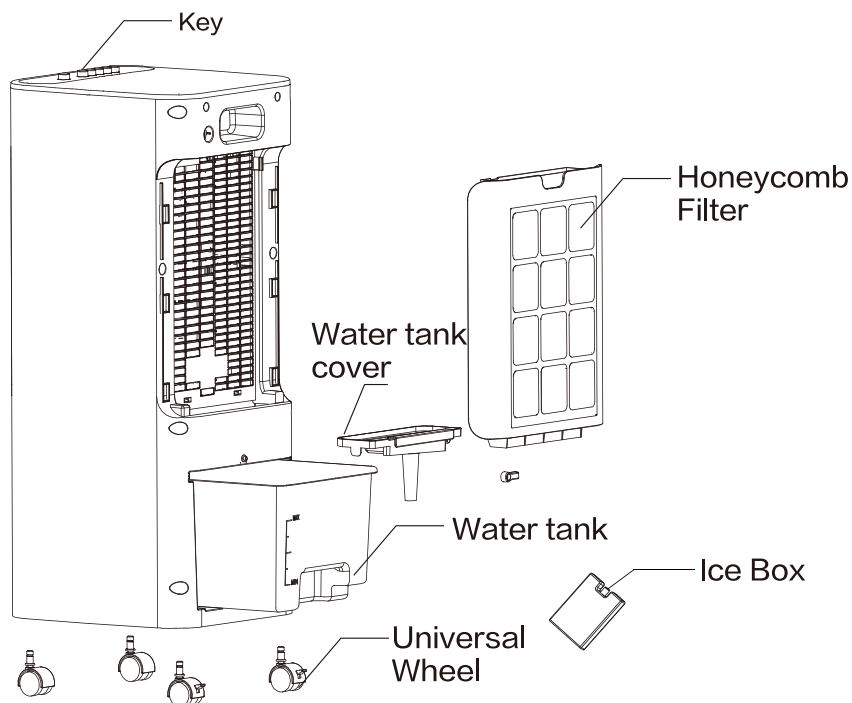


## Foot-Wheel Installation

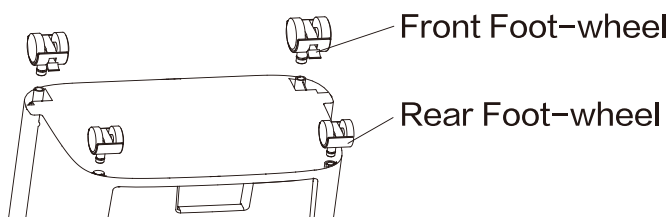

# INSTRUCTIONS FOR USE

## ■ Instructions for operation

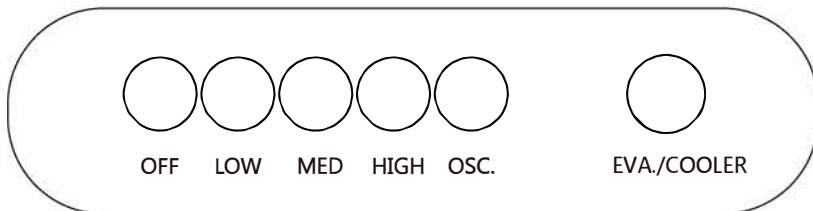


Press a key on the unit to activate a corresponding function.

For instance:

- Press [OFF] Key to activate or deactivate OFF Function.
- Press [LOW], [MED], [HIGH] Keys to adjust fan speed.
- Press [OSC.] Key to activate or deactivate Swing Function.
- Press [EVA./COOLER] Key to activate or deactivate EVA./COOLER Function.

Please Note:

Buttons on the unit may differ based on the actual product model.

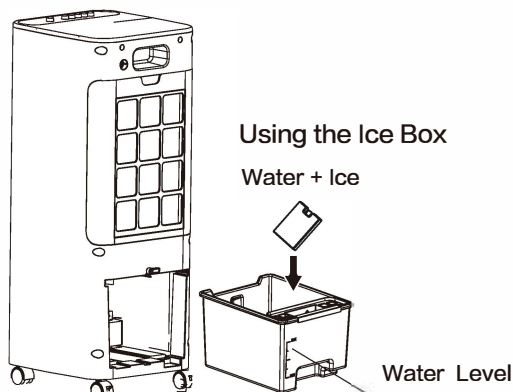

Please Note:


When humidifying, water level in the Water Tank must remain under MAX indication; replenish water if level gets lower than MIN indication.

## ■ Guidelines for water filling and cleaning of water tanks.


- Please unplug the power plug when adding water and cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.
- Before starting up, make sure the pump module is fixed in place, if the pump module is placed randomly, it may cause the unit to not work properly.

There are two ways to add water:


Drain half water tank (pump module not removed), add water directly,  
After detaching the pump module, pump the water tank to add water or clean it.

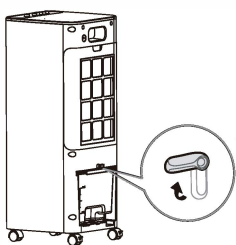


**1** Push the water tank button out to horizontal state

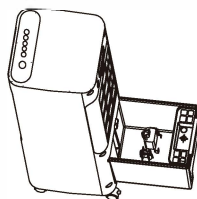

**2** Take half of the tank out, the water tank can be Pushed back after adding water

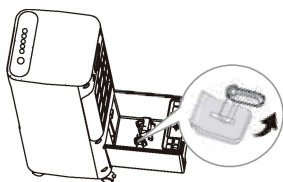

**3** Turn the knob off by hand (According to the 90 ° counterclockwise)  
Separate the water tank from the pump module (Including the pipe)

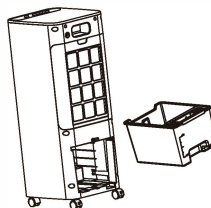

**4** After slowly pulling out the water tank, clean and add water to the water tank.

**5** After cleaning and adding water to the water tank, push it into the water tank and fix the pump module Lock the water tank with the knob

## MAINTENANCE INSTRUCTION

The Air Cooler requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, air cooler must be unplugged.
2. To ensure sufficient air supply, the honeycomb filter and dust filter shall be cleaned regularly.
3. Please wipe the exterior parts with a soft cloth and mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.

Do not use any of the following as a cleaner: gasoline, thinner.

5. Do not allow water or any other liquid into the motor housing or interior parts.