




Drain pan

Installation instructions

GB

Document in original language | 277318 · A001

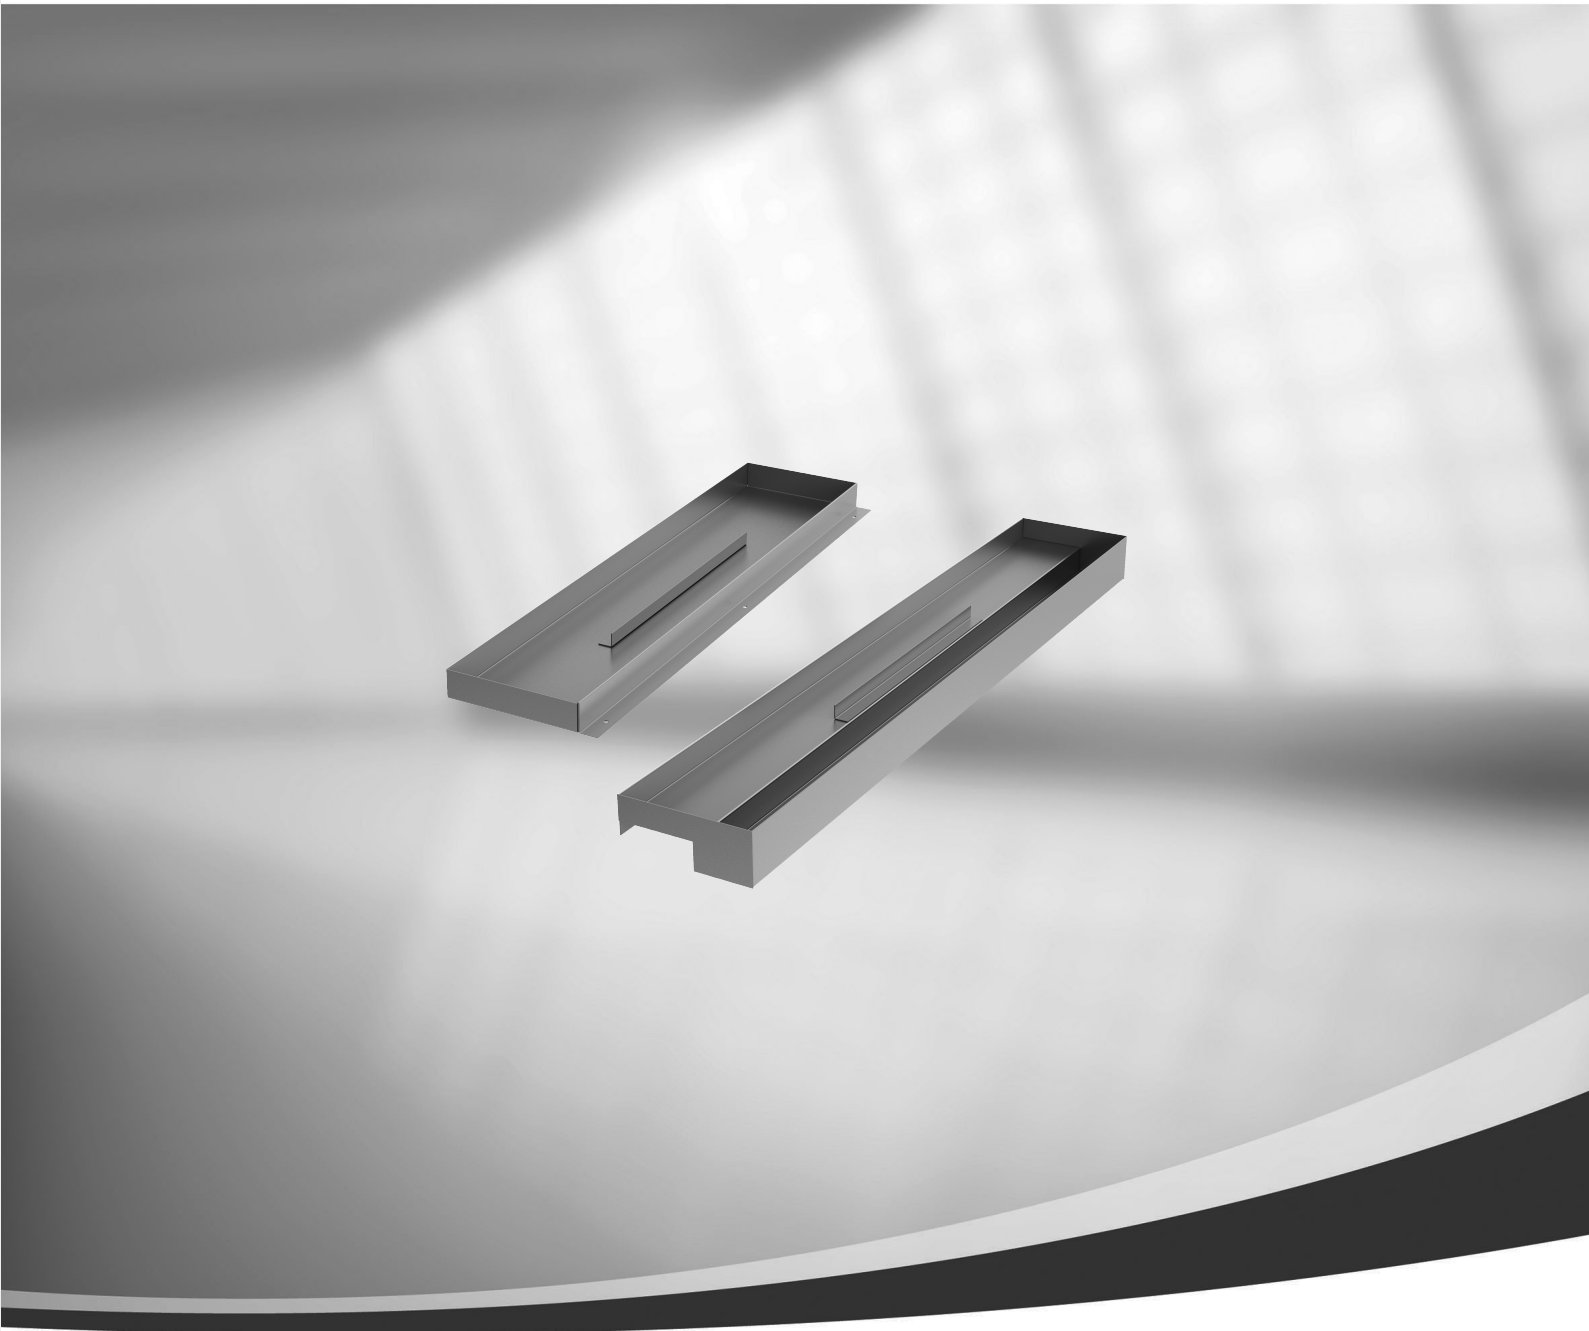

Get In Touch

 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





© Copyright Systemair AB
All rights reserved
E&OE

Systemair AB reserves the rights to alter their products without notice.
This also applies to products already ordered, as long as it does not affect the previously agreed specifications.



277318 | A001

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





Contents

- 1 Introduction 1
 - 1.1 Product overview 1
 - 1.2 Parts enclosed 1
 - 1.3 Intended use 1
- 2 Installation 1



Get In Touch

 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



Get In Touch

 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk


Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

1 Introduction

If the water coil in Topvex SR is used as a cooler (with cold water) a drain pan must be installed.

1.1 Product overview

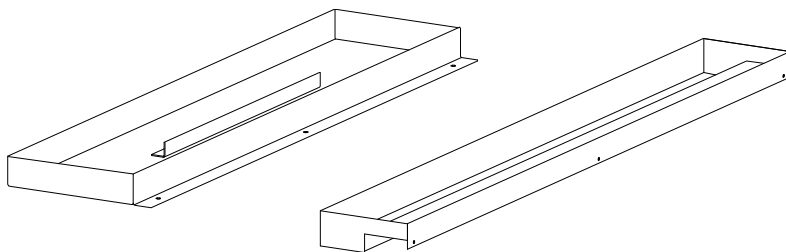

1.2 Parts enclosed

Drain pan, rivets to attach the drain pan, protective stickers for rivet and grommet holes.

1.3 Intended use

Place the drain pan under the water coil to collect possible condensation water.

2 Installation



Danger


Disconnect the mains power supply to the unit is before performing any maintenance or electrical work.



Warning



- Beware of sharp edges. Use gloves and protective clothing.
- Be aware of rotating parts even if the mains power supply is disconnected.

For all Topvex SR sizes

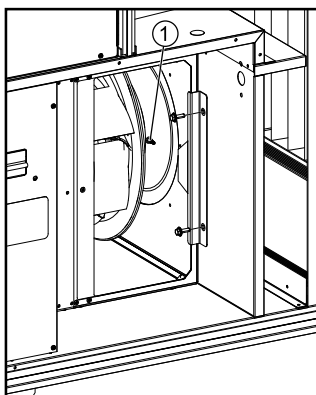

Remove the supply air fan for easy access.

1. Disconnect the fast coupling to the electric wire.
2. Disconnect the blue and red tubes from the supply air fan (standard units with CAV). Blue tube is connected to the cone (1) of the fan, the red tube is connected to measuring nipple on the wall or on the sheet metal on the suction side.
3. Loosen the two bolts on the rail to remove the fan.

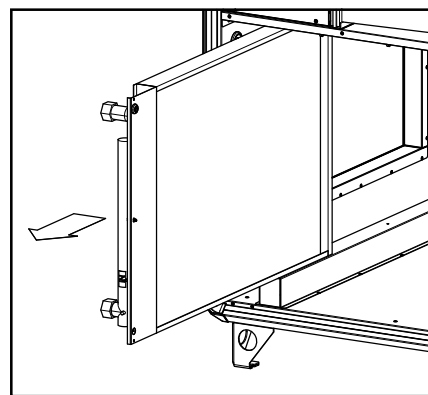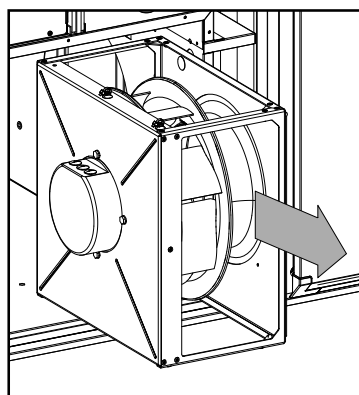

Pull out the water coil.

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk


Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH




SR20, 25, 60, 80, 100


SR35, 70

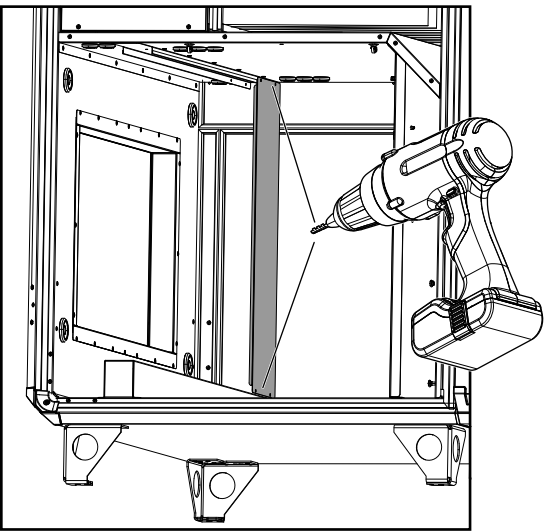

Use a drill to remove the inner coil plate.

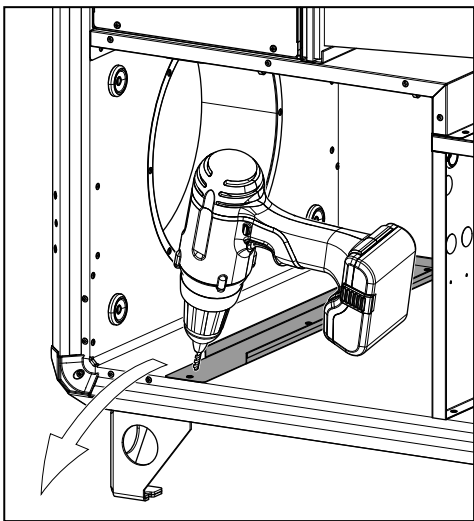

Use a drill to remove the bottom coil bracket. Attach protective stickers over the holes. The upper coil bracket remains in place.

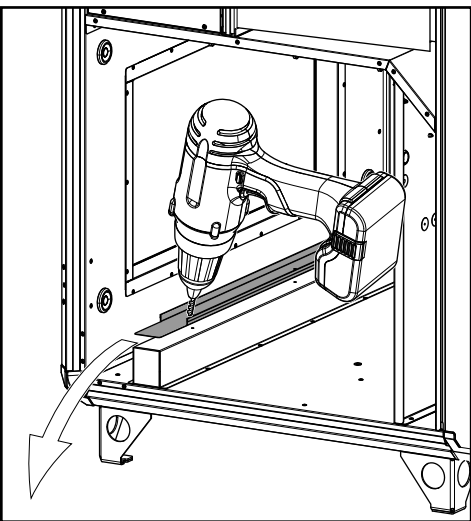

Get In Touch


 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address


Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



SR20, 25, 60, 80, 100

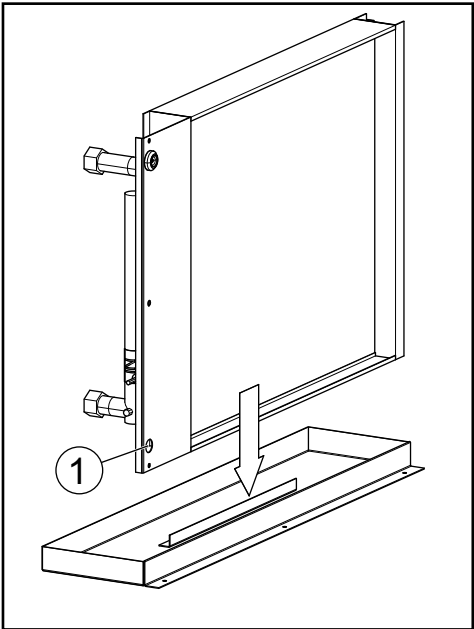


Remove the bottom grommet (1) from the water coil and place a protective sticker over the hole. Place the water coil in the drain pan.

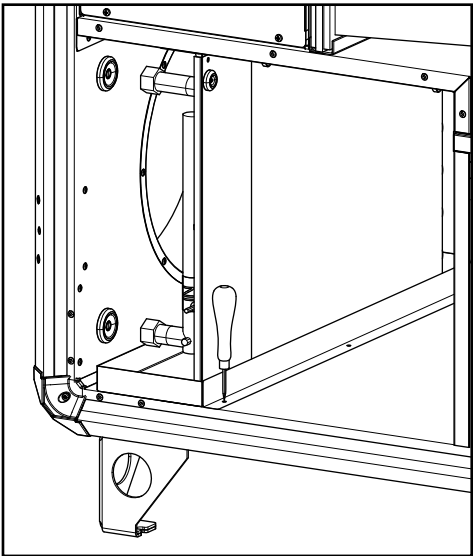


The water coil is placed in the drain pan to ensure the placement with the upper coil bracket. Mark the drill holes using the drain pan as a template.

SR35, 70

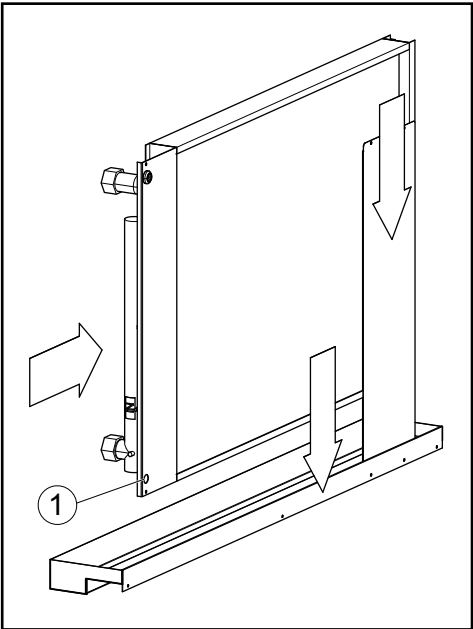

Place the inner coil plate with the coil in the drain pan.

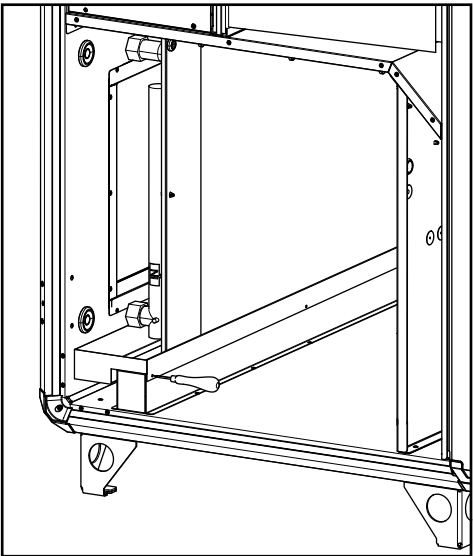

Get In Touch


Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address


Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





SR20, 25, 60, 80, 100

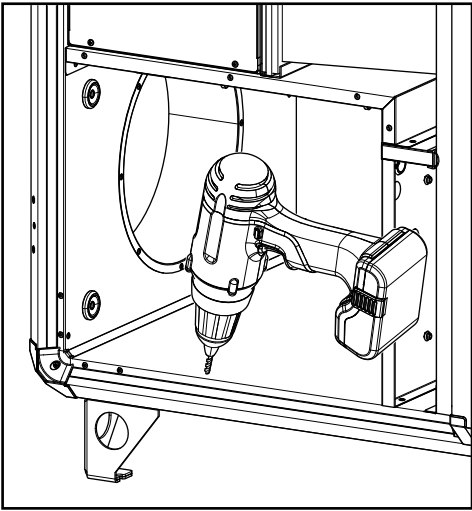

SR35, 70

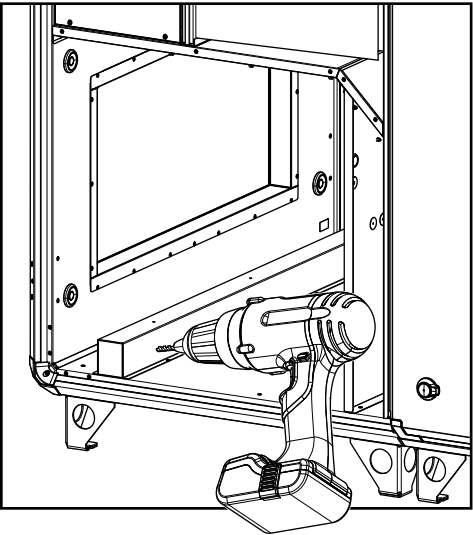

Remove the drain pan and water coil. Drill 4,2 mm holes.

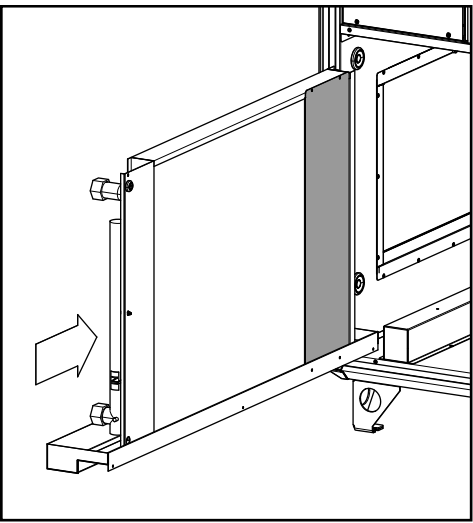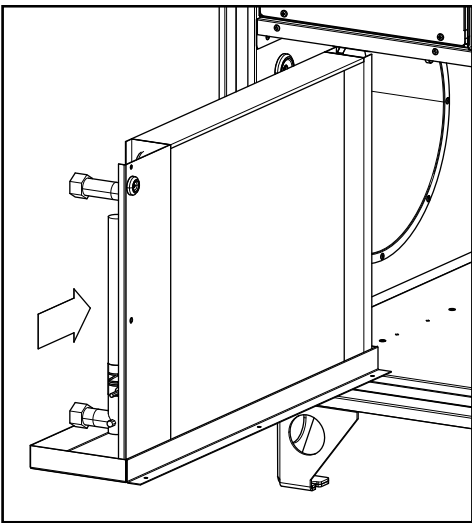

Place the water coil in the drain pan and push it in to the air handling unit.

Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremi.co.uk


Our Address

Puravent, Adremi Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH




SR20, 25, 60, 80, 100

SR35, 70

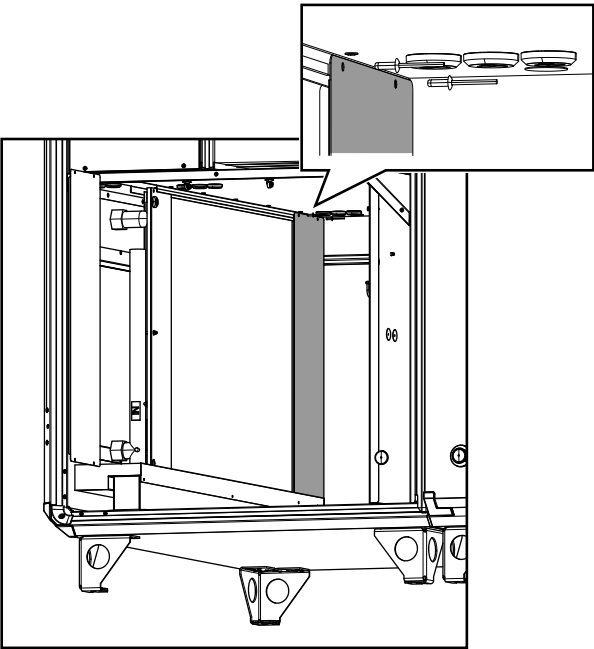


Fasten the inner plate with rivets to the upper coil bracket.

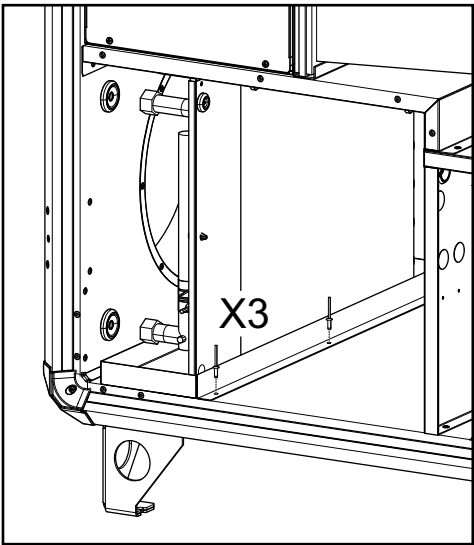

Fasten the drain pan with rivets.
Put the fan in place and connect the electric wire and tubes.

For connection to drains, follow the local demands.

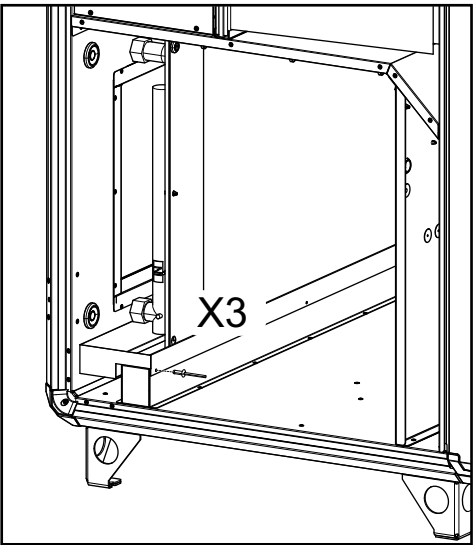

Get In Touch

Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



Systemair Sverige AB
Industrivägen 3
SE-739 30 Skinnskatteberg, Sweden

Phone +46 222 440 00

www.systemair.com

Get In Touch



Call: [0845 6880112](tel:0845 6880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

