


MP-WP6-IP

6 Buttons IP Control Panel

Program buttons to send RS232 commands to control projectors, screens and other third-party devices.

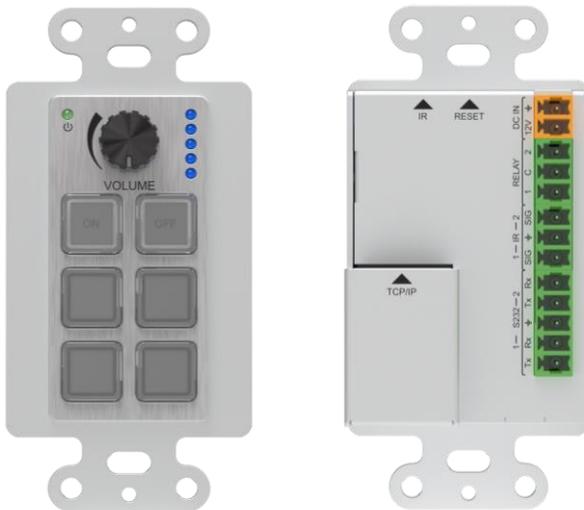

All Rights Reserved

Version: MP-WP6-IP_2023V1.0

6 Buttons IP Control Panel

Preface

Read this user manual carefully before using the product. Pictures are shown in this manual for reference only, different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till January, 2023. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



6 Buttons IP Control Panel

SAFETY PRECAUTIONS

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

Contents

1. Introduction	1
1.1 Introduction to MP-WP6-IP	1
1.2 Features	1
1.3 Package List	1
2. Panel Description.....	1
3. System Connection.....	3
4. GUI Control.....	4
4.1 Log in.....	4
4.2 Home	5
4.3 Configuration	5
4.3.1 Knob	5
4.3.2 Button	6
4.3.3 TCP/IP	6
4.3.4 RS232	7
4.3.5 IR.....	7
4.3.6 Relay	8
4.3.7 LED	8
4.3.8 Delay	9
4.4 Network	9
4.5 Setting	10
4.6 Upgrade.....	10
5. Specification	11
6. Panel Drawing	12
7. Customer Service	13

1. Introduction

1.1 Introduction to MP-WP6-IP

The Wallplate Control Panel has (2) built-in programmable RS232 connectors and (2) Infrared (IR) connectors.

The Programmable Control Panel can fully control the compatible switches, as well as third-party devices such as matrix switcher, compact scaler switcher, projectors, screens, etc. Use the device for presentations in showrooms, classrooms, and boardrooms.

1.2 Features


- Six customizable control buttons;
- One volume control knob;
- Support IR, RS232 and TCP/IP control;
- Can be controlled and configured via GUI;
- Can be powered by PoE;


1.3 Package List

- 1 x MP-WP6-IP
- 6 x Button caps
- 2 x 3-Pin Pluggable terminal block
- 1 x User Manual
- 1 x 2-Pin Pluggable terminal blocks
- 1 x 5-Pin Pluggable terminal block
- 1 x Button label

Note: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

2. Panel Description

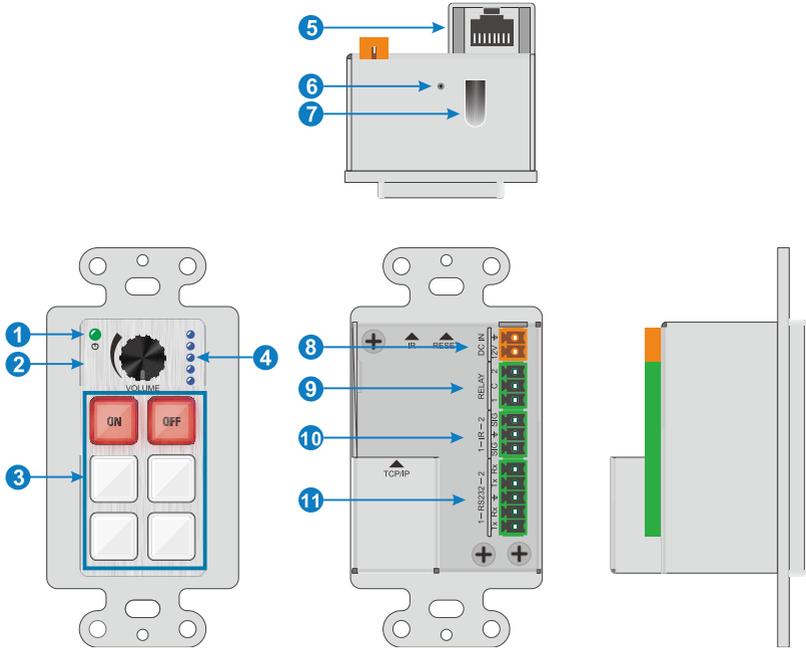

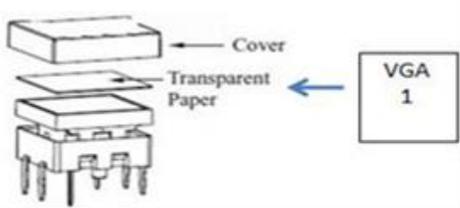No.	Name	Description
1	Power LED	Illuminates green when power on.
2	Volume Knob	Black volume knob, high-quality knob with high damping feel and stable structure, about 12-13mm in diameter
3	Button	<p>(6) crystal and luminescent programmable buttons:</p> <p>Each button can be programmed with the Control Panel Software.</p> <p>Each label within a button can be easily changed. Simply select the label you need and change it as shown below:</p> 


6 Buttons IP Control Panel

4	Volume indicator	5x blue indicator lights, light up in percentage according to the volume knob (1-19%, 20-39%, 40-59%, 60-79%, 80-100%)
5	TCP/IP	RJ45 connector. Connects with PC to run the GUI to customize button control.
6	RESET	Long-press this button 3 seconds until the power LED goes out to start to the restore factory defaults, and then the LED will light up while the resetting is successful.
7	IR Sensor	Receives and learns the IR code to build the IR database.
8	PWR(12V)	Connects with 12V DC power adaptor.
9	RELAY	Two groups of Relay Control, share a common switch interface, default ON
10	IR	Two sets of IR OUT, share a ground port, 5V standard, connect to the infrared emitting rod
11	RS232	2 RS232 ports. Connect the third-party devices which are need to be controlled via the MP-WP6-IP.

3. System Connection

The MP-WP6-IP can active different ports at one time. It means every button can send the RS232 commands, IR code at the same time.

The demo system diagram as below:

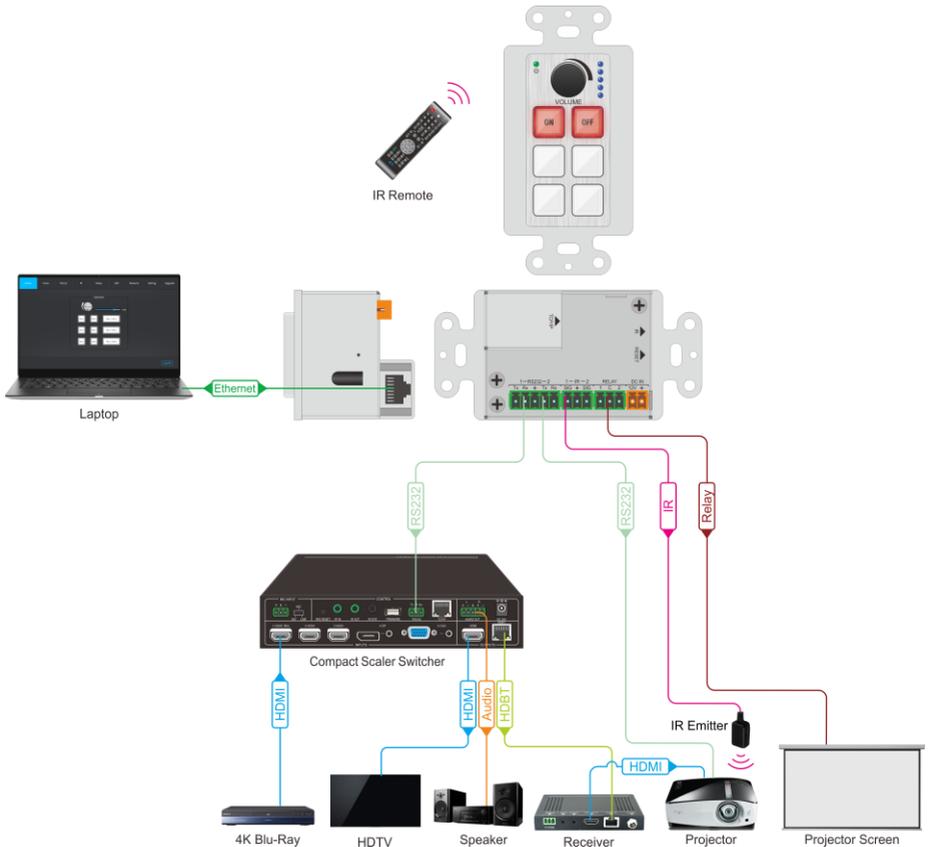

System Diagram

- 1) Connect the MP-WP6-IP to the LAN port of Wireless Route, or control device (such as PC) to TCP/IP port.
- 2) Connect the third-party devices (such as Matrix Switcher, Compact Scaler Switcher or Projector) that need to be controlled to RS232 (1) ~RS232 (3) ports.
- 3) Connect the IR Emitters to IR (1) ~ IR (2) ports.
- 4) Connect to the third-party devices that need to be controlled by relay.

4. GUI Control

4.1 Log in

The MP-WP6-IP is controlled by TCP/IP. The default settings are:

IP Address: 192.168.0.178

Subnet Mask: 255.255.250.0

Type 192.168.0.178 in the internet browser, it will enter the below log-in webpage:



User Name

Password

Login

GUI: V1.0.0
Firmware: V1.0.0


Username: admin

Password: admin

Type the username and password, and then click the login to enter the GUI setting.

6 Buttons IP Control Panel


4.2 Home

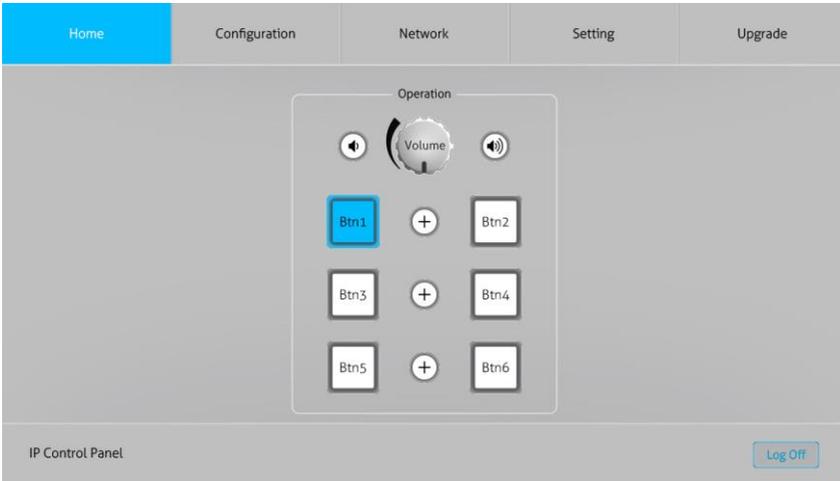

- Click the volume icon to adjust the volume; or click the knob icon to implement the corresponding event;
- Mouse operation click the corresponding button

4.3 Configuration

4.3.1 Knob

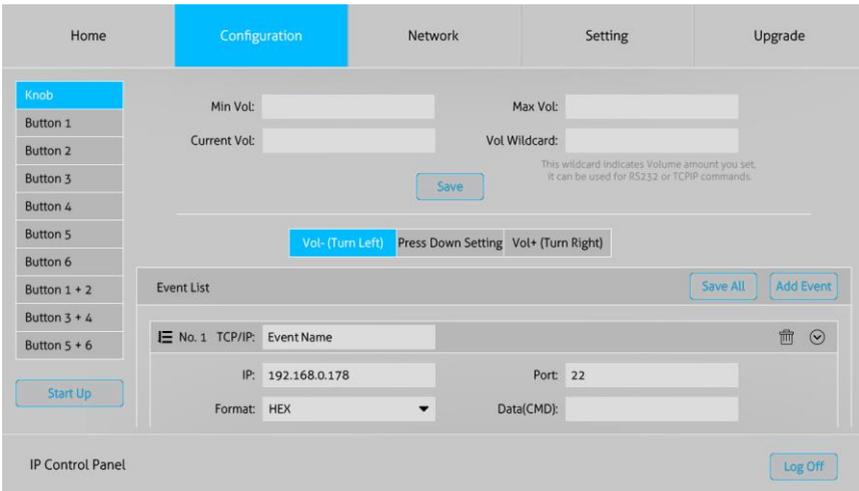

- Knob/Button: Choose the knob or button to enter the event setting page
- Start up: Click to enter the starts up event setting page

6 Buttons IP Control Panel

- Set the Knob events: Turn Left, Press Down Setting or Turn Right

4.3.2 Button

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, a 'Knob' menu has 'Button 1' selected. The main area displays an 'Event List' with three entries:

- No. 1 TCP/IP: Event Name (with a trash icon and refresh icon)
- No. 2 RS232: Event Name (with a trash icon and refresh icon)
- No. 3 LED: Event Name (with a trash icon and refresh icon)

The details for the selected TCP/IP event are shown in a form below:

- IP: 192.168.0.178
- Port: 22
- Format: HEX
- Data(CMD):
- End Char for ASCII: NULL

Buttons for 'Save All', 'Add Event', 'Start Up', and 'Log Off' are visible.

- Click the Button 1 to set the button 1 event, click Add Event and then set the Event and the corresponding settings
- One button can set multiple command events, such as TCP/IP, RS232, IR, RELAY, Delay and LED status

4.3.3 TCP/IP

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, a 'Knob' menu has 'Button 1' selected. The main area displays an 'Add Event' form:

- Event: TCP/IP
- Event Name: Event Name
- IP: 192.168.0.178
- Port: 22
- Format: ASCII
- End Char for ASCII: NULL
- Data(CMD):

Buttons for 'Save', 'Cancel', 'Start Up', and 'Log Off' are visible.

6 Buttons IP Control Panel

- Set the TCP/IP event, such as IP, Port, Format, End Char for ASCII and Data

4.3.4 RS232

The screenshot shows the 'Configuration' tab of the IP Control Panel. The 'Add Event' section is active, with 'Event' set to 'RS232'. The 'Event Name' field is empty. The 'RS232 Port' is set to 'RS232 1', 'Baud Rate' to '9600', 'Data Bit' to '8', 'Parity' to 'NONE', and 'End Char for ASCII' to 'NULL'. The 'Format' is set to 'ASCII' and 'Data(CMD)' is empty. There are 'Start Up', 'Save', and 'Cancel' buttons at the bottom of the form. The 'Log Off' button is visible in the bottom right corner of the panel.

- Set the RS232 event, and then click save button to finish setting.

4.3.5 IR

The screenshot shows the 'Configuration' tab of the IP Control Panel. The 'Add Event' section is active, with 'Event' set to 'IR'. An 'IR Learning' button is present. The 'Event Name' field is empty. The 'Port' is set to 'IR Out 1' and 'Code or Custom' is set to 'IR Code'. The 'IR Code' field is empty. There is a table for 'Set', 'Label', 'Value', and 'Del' with an empty body. There are 'Import' and 'Export' buttons below the table. There are 'Start Up', 'Save', and 'Cancel' buttons at the bottom of the form. The 'Log Off' button is visible in the bottom right corner of the panel.

- In IR event, user can import or export the IR command
- Set the Event Name, Port, Code or Custom and IR Code for the event
- Click Save button to finish setting

4.3.6 Relay

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, a sidebar lists 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is titled 'Add Event' and contains the following fields:

- Event: Relay (dropdown menu)
- Event Name: Event Name (text input)
- Port: Relay 1 (dropdown menu)
- Action Mode: ON (dropdown menu)

At the bottom of the form are 'Start Up', 'Save', and 'Cancel' buttons. The footer of the page includes 'IP Control Panel' and a 'Log Off' button.

- Set the Event Name, Port and the Action Mode;
- Click Save button to finish setting

4.3.7 LED

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, a sidebar lists 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is titled 'Add Event' and contains the following fields:

- Event: LED (dropdown menu)
- Event Name: Event Name (text input)
- Button Select: Button 1 (dropdown menu)
- Status: Always OFF (dropdown menu)

At the bottom of the form are 'Start Up', 'Save', and 'Cancel' buttons. The footer of the page includes 'IP Control Panel' and a 'Log Off' button.

- Set the Event Name, Button Select, Status and LED Color;
- Click the Save button to finish setting

4.3.8 Delay

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, there is a sidebar with 'Knob' and 'Button 1' through 'Button 6' and combinations. The main area is titled 'Add Event'. The 'Event' dropdown is set to 'Delay'. Below it, there is an 'Event Name' input field. Further down, there are four input fields for time: 'Hour' (0, range 0-23), 'Minute' (0, range 0-59), 'Second' (0, range 0-59), and 'Millisecond' (0, range 0-999). At the bottom of the form are 'Start Up', 'Save', and 'Cancel' buttons. The footer of the page shows 'IP Control Panel' and a 'Log Off' button.

- Set the delay event to trigger the event after how long to press
- Click Save button to finish setting

4.4 Network

The screenshot shows the 'Network' tab of the IP Control Panel. At the top, the 'MAC Address' is 44-33-4C-C9-35-12. Below that, there are two radio buttons for 'DHCP' and 'Static IP'. The 'DHCP' radio button is selected. Underneath, there are three input fields: 'IP Address' (192.168.0.178), 'Subnet Mask' (255.255.255.0), and 'Gateway' (192.168.0.1). A 'Confirm' button is located at the bottom of the form. The footer of the page shows 'IP Control Panel' and a 'Log Off' button.

- Select dynamic or static IP mode. Under static mode, then IP Address, Subnet Mask and Gateway can be reset.

4.5 Setting

Home Configuration Network **Setting** Upgrade

Credentials

User Name: admin

New Password: admin

Confirm

Update Profile

Setting: Please select file Browse

Import

Export

Factory Default

Default

IP Control Panel Log Off

- Credentials: setting the user name and new password and then click confirm button to perform the modification.
- Update Profile: Import or export the setting file to implement the system configuration.
- Factory Default: Click Factory reset

4.6 Upgrade

Home Configuration Network Setting **Upgrade**

Firmware Upgrade

C:\ Browse

Upgrade


IP Control Panel Log Off

- Firmware Upgrade: click the browse to choose the upgrade file(the file need to be renamed as "MP-WP6-IP.app") and then click upgrade to execute upgrade.

5. Specification

Program Port	TCP/IP
Output Port	2 x RS232, 2 x IR, 2 x Relay
Output Connector	2 x 3-Pin Pluggable terminal blocks, 2 x 2-Pin Pluggable terminal blocks,
Baud Rate	9600 baud, supports 9600,19200,38400,57600,115200
Power Consumption	2.5W (Max)
Operation Temperature	0 ~ +40°C
Storage Temperature	-10 ~ +55°C
Relative Humidity	10% ~ 90%
Power Supply	Input: 12VDC, PoE
Net Weight	155g
Case Dimensions (W*H*D)	50mm x 103.5mm x 50.5mm

6. Panel Drawing

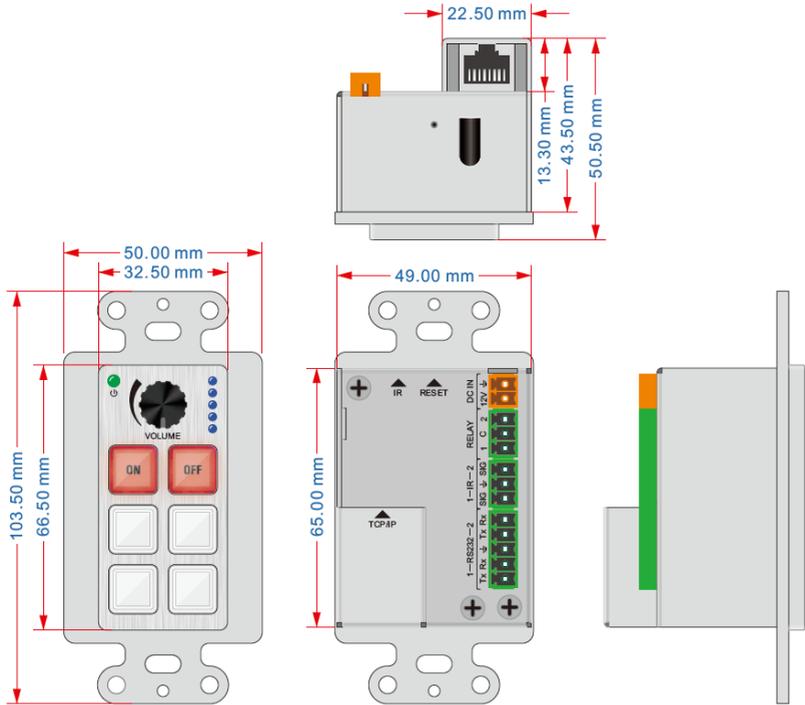

7. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. There terms and conditions may be changed without prior notice.

1) Warranty

The limited warranty period of the product is fixed three years.

2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

3) Warranty Exclusions:

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - ✓ Normal wear and tear.
 - ✓ Use of supplies or parts not meeting our specifications.
 - ✓ No certificate or invoice as the proof of warranty.
 - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - ✓ Damage caused by force majeure.
 - ✓ Servicing not authorized by distributor.
 - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

4) Documentation:

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

Remarks: For further assistance or solutions, please contact your local distributor.