

<div data-bbox="280 298 663 419"><h1>S9</h1><p>wireless karaoke speaker</p></div> <div data-bbox="303 702 636 747"><div><div></div><div></div><div></div></div></div>	<div data-bbox="824 70 1139 139"><p>S9 wireless Bluetooth speaker</p><p>User manual</p><p>Please read carefully before use</p></div> <div data-bbox="824 202 1185 512"></div> <div data-bbox="824 569 1311 782"><div><div>❶ Mode conversion</div><div>❷ Volume up/previous track</div></div><div><div>❸ Volume decrease/next track</div><div>❹ Pause/Play</div></div><div><div>❺ Power on/off</div><div>❻ AUX interface</div></div><div><div>❼ TF card interface</div><div>❽ USB interface</div></div><div><div>❾ Charging interface</div></div></div>	<div data-bbox="1407 70 1848 122"><p>Please read the manual carefully before use and save it for future use!</p></div> <div data-bbox="1407 148 1568 174"><p>Packaging List</p></div> <div data-bbox="1407 189 1591 236"><p>Portable audio system * 1</p><p>Charging cable * 1</p></div> <div data-bbox="1680 189 1802 236"><p>Microphones * 2</p><p>Carrying strap * 1</p></div> <div data-bbox="1407 262 1519 288"><p>USB mode</p></div> <div data-bbox="1407 293 1653 376"><p>Insert the USB drive into the USB slot, and the speaker will automatically switch to USB mode and play the songs stored in the USB drive</p></div> <div data-bbox="1680 288 1825 313"><p>Charging port</p></div> <div data-bbox="1680 319 1883 339"><p>Type - C adapter input charging</p></div> <div data-bbox="1680 365 1802 391"><p>Microphone</p></div> <div data-bbox="1680 396 1875 417"><p>Wireless Bluetooth connection</p></div> <div data-bbox="1680 443 1833 469"><p>TF card mode</p></div> <div data-bbox="1680 474 1918 562"><p>Inserting the TF/SD card into the slot will automatically switch the speaker to TF card mode and play the songs stored in the TS/SD card</p></div> <div data-bbox="1407 536 1630 562"><p>Charging indicator light</p></div> <div data-bbox="1407 567 1657 645"><p>When charging the speaker, the indicator light remains red and on for a long time. When the speaker is fully charged, the speaker indicator light goes out</p></div> <div data-bbox="1680 583 1841 609"><p>Charging mode</p></div> <div data-bbox="1680 614 1925 681"><p>When the battery level of the speaker is below 20%, the speaker will display a "low battery" prompt</p></div> <div data-bbox="1396 712 1948 795"><div><div></div><div><p>This product is not sold with a power adapter. If consumers use a power adapter for power supply, they should purchase a matching power adapter that has obtained CCC certification and meets standard requirements. The output specifications of the adapter should comply with DC5V2A</p></div></div></div>	<div data-bbox="2010 70 2332 106"><p>Parameter specifications</p></div> <div data-bbox="2010 117 2339 448"><p>Model : S9 wireless Bluetooth speaker</p><p>Bluetooth version : 5.1</p><p>Power : 10W * 2</p><p>Speaker Diameter : 52 MM</p><p>Bluetooth link distance : 10M</p><p>Battery capacity : 3200MAH</p><p>Play time : 5-6H (50% volume)</p><p>Charging time : 1-2h</p><p>Input : 5V-1A</p><p>Speaker size : 202 * 80 * 90mm</p><p>Speaker weight : 0.98kg</p></div> <div data-bbox="2010 474 2274 510"><p>Health maintenance</p></div> <div data-bbox="2010 521 2497 790"><p>- Do not use any form of detergent or cleaning agent to clean the product, as any type of chemical substance may render this device unusable.</p><p>- Do not disassemble this product as it does not contain user repairable components.</p><p>- Please do not fall or step on the speaker.</p><p>- Please place this speaker in a dry place. Dust, dirt, and moisture can all cause damage to the speaker.</p><p>- Do not place this product in a fire, as the battery may explode or leak.</p></div>	<div data-bbox="2608 70 2999 96"><p>Bluetooth function operation instructions</p></div> <div data-bbox="2608 111 3107 231"><p>1. When turned on, the speaker defaults to Bluetooth search mode, with a blue light flashing quickly and waiting for pairing.</p><p>2. Open the phone, enter the "Device" menu option, find the Bluetooth function option, click the scan button, and wait until the product model is found and connected.</p></div> <div data-bbox="2608 241 3091 267"><p>Wireless charging microphone function description</p></div> <div data-bbox="2608 272 3134 396"><p>Instructions for using a wireless charging microphone connection: Press and hold the microphone power button to turn on the device. The screen will display the default frequency value, and the speaker and wireless charging microphone will automatically connect successfully; In the power on state, long press the microphone power button, and the screen will turn off to indicate that the microphone is turned off</p></div> <div data-bbox="2608 417 2838 443"><p>Microphone Instructions</p></div> <div data-bbox="2608 464 2915 790"></div>	<div data-bbox="3203 70 3344 96"><p>A: Power button</p></div> <div data-bbox="3203 106 3655 231"><p>Long press for 3-5S : turn on / turn off;</p><p>Double click : pause / play;</p><p>Short press : (switch mode - reverb adjustment - accompaniment adjustment - microphone adjustment)</p></div> <div data-bbox="3203 272 3260 298"><p>B: Plus</p></div> <div data-bbox="3203 308 3701 396"><p>Short press : (microphone volume increase/accompaniment volume increase/reverb effect increase)</p><p>Long press : Next song</p></div> <div data-bbox="3203 438 3291 464"><p>C: Reduce</p></div> <div data-bbox="3203 474 3674 562"><p>Short press : decrease in microphone volume/decrease in accompaniment volume/decrease in reverb effect;</p><p>Long press : Previous track</p></div> <div data-bbox="3203 603 3379 629"><p>D: Mic function keys</p></div> <div data-bbox="3203 640 3724 728"><p>Short press : switch sound effects (shout mode/female to male/ male to female/baby sound/magic sound);</p><p>Long press : (The original sound / Cancel the original sound)</p></div>
---	--	---	---	---	--

S9 说明书
材质:105G铜版,正反面印刷

折后尺寸：70×90mm