 


AIR COOLER User Guide

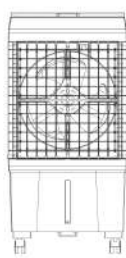

MODEL NO: JH-310Y
Aftermarket311@gmail.com

Thank you for Choosing us!

Your support means the world to us.
We hope you enjoy our product as much
as we did creating it.

CONTENTS

1 IMPORTANT SAFETY INSTRUCTIONS

1-2

4 CLEANING AND MAINTENANCE

8

5 TROUBLE- SHOOTING

9

IMPORTANT SAFETY INSTRUCTIONS

SAFETY INFORMATION

WARNING!
READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Please read all instructions before use.
2. Use only the voltage specified on the rating plate.
3. USE this machine only as described in this manual. Other uses are not recommended as it may cause fire or electric shock.
4. After the machine is filled with water, place or move it without tilting or jolting it. When moving the machine, please push it slowly to prevent the water from overflowing. Using this machine is strictly prohibited to overturn and place it on a sloping ground to prevent accidents.
5. Do not place heavy objects on the top of the machine, and it is strictly forbidden to cover the air outlet. When using, there should be no physical shielding within one meter in front of and behind the machine to facilitate smooth air.
6. Do not immerse the machine in water or rinse it under the faucet.
7. To reduce the risk of fire or electrical shock, do not expose electrical connections to water.
8. Always use on a dry surface.
9. This machine should not be placed at high temperature and ultra-low temperature. The water in the water tank in the hot and summer season is easy to deteriorate and produce odor. Please pay attention to update the water.
10. This machine has a strong humidification effect. Please do not use it in a closed environment. If you use it in a closed environment, please turn off the cold air function.
11. When the water level is lower than the minimum water level line, please add water in time.
12. When it needs to be packaged and stored, it should be run with normal air for a period of time after draining the water to make the evaporator completely dry before packaging to prevent the evaporator from producing peculiar smell due to the wet surface.
13. Avoid contact with moving fan parts.
14. Do not insert or allow foreign objects to enter the air outlet, as this may cause equipment damage or create danger.
15. Do not use in hazardous areas, such as flammable, explosive, high chemical content, or environments where gasoline, paint, or flammable gases are stored.
16. NEVER operate any Fan with a damaged cord or plug or after the Fan malfunctions, has been dropped or damaged in any manner.

1

2 KNOWING YOUR AIR COOLER

3

3 USING YOUR AIR COOLER

4-7

6 CUSTOMER CARE

10

USING YOUR AIR COOLER

PACKAGE INCLUDES



1X Air Cooler Fan

1X Remote Control

1X Owner's USER MANUAL

 
4X Wheel

4X ICE BOXES

ASSEMBLY INSTRUCTIONS

Align the connecting shaft of the wheel with the connecting hole at the bottom of the product, insert it firmly, and repeat it four times.

NOTE:
The wheel with a lock is the rear wheel, and the wheel without a lock is the front wheel.



4

CLEANING AND MAINTENANCE

4 CLEANING

To maintain optimal airflow and air purification, it is important to clean the machine regularly due to dust accumulation on the wet curtain during prolonged operation. **NOTE:** For your safety, please ensure the power is turned off before cleaning electrical components, remember to unplug the power cord.

1. Use a mild detergent and a soft cloth to clean the surface. Wipe with a soft dry cloth, avoid using hard objects that could damage the surface.
2. Loosen the screws on the back-cover plate, remove the back-cover plate and the wet curtain.
3. Use a soft brush and mild detergent to clean the wet curtain, drag it with water and let it dry under sunlight. After cleaning, reassemble the wet curtain and back-cover plate according to the original disassembly method.

NOTE:
1. Keep the control panel dry, avoid contact with water. DO NOT immerse the fan in water, avoid loading the motor in water or rinsing it under the tap.
2. Do not use corrosive substances such as alcohol, alkaline detergent, decontamination powder, volatile agents, solvents, or chemical reagents for cleaning. Improper cleaning methods may cause discoloration and corrosion of the cooling fan.
3. When using this device, ensure that the wet curtain is correctly installed inside the machine to ensure proper operation and service life.

MAINTENANCE AND STORAGE

Following our instructions, regular maintenance is crucial to ensure long-term effective operation of the fan. Please adhere to the following guidelines:

1. Check the fan for at least once a month. Clean as necessary, following the cleaning instructions provided.
2. Depending on the amount of dust in your environment, consider increasing the frequency of inspections.

If you don't plan to use it in the short term, it is recommended to store it after maintenance and cleaning to prevent dust buildup. Follow these steps for proper storage:

1. Drain the water tank and run the fan for at least 30 minutes without turning on the water pump to ensure the wet curtain is dry. Allow the fan to completely dry before packaging it in its original packaging.
2. Store the fan in a place away from direct sunlight and with low humidity. Avoid placing the fan near fire or flammable materials.

8

TROUBLESHOOTING

5

Trouble	Cause	Solution
Product not working	1. The power cord is unplugged or in poor contact.	1. Plug the power back in firmly or plug it into a different outlet to connect the power.
	2. The LED screen is damaged.	2. Contact customer service & repair center.
	3. Not working after a while or for other reasons.	3. Please provide the video and contact customer service & repair center.
Bad cooling effects	1. Air inlet or air outlet clogged or there are other heat sources.	1. Remove the obstruction or remove other sources of heat.
	2. Other reasons.	2. Please provide the unusable video, and contact customer service & repair center.
Water pump doesn't work	1. The water level in the water tank is lower than the minimum water level scale.	1. Adding water exceeds the minimum water level scale.
	2. The cooling mode is not activated.	2. Turn on the cooling mode.
	3. Other reasons.	3. Please provide the unusable video, and contact customer service & repair center.
The remote control does not work	1. Exceeding the control range of the remote control (10-16ft).	1. Bring the remote control closer to the fan.
	2. This remote control was not aiming at the signal receptor on the unit.	2. Point the remote control at the signal receptor on the unit.
	3. The batteries have no electricity left.	2. Replace the batteries.
Lack of accessories	1. Lack of ice box.	1. Contact customer service & repair center.
	2. Missing wheel.	

NOTE: The types of loads and possible causes include but are not limited to the above. If the problem remains unresolved or other problems are encountered after the operation of the above methods, please contact our after-sales mailbox for help.

9

READ AND SAVE THESE INSTRUCTIONS READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE! RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Working Principle
Evaporative cooling operates based on the principle of heat absorption through moisture evaporation. In simple terms, as water evaporates, heat is extracted from the air. You experience this phenomenon when you emerge from a swimming pool or shower and feel the coolness as water evaporates from your skin's surface.
Your evaporative cooler functions following the same principle. The fan draws in hot outside air and passes it through the moist cooling pads, where the air undergoes evaporation and subsequently gets discharged from the cooler, now cooled.

 
17. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
19. Note: Do not depend on the switch panel as the sole means of disconnecting power when servicing or moving the fan. Always unplug the power cord.
20. Note: Before removing the protective cover, it must be disconnected from the power supply.
21. Note: Please turn off the machine and pull out the power plug when unattended. To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
22. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.
23. CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.
24. READ AND SAVE THESE INSTRUCTIONS.

2

KNOWING YOUR AIR COOLER

2

PRODUCT DIAGRAM

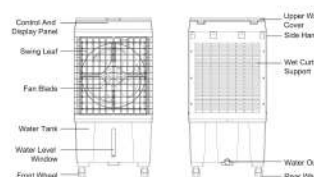

SPECIFICATIONS

Model	JH-310Y
Rated power	100W
Rated voltage	AC 220V
Product size	16.9" (42.7") x 13.7" (34.8")
Weight	12.7 lbs
Wire length	6 Feet
Frequency	60HZ

NOTE: As a result of continual improvements, the design and specifications of the product may vary slightly to the unit illustrated on the packaging.

3

PANEL CONTROL



Place the unit on a firm-level surface and plug it into a socket. The power indicator light is there to remind that this product is in standby mode. Turn on the **ON/OFF** button, the default is low speed. Press it again, and the machine will be standby.

ON/OFF Button: Press this button to open the air cooler. Press this button at any state to stop the operation.

Speed Button: Press this button to change the speed between low/medium/high.

Mode Button: Press this button to change the fan mode between normal mode and natural mode. Natural mode: Speed varies randomly.

Swing Button: Press this button to control the left and right swings, and press it again to stop swinging.

Timer Button: Press this button to set the timer, max 12 hours. When the set time is reached, the machine will automatically stop working.

Cool Button: Press this button to open or close the cooling system.

NOTE

- Do not turn on the cooling system when the water tank is empty.
- The product may have a slight odor upon initial use, but the smell will dissipate with continued use.
- The water in the water tank in the hot and summer season is easy to deteriorate and produce odor. Please pay attention to update the water.

6

CUSTOMER CARE

WARRANTY AND SERVICE

Thank you for your purchase!

Our goal is to ensure your 100% satisfaction with our warranty service!
This appliance comes with a 12-month warranty, starting from the date of initial purchase. During the 1-year warranty period, we will provide free service for any quality issues, installation problems, and missing parts.

Service Guarantee

All of our items are brand new and in excellent condition, in the event that the product you received does not meet this standard, please contact us.

Sincerely At Your Service

Your shopping experience is very important to us! If you are unsatisfied with our service with purchases, please feel free to let us know. We will always be here to offer you the best service and get your satisfaction.

The warranty will not apply in cases of

- Accident, misuse, or repairs performed by unauthorized personnel.
- Tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual (e.g. connection to an unsuitable mains supply or non-compliance with the instructions).
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by us.

We are here to provide assistance

For any questions, please contact our customer service email to get extra after-sale service.
Email: Aftermarket311@gmail.com

ENVIRONMENT

 
Manning of the crossed-out wheeled dustbin:

- Do not dispose of electrical appliances as unsorted municipal waste.
- Use separate collection facilities. Contact your local council for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

10

REMOTE CONTROL

NOTE: Remote Control Comes with a Plastic Paper to Prevent Battery from Drying During Transportation. Before using the remote control, remove the plastic insulating film located under the battery.

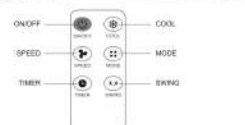

- The remote control must be pointed directly at the receiver on the fan when using. If the remote control is not pointed directly towards the receiver, the signal will deviate.
- The remote control may not operate in a room where baby monitors are operating.
- Do not block the line of sight between the remote control and the receiver.
- Handle the remote control with care. Do not drop the remote control on the floor or bang it against hard objects.
- Do not drop water or liquid to get into the remote control.

REPLACING THE BATTERY

- Press the locking button on top of the battery holder.
- Replace with the same battery type with the (+) facing left.
- Push in the holder until it is locked into place.
- The remote control uses one AAA battery, model LR 03 (1.5V).
- We recommend the use of lithium-type battery for longer use.

WARNING!
Chemical leak hazard. Keep batteries away from children.
This product contains a lithium battery. Lithium battery is a new or used lithium battery. Lithium battery is not to be recycled or disposed of in a landfill. It is a hazardous waste and should be disposed of in a hazardous waste facility.

The batteries must be disposed of properly, including keeping them away from children. Seen used with care (avoid injury).

7

If you encounter any problems when using our products, please feel free to contact us through the following Email to get a quick response and a 100% satisfactory solution.

Questions or Problems?

Tell us
We are here to help with our lifetime professional 100% satisfied service within 24 hours

Email: Aftermarket311@gmail.com



MADE IN CHINA