

AT&T U-verse® TV
Standard Remote Control
User Guide



Section of Contents

Quick Setup Guide

1. How to activate the batteries
2. Setting up your Remote to control other devices (TV/DVD/etc)
- 2A. Search for Device Codes
- 2B. Manually Program the Device Codes

Advanced Features Setup

- A. Volume or Channel Control Options
- B. Power Control Options
- C. Backlight Cancellation Feature
- D. Restoring Factory Defaults

Specifications & Notice

Questions & Answer (Q&A)

Care & Maintenance

Setup Codes (Back Page)

AT&T U-verse® TV
Standard Remote Control
User Guide



Quick Setup Guide

1. How to activate the batteries (two AA Alkaline batteries have been pre-installed)

STEP 1. Pull the Tab on the back of the Remote Control straight out with one smooth motion.

STEP 2. Press the **AT&T** key. The **AT&T** key will light up if the batteries are working properly. If the **AT&T** key does not light up, please refer to the Questions & Answer (Q&A) of this Guide.



Pull Tab on Battery Compartment

2. Setting up your Remote to control other devices (TV/DVD/etc)

You may also use the setup tool on the TV (Recommended) Go to Menu- Help - System Set-up - Program your U-verse Remote

To control other devices, your Remote Control needs to be programmed. The Remote contains the IR codes to control them.

*Start with Section 2A (Search for Device Codes) to find the code for your device.

*If Section 2A is unsuccessful, please refer to Section 2B (Manually Program the Device Codes).

2A. Search for Device Codes

The Search method will scan through all of the IR codes to find one that works with your TV or other device.

STEP 1. Power on the device to be programmed.

STEP 2. Point the remote control at the selected device.

STEP 3. Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **ENTER** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in search mode.



STEP 4. Search by pressing the **SCAN** key repeatedly until the device turns OFF (the selected mode key will flash once for each press of the **SCAN** key). Pause briefly between each key press to allow your device enough time to respond.

STEP 5. Press the **POWER** button on the Remote to turn the device back on.

NOTE: If the device does not turn off and you have searched all available codes, the selected mode key will flash 8 times. If this happens, please start over at Step 2 or proceed to 2B (Manually Program the Device Codes).

NOTE: If the device does not turn on, you may have pressed the **SCAN** key too many times. Press the **REW** key to scan backwards and test the **POWER** button again.

STEP 6. Check **VOLUME** and **MUTE**. Do not test using **REW**, **SCAN**, **FWD**, **EXIT**. If there is any problem with any of the keys, press the **SCAN** button and search until you find a code which will operate all the function properly.

STEP 7. Press the **ENTER** key to save the programming. The appropriate mode key will give a long flash indicating successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

If you have an integrated or combination unit such as TV-DVD, TV-DVD-VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV-DVD, search for the device code of TV and program into TV mode key, then search for the Device Code of DVD and program into the DVD mode key.

2B. Manually Program the Device Codes

Use the following steps to setup the TV, DVD or AUX mode keys:

STEP 1. Each device (TV, DVD, VCR, etc.) has its own "code". A list of these 4-digit device setup codes is provided in the back of this Booklet. Make a note of the codes for your devices for quick reference:

TV _____
DVD _____
VCR _____
OTHER _____

The mode keys can only be programmed with codes starting with the number assigned to that device. TV codes must start with "1"; DVD codes "2"; AUX codes "3", "4", "5", or "6".

STEP 2. Power on the device to be programmed.

STEP 3. Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **OK** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in the programming mode.



STEP 4. Enter the 4-digit Device Code from Step 1 for the desired device using the keypad on the remote.

STEP 5. The appropriate mode key will give a long flash indicating it received the code.

STEP 6. Point the remote control at the selected device and press the **POWER** key to turn off the device and confirm programming. If the device does not turn off, or not all functions work, then start again at Step 1 with the next code in the List. It is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device. Press the **POWER** key again to turn the device back on and check other functions.

NOTE: When an invalid code is entered, the selected mode key will flash eight times and the Remote Control will return to its normal operation.

NOTE: If you press any key other than the number keys, the selected mode key will flash eight times and exit programming mode. The same is true if it is inactive for more than 30 seconds. This indicates the remote has left the programming mode and returned to normal operation without saving any changes. You will have to start over again.

Function Keys



Advanced Features Setup

A. Volume or Channel Control Options

By factory default the Volume and Channel commands are sent to the AT&T U-verse Receiver. Once the TV has been programmed, the **POWER** key will control both the U-verse Receiver and the TV; the Volume controls (**VOL+** or **-**, **MUTE**) will go to the TV, and the Channel controls (**CH +** or **-**, **LAST**, number keys) will be sent to the U-verse Receiver. Once you have programmed a device to a mode key, you can send the volume commands to that device rather than the TV or U-verse Receiver (e.g. a home theater receiver). Follow the instructions in Section A1 to have the Volume commands always go to one device. If you want the Volume (or Channel) commands to go to a programmed device when it has been selected using the mode key, follow the instructions in A2.

A1. Always Send Volume or Channel Commands to One Device

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the mode key (**TV**, **DVD**, or **AUX**) for the device that you want to always control the volume or channel (e.g. **AUX** for your Home Theater).

STEP 4. The selected mode key (e.g. **AUX**) will give a long flash to confirm successful programming.

A2. Send Volume or Channel Commands only to the Device Mode Selected (e.g. in DVD mode, the DVD player controls the audio, but in TV mode the TV controls the audio)

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

NOTE: The mode key must first have been programmed for your device.

B. Power Control Options

By factory default, the **POWER** key only operates the AT&T U-verse Receiver. Once you have programmed the TV mode key, both the TV and the AT&T U-verse Receiver will be powered ON and OFF at the same time. In normal operation, you can turn programmed devices ON or OFF individually by pressing the appropriate mode key, and then the **POWER** key.

B1. To Power Multiple Devices On and Off Simultaneously

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

STEP 3. Press the **AT&T** key. The **AT&T** key will flash twice indicating correct entry.

STEP 4. Press the appropriate mode keys (**TV**, **DVD**, or **AUX**) that you wish to also control. The appropriate mode key will flash twice.

NOTE: The mode key must first have been programmed for your device.

STEP 5. Press the **ENTER** key to complete the programming. The last mode key programmed will give a long flash indicating successful programming.

B2. To Power Devices On and Off Independently

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C. Backlight Cancellation Feature

Your Remote Control has the ability to turn the keypad backlighting ON or OFF. If you wish to use this feature to extend battery life, follow these instructions.

C1. Turning the Keypad Backlight OFF

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C2. Turning the Keypad Backlight ON

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

D. Restoring Factory Defaults

Return all programmed codes to Factory Default.

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 0 0** using the numeric keypad. The **AT&T** key will give a long flash to confirm successful programming. The Remote Control then returns to its normal state.

Specifications & Notice

Model: AT&T U-verse TV Standard Remote Control
IR Range: up to 30"

*The range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on conditions, and can be less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: battery strength, infrared interference, and obstructions.

The AT&T U-verse TV Standard Remote Control is intended for use only with AT&T's U-verse TV receivers. The Remote Control may

not be compatible with all devices or capable of accepting every programming code or operating every function for all devices. See this Guide for further information.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Questions & Answer (Q&A)

Question: I pulled the tab from the battery compartment and pressed the AT&T key, but it did not light up.

Answer: Remove the battery door (push the tab up - towards the top of the remote). Check to be sure the batteries are seated and properly installed according to the (+ or -) markings inside the battery compartment.

Question: The remote does not work or the backlighting is dim.

Answer: Check to be sure the batteries are

installed with the correct polarity (see above). Use only Alkaline batteries. Batteries may be weak and need to be replaced.

Question: I tried to program using "Search for Device Codes", but it failed.

Answer: You must press the **ENTER** key to "save" the programmed code. Search may not work for all devices. Please refer to Section 2B - Manually Program the Device Codes.

Question: What should I do when I replace

a device after I programmed the mode key?

Answer: Simply override the code by reprogramming the mode key for the new device (see Quick Start Guide, Section 2A, or Section 2B).

Question: I have programmed the codes for a device, but some function keys do not work.

Answer: Try using Search for Device Codes (Section 2A) and make sure that the functions work before saving. If you entered the 4-digit device code using Section 2B (Manually

Program the Device Codes), it is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device.

Question: I have programmed the TV mode key. After pressing the TV key, the Channel keys still control the AT&T U-verse receiver and not the TV.

Answer: By default, the **CHANNEL** keys (**+**, **-**), **LAST**, and number keys on the remote control operate the U-verse receiver.

Care & Maintenance

1. Keep the remote control dry. If it gets wet, wipe it dry immediately.

2. Use and store the remote control only in normal temperature environments.

3. Handle the remote control gently and carefully. Don't drop it.

4. Wipe the remote control with a clean cloth occasionally to keep it looking new.

5. Except for the battery door, do not attempt to open, modify or tamper with the internal components of the remote control. This can cause malfunction and void the warranty.

6. Use only Alkaline AA batteries. Do not mix old and new batteries.

7. Replace batteries every 9 months.



AT&T U-verse SETUP CODE List

TV	
Abex	1314
Acer	1316
Adion	1393, 1553
Admiral	1293, 1315, 1331, 1337
Advent	1040, 1323, 1324
Adventura	1317, 1361
Aiko	1297, 1330
Alwa	1155, 1164, 1488, 1512
Alkal	1043, 1201, 1202, 1247, 1248, 1257, 1265, 1267, 1294, 1345, 1404, 1405
Akura	1375, 1549
Alaron	1365, 1379, 1382
Albatron	1385, 1388
Allerton	1300
A-Mark	1353
Ambassador	1378
America Action	1044, 1380
Ampro	1386
Amtron	1045
Anam	1044, 1380
Anam National	1045, 1295
AOC	1041, 1042, 1043, 1046, 1353, 1359, 1368, 1381, 1440, 1442
AOC Envision	1410
Apex	1012, 1106, 1156, 1433, 1489
Aper Digital	1038, 1268, 1332
Archer	1353
Astar	1400, 1460
Audinac	1380
Audiovox	1044, 1045, 1249, 1330, 1336, 1353, 1380, 1384, 1402, 1436
Aventura	1334
Axion	1161, 1402, 1506
Bang & Olufsen	1401, 1423, 1424
Baysonic	1380
Beicon	1041, 1359, 1442
Bell & Howell	1293, 1302, 1343
Benq	1107, 1116
Boxlight	1387
BPL	1382
Bradford	1044, 1045, 1380
Brilliant	1078, 1418
Brookwood	1041, 1359, 1442
Broksonic	1044, 1157, 1267, 1291, 1337, 1353, 1432, 1494
Bydsign	1396, 1450
Candle	1041, 1042, 1043, 1296, 1317, 1361, 1370, 1442
Carnivale	1043
CCE	1364, 1365, 1366, 1447
Celebrity	1027, 1294
Celera	1038
Centurion	1038, 1406, 1407, 1408
Cineral	1384
Citizen	1039, 1041, 1042, 1043, 1045, 1047, 1296, 1297, 1311, 1330, 1361, 1367, 1370, 1442
Clairtone	1381
Clarion	1044, 1380
Coby	1158, 1250, 1409, 1498
Colortyme	1041, 1042, 1442
Commercial Solutions	1326
Concerto	1041, 1042, 1370, 1442
Contec	1044, 1377, 1380, 1381
Contec/Cony	1045, 1049
Craig	1044, 1045, 1380
Crosley	1048, 1425
Crown	1044, 1045, 1306, 1367, 1380
CTA	1108, 1567
Curtis Mathes	1000, 1041, 1042, 1043, 1047, 1048, 1302, 1311, 1326, 1331, 1336, 1422, 1343, 1345, 1367, 1370, 1384, 1425, 1442
CXC	1044, 1045, 1380
Cytron	1110, 1398, 1475
Daewoo	1041, 1039, 1041, 1042, 1046, 1047, 1061, 1212, 1277, 1297, 1330, 1336, 1359, 1367, 1384, 1442
Daytron	1041, 1042, 1047, 1359, 1442
De Graaf	1382
Dell	1177, 1178, 1416, 1417, 1528, 1529
Denon	1342, 1544
DiamondVision	1451, 1478, 1479
Dumont	1041, 1313, 1325, 1359, 1442
Durabrand	1035, 1037, 1041, 1044, 1334, 1337, 1353, 1380
Dwin	1331
Dynex	1040
Electroband	1027, 1294, 1381
Electrograph	1340
Electrohome	1041, 1042, 1294, 1295, 1442
Element	1398, 1422, 1437, 1444, 1581, 1597, 1598
Elite	1481
Emerson	1014, 1017, 1028, 1039, 1041, 1042, 1044, 1045, 1047, 1049, 1251, 1264, 1271, 1291, 1298, 1299, 1300, 1302, 1320, 1334, 1337, 1343, 1359, 1365, 1367, 1378, 1379, 1380, 1381, 1442, 1454, 1468
Emprex	1399, 1466
Envision	1041, 1042, 1043, 1442
Epson	1399, 1339
ESA	1382
Finlandia	1382
Finlux	1374
Fisher	1109, 1301, 1302, 1343, 1382
Frontech	1375
Fujitsu	1213, 1228, 1229, 1230, 1231, 1300, 1379, 1570
Funai	1017, 1044, 1045, 1099, 1287, 1300, 1334, 1379, 1380, 1406, 1407, 1408
Futuretec	1044, 1045, 1375, 1380
Gateway	1030, 1103, 1340, 1346, 1472
GE	1000, 1011, 1041, 1042, 1165, 1288, 1289, 1295, 1303, 1305, 1326, 1328, 1336, 1384, 1442, 1516
Go Video	1393
Goldstar	1041, 1042, 1043, 1046, 1047, 1049, 1290, 1314, 1359, 1442
Gradiente	1369, 1370, 1371, 1372, 1373, 1448
Granada	1382

Great Wall	1028
Grundig	1364
Grundig	1044, 1045, 1300, 1379, 1380
Haler	1367
Hallmark	1041, 1042, 1442
Hannspree	1482, 1483, 1484
Harley Davidson	1287, 1379
Harman/Kardon	1048, 1362
Harvard	1044, 1045, 1380
Havermey	1331
Helios	1390, 1532, 1533
Hello Kitty	1336, 1384
Hellorid Packard	1429, 1435, 1438, 1480
Himitsu	1355, 1380
Hissense	1117, 1338, 1530
Hitachi	1013, 1041, 1042, 1049, 1054, 1132, 1166, 1207, 1222, 1232, 1238, 1287, 1327, 1333, 1342, 1370, 1374, 1442
HP	1395, 1435, 1438, 1480
Hyoson	1375, 1517, 1559, 1573
Hyundai	1350, 1351, 1352
ICE	1375, 1534, 1562
iLO	1020, 1032, 1453, 1457, 1464
IMA	1045
INFET-TV	1033, 1499, 1519, 1520
Infinity	1041, 1038, 1425
Infocus	1387, 1473
Initial	1020
Insignia	1034, 1035, 1040, 1398, 1465, 1596
Inteq	1325
Intervention	1041, 1042, 1043, 1044, 1047, 1048, 1306, 1425
JC Penney	1000, 1041, 1042, 1046, 1047, 1426, 1303, 1305, 1311, 1314, 1442
JCB	1027, 1294
Jensen	1041, 1042, 1110, 1324, 1442
JVC	1008, 1049, 1053, 1062, 1111, 1112, 1113, 1114, 1115, 1159, 1167, 1168, 1180, 1181, 1182, 1208, 1305, 1307, 1329, 1369
Kawasho	1368
Kaypani	1044, 1380
KEC	1041, 1042, 1043, 1240, 1359, 1442
Kenwood	1041, 1042, 1043, 1240, 1359, 1442
KLH	1038
Kloss	1360, 1361, 1362
Kloss Novabem	1045, 1317
Konka	1341
KTV	1043, 1044, 1045, 1047, 1365, 1367, 1380, 1381
LG	1375
Leyco	1009, 1024, 1036, 1041, 1046, 1160, 1200, 1370, 1385, 1428, 1442, 1580, 1582, 1583, 1594, 1595
Lloyd's	1287, 1500, 1548
Local India	1382
Loewe	1306, 1535, 1554, 1556, 1558
Logik	1293
Luxman	1041, 1042, 1370, 1442
LXI	1000, 1041, 1042, 1048, 1302, 1306, 1326, 1332, 1343, 1376, 1377, 1442
M Electronic	1375
Magnasonic	1039
Magnavox	1020, 1041, 1042, 1043, 1048, 1103, 1117, 1118, 1119, 1129, 1183, 1203, 1264, 1278, 1279, 1281, 1287, 1296, 1306, 1360, 1379, 1425, 1440, 1442
Magnin	1288, 1555
Marantz	1293, 1504, 1526
Manesth	1375
Matsui	1041, 1042, 1043, 1048, 1306, 1370, 1374, 1442
Matsushita	1382
Maxent	1335, 1531, 1561
Megapower	1340, 1455
Megatron	1385
MEI	1041, 1042, 1342, 1353
Memorex	1381
MGA	1017, 1041, 1042, 1046, 1123, 1260, 1286, 1290, 1293, 1302, 1337, 1343, 1379
Midland	1041, 1042, 1043, 1046, 1288, 1370, 1384, 1425, 1442
Mintek	1044, 1045, 1380
Minutut	1110, 1398, 1475
Mitsubishi	1041, 1039, 1041, 1042, 1046, 1047, 1061, 1212, 1277, 1297, 1330, 1336, 1359, 1367, 1384, 1442
Monivision	1041, 1042, 1047, 1359, 1442
Montgomery Ward	1385, 1388
MOTOROLA	1295, 1315, 1331
MTC	1016, 1041, 1042, 1046, 1046, 1311, 1370, 1379, 1381, 1442
Multitech	1044, 1045, 1365, 1380
Multivision	1308
NAD	1041, 1042, 1318, 1332, 1364, 1370, 1376
NEC	1041, 1042, 1043, 1046, 1184, 1295, 1322, 1359, 1370, 1371, 1442, 1469
Netsat	1364, 1539
NET-TV	1096, 1103, 1340, 1455
Nikkal	1375
Nikko	1041, 1042, 1043, 1297, 1330
Norcent	1090, 1388, 1440, 1540, 1560
Noshi	1358
NTC	1297, 1330, 1541, 1564
Olevia	1029, 1419, 1420, 1421, 1439, 1443
Onwa	1044, 1045, 1380
Opto	1477, 1563, 1568, 1569
Optimus	1286, 1318, 1335, 1343
Optoma	1474
Optonica	1309, 1315, 1331
Orion	1035, 1291, 1299, 1320, 1337, 1379
Osaki	1375
Panama	1375, 1542, 1545
Panasonic	1003, 1022, 1050, 1051, 1055, 1056, 1059, 1066, 1067, 1121, 1122, 1185, 1215, 1224, 1235, 1236, 1239, 1241, 1243, 1244, 1245, 1246, 1252, 1253, 1261, 1266, 1270, 1274, 1275, 1276, 1285, 1286, 1292, 1295, 1304, 1305, 1306, 1310, 1328, 1335, 1344, 1577, 1593
Panavision	1280, 1485, 1506, 1507, 1521, 1522
Penney	1041, 1043, 1288, 1290, 1326, 1328, 1332, 1353, 1358, 1359, 1367, 1376
Philco	1041, 1042, 1043, 1046, 1048, 1049, 1123, 1295, 1296, 1306, 1359, 1425, 1442
Philips	1001, 1020, 1021, 1041, 1048, 1049, 1058, 1068, 1069, 1099,

1124, 1125, 1126, 1127, 1128, 1129, 1186, 1209, 1278, 1281, 1295, 1296, 1306, 1356, 1357, 1364, 1425, 1442	Philips Magnavox
1001, 1048, 1117, 1118, 1126, 1127, 1128, 1129, 1130	Pioneer
1041, 1043, 1049, 1359, 1367, 1442	Plasmasync
1018, 1041, 1042, 1070, 1217, 1218, 1219, 1318, 1321, 1347, 1426, 1427, 1434, 1442, 1481	Portland
1322, 1470	Price Club
1038, 1187, 1188, 1225, 1258, 1273, 1390, 1398, 1422, 1437, 1444, 1459	Prima
1041, 1042, 1046, 1047, 1297, 1330, 1359, 1367, 1442	Princeton
1311, 1486, 1490, 1491	Prism
1237, 1323, 1324, 1446, 1449, 1476	Proscan
1385	Protech
1305, 1328, 1492, 1493, 1524, 1525	Proton
1000, 1326	Prottron
1375	Pulsar
1041, 1042, 1049, 1353, 1363, 1368, 1459	Pye
1397, 1431, 1462	Quasar
1033, 1422, 1463	Radio Shack
1041, 1313, 1325, 1359, 1442	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1287, 1302, 1309, 1314, 1326, 1343, 1047, 1365, 1367, 1370, 1380, 1442
1356, 1546, 1557, 1574	RCA
1274, 1285, 1286, 1295, 1305, 1322, 1376	1012, 1106, 1156, 1433, 1489
1019, 1027, 1195, 1196, 1336, 1414, 1430, 1433	Realistic
1014, 1337	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1302, 1309, 1313, 1134, 1161, 1162, 1169, 1170, 1269, 1288, 1289, 1295, 1321, 1326, 1347, 1358, 1359, 1442
1041, 1042, 1043, 1046, 1359, 1442	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1287, 1302, 1309, 1314, 1326, 1343, 1047, 1365, 1367, 1370, 1380, 1442
1375	1375, 1497, 1501
1005, 1041, 1052, 1054, 1057, 1076, 1077, 1101, 1102, 1105, 1152, 1153, 1154, 1175, 1197, 1211, 1283, 1287, 1291, 1293, 1313, 1325, 1330, 1337, 1442	1375, 1497, 1501
1353, 1354, 1355	1365, 1381, 1494, 1508

1380	Tophouse
1010, 1098, 1104, 1147, 1148, 1149, 1150, 1151, 1173, 1174, 1212, 1219, 2128, 2127, 2165, 2438, 2465	Toshiba
1381	Tosonic
1018, 1041, 1042, 1070, 1217, 1218, 1219, 1318, 1321, 1347, 1426, 1427, 1434, 1442, 1481	Television
1194, 1527, 1560, 1565	Trical
1337	Trutech
1303	TVS
1374, 1375	Universal
1377	Universum
1412	Vector Research
1307, 1329, 1369	Venturer
1048, 1425	Victor
1041, 1042, 1046, 1359, 1442	Vidikron
1091, 1092, 1093, 1094, 1095, 1103, 1216, 1232, 1340, 1410, 1413, 1414, 1441	Videch
1031, 1032, 1457	Viewsonic
1009, 1030, 1346, 1413, 1414, 1415, 1459, 1461, 1585, 1588, 1590, 1600, 1601	Viking
1000, 1041, 1042, 1043, 1046, 1048, 1293, 1298, 1300, 1303, 1306, 1309, 1359, 1370, 1379, 1425, 1442	Viore
1332, 1376	Vizio
1019, 1027, 1195, 1196, 1336, 1414, 1430, 1433	Wards
1014, 1337	Waycon
1041, 1042, 1043, 1046, 1359, 1442	Westinghouse
1375	White Westinghouse
1005, 1041, 1052, 1054, 1057, 1076, 1077, 1101, 1102, 1105, 1152, 1153, 1154, 1175, 1197, 1211, 1283, 1287, 1291, 1293, 1313, 1325, 1330, 1337, 1442	Yamaha
1353, 1354, 1355	Yoko
	Zenith
	Zonda

DVD / Blue Ray DVD

2432	3D Lab
2456, 2476, 2488	Accele Vision
2439	Acoustic Solutions
2137, 2416	Advent
2445	AEF
2435, 2437	Aim
2435	Airis
2030, 2209, 2490	Alwa
2020, 2436, 2438, 2442, 2445	Alkal
2437	Akira
2435, 2436, 2437, 2439, 2443	Alba
2135	Alco
2413, 2489	Allegro
2026	Alpine
2031, 2141	Amphen
2023, 2243, 2244, 2245, 2246, 2247	Armstrong
2004, 2074, 2171, 2213, 2214, 2215, 2451, 2473	ANW
2126, 2151, 2152, 2216, 2435	Apex Digital
2432	Apex
2417, 2491, 2492, 2493	Argo
2140	Aspire Digital
2458, 2477	Astatic
2406	Audiologic
2029, 2075, 2078, 2135, 2153, 2154, 2155, 2172, 2206, 2423	Audiovox
2439	Autovox
2423, 2462	Axion
2401	B & K
2431	Bang & Olufsen
2439	Basic Line
2436, 2437, 2439	Be Canto Design
2439, 2442	Black Diamond
2019, 2152	Blaupunkt
2149	Blue Parade
2434, 2436, 2436, 2437, 2439	Blue Sky
2444	Bosch
2032, 2070, 2471, 2472	BOSS