



Original	Replacement
	Power
	A
	B
	C
	D
	E
	F
	G
	Reset / Upgrade
	Recall / Info
	Guide
	Home / Menu
	Back / PP
	Options
	Smart
	Up
	Left

Original	Replacement
	OK
	Right
	Down
	Teletext
	CC
	TV Vol +
	TV Vol -
	Mute
	P+
	P-
	1
	2
	3
	4
	5
	6
	7

 






Original	Replacement	Original	Replacement
	Power		Power
	A		Red
	B		Green
	C		Yellow
	D		Blue
	E		3D
	F		Shift + 6
	G		Shift + 7
	Reset / Upgrade		Exit
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Alarm / Clock		Media
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6







Original	Replacement
	Power
	Info
	Guide
	Menu
	Back
	Options
	Media
	Smart
	Up
	Left
	Ok
	Right
	Down
	Text
	Subt
	Vol +
	Vol -

Original	Replacement
	Mute
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV
	Sleep





Original	Replacement
	Power
	Info
	Guide
	Menu
	Back
	Options
	Media
	Smart
	Up
	Left
	Ok
	Right
	Down
	Text
	Subt
	Vol +
	Vol -

Original	Replacement
	Mute
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV
	Sleep

