

CS1500 CS1550
CS1501 CS1551
CS1502 CS1552
CS1503 CS1553



Scan the QR code for
support information



vtech® Quick Start Guide



Specifications are subject to change without notice.
©2022 Vtech Telecommunications Ltd.
All rights reserved. 05/22, CS150X, CS155X, UK, 05G_V1



Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	1.88 GHz to 1.9GHz
Channels	10
Nominal effective range	Actual operating range may vary according to environment conditions at the time of use.
Handset battery	1) Yi Yang Corun Battery Co., Ltd.; NI-MH AAA400mAh 1.2V; 2) GPI International Ltd.; VT40AAHC.
Base/charger	Adapter: VTP-L: VT05EUK0604S (UK plug) VTP-L: VT05EUK0604S (EU plug) Input 100-240V AC 50/60Hz 0.15A; Output 6VDC 0.45A 2.7W
RF power	<250mW

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to heating sources such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to Vtech/distributor under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The batteries may be damaged.
13. Please note the correct polarity while inserting the batteries.
14. Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.

15. Use only adaptors and battery listed below; Use only the provided external power supply: Vtech Telecommunications Limited. Model: VT05EUK0604S | VT05EUK0604S. Use only the supplied batteries: Yi Yang Corun Battery Co., Ltd. Model: NI-MH AAA400mAh 1.2V; GPI International Ltd. Model: VT40AAHC.

Disposal of Old Equipment and Batteries (WEEE)

Only for European Union and countries with recycling systems

These symbols (a, b) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste. For proper treatment, recovery and recycling of old products and batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.



For more information about collection and recycling, please contact your local municipality. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Product disposal instructions for business users

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other countries outside the European Union

These symbols (a, b) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (b) might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Recycle your device (WEEE directive 2012/19/EU)

The WEEE logo appears on the product to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Approval and conformity

This product is intended for use within Europe and the UK. This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment.

Vtech Telecommunication Ltd. hereby declares that this telephone CS1500/1501/1502/1503 | CS1550/1551/1552/1553 is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Equipment Regulations 2017.

The declaration of conformity may be viewed at <https://www.vtech.com/rte-directive>.

The symbol confirms the conformity of the telephone and the above directive.



Importer: Vtech Electronics Europe Plc.

Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT.

Manufacturer: Vtech Telecommunications Ltd.

23/F, Tai Ping Industrial Centre, Block 1, 57 Ting Kok Road, Tai Po, Hong Kong.

Operating condition	Power consumption
Off mode	<1 W
Network standby mode	<1 W

Customer Service and Product Warranty

IMPORTANT

Please retain this guide with your sales receipt as proof of the date of purchase.

Customer Service

Please call our Customer Services Department on 03306780149 (from the UK) or +44 3306 780149 (outside the UK) and a service representative will be happy to help you.



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your Vtech product

By joining the Vtech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.

PRODUCT WARRANTY

Thank you for choosing this quality product from Vtech.



 
1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to Vtech Electronics Europe Plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. Vtech Electronics Europe Plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorized repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Products returned to Vtech Electronics Europe Plc, should be sent to the address shown below and packed carefully to avoid damage in transit. Please do not include batteries or adaptors. Please include details of the fault together with your name and address, contact phone number and/or email address.
8. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/clubvtech

Vtech Electronics Europe Plc, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE


THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Ireland only. For products purchased outside the UK and Ireland, please contact your local distributor or place of purchase.


Connect the base

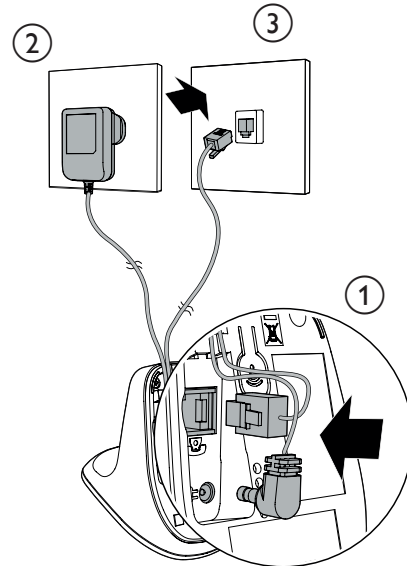

Install the battery

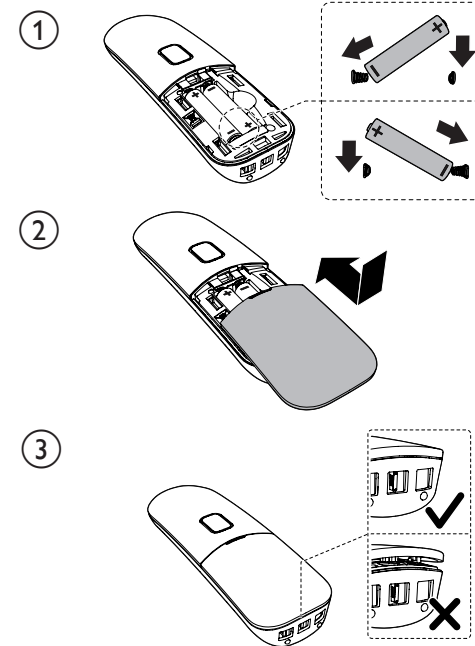 

Charge the battery

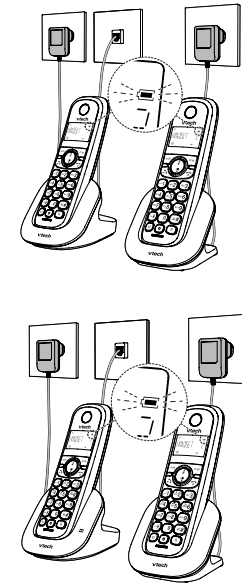 

CS1500
CS1501
CS1502
CS1503

CS1550
CS1551
CS1552
CS1553

Settings

SET LANGUAGE

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **LANGUAGE** → ⇨/OK
→ ▲/▼ → **ENGLISH | DEUTSCH | FRANÇAIS | ITALIANO | ESPAÑOL | NEDERLANDS** → ⇨/OK

SET DATE OR TIME FORMAT

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **DATE & TIME** → ⇨/OK
→ ▲/▼ → **DATE FORMAT** → ⇨/OK
→ ▲/▼ → **DD-MM-YY / MM-DD-YY** → ⇨/OK
→ ▲/▼ → **TIME FORMAT** → ⇨/OK
→ ▲/▼ → **12 HR / 24 HR** → ⇨/OK

Phonebook

STORE A NUMBER ENTRY

⇨/OK → ▲/▼ → **PHONEBOOK** → ⇨/OK
→ **ALL CONTACTS** → ⇨/OK → ⇨/OK → **ADD**
→ ⇨/OK → **NAME** → ⇨/OK → enter name
→ ⇨/OK → **NUMBER** → ⇨/OK → enter phone number → ⇨/OK → **MELODY 1**
→ ▲/▼ to select melody → ⇨/OK

Quick access keys

Call list

Redial list

Phonebook

Call Blocker

SET DATE & TIME

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **DATE & TIME** → ⇨/OK
→ ▲/▼ → **SET DATE** → ⇨/OK
→ Enter the date → ⇨/OK
→ ▲/▼ → **SET TIME** → ⇨/OK
→ Enter the time → ⇨/OK

RINGER - EXTERNAL CALLS

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **RING SETUP** → ⇨/OK
→ ▲/▼ → **EXT, RING** → ⇨/OK
→ ▲/▼ to select melody → ⇨/OK

RINGER - INTERNAL CALLS

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **RING SETUP** → ⇨/OK
→ ▲/▼ → **INT, RING** → ⇨/OK
→ ▲/▼ to select melody → ⇨/OK

Nuisance and Unwanted Call Blocker

ADD A CALL BLOCK ENTRY

⇨/OK → ▲/▼ → **CALL BLOCKER** → ⇨/OK
→ **BLACK LIST** → ⇨/OK → ⇨/OK → **ADD**
→ ⇨/OK → **NAME** → ⇨/OK → enter name
→ ⇨/OK → **NUMBER** → ⇨/OK → enter phone number → ⇨/OK

BLOCK UNKNOWN CALLS

⇨/OK → ▲/▼ → **CALL BLOCKER** → ⇨/OK
→ ▲/▼ → **SETTINGS** → ⇨/OK
→ ▲/▼ → **CALL TYPE** → ⇨/OK
→ ▲/▼ → **UNAVAILABLE** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK

RINGER - VOLUME

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **RING SETUP** → ⇨/OK
→ ▲/▼ → **RING VOLUME** → ⇨/OK
→ ▲/▼ to select volume → ⇨/OK

TONE - SET KEY TONE ON/OFF

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **TONE SETUP** → ⇨/OK
→ ▲/▼ → **KEY TONE** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK

TONE - SET ALERT TONES ON/OFF

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **TONE SETUP** → ⇨/OK
→ ▲/▼ → **BATTERY TONE / OUT OF RANGE** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK

Answering machine (CS1550 series only)

TURN ON OR OFF WITH HANDSET

⇨/OK → ▲/▼ → **ANS. MACHINE** → ⇨/OK
→ ▲/▼ → **TAM ON/OFF** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK

PLAY/STOP, DELETE, REPEAT AND SKIP MESSAGE

To activate the handset controls during message playback, press:-
⇨/OK → ▲/▼ → **ANS. MACHINE** → ⇨/OK
→ ▲/▼ → **MSG PLAYBACK** → ⇨/OK

Press these handset keys to control messages.

STOP	DELETE	REPEAT	SKIP
 5	 2	 4	 6

ALARM - SET ALARM TIME AND ACTIVATION

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **ALARM** → ⇨/OK
→ ▲/▼ → **ON** → ⇨/OK
→ Enter alarm time in 24 hr format → ⇨/OK
→ Display **SNOOZE** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK

SET THE AUTO ANSWER

⇨/OK → ▲/▼ → **HS SETTINGS** → ⇨/OK
→ ▲/▼ → **AUTO ANSWER** → ⇨/OK
→ ▲/▼ → **ON / OFF** → ⇨/OK