




REPAIR PARTS LIST

587.15202802
587.15203802

For Parts or Service:
Call
1-800-4-MY-HOME®
(1-800-469-4663)

Or Visit
www.sears.com

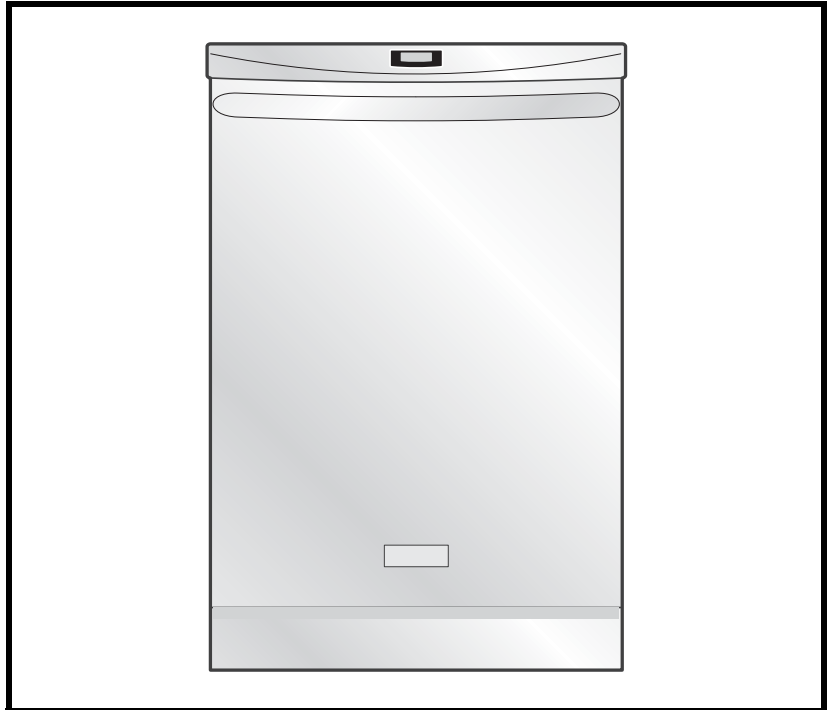

24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.


When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A
Publication number 5995552733

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

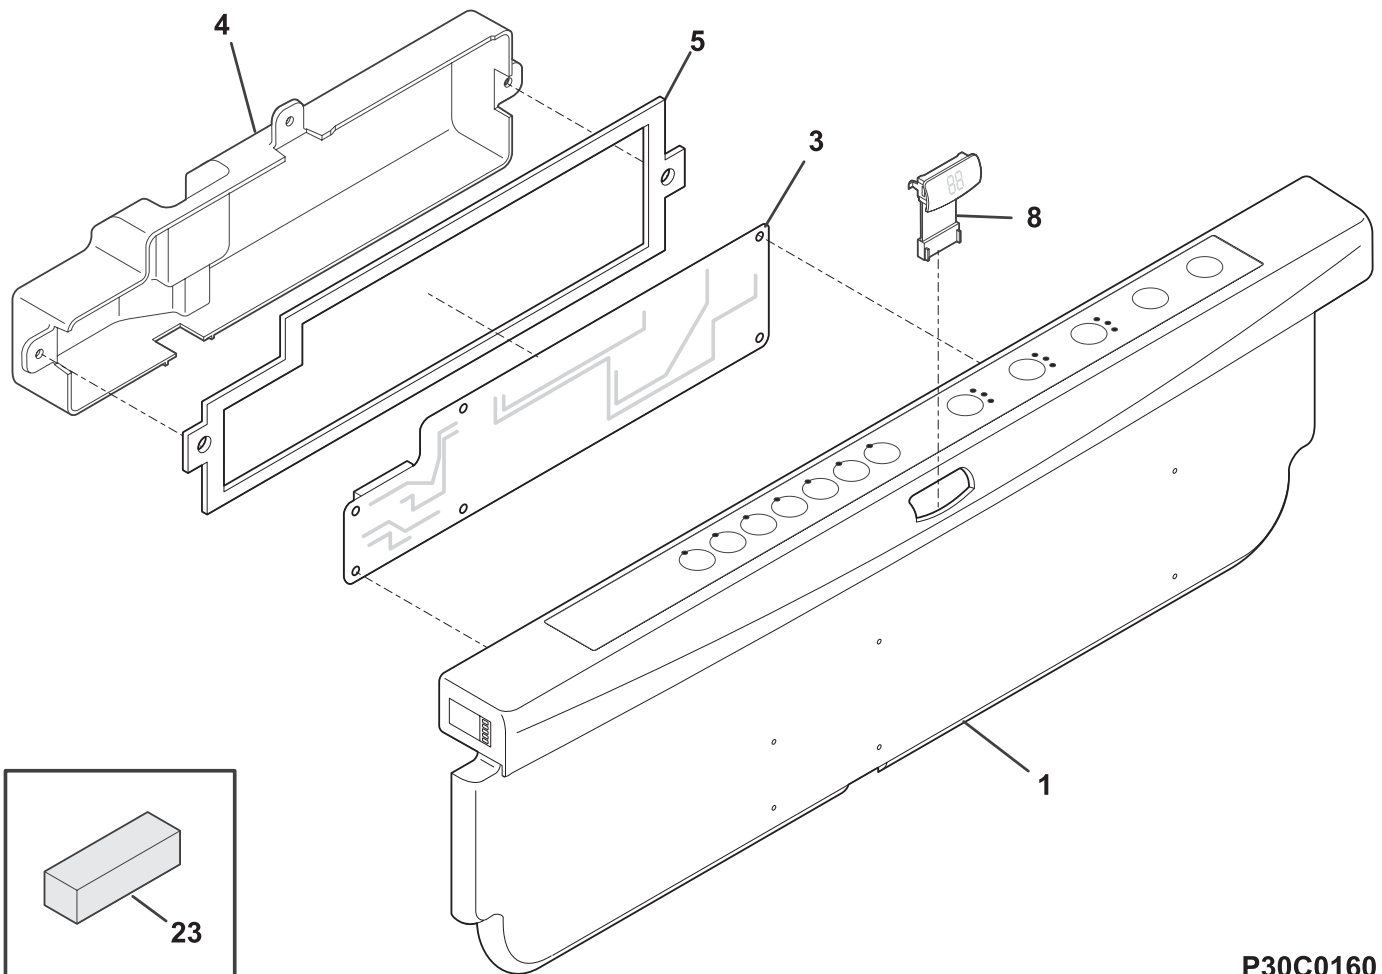**P30C0160**

CONTROL PANEL


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
1 #	154639201	A -	Console Panel, assembly, white, & foam, w/overlay
1 #	154639207	- B	Console Panel, assembly, stainless, & foam, w/overlay
3 #	154757002	A B	Board, control
4	154718801	A B	Cover, control
8 #	154543401	A B	Board, display
23	154592902	A B	Insulation, foam, 1.5/.9/.09, console RH
33	154718901	A B	Gasket, control cover
* #	154734201	A B	Harness, wiring, main
*	5995552733	A B	Repair Parts List
*	154719601	A B	Owners Manual, eng/spn
*	154719602	A B	Owners Manual, French
*	154719501	A B	Service Data Sheet
*	154524101	A B	Instructions, installation
*	154758420	A B	Energy Guide
*	154409401	A B	Screw, ground, #8-18 x .375

DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

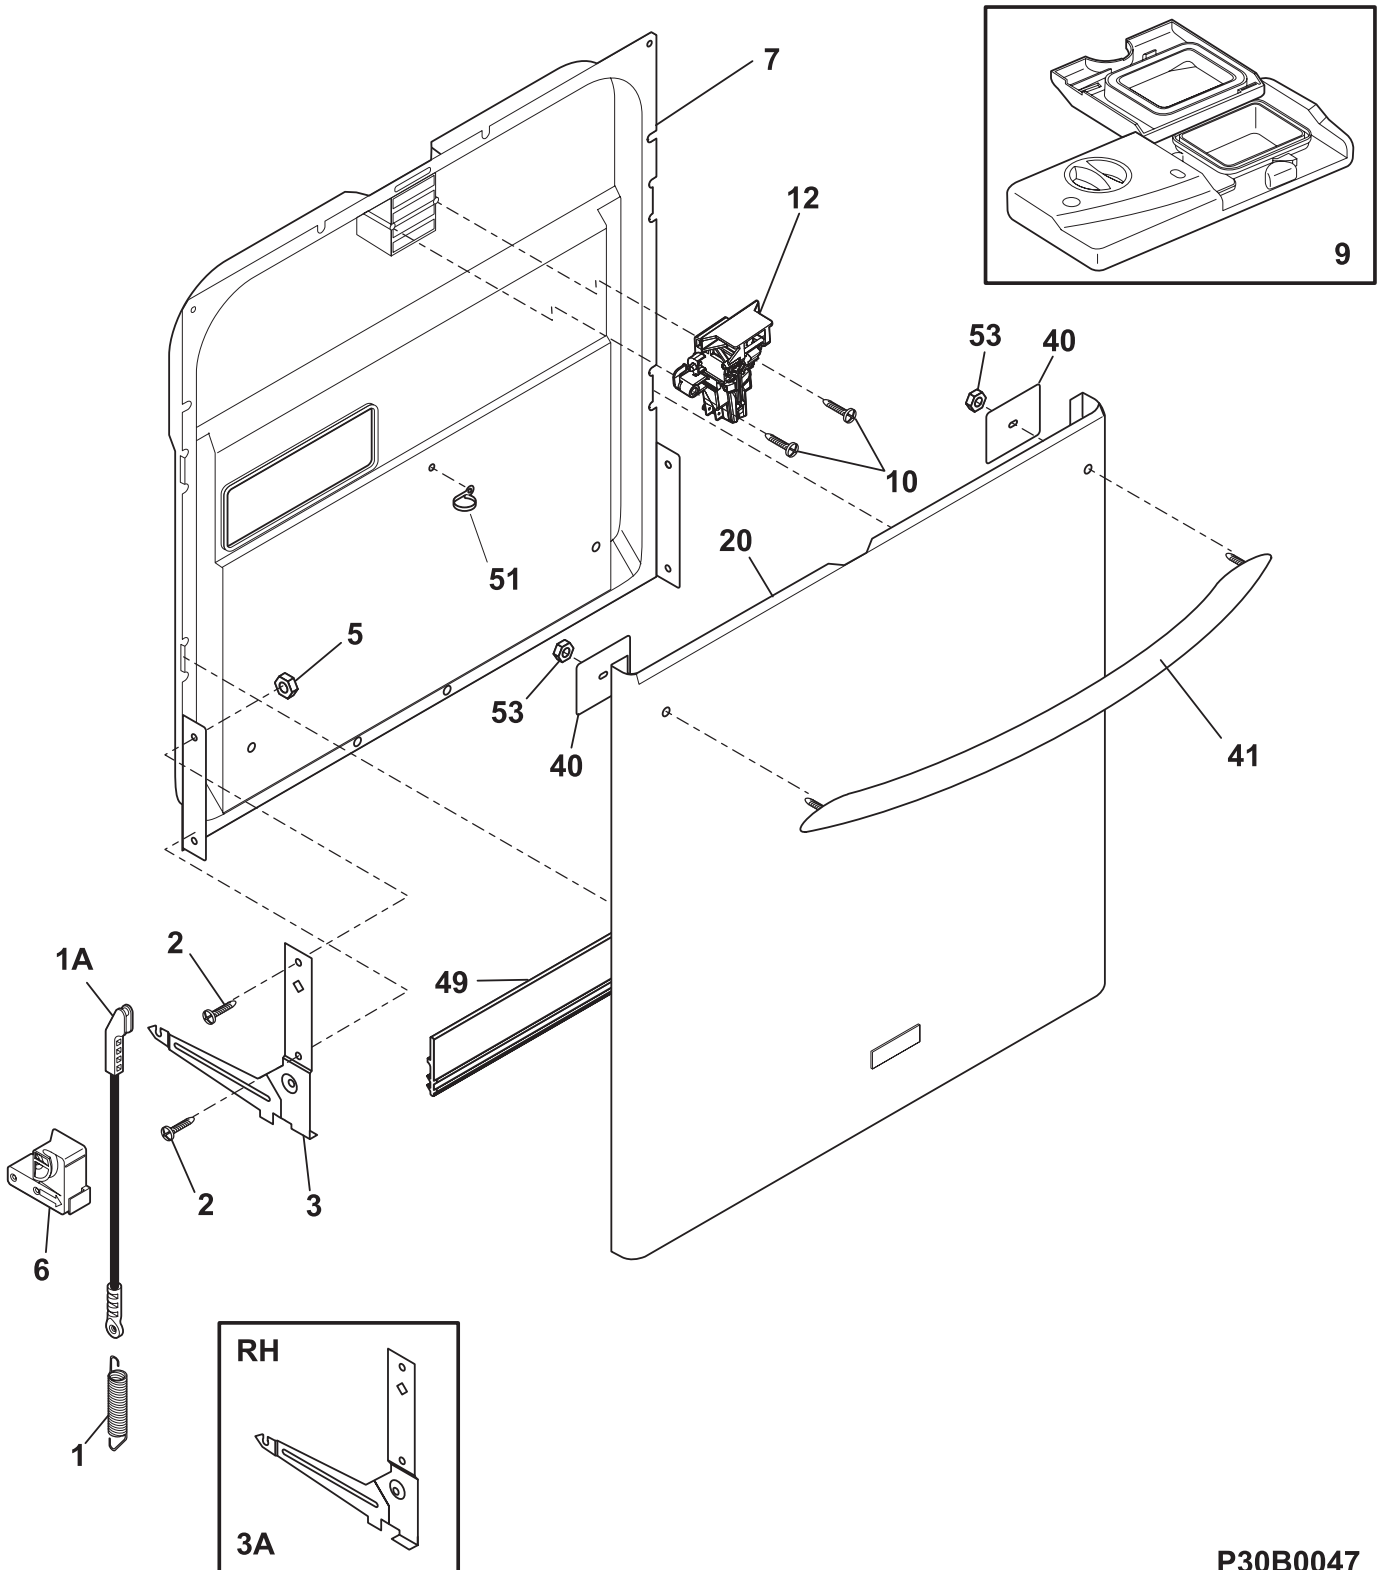**P30B0047**


DOORCAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
1	154579101	A B	Spring, friction pulley, (2)
1A	154578801	A B	Cable, friction pulley, (2)
2	154093301	A B	Screw, arm assy, (4)
3	154700501	A B	Arm Assy, LH, w/foam
3A	154700401	A B	Arm Assy, RH, w/foam
*	154647101	A B	Hinge Pin, arm assy
*	154686401	A B	Bearing, hinge pin
5	154079601	A B	Nut, arm assy, and handle mtg.
6	154579201	A B	Pulley, friction, LH
6	154579202	A B	Pulley, friction, RH
7	154687902	A B	Liner, door assembly, grey, complete
9	154542104	A B	Dispenser, det/rinse aid, w/read
9*	154719301	A B	Shield, dispenser assy
9*	154294701	A B	Screw, #7 plas .375, (6), disp. assy.
10	154103702	A B	Screw, latch mtg, (2)
12 #	154543901	A B	Latch assy, black
20	154719801	A -	Door, white, w/nameplate
20	154719805	- B	Door, stainless, w/nameplate
20*	154754701	A B	Screw, truss hd, 8-18 type AB, (2)
40	154760101	A B	Bracket, handle support, (2)
41	154543701	A -	Towel bar assy, white
41	154543705	- B	Towel bar assy, stainless
49	154588201	A B	Gasket, door wiper
51	154320301	A B	Clamp, drip loop, wire
53	154425001	A B	Nut, Keps, (2), handle mtg.
*	154200601	A B	Screw, #10-16 x 3/8
*	154409401	A B	Screw, ground, #8-18 x .375

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

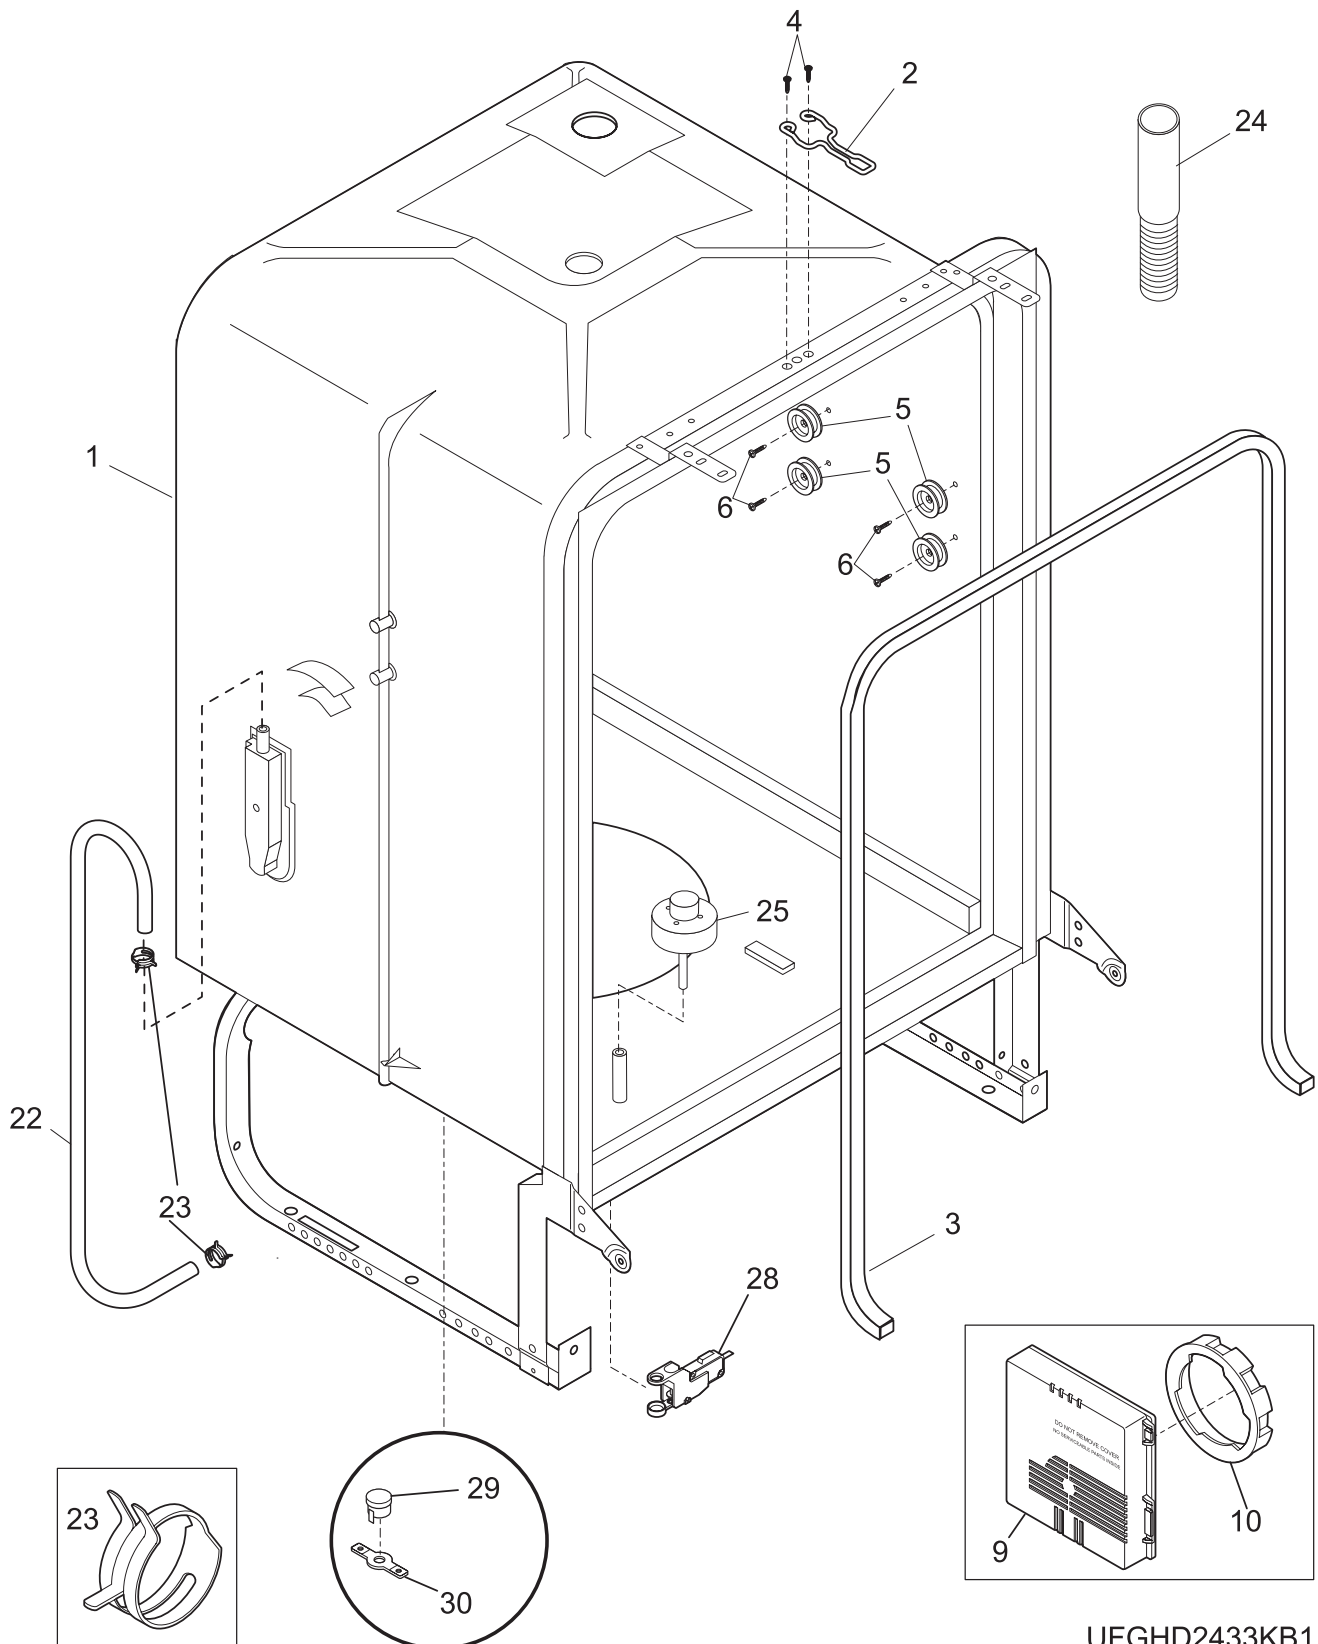

UFGHD2433KB1


TUBCAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
1 #	154729502	A B	Tub assy, w/frame parts, grey, & vent hole
*	154685101	A B	Gasket, tub, corner, (2)
*	154598801	A B	Foam, tub, (2)
2	154544601	A B	Strike, door
3 #	154561001	A B	Gasket, tub
4	154200602	A B	Screw, 10-16 x 3/8, hex
5	154767502	A B	Roller Assembly, tub, (8), w/screw-washer
6	5303943103	A B	Screw, w/washer, (8)
9 #	154773301	A B	Vent assy, blower
9*	154691601	A B	Cover, connector, vent assy
10	154562902	A B	Bezel, vent, gray
22	154446002	A B	Tubing, water inlet
23	5303318539	A B	Clamp, tubing, (2)
24 #	154753201	A B	Hose, drain
*	154380601	A B	Clamp, hose, 1.5" open, worm gear, (5)
25 #	154767802	A B	Float
28	154408701	A B	Switch Assy, float
29 #	154642901	A B	Thermostat, hi limit
30	154241101	A B	Retainer, thermostat
30*	154297701	A B	Screw, retainer-thermo
*	154528701	A B	Cabinet Seal Kit
*	154753301	A B	Insulation, blanket
*	154635101	A B	Insulation, back
*	154041001	A B	Screw, plask #1, 10-10 x 9/16
*	154200601	A B	Screw, #10-16 x 3/8
*	154200701	A B	Screw, #10-32 x 3/8
*	5300807270	A B	Screw, (2), countertop mtg.

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

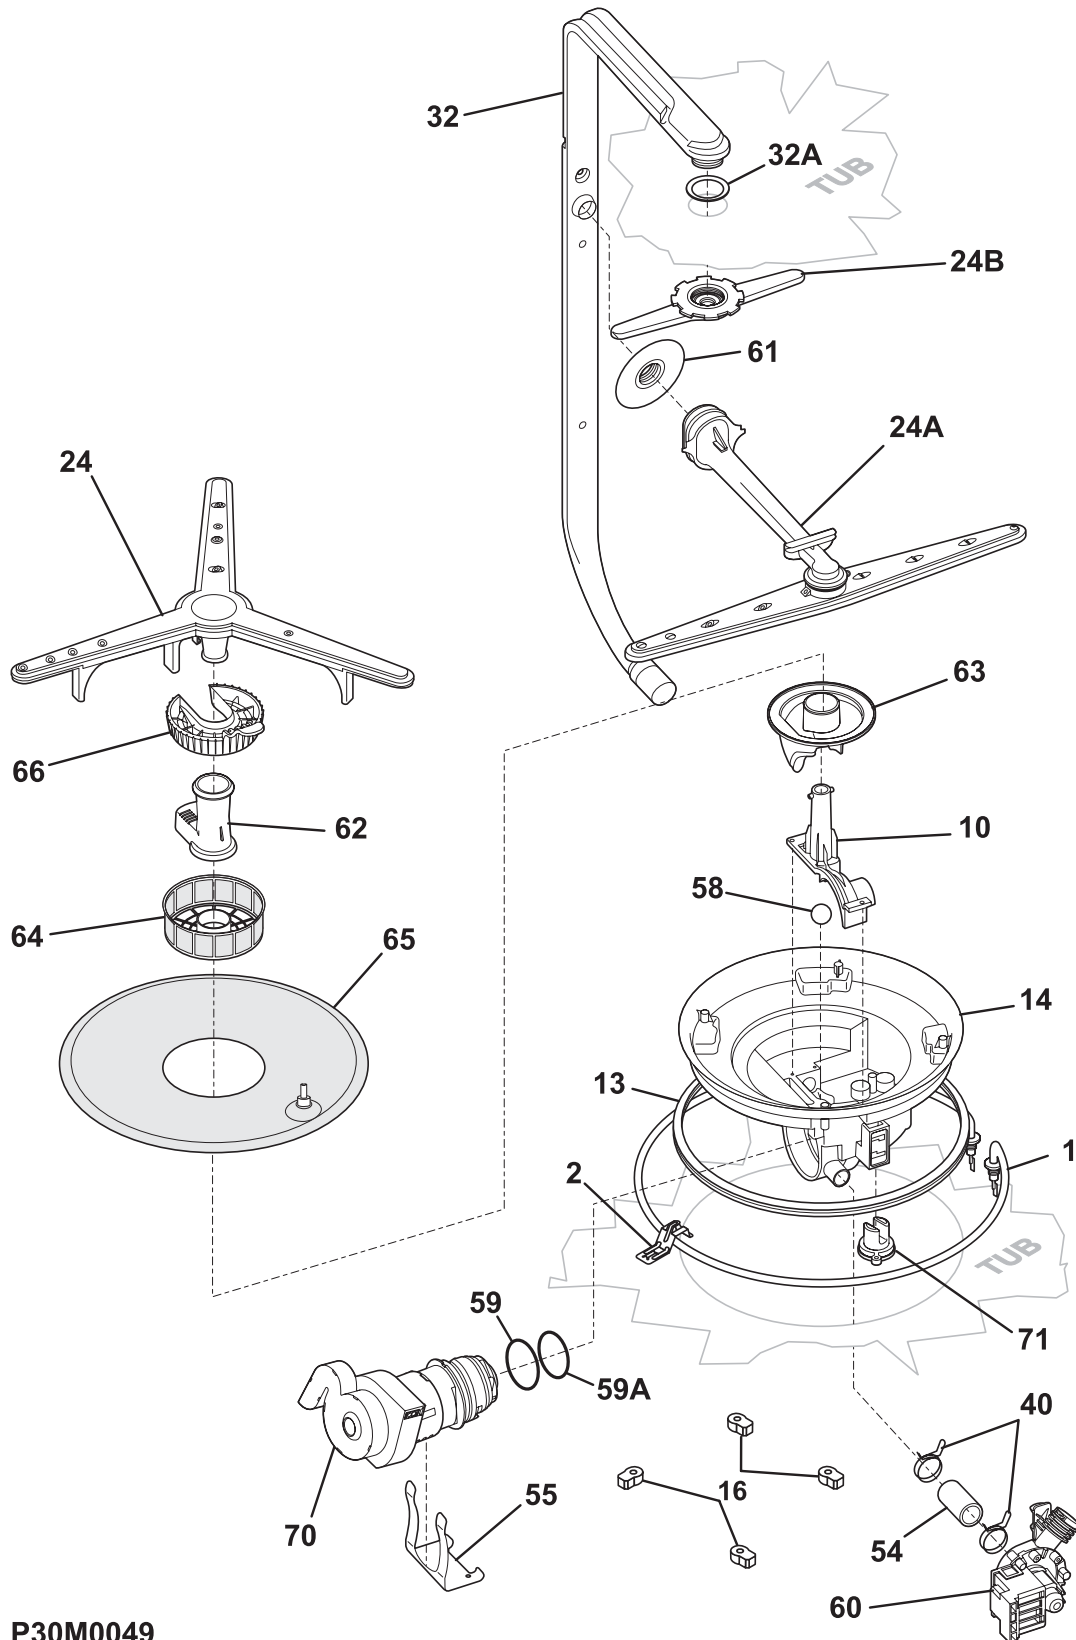

P30M0049

MOTOR & PUMPCAUTION: Use the Kenmore part number to order part, not the illustration number.


Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
1 #	154663801	A B	Heater, round
1*	154106202	A B	Nut, heater, (2)
1*	154289801	A B	Shield, heater terminal
2	154465101	A B	Bracket, heater, (2)
10	154245501	A B	Cover, volute
13	154246801	A B	Gasket, sump
14	154461902	A B	Housing, sump
16	154246502	A B	Retainer, sump
16*	154754901	A B	Screw, sump mtg, 8-16, (4)
24	154608102	A B	Spray arm, grey, lower, w/heat shield
24A	154468502	A B	Spray arm, grey, center
24B	154607802	A B	Spray arm, assembly, upper
32	154464101	A B	Tube, delivery
32*	154491101	A B	Screw, delivery tube
32A	154406401	A B	Gasket, delivery tube
40	154106801	A B	Clamp, hose, 1.29" open, worm gear, (2)
40*	154380601	A B	Clamp, hose, 1.5" open, worm gear, (5)
54	154491201	A B	Hose, connector, drain pump
55	154595901	A B	Bracket, motor
55*	5303316032	A B	Screw, truss ss, 8 .625, (7)
58	154246402	A B	Check ball
59	154246901	A B	O-ring, rear
59A	154247001	A B	O-ring, front
60 #	154580301	A B	Pump Assy, drain
61	154463402	A B	Grommet, delivery tube
62	154294102	A B	Support, spray arm, grey, lower
63	154776101	A B	Base, soil director
64	154252302	A B	Filter, soil director, grey
65	154283005	A B	Filter Assy, grey
66	154252702	A B	Trap, glass, grey
70 #	154719201	A B	Motor & Pump Assy
71 #	154473901	A B	Sensor, turbidity
71*	154376001	A B	O-ring, turbidity
*	154200601	A B	Screw, #10-16 x 3/8

587.1520

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

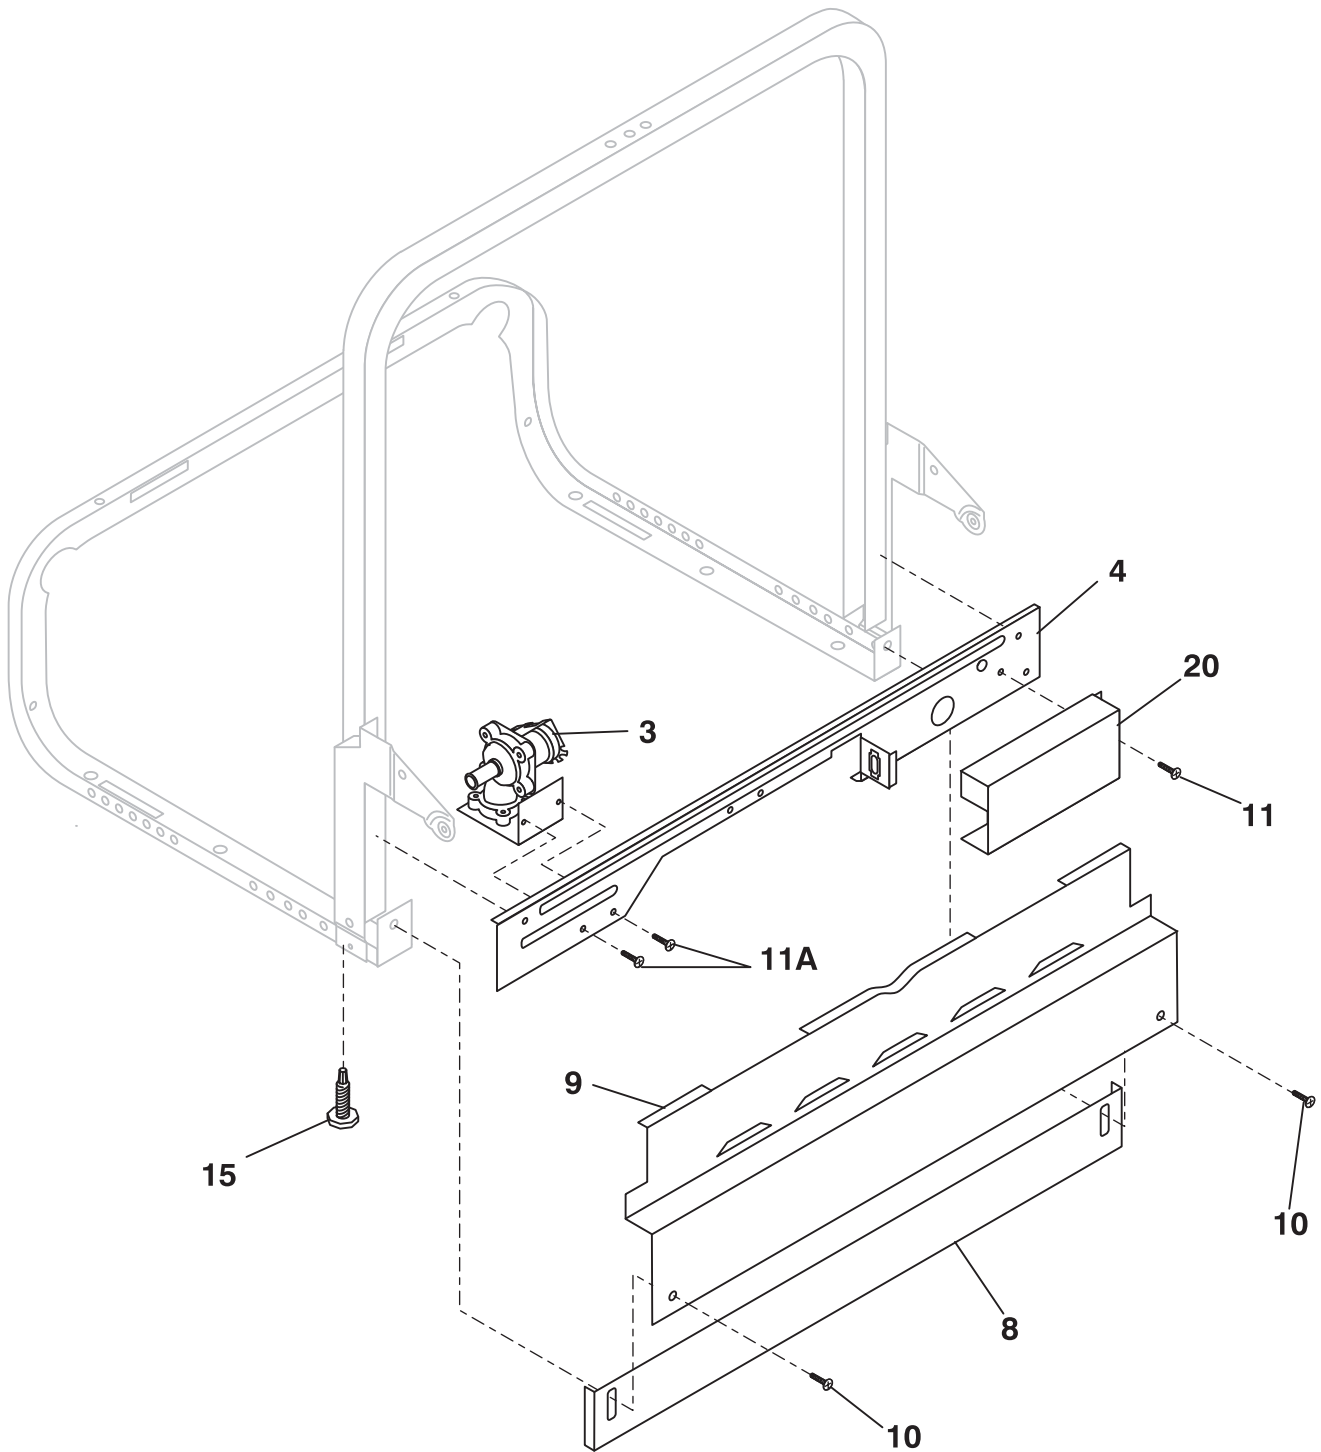

P30F0022

FRAME


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
3 #	154637401	A B	Valve, water
4	154669301	A B	Brace, front frame
8	154589401	A -	Toeplate, adjustable, white
8	154589403	- B	Toeplate, adjustable, black
8*	154528101	A B	Insulation, toeplate
9	154589501	A -	Kickplate Assy, white
9	154589503	- B	Kickplate Assy, black
10	154371301	A B	Screw, Phillips head, white
11	154200701	A B	Screw, #10-32 x 3/8
11A	154200601	A B	Screw, #10-16 x 3/8
15	154571101	A B	Leg, leveling, (4)
20	154758501	A B	Cover, junction box, w/label
*	154041001	A B	Screw, plask #1, 10-10 x 9/16
*	154200602	A B	Screw, 10-16 x 3/8, hex
*	154409401	A B	Screw, ground, #8-18 x .375

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

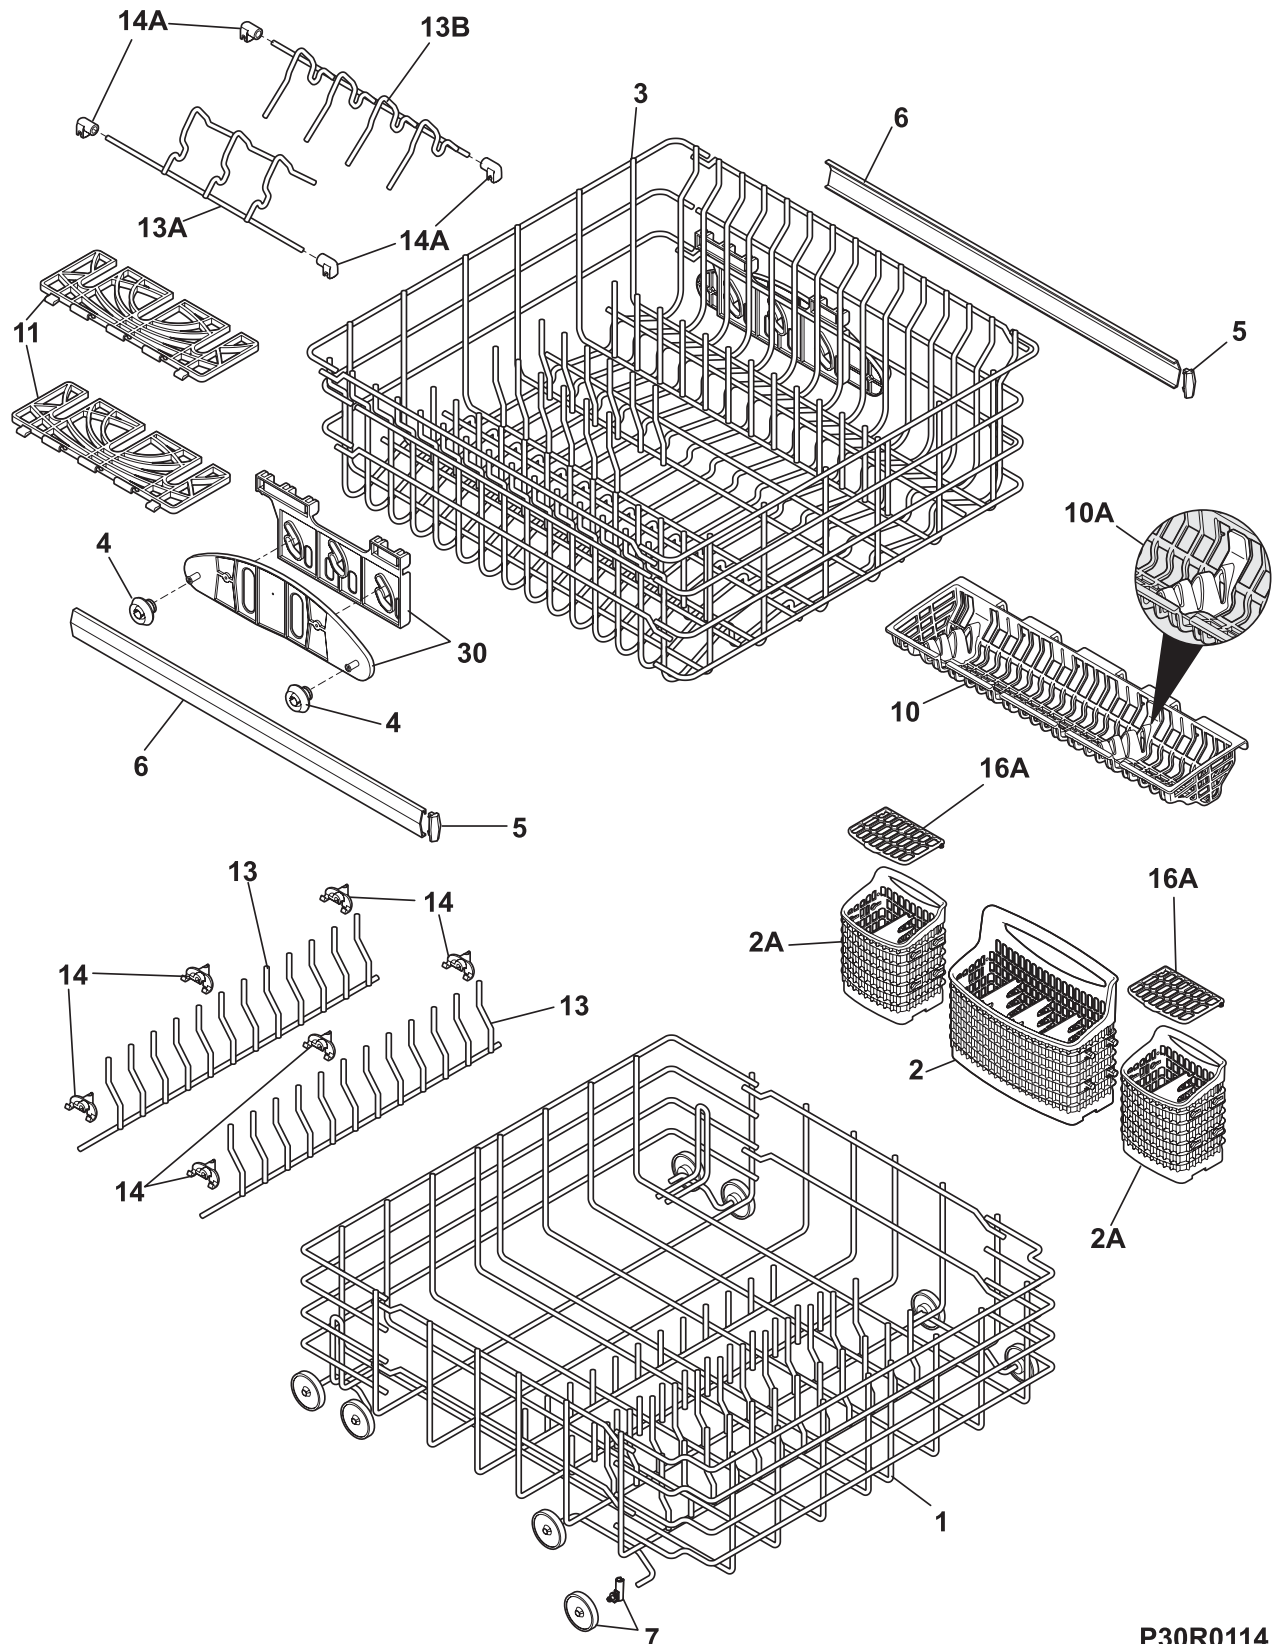

P30R0114

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1520 (587.15202802)
 B 587.1520 (587.15203802)

POS. NO	PART NO.		DESCRIPTION
1	154432604	A B	Rack assy, lower, grey
2	154424002	A B	Basket, silverware, grey, main
2A	154424102	A B	Basket, silverware, grey, (2), side
3	154494404	A B	Rack assy, upper, grey
*	154567202	A B	Nameplate, grey, Kenmore
4	154494502	A B	Wheel assy., upper rack, (4)
5	5304440996	A B	Cap, slide, grey, (4)
6	154597801	A B	Slide, rack, upper, (2)
7	154174503	A B	Wheel & bracket assy, grey, lower rack, (8)
10	154488802	A B	Tray, utility, grey, w/knife holder
10A	154452502	A B	Holder, knife, grey
11	154436104	A B	Shelf, cup, half width, grey
13	154721402	A B	Fence, fold down, grey, lower rack, (2), full length
13A	154740302	A B	Fence, multi, 3 wire, LH, upper rack
13B	154740402	A B	Fence, multi, 4 wire, RH, upper rack
14	154428402	A B	Bracket, fold down fence, grey, lower rack, (6)
14A	154242003	A B	Bracket, multi fence, grey, upper rack, (4)
16A	154424303	A B	Cover, side basket, grey, (2), silverware
30	154780102	A B	Bracket, adjustment, LH, upper rack, assembly
30*	154780202	A B	Bracket, adjustment, RH, upper rack, assembly

Get it fixed, at your home or ours!

Your Home

For expert troubleshooting and home solutions advice:

manage  **my home**

www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

1-800-469-4663 (Canada)

www.sears.com

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR[®]

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears

® Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC

® Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC

© Sears Brands, LLC