




REPAIR PARTS LIST

587.16242702
587.16248702
587.16249702

For Parts or Service:
Call
1-800-4-MY-HOME®
(1-800-469-4663)

Or Visit
www.sears.com

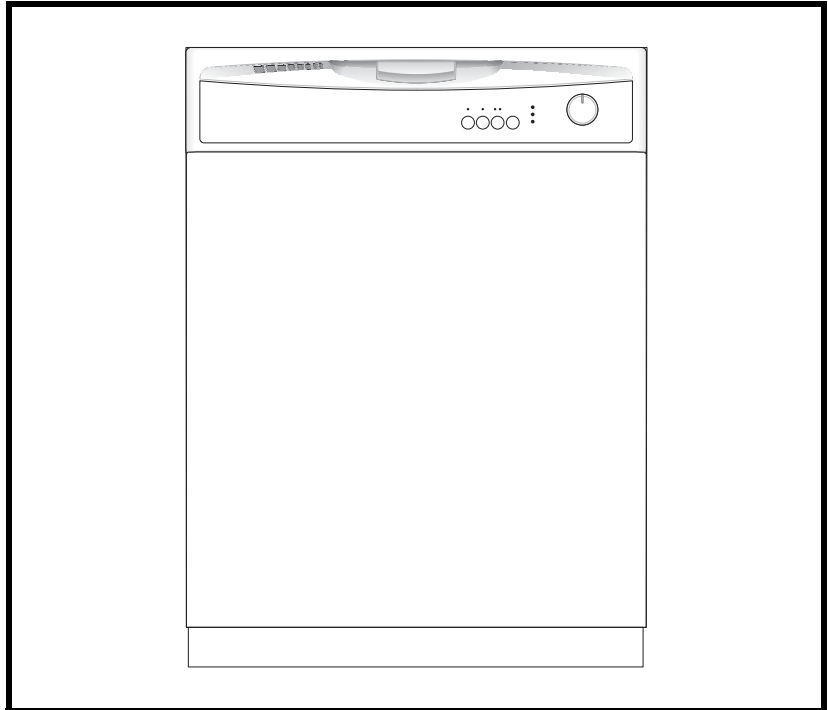

24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.


When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A
Publication number 5995520797

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

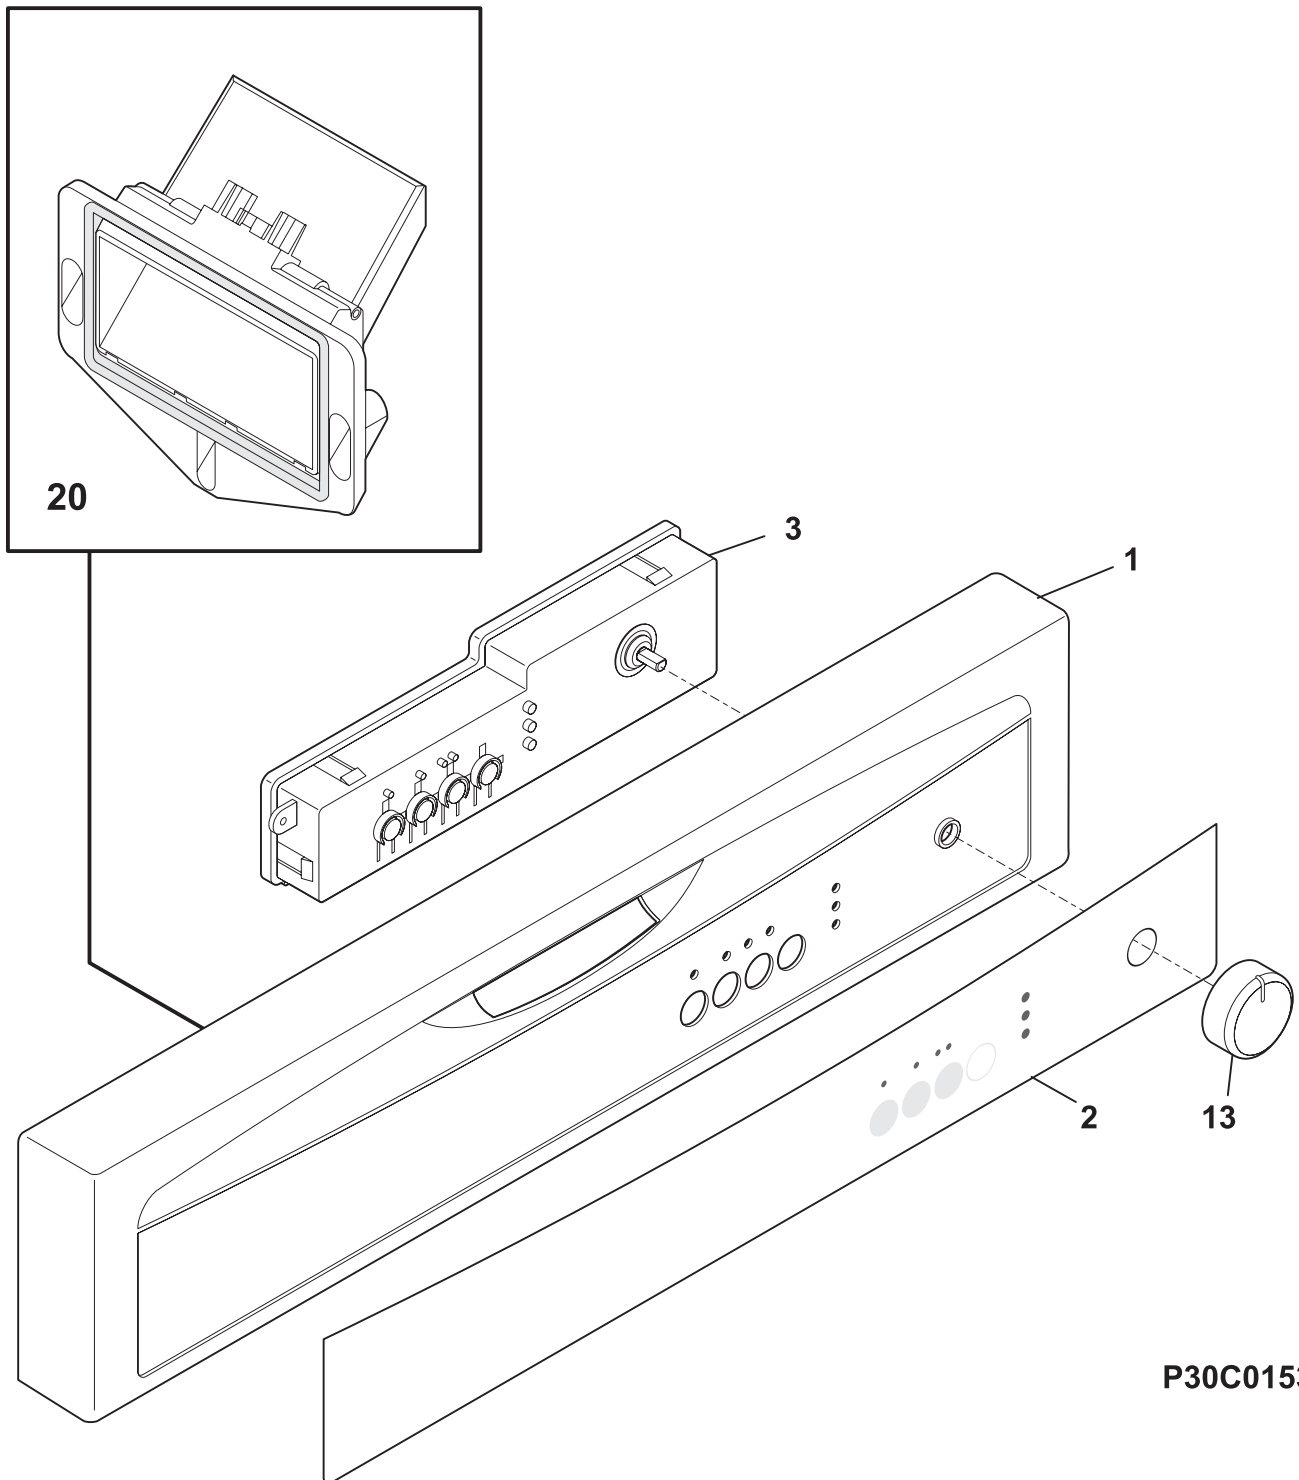

CONTROL PANEL


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
 B 587.1624 (587.16248702)
 C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
1	154644401	A - -	Panel, control, white
1	154644403	- B C	Panel, control, black
2	154571201	A - -	Insert, control panel, white, 4 button
2	154571203	- B C	Insert, control panel, black, 4 button
3 #	154668901	A B C	Control Module, 4 button, w/selector
13	154551901	A - -	Knob, timer, white
13	154551903	- B C	Knob, timer, black
20	154433001	A B C	Vent assy, static dry
20*	154436201	A B C	Screw, dry duct, (3)
* #	154646301	A B C	Harness, wiring, main
*	154227501	A B C	Thermistor
*	5995520797	A B C	Repair Parts List
*	154643101	A B C	Owners Manual, eng/spn
*	154643102	A B C	Owners Manual, French
*	154643001	A B C	Service Data Sheet
*	154524101	A B C	Instructions, installation
*	154678515	A B C	Energy guide label
*	154409401	A B C	Screw, #8-18 x .375

DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

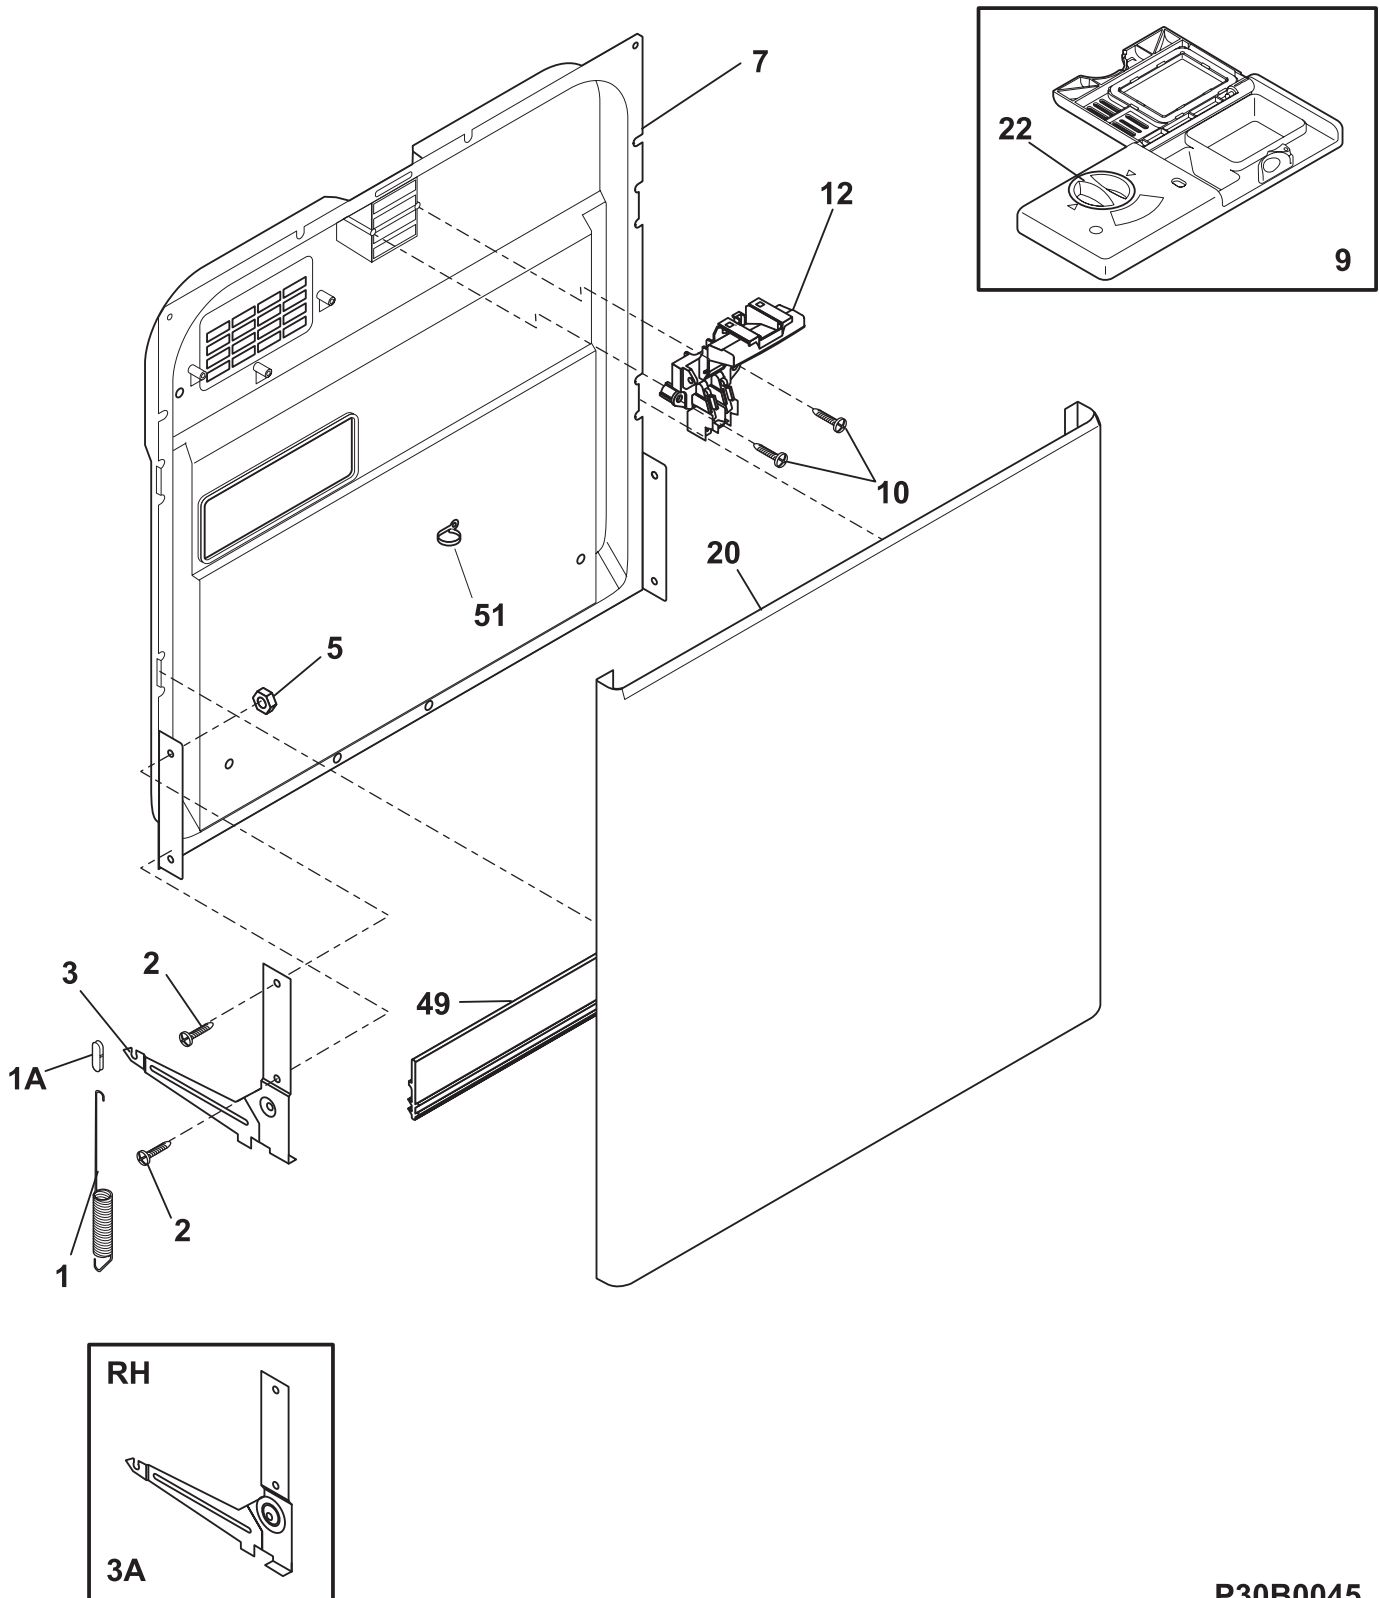**P30B0045**

DOOR


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
 B 587.1624 (587.16248702)
 C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
1	154430501	A B C	Spring, door, (2)
1A	154325201	A B C	Linkage, door spring, (2)
2	154093301	A B C	Screw, arm assy, (4)
3	154691201	A B C	Arm Assy, LH
3A	154691101	A B C	Arm Assy, RH
*	154647101	A B C	Hinge Pin, arm assy
*	154686401	A B C	Bearing, hinge pin
5	154079601	A B C	Nut, arm assy, and handle mtg.
7	154494601	A B C	Liner, door assy.
9	154574401	A B C	Dispenser, det/rinse aid, w/o reed
9*	154294701	A B C	Screw, #7 plas .375, (6), disp. assy.
10	154103702	A B C	Screw, latch mtg, (2)
12 #	154556701	A - -	Latch assy, white
12 #	154556703	- B C	Latch assy, black
20	154538301	A - -	Door, white
20	154538306	- B -	Door, silver mist
20	154538303	- - C	Door, black
20*	5304428306	A B C	Screw, door mtg., (2)
22	154388801	A B C	Cap, Rinse aid
49	154588201	A B C	Gasket, door wiper
51	154320301	A B C	Clamp, drip loop, wire
*	154409401	A B C	Screw, #8-18 x .375

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

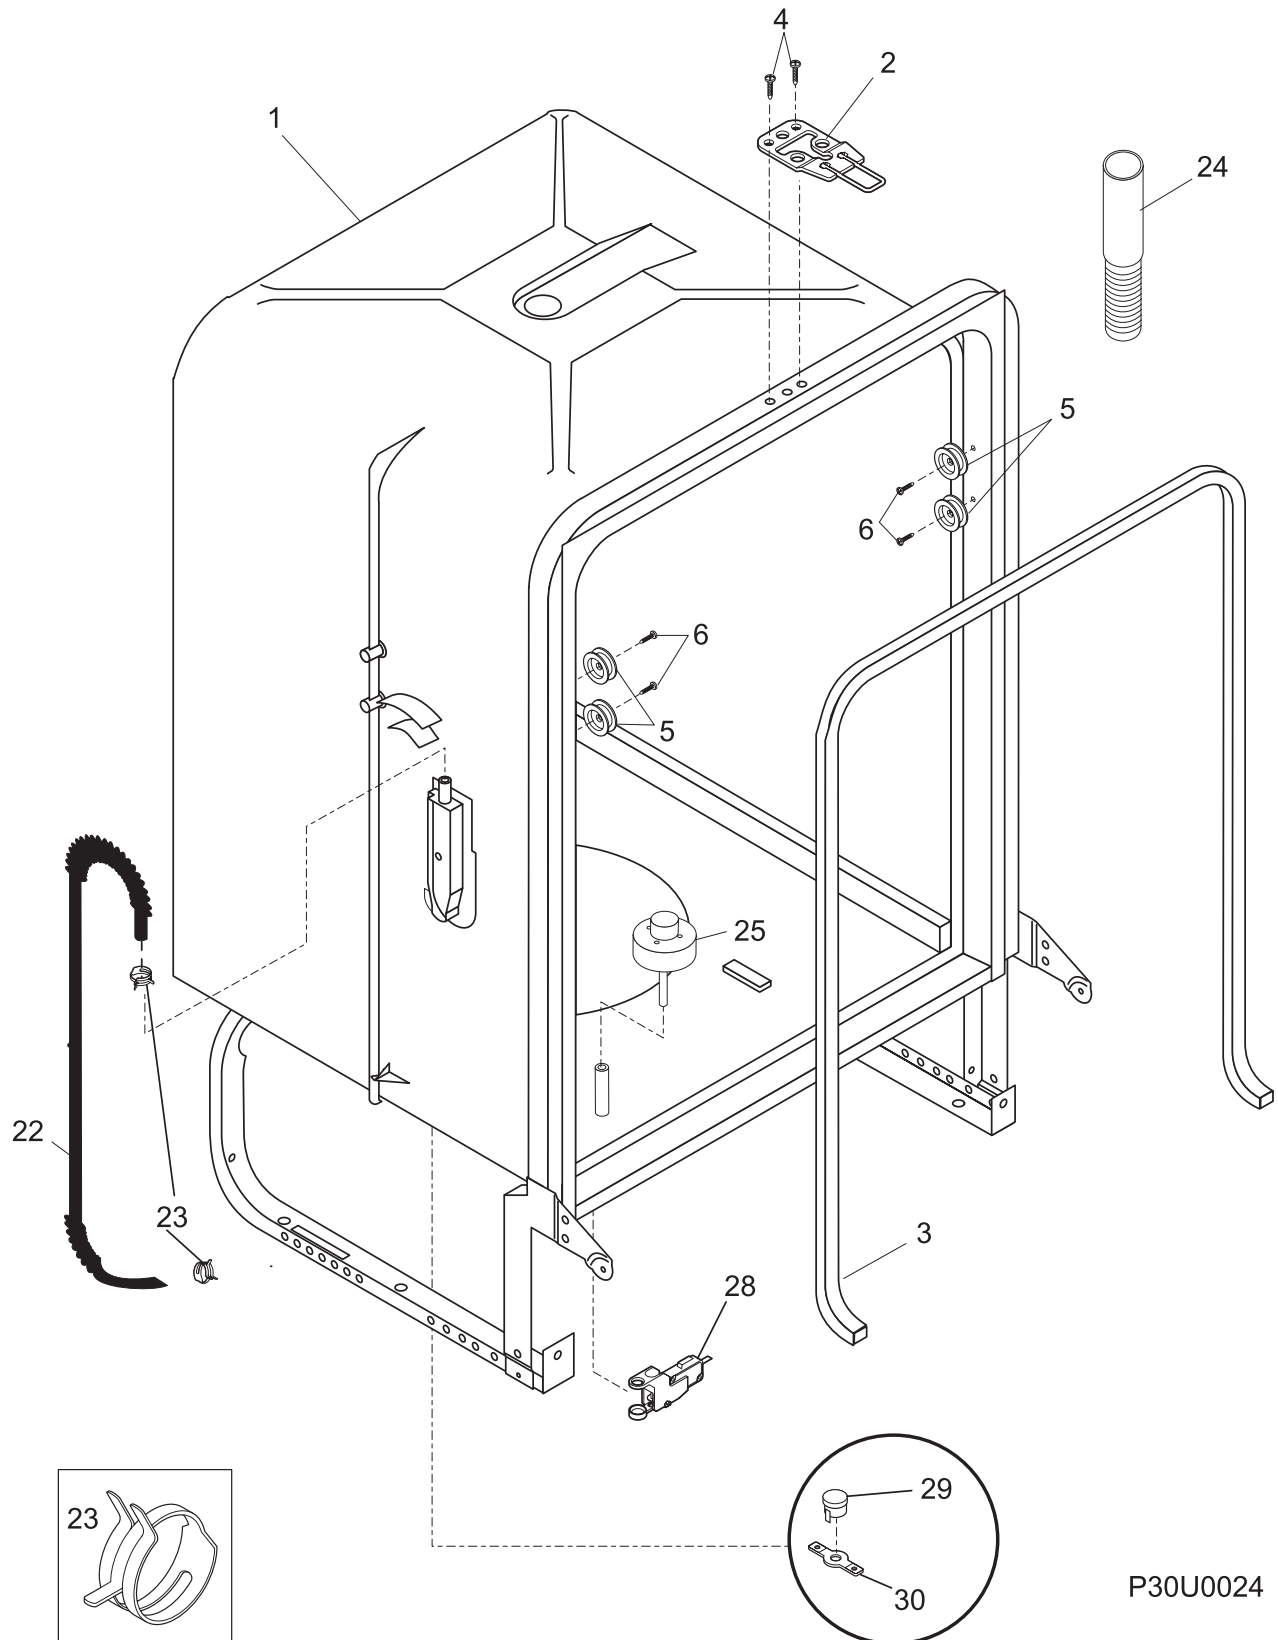

P30U0024

TUB


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
 B 587.1624 (587.16248702)
 C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
1 #	154729301	A B C	Tub assy, w/frame parts, white, PW
2	154662601	A B C	Strike, door
3 #	154561001	A B C	Gasket, tub
4	154200602	A B C	Screw, 10-16 x 3/8, hex
5	154333902	A B C	Roller, tub
6	5303943103	A B C	Screw, w/washer, (8)
22	154577401	A B C	Tubing, water inlet
23	5303318539	A B C	Clamp, tubing, (2)
24 #	154606701	A B C	Hose, drain
25 #	154209701	A B C	Float
28	154408701	A B C	Switch Assy, float
29 #	154290204	A B C	Thermostat, re-settable
30	154241101	A B C	Retainer, thermostat
30*	154297701	A B C	Screw, retainer-thermo
*	154641601	A B C	Insulation, blanket
*	154685101	A B C	Gasket, tub, corner, (2)
*	5300807270	A B C	Screw, (2), countertop mtg.
*	154041001	A B C	Screw, plask #1, 10-10 x 9/16
*	154200601	A B C	Screw, #10-16 x 3/8

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

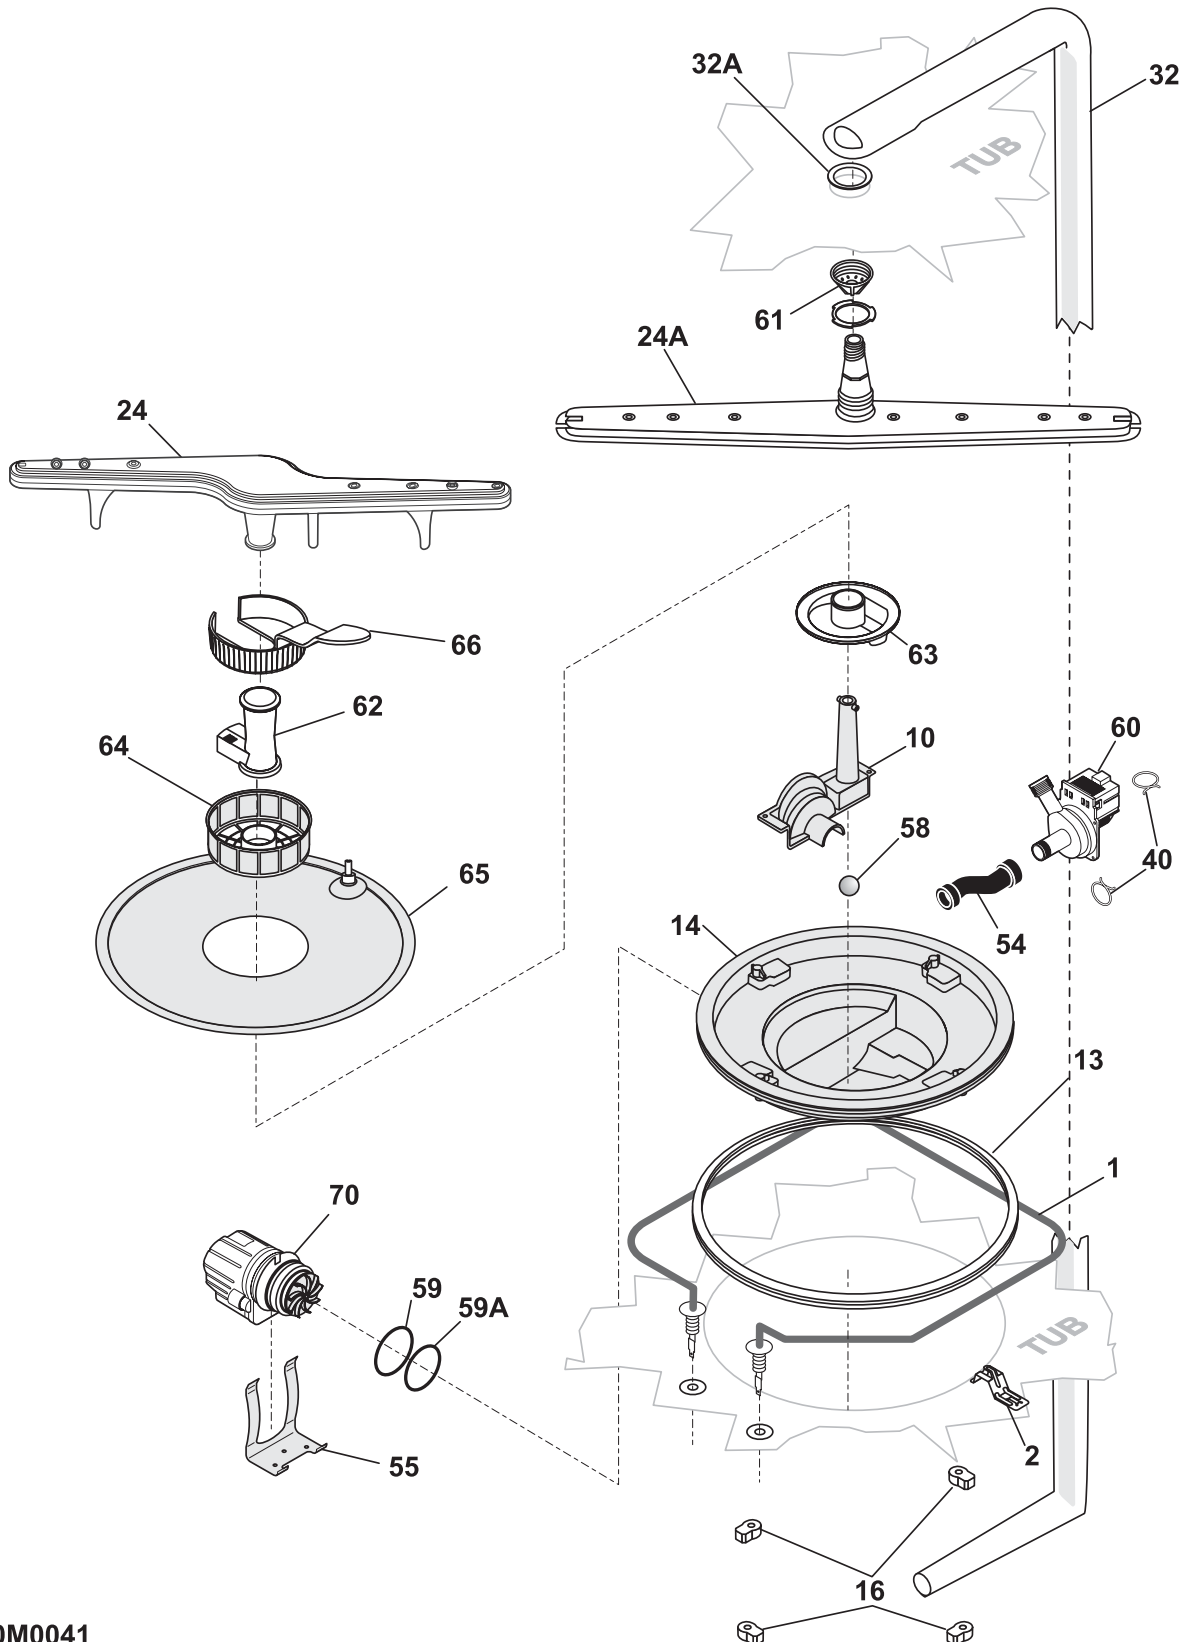**P30M0041**


MOTOR & PUMPCAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
B 587.1624 (587.16248702)
C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
1 #	154247601	A B C	Heater
1*	154106202	A B C	Nut, heater, (2)
1*	154289801	A B C	Shield, heater terminal
2	154479601	A B C	Bracket, heater, (2)
10	154245501	A B C	Cover, volute
13	154246801	A B C	Gasket, sump
14	154365902	A B C	Housing, sump
16	154246502	A B C	Retainer, sump
24	154568001	A B C	Spray arm, white, lower, w/heat shield
24A	154313601	A B C	Spray arm, center
24A*	154252001	A B C	Nut, spray arm, center
32	154406601	A B C	Tube, delivery
32A	154406401	A B C	Gasket, delivery tube
40	154348401	A B C	Clamp, hose, red, push spring, (3)
40	154348502	A B C	Clamp, red, hose
40*	154106801	A B C	Clamp, hose, 1.29" open, worm gear, (2)
40*	154380601	A B C	Clamp, hose, 1.5" open, worm gear, (5)
54	154234401	A B C	Hose, connector
55	154595901	A B C	Bracket, motor
55*	5303316032	A B C	Screw, truss ss, 8 .625, (7)
58	154246402	A B C	Check ball
59	154246901	A B C	O-ring, rear
59A	154247001	A B C	O-ring, front
60 #	154640201	A B C	Drain Pump Assy
60*	154426201	A B C	Bracket, motor, drain
61	154606801	A B C	Nozzle, 3rd level, spray arm
62	154294101	A B C	Support, spray arm, lower
63	154252201	A B C	Base, soil director
64	154252301	A B C	Filter, soil director, white
65	154252401	A B C	Filter, polypro
66	154252701	A B C	Trap, glass
70 #	154700101	A B C	Motor & Pump Assy, johnson, 2900
*	154200601	A B C	Screw, #10-16 x 3/8
22	5300809968	A B C	Washer

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

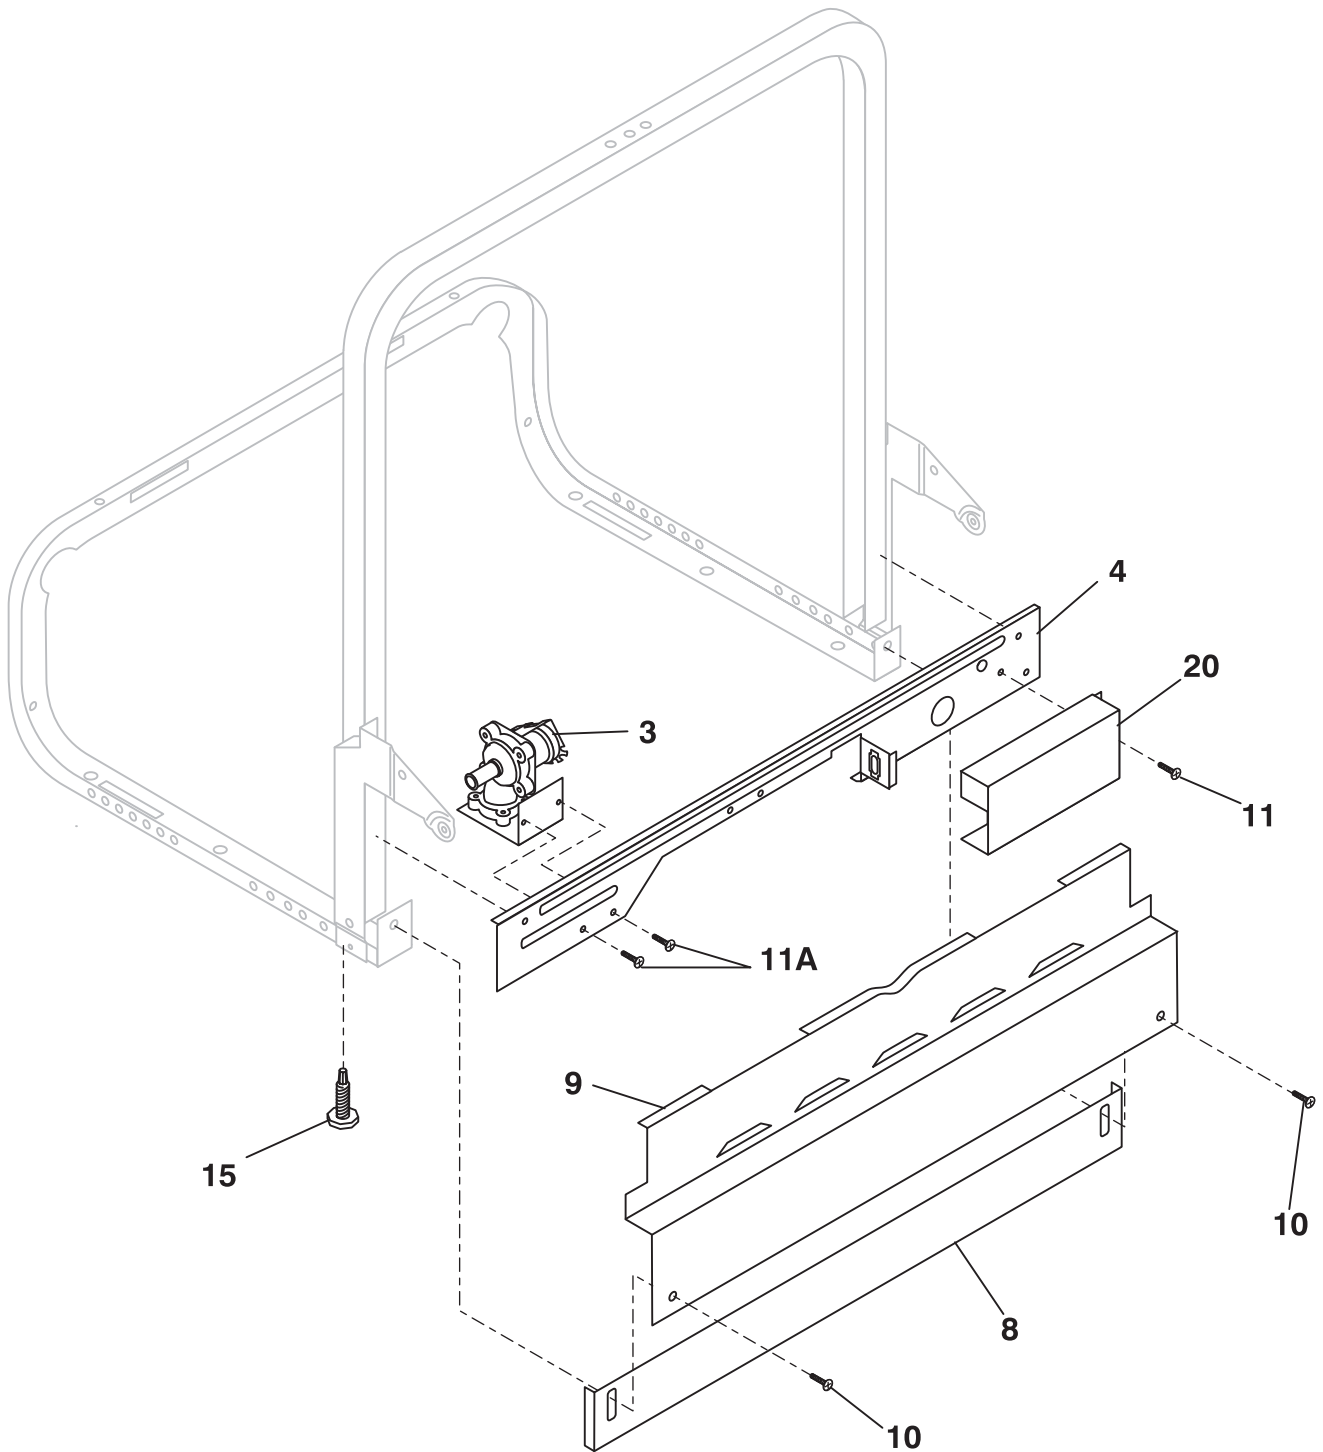**P30F0022**

FRAME


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
 B 587.1624 (587.16248702)
 C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
3 #	154637401	A B C	Valve, water
4	154669301	A B C	Brace, front frame
8	154589401	A - -	Toeplate, adjustable, white
8	154589403	- B C	Toeplate, adjustable, black
9	154589501	A - -	Kickplate Assy, white
9	154589503	- B C	Kickplate Assy, black
10	154371301	A - -	Screw, Phillips head, white
10	5300808658	- B C	Screw, #8A x .375", black
11	154200701	A B C	Screw, #10-32 x 3/8
11A	154200601	A B C	Screw, #10-16 x 3/8
15	154571101	A B C	Leg, leveling, (4)
20	154597001	A B C	Cover, junction box
*	154041001	A B C	Screw, plask #1, 10-10 x 9/16
*	154200602	A B C	Screw, 10-16 x 3/8, hex
*	154409401	A B C	Screw, #8-18 x .375

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

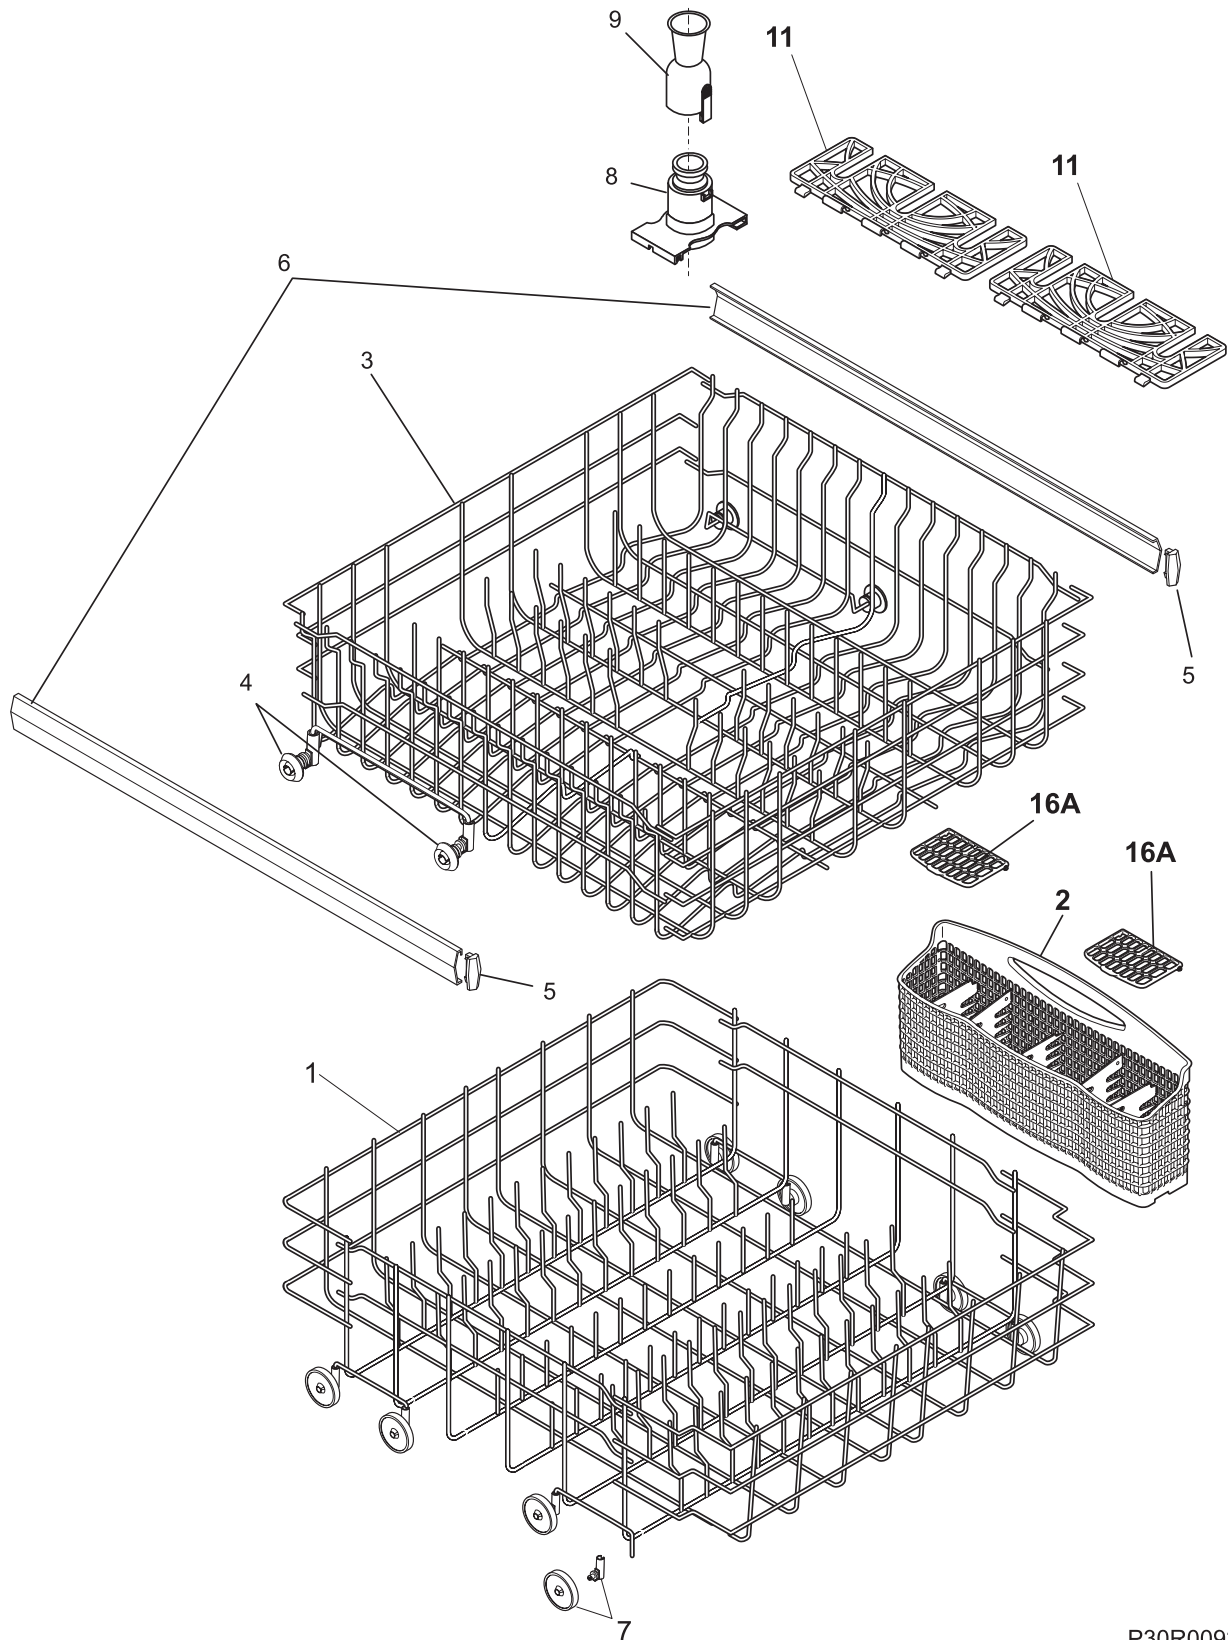

P30R0092

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1624 (587.16242702)
 B 587.1624 (587.16248702)
 C 587.1624 (587.16249702)

POS. NO	PART NO.		DESCRIPTION
1	154319706	A B C	Rack assy, lower
2	154556101	A B C	Basket, silverware, white
3	154319524	A B C	Rack assy, upper
4	154522901	A B C	Wheel & bushing assy, upper rack, (8)
5	5300809927	A B C	Cap, slide, (4)
6	154597801	A B C	Slide, rack, upper, (2)
7	154174502	A B C	Wheel & bracket assy, lower rack
8	154304001	A B C	Base, funnel
9	154251801	A B C	Funnel
11	154436101	A B C	Shelf, cup, half width, white
16A	154424301	A B C	Cover, side basket, (2), silverware

Get it fixed, at your home or ours!

Your Home

For expert troubleshooting and home solutions advice:

manage  **home**

www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

1-800-469-4663 (Canada)

www.sears.com

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears

® Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC

® Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC

© Sears Brands, LLC