

FLOODED
LEAD ACID

perfect plus[®] *Water Less*[®]

ATEX UKEX Certified Batteries



OWNER'S MANUAL

CONTENTS

Introduction	3
Standard	4
Rating Data	4
Condition of Use	4
Safety Precautions	5
Safety	6
Service	6
Handling	6
Taking Delivery of Your Battery	6
Commissioning	7
Maintenance	7
Water Less Topping-Up Intervals	9
Discharge	9
Recharge	10
Measurement of Specific Gravity	11
Temperature	11
Surrounding Area Conditions	11
Effect of Explosive Atmosphere on Materials	11
Protection Against Other Hazards	12
Hazards From Different Ignition Sources	12
Withstanding Attack by Aggressive Substances ...	12
Care of the Battery	12
Storage	13
Malfunctions	13
Aquamatic Water Refilling System	13
Electrolyte Circulation System	15
Disposal	15

INTRODUCTION

perfect plus **Water Less** **Batteries**

The information contained in this document is critical for safe handling and proper use of the Perfect Plus® and Water Less® ATEX UKEX certified batteries. It contains a global system specification as well as related safety measures, codes of behaviour, a guideline for commissioning and recommended maintenance. This document must be retained and available for users working with and responsible for the battery. All users are responsible for ensuring that all applications of the system are appropriate and safe, based on conditions anticipated or encountered during operation.

This owner's manual contains important safety instructions. Read and understand the sections on safety and operation of the battery before operating the battery and the equipment into which it is installed.

It is the owner's responsibility to ensure the use of this documentation and all related activities comply with applicable legal requirements in their respective countries.

This owner's manual is not intended to substitute for any training on handling and operating the Perfect Plus® and Water Less® ATEX UKEX certified batteries that may be required by local laws and/or industry standards. Proper instruction and training of all users must be ensured prior to any contact with the battery system.

For service, contact your sales representative or call:

EnerSys EMEA
EH Europe GmbH
Baarerstrasse 18
6300 Zug, Switzerland
Tel: +41 44 215 74 10

EnerSys World Headquarters
2366 Bernville Road
Reading, PA 19605, USA
Tel: +1-610-208-1991
+1-800-538-3627

EnerSys APAC
No. 85, Tuas Avenue 1
Singapore 639518
+65 6558 7333
www.enersys.com

Your Safety and the Safety of others is Very Important

⚠ WARNING You can be killed or seriously injured if you don't follow these instructions.

STANDARD, DATA, & CONDITION

These ATEX UKEX-certified batteries are certified for use in areas with risks of explosion due to gas or dust.

- Explosion group I Category M2/Mb mining
- Explosion group II Category 2 and 3 [Zone 1 2G/Gb, Zone 2 3G/Gc (Gas)]
- Explosion group III Category 2 and 3 [Zone 21 2D/Db, Zone 22 3D/Dc (Dust)]

They should be in perfect condition and free from any damage. If any damage is noted or accessories missing, please contact your supplier within the

first 24 hours of receiving this product. Ex traction batteries are designed for use in battery-powered applications within hazardous areas: such as electric counterbalance, reach and pallet trucks also floor sweepers, and other cleaning equipment. The cells and connectors comply with IP (ingress protection) 65, the crates with IP23.

The patented ventilation design makes it possible for these traction batteries to fit within existing DIN and British standard crate sizes, offering the same capacity, as specified, by the truck manufacturer.

Standard

Motive power ATEX UKEX-certified batteries comply with the ATEX 2014/34/EU and UKEX UKSI 2016:1107 UKEX Directive. Conformity has been demonstrated with reference to the following documentation:

EC type-examination certificates:

UKEX	ATEX	IECEx	Description
• CSAE 23UKEX1000X (Batteries up to 98.8 KWh)	• SIRA 01ATEX3016U • SIRA 01ATEX3019U	• SIRA IECEx 07.0061U • SIRA IECEx 07.0062U	• Flooded BS cell • Flooded DIN cell
• CSAE 23UKEX1001X (Batteries above 68.8KWh up to 153.6 KWh)	• SIRA 01ATEX3022X • SIRA 01ATEX3025X	• SIRA IECEx 07.0065X • SIRA IECEx 07.0066X	• Batteries up to 68.8 kWh • Batteries above 68.8 up to 153.6 kWh

ATEX UKEX certificates apply to the EEx and IECEx certificates apply to the rest of the world except North America (USA and Canada).

Quality Assurance Notification: Sira 01 ATEX M103


Rating Data

- | | |
|----------------------------------|-------------------------------------|
| 1. Nominal capacity C_5 : | See type plate |
| 2. Nominal voltage: | 2.0 V x No of cells |
| 3. Nominal discharge current: | $C_5/5h$ |
| 4. Nominal S.G. of electrolyte*: | 1.29 kg/l |
| 5. Rated temperature: | 30°C |
| 6. Nominal electrolyte level: | up to electrolyte level mark "max." |

*Will be reached within the first 10 cycles

Condition of Use

Do not charge in a hazardous area

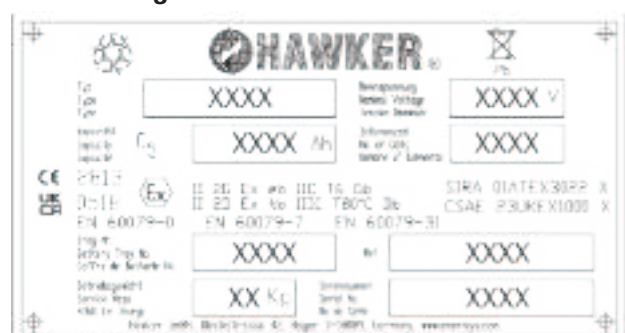

Example of battery labeling

SAFETY PRECAUTIONS

Safety Precautions



- Pay attention to the operation instructions and fix them close to the battery.
- Work on batteries to be carried out by skilled personnel only!



- Wear protective glasses and wear safety clothing when working on batteries.
- Pay attention to the accident prevention rules as well as EN 62485-3 and EN 50110-1.



- No smoking!
- Do not expose batteries to naked flames, glowing embers, or sparks, as it may cause the battery to explode.



- Acid splashes into the eyes or on the skin must be washed immediately with an abundance of clean water. After abundant flushing consult a doctor immediately!
- Clothing contaminated by acid should be washed in water.



- Risk of explosion and fire! Avoid short circuits.
- **Caution:** Metal parts of the battery are always live. Do not place tools or other metal objects on the battery!



- Electrolyte is highly corrosive.



- Batteries and cells are heavy.
- Ensure secure installation! Use only suitable handling equipment (e.g. lifting gear) in accordance with VDI 3616.



- Dangerous electrical voltage!



- Pay attention to the hazards that can be caused by batteries.

Ignoring the operating instructions, and repairing with non-original parts will render the warranty void. All failures, malfunctions, and default codes of the battery, the charger, or any other accessories must be communicated to EnerSys® Service immediately.

SAFETY, SERVICE, & HANDLING

Safety

Always remember that the battery is a source of power; even when fully discharged there remains sufficient energy in the battery to cause serious damage.

Follow these safety rules:

- Never charge an Ex battery in a zoned controlled area.
- Never disconnect the battery in a zoned area. Isolate circuits before disconnecting the battery outside a zoned area.
- Never open the battery cover in a zoned area.
- Always use certified DC plugs for connection to the battery.
- Never use the battery if damaged or bare cables are evident.
- Never use the battery if the DC plugs are damaged.
- Never attempt to repair the battery. Call your recommended authorised service centre.
- Close vent plug lids firmly when topping the battery's electrolyte has been completed.

Service

Your local authorised service engineer provides local help and support. This handbook gives guidelines of a general nature; our engineer will help you to interpret your needs about your particular requirements.

Your authorised engineer can answer the questions that are beyond the scope of this manual and obtain specialist help should it be required. Your battery is an expensive investment and designed for use in a zoned area, and it is our aim to help you obtain the best possible results from it. Please do not hesitate to call your local service centre if you have any questions relating to the battery.

Handling

Lead-acid Ex batteries are very heavy. Always use approved moving equipment when attempting to change batteries. When lifting and handling the Ex batteries, use the correct approved lifting equipment and keep the battery in an upright position. Due to the wide variation in types of electric vehicles, designs of battery containers, equipment used, and methods of battery changing, it is not possible to give detailed instructions on the procedures to be followed when changing the batteries on an electric vehicle. The manufacturer of the vehicle or the battery-changing equipment must supply the correct method and procedure.

Taking Delivery of Your Battery

Do not carry out any of the following procedures in a zoned area. The possibility of the battery being connected in the wrong polarity is prevented by visibly marking the polarities adjacent to the connection plug with an identification colour (Positive: Red and Negative: Blue). The possibility of the insulation on the overall battery voltage leads being cut to expose the conductor is prevented by sleeving the insulation with cable retention material (i.e. spiral wrap).

Please ensure that the battery containers are always upright so that the electrolyte is not spilled. Remove all packing material and carefully examine the containers, etc. to ensure that there is no physical damage.

If the battery is not used at receipt, please refer to the Storage section on page 13.

COMMISSIONING & MAINTENANCE

Commissioning

For the commissioning of unfilled batteries, see separate instructions. The level of the electrolyte must be checked.

If it is below the anti-surge baffle or the top of the separator, it must first be topped up to this level with purified water (IEC 62877-1:2016). The charger cables must be connected to ensure good contact, taking care that the polarity is correct. Otherwise, the battery, vehicle, or charger could be damaged. Wipe over the tops and sides of the cells and container with a damp cloth to remove dust, water, or spilled sulphuric acid. Cell cleanliness cannot be too highly stressed. Check that all connections are tight.

The specified torque loading for the pole screws is 25 + 2 Nm (screw M10). Make sure that the cells are readily accessible for testing and topping up if the automatic watering facility is not fitted. This will make regular maintenance hassle-free.

Check that the battery compartment is well drained and ventilated and that there is no risk of metal objects dropping through the top ventilation of the battery. Check that the battery sits quite firmly and securely in its housing, and

use suitable packing to prevent any movement when the vehicle is in motion. The cables should be flexible and of sufficient length to prevent any strain from being imposed either on the cable or the certified terminals to which the cables are connected. Smear any steel runners or supports (anything supporting the battery container) with petroleum jelly. This will reduce the possibility of rust and acid corrosion and extend the life of these components.

If a new Ex battery is to be used in an application where there is uncertainty about the zoned area, please contact your local factory inspector.

Never directly connect an electrical appliance (for example, a warning beacon) to some cells of the battery. This could lead to an imbalance of the cells during the recharge (i.e. a loss of capacity), a risk of insufficient discharge time, or damage to the cells. THIS MAY AFFECT THE WARRANTY OF THE BATTERY.

The battery is then charged as in the Recharge section on page 10. The electrolyte should be topped up to the specified level with purified water per the Water Topping-Up Interval section on page 9.


Maintenance

Daily

Recharge the battery after discharge.

- **Remember**, never charge an Ex battery in a zoned area, even if approved charging equipment is available. Always check that the charger is operating correctly.
- Check the electrolyte levels at the end of the charge and top up if necessary (respect max level). The correct level is at the top of the level indicator.

If too much water is added, the expansion during recharge will cause the electrolyte to overflow, therefore weakening the strength of the electrolyte. If insufficient water is added, the top of the plates will become exposed, reducing the performance and life of the battery. Use approved distilled or demineralised water only. The standard of purity of water required for topping up is given in IEC 62877-1:2016.

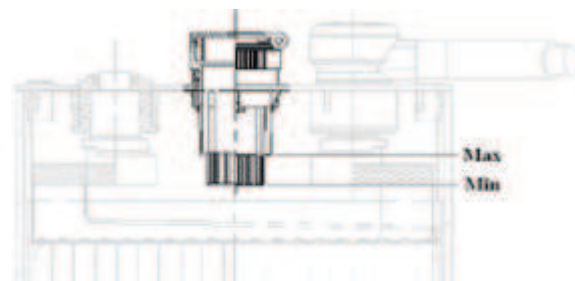

Perfect Plus®

Suppliers of topping-up water, topping-up devices, or automatic water filling systems can be obtained from your local supplier or service depot. Note that topping-up water must only be held in and dispensed from non-metallic containers.

Never top up with acid. Should you feel that an acid adjustment is required, please consult your local service depot.

MAINTENANCE

Maintenance (cont.)

Weekly

Please note any cells that are taking too much or too little water. If this occurs, please contact your local service depot.

Check all connections and take off leads for any frayed or worn insulation. If frayed wires or worn insulation is noted, take the battery **out of service immediately** and place it in a safe area that is outside the zoned area. **Do not attempt to repair an Ex battery.** Call your local EnerSys® Service Representative.

Check that all insulators and vent plugs are in place and that the battery plugs are in sound condition.

Ensure that the top of the battery is clean and dry. Dirt and moisture can provide tracking paths for the electricity and potentially cause a spark in a zoned area. Should there be any corrosion of the metal container, scrape this off and neutralise the area with a solution of water and baking soda, or diluted ammonia, and protect the part from further corrosion by painting it with acid-proof paint.

Monthly

At the end of the charge, the voltages of all cells should be measured with the charger switched on and recorded. After charging has been completed, the electrolyte density, electrolyte temperature, and the filling level of all cells are to be measured and recorded. If significant changes from earlier measurements or differences between the cells are found, further testing and maintenance by EnerSys® Service should be requested. This should be done following a complete charge, and a minimum of 2 hours of rest time.

Measure and record:

- total voltage
- voltage per cell
- if the voltage readings are irregular, also check the S.G. of each cell

(see Water Topping-Up Interval section on page 9).

If significant changes from earlier measurements or differences between the cells or bloc batteries are found, please contact an EnerSys® Service Representative.

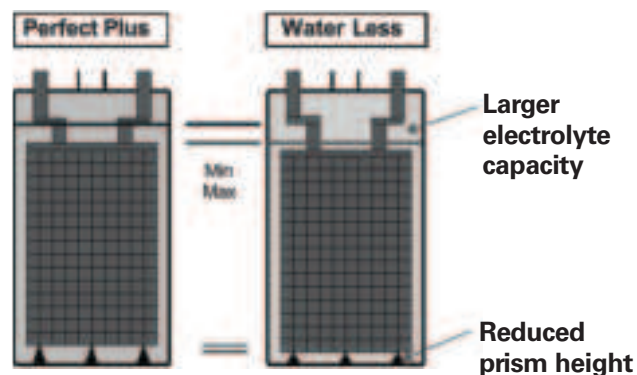


Figure 1

If the discharge time of the battery is not sufficient, check:

- that the work required is compatible with the battery capacity
- the settings of the charger
- the settings of the discharge limiter.

Check the electrolyte level and top up if necessary (respect the maximum level according to **Figure 1**).

Annually

Following EN 1175-1 at least once per year, the insulation resistance of the truck and the battery must be checked by an electrical specialist. The tests on the insulation resistance of the battery must be conducted following EN 1987 part 1. The insulation resistance of the battery thus determined must not be below a value of 50Ω per volt of nominal voltage, in compliance with EN 62485-3. For batteries up to 120V nominal voltage, the minimum value is 1000Ω.

Proceed to the maintenance, including the measurement of electrolyte S.G. at the end of the charge. The filter of the air pump must be checked during the annual maintenance, and eventually cleaned or replaced. Earlier replacement of the filter is necessary if, for undefined reasons (no leaks in the air pipes), the defect signal of the air mixing system on the charger or the battery (on the DC air pump or remote signal) is illuminated. During the annual maintenance, check the correct operation of the air pump.

TOPPING-UP & DISCHARGE

Water Less® Topping-Up Intervals

PzM Variant & Conditions		Water Topping Up Intervals*	
		1 Shift Operation	3 Shift Operation**
4 Weeks	PzM/PzMB plus 50Hz	20 Cycles (4 weeks)	20 Cycles (2 weeks)
8 Weeks	PzM/PzMB plus HF	40 Cycles (8 weeks)	40 Cycles (5 weeks)
13 Weeks	PzM/PzMB plus EC*** & HF	65 Cycles (13 weeks)	65 Cycles (8 weeks)

80% DOD, 5 operating days per week, and average battery temperatures of 20°C

* +/- 1 week in the most common applications at 20°C

** This number of cycles can be reduced if operating 3 shifts with high battery temperatures!

*** Electrolyte Circulation

Discharge

Be sure that all ventilation holes are not sealed or covered. Electrical connections (e.g. plugs) must only be made or broken in the open circuit condition. To achieve the optimum life for the battery, operating discharges of more than 80% of the rated capacity should be avoided (deep discharge). This corresponds to an electrolyte specific gravity of 1.14 kg/l at 30°C at the end of the discharge.

Discharged batteries must be recharged immediately and must not be left discharged. This also applies to partially discharged batteries.

It is recommended that the battery is discharged evenly and the use of tappings across a part of the battery is discouraged. To overcome this problem, a D.C.-D.C. converter must be used to allow auxiliary loads to be supplied from the whole battery.

NOTE: The D.C.-D.C. converter must be certified for use in a zoned area as well as the auxiliary equipment.

Battery performance is directly related to temperature. Batteries are rated at 30°C. Where the battery temperature is lower than this, the available performance is reduced. Additional capacity is therefore required when the batteries are to be used in areas of low ambient temperatures (e.g. cold stores).

RECHARGE

Recharge

NOTE: Never recharge an Ex battery in a zoned area.

Only direct current must be used for charging. All charging procedures following DIN 41773-1 and DIN 41774 are permitted. Only connect the battery to a charger suitable for the size of the battery, to avoid overloading of the electric cables and contacts, unacceptable gassing, and the escape of electrolyte from the cells. In the gassing stage, the current limits given in EN 62485-3 must not be exceeded. If the charger was not purchased together with the battery, it is best to have its suitability checked by the manufacturer's service department. When charging, proper provision must be made for venting the charging gases. Doors, battery container lids, and the covers of battery compartments must be opened or removed. During the charge, the battery must be removed from the closed battery compartment on the truck. The ventilation must comply with EN 62485-3 standard. The vent plugs should stay on the cells and remain closed. With the charger switched off, connect the battery, ensuring that the polarity is correct (positive to positive, negative to negative). Now switch on the charger. When charging, the temperature of the electrolyte rises by about 10°C, so charging should only begin if the electrolyte temperature is below 43°C. The electrolyte temperature of batteries should be at least +10°C before charging, otherwise a full charge will not be achieved. The charge is considered finished when the specific gravity of the electrolyte and the battery voltage have remained constant for two hours.

Batteries fitted with electrolyte mixing (option): If the warning light on the pump controller is illuminated or if a defect signal on the electrolyte circulation system appears, check that the piping system is connected and examine the piping circuit for leaks or defects (see Maintenance section).

The air pipe should never be removed during the charge. Excessive charging reduces battery life, increases water loss from the battery, and wastes electricity. It is important to ensure that charger gassing times are not extended without prior consultation from your supplier.

The length of the D.C. cable between the charger and battery affects the voltage drop back to the control unit of the charger. The cable should not be extended without prior consultation with the charger manufacturer and supplier of your Ex battery.

In situations where the battery is generally only very lightly discharged, it may be an option to recharge the battery at less frequent intervals, perhaps every second day. In such circumstances, please seek the advice of your local service engineer.

Do not disconnect the battery until the charger has been switched off. Your local area service centre must approve any managing charging system, otherwise the warranty may be invalidated.

Equalising

Some chargers have an equalising facility, either a manual operation or automatic control.

For full operational procedures for the charger, see manufacturer's instructions. **But remember, never charge an Ex battery in a zoned area at any time.**

Equalising charges are used to safeguard the life of the battery and to maintain its capacity. They are necessary after deep discharges, repeated incomplete recharges, and charges to an IU characteristic curve. Equalising charges are carried out following normal charging. The charging current must not exceed 5 A/100 Ah of rated capacity (end of charge). **Watch the temperature!**

Measurement of Specific Gravity

To take a hydrometer reading, the bulb is squeezed, the end of the rubber tube is dipped into the electrolyte and the bulb is gently released to draw up sufficient liquid so that the float moves freely. The hydrometer must be held in a vertical position and there should be no pressure on the rubber bulb. When reading the hydrometer to measure the specific gravity, the liquid level shows the value on the scale, which is printed on the float. After reading, the rubber bulb should be squeezed to return the electrolyte to the cell.

The rated specific gravity (S.G.) of the electrolyte is related to a temperature of 30°C and the nominal electrolyte level in the cell in a fully charged condition. Higher temperatures reduce the specified gravity of the electrolyte, while lower temperatures increase it. The temperature correction factor is -0.0007 kg/l per °C, e.g. an electrolyte specific gravity of 1.28 kg/l at 45°C corresponds to an S.G. of 1.29 kg/l at 30°C. The electrolyte must conform to the purity regulations in IEC 62877-2:2016.

Temperature

An electrolyte temperature of 30°C is specified as the rated temperature. Higher temperatures shorten the life of the battery, while lower temperatures reduce the capacity available. 55°C is the upper temperature limit and is not acceptable as an operating temperature.

The temperature on the surface must never exceed 80°C in the explosive area. Charging should only begin if the electrolyte temperature is below 43°C. If the electrolyte temperature reaches 55°C during the charge, wait for it to cool before using the battery in the explosive area. If

a hot battery is detected, it should be taken out of the controlled zoned area and allowed to cool to ambient temperature.

An investigation should be carried out into why the battery is getting hot before it is placed back into service. Possible reasons why the battery might be getting hot is that there might be a fault in the equipment that the battery is powering, or a fault could have occurred within the cells of the battery. In the case of a suspected battery problem, contact your local service centre.

Surrounding Area Conditions

The apparatus is designed to cope with the intended surrounding area conditions.

Effect of Explosive Atmosphere on Materials

The materials selected are not known to react with any explosive atmospheres to which the apparatus may be subjected.

HAZARDS & CARE

Protection Against Other Hazards

The apparatus does not cause injury or harm when used as specified in the installation and operation manual.

Hazards From Different Ignition Sources

The apparatus does not produce ignition-capable electrical sparks or arcs. The apparatus has also been designed not to produce potential ignition sources from electromagnetic, acoustic, optical or other such external energy sources.

Withstanding Attack by Aggressive Substances

The individual cells contain sulphuric acid. These cells and enclosures which make up the apparatus are constructed from materials that are resistant to acid attack. See manufacturer's data sheet.

Care of the Battery

The battery should always be kept clean and dry to prevent tracking currents. Any liquid in the battery tray must be extracted and disposed of in the prescribed manner.

Damage to the insulation of the tray should be repaired after cleaning to ensure that the insulation value complies with EN 62485-3 and to prevent tray corrosion. If it is necessary to remove cells, it is best to call our service department for this.

OPTIONAL ACCESSORY

Storage

If batteries are taken out of service for a lengthy period, they should be stored in a fully charged condition in a dry, frost-free room. To ensure the battery is always ready for use, a choice of charging methods can be made:

1. A monthly equalising charge (See Equalising in the Recharge section), or
2. Float charging at a charging voltage of 2.27 V x the number of cells.

The storage time should be considered when considering the life of the battery.

Malfunctions

If malfunctions are found on the battery or the charger, our service department should be called in without delay. The measurements taken in the Monthly Maintenance section on page 8 will facilitate fault-finding and elimination. A service contract with us will make it easier to detect and correct faults in good time.

Aquamatic Water Refilling System (Optional Accessory)


#	Description
1	Tank
2	Outflow Connector with Ball Valve
3	Plug with Magnetic Valve
4	Plug with Ball Valve
5	Flow Control
6	Coupling
7	Connector
8	Battery Charger
9	Charger Main Switch

Application

The water refilling system is used to automatically maintain the nominal electrolyte levels. The charging gases escape through the vent on each cell.

Function

A valve and a float together control the topping-up process and maintain the correct water level in each cell. The valve allows the flow of water into each cell, and the float closes the valve when the correct water level has been reached. For fault-free operation of the water refilling system, please note the instructions that follow.

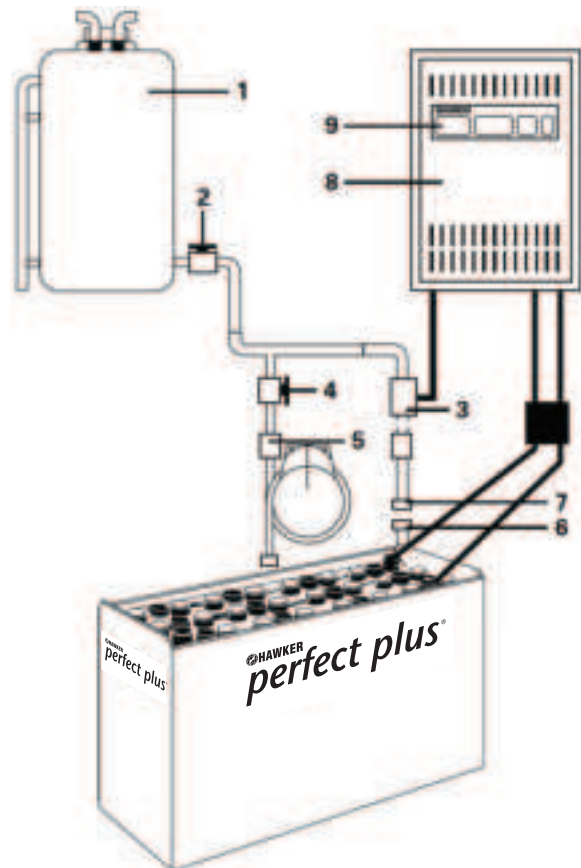

OPTIONAL ACCESSORY

Aquamatic Water Refilling System (Optional Accessory [cont.])

Manual or Automatic Connection

The battery should be topped up shortly before the completion of a full charge, as at this point the battery has reached a defined operational state resulting in satisfactory electrolyte mixing. Filling takes place when the connector (7) from the tank is connected to the coupling (6) on the battery.

If manual connection is used, the Perfect Plus® battery should only be connected to the filling system once a week.

If automatic coupling is used (with a magnetic valve controlled by the charging apparatus), the charger main switch selects the correct moment for filling.

NOTE: In this case, we recommend a water refilling at least once a week to ensure the right electrolyte level.

In multiple shifts and warm ambient temperature operations, it may be necessary to have shorter topping-up intervals.

Filling Time

Filling time depends on the utilisation rate and the corresponding battery temperature. Generally speaking, the topping-up process takes a few minutes and can vary according to the battery range; after this, if manual filling is used, the water supply to the battery should be turned off.

Working Pressure

The water refilling system should be installed in such a way that a water pressure of 0.2 to 0.6 bar is obtained (with at least a 2 m height difference between the upper edge of the battery and the lower edge of the tank). Any deviation from this will cause the system to not function properly.

Purity

The topping-up water must be purified. The water used to refill the batteries must have a conductance of not more than 30 µS/cm. The tank and pipes must be cleaned before operating the system.

Pipe System on the Battery

The pipe system to the individual battery cells must follow the battery's electrical circuit. This reduces the risk of current leakage in the presence of electrolytic gas causing an explosion (DIN EN 50272-3). A maximum of 10 cells may be connected in a series.

The system should not be modified in any way.

Working Temperature

In winter, batteries fitted with the Aquamatic Water Refilling System should only be charged or refilled at a room temperature above 0°C.

Flow Control

A flow indicator built into the water supply pipe to the battery monitors the filling process. During filling, the water flow causes the built-in disc in the flow indicator to turn. When all the plugs are closed, the disc stops, indicating that the filling process is complete.

DISPOSAL

Electrolyte Circulation System (Optional Accessory)

Application

The electrolyte circulation system is based on the principle of pumping air into the individual battery cells. This system prevents electrolyte stratification, and the battery charge is optimised using a charge factor of 1.07. The electrolyte circulation is particularly beneficial for heavy-duty use, short charge times, boost or opportunity charging, and in high ambient temperatures.

Function

The electrolyte circulation consists of a pipe system fitted in the cells. The aeromatic diaphragm pump is fitted in the charger or separately mounted on the battery or vehicle. This diaphragm pump sends a low-rate airflow into each cell, which creates a circulating air stream inside the cell box. The air stream is continuous or pulsed, depending on the battery voltage and pump type. The air supply is adjusted following the number of cells in the battery. The pipe system to the individual battery cells must follow the existing electrical circuit. This reduces the risk of current leakage in the presence of electrolytic gas, causing an explosion (EN 62485-3).

Maintenance of Air Filter

Depending on the working conditions, the pump air filter should be changed at least once a year. In work areas with high levels of air pollution, the filter should be checked and replaced more frequently.

Repair and Maintenance

The system must be checked for leakage. The charger will display an error message to indicate leakage. Sometimes in the case of leakage, the characteristic charging curve is switched over to the characteristic standard curve (without electrolyte circulation).

In case of faulty parts, contact EnerSys® service. Only EnerSys original spare parts may be used, as these are designed for the pump air supply and will ensure the correct functioning of the pump.



Battery must be recycled



Disposal and back to the manufacturer!

Always dispose of the battery container and cells through your local service depot. Do not attempt to dismantle the battery or the cells in any way. Once the product has failed and is no longer repairable, store outside the zoned area until removed for reclaim.

Batteries with this sign must be recycled.

Batteries which are not returned for the recycling process must be disposed of as hazardous waste!

When using motive power batteries and chargers, the operator must comply with the current standards, laws, rules, and regulations in force in the country of use!

This document is an original version published in the English language and shall be considered the authoritative reference. In the event of any inconsistency or discrepancy between the English version and a translated version, the English version shall prevail.

www.enersys.com

© 2025 EnerSys. All rights reserved. Trademarks and logos are the property of EnerSys® and its affiliates except for IEC, UK CA, and CE, which are not the property of EnerSys®. Subject to revisions without prior notice. E.&O.E.

EMEA-EN-OM-PP-WL-ATEX-UKEX-0725

