


Ultra TV Quick Reference Guide to the Ultra TV Entertainment Experience

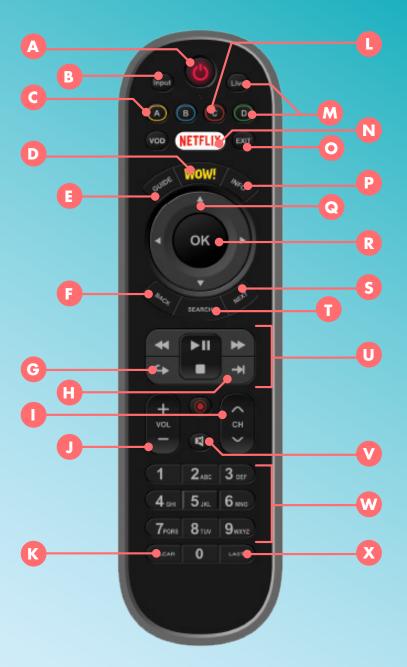

Ultra TV Remote Control

- A Controls TV and/or Audio Device Power
- **B** Changes Input on TV
- c A button lists Recorded Shows
- Displays Menu Options
- **E** Brings up Viewing Guide
- F Go to Previous Page
- G Rewind Last 7 Seconds
- Skips Ahead in Buffered or Recorded Content
- Changes Channels and Pages in the Grid and Menu
- J Changes TV or Receiver Volume
- K Deletes Character during Text Entry or Removes Flip Bar
- L (C) button displays Grid Guide
- M Live or (D) button returns to Live TV
- N Directly Accesses Netflix
- Exit takes you back to where you were previously
- P Displays Program Information
- Navigates Menu and Guide Options
- R Selects Menu Options and Programs from the Guide
- Goes to Next Page. Skips Ahead30 min when in the Guide
- T Search for Programs
- U Controls Live and Recorded TV, Other Content
- v Mute Audio On and Off
- w Directly Tune to Channels
- x Takes you to Channel Last Viewed

Smart Menu and Category Cards

To access the Smart Menu, press the MENU button on the remote. Use the left and right arrows on the remote to browse the category cards.



Channels

View all available channels



Search

Search for programs by title, keyword, or category across all available content



Settings

Customize your experience



Recorded TV

View all of the programs you've recorded



Sports

View all available sports programming



Kids

View all children's programming



News

Find all of the news channels and current news programming, including live TV and recorded TV



Favorite Channels

Create a list of your favorite channels for easy access



Movies

View all available movies including those in live TV and recorded TV.



Netflix

Instantly access your Netflix account without switching inputs on your TV



Apps

Access other applications like YouTube and Pandora right on your TV



Control how you watch live TV - Pause, rewind or fast-forward like you would a recorded program.

- Press PAUSE to alternate between pausing and resuming the show you are watching.
- Press REWIND up to three times (for three speeds) to rewind the show.
- Press FORWARD up to three times (for three speeds) to fast-forward the show up to the point of broadcast.
- Press PLAY to stop fast-forwarding or rewinding or resume from a pause.
- Press LIVE to go to the point of broadcast of the last channel you watched.
- Press REPLAY to view the previous seven seconds of the show.
- Press SKIP to skip forward in the show up to the moment of broadcast. You can set how many seconds to skip with this button on the Settings menu.
- Press PAUSE and then FORWARD once to activate slow motion.
- Press RECORD to record the program you are watching, including the entire contents of the temporary memory or buffer for the show you are watching.
- BACK moves a list displaying TV programming back to the previous half hour.
 Also, pages back through an info note.
- NEXT moves a list displaying TV programming forward to the next half hour.
 Also, pages forward through an info note.
- Press PAUSE and then SKIP to advance forward one frame.

Recorded TV

Managing Recorded TV

The Recorded TV category lists all your recorded shows in alphabetical order. Episodes of a series are grouped into folders and individual episodes are seen in the preview panel to the right.

The recorded show icons let you know the following:

- The show is recording right now
- The show is scheduled to record
- The show is recorded and may be deleted when space is needed
- The show is recorded and will not delete unless deleted manually

The Options card in the Recorded TV category lets you manage your recorded TV

- Scheduled to Record in Options lets you see all the programs that are set to record. Here you can
 also cancel a recording or alter your recording settings for each show. Just pick the show you want to
 manage and press the INFO button.
- Recording Defaults in Options lets you determine your default preferences for how long to keep a
 recording, how many episodes to record, when the recording starts and stops, and whether to record first
 runs or repeats.

How to set a recording & series recording

When watching a show: To record the show you are currently watching press **RECORD** and the show will begin recording. If you are watching a show and want to record the series, press **INFO**. Then select "**Record Series**." A red dot means the program is recording.

Via the Search category: You can search for the show in the Search category by title, keyword or category. Select the show in the results by pressing **OK** and then select "**Record Once**" or "**Record Series**" in the action menu. A blue dot means the program is scheduled to be recorded.

In TV Channels category: You can scroll through the TV channel lineup. When you find a show that is in progress that you want to record either in the listing or in the preview panel, press RECORD. If you want to record an upcoming show, press INFO. An action menu will appear where you can select "Record Once" or "Record Series." A blue dot means the program is scheduled to be recorded.

Automatic Conflict Management

You can record or watch up to six shows at once. A conflict detection note will pop up if you are already using all six tuners – which means that you may be recording five shows and watching Live TV. If this happens, an action menu will show up automatically on the screen giving you options to choose which recordings you want to keep.

How to Delete a Recording

Press the "A" button, and then use the arrow buttons to highlight a recording. Press the "Info" button to bring up options and again use the arrow button to highlight the "Delete" option. Press the "OK" button twice to confirm your selection.

How to Cancel a Live Recording

Press the "A" button, and then use the arrow buttons to highlight a recording. Press the **INFO** button to bring up options and again use the arrow button to highlight the "**Stop Recording**" option. Press the "**OK**" button to confirm your selection, and then highlight "**YES**" when presented, then press the "**OK**" button.

How much space is left on my DVR to record shows?

The Storage Meter lets you know how much space you have left to record more programs. It's located in two places in the Smart Menu. In Recorded TV, the Options card displays the amount of space remaining. In Settings, select the Recording Space card.

Favorites

You can create a channel lineup of only your favorite channels.

To Add A Channel To Your Favorites:

- In the TV Channels category, tune to the channel you want to add and press INFO.
- Choose "add item to favorites."
- You can delete a channel by selecting the channel and choosing "remove from favorites."

Browse your Favorites channel lineup by selecting the Favorites category card. You can clear the entire favorites list by selecting the Options card in the Favorites category, then choosing "clear all" from the action menu.



Whole-Home HD DVR

6 HD Tuners Record 6 HD shows at one time.

Multi-Room Solution Start a recorded show in one room, pause it and then continue

watching it in another room.

Easily Setup Recordings Whether a movie, show or whole series, easily program your DVR

with the Smart Menu. You can even change your settings after a show has

started to record.

Lots of Storage The 500GB hard drive lets you store up to 300 hours of SD programming or

75 hours of HD programming. The storage meter is easy to check to see how

much you have recorded.

Automatic Conflict DetectionThe system will let you know if you have a conflict that would impact your

ability to record an upcoming show.

Smart Menu

TV Categories View upcoming programs for Movies, Kids, News or Sports with

programming listings for live TV and recorded content,

specific for those categories.

Search Search for a program by keyword, title or category across all live TV

and recorded content.

Flip Bar Allows you to view information on what is playing, what shows are coming or

set a recording all without having to change the channel.

Live TV Controls Pause, play or rewind live TV. Watch a show on live TV, pause it, and

continue watching from where you left off in another room.

Favorites Set up a custom channel lineup, showing only the networks

that you want to see.

Customize TV Listings Hide channels that you don't want to show up in your main

TV channels listing.

Grid Guide View listings with the Smart Menu or with a Grid Guide view.

Ultra Additional Features

Parental Controls Set controls so certain shows require you to enter a PIN to watch

Netflix Netflix subscribers can stream their favorite TV shows and movies instantly

on their Ultra TV set top box. Simply log in with your existing Netflix account

or sign up for a free trial and begin watching your favorite shows

and movies without having to change inputs on your TV. Netflix streaming

membership is required.

PandoraWe know how useful it is to have Pandora right at your fingertips on

all of your other devices. That's why we've made it simple to access your

Pandora account at any time!

YouTube With instant access to YouTube on Ultra TV you can see what the world

is watching - from the hottest music videos to what's popular in gaming,

fashion, beauty, news, learning and more.



Thanks for Choosing Breezeline

