uide de l'utilisateur disponible à pyramidtimesystems.com/resources/user-guides User Guide available at pyramidtimesystems.com/resourcesources/user-guides Guia del usuario disponible en pyramidtimesystems.com/resources/user-guides



Copyright © 2024 Pyramid Time Systems. All rights reserved.





**THAMS: 314MIS** Quick Start Guide customer\_support@ptitime.com Jema na su bnač




su lla⊃ \$88.479,7264



**PSDLAUBKK** Swipe Card Time Clock System TIMETRANE Elite • Swipe ek



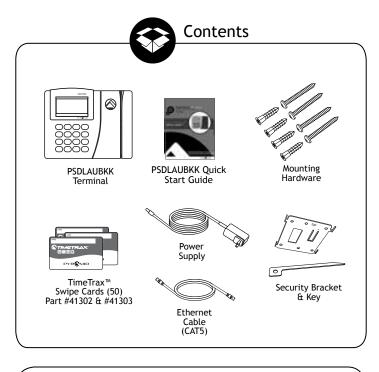

Phillips Head

Screw Driver

Power Drill

(Optional)

Pencil

What you will need.

Tape Measure





## Software Requirements



Operating System & Single User Installation 8GB or higher Memory:

Processor: Free Space: 20GB or more

X64 Pentium IV 2.0 GHz or higher

Updated version of Chrome or Firefox Browser:



Windows: Windows 10 or greater

All Windows updates must be installed prior to software installation



ADMIN: Must be the primary Admin to

install software



English: Regional setting and hardware

input in English

TimeTrax™ Time and Attendance Software should not be installed on a Server or Virtual Machine. Pyramid Time Systems does not support the use of TimeTrax™ software on a Server or Virtual Machine.

### **IMPORTANT:**


Please write down serial # located on back of terminal before mounting.



Write your serial # here:





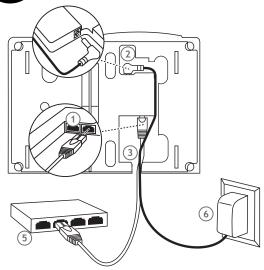

- Onnect either end of RJ45 cable into "ETHERNET" port located on the back of time clock terminal.
- Connect power supply into "POWER" port located in compartment on back of terminal.
- Route the cables through channel at base of terminal.
- A Mount terminal (see instructions below).
- Plug free end of RJ45 cable into a DHCP network jack, router or switch.
- 6 Plug power supply into outlet.



### TimeTrax™ Software Download Information

For TimeTrax<sup>™</sup> Version 5 software information please call **888 479-7264**, ext. **800** or email customer\_support@ptitime.com



 
## TimeTrax™ Instructional Videos

Follow the instructions below to view our setup videos.

- 1 In your web browser type in the following URL: pyramidtimesystems.com/resources/videos
  - Scroll down to TimeTrax Time and Attendance Software and start with the HARDWARE MANAGER video.



# Mount Terminal








### To mount terminal.

- Install mounting bracket using the mounting screws provided. "TOP" is engraved to ensure bracket is oriented correctly and the tabs face upwards.
- Additional holes are provided if mounting onto an electrical box.
- Push terminal onto mounting bracket aligning four tabs on bracket with four matching slots on back of terminal. Be sure to write down the terminal serial number before mounting. Slide terminal downward until locking tab clicks into place. When properly mounted, terminal cannot be removed from the bracket without using the included wall bracket release key to disengage locking tab.
- Cables may be rooted through channel at base of terminal or by drilling a hole in the rectan gular section of the mounting bracket and through the wall for concealing cables.

### To detach terminal.

- Insert key (tab facing outward) into narrow slot located on bottom of terminal to right of cable access current.
- Push key all the way up into slot. Key will slide easily until last ½ inch until some resistance from locking tab is felt.
- With key fully pushed into slot, slide the terminal up and off mounting bracket.



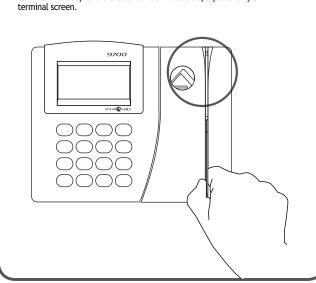

right hand side. If employee card number is successfully read, the time clock terminal will beep and the card number will be displayed briefly on

Technical Support and Warranty info at pyramidtimesystems.com/support/warranty-and-return/