

# GPS Tracker Hunter User Guide



Thanks for your purchase of UniGuard GPS Tracker. Please read the manual carefully. Any questions, free to contact us.



## Specifications

Model	B38/Hunter		
Internet	2G GSM 850/900/1800/1900Mhz		
	4G LTE-FDD: B1/3/5/7/8/20		
Communication Protocol	TCP/IP		
	GPS and BeiDou and GLONASS		
	Location accuracy: 10m		
	Speed accuracy: 0.1m/s		
GNSS details	Capturing sensitivity: -148dbm		
	Tracking sensitivity: -165dbm		
	Cool start: <32s		
	Hot start: <2s		
GNSS antenna	Built in.		
Charging	Magnetic Charge		
SIM card	Nano-SIM		
Signal light	YES		
Battery	3000mAh 3.7V Li-polymer Industry battery		
Battery Life	40 days standby		
Working current	Avg. 88mA@ RX:-75dBm		
	Sleep: 5mA		
GSM sensitivity	-108dBm		
Working temperature	-20 °C to 70 °C		
Working humidity	5 -95% RH		
AGPS	Support		
Size	85*32*37 mm		
Weight	150g		
Waterproof	IP68		



#### SIM Card Installation

SIM card must enable GPRS SMS and Call function for testing purposes. Make sure the SIM card has enough credit. Insert it into the device. SIM card must be inserted before turning on the device. Charge it to turn it on.



### Signal Light

Red	Device does not read SIM card or SIM card is not inserted	
Green	SIM card is ready	
OFF	Power saving mode or Device is OFF.	

#### SMS commands

Usage	Command	
Check device setup	at^param=?	
Setup APN	at^apn=APN,user name, password,	
	E.g. at^apn=Safaricom,,,	
Restart device	at^reboot=1	



### Web Platform GPS Tracking Software

website: <a href="https://www.appxmg.com/">https://www.appxmg.com/</a>

APP:

POSTRAK: Search at Google Play

XiaoYue: Search at App Store.

#### Guarantee Card

Phone	
IMEI	