 




Original	Replacement	Original	Replacement
	Power		Power
	A		Red
	B		Green
	C		Yellow
	D		Blue
	E		3D
	F		Shift + 6
	G		Shift + 7
	Reset / Upgrade		Exit
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7







Original	Replacement	Original	Replacement
	Power		Power
	A		Red
	B		Green
	C		Yellow
	D		Blue
	E		3D
	F		Shift + 6
	G		Shift + 7
	Reset / Upgrade		Exit
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Alarm / Clock		Media
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6







Original	Replacement
	Power
	Info
	Guide
	Menu
	Back
	Options
	Media
	Smart
	Up
	Left
	Ok
	Right
	Down
	Text
	Subt
	Vol +
	Vol -

Original	Replacement
	Mute
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV
	Sleep





Original	Replacement	Original	Replacement
	Power		Power
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Alarm / Clock		Media
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -

Original	Replacement	Original	Replacement
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Sleep		Sleep

