

cecotec

GRANDHEAT 2500 FLATBED TOUCH WHITE

Microondas sin plato digital táctil de 25 litros de capacidad y 800 W de potencia./

Digital flatbed microwave with touch panel, 25-litre capacity and 800 W.



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1.

1. Control panel
2. Display
3. Door
4. Door handle

Control panel

Fig.2

1. Automatic menus
2. Time/weight knob
3. On/off
4. Defrost
5. Clock
6. Stop/Cancel
7. Reheat
8. Start/+30 s

2. BEFORE USE

Take the product out of the box. If the microwave has a protective film, tear it off before starting operation. Check carefully if there is any damage, and if there is, immediately notify the Technical Support Service.

The product must be placed on a flat, stable and dry place and kept away from corrosive materials, heat and humidity, such as gas burners or water.

The product must be placed in such way that the plug is accessible and must ensure an effective grounding in case of leakage in order to avoid electric shocks.

The microwave door must be closed in order to operate.

In case there is any manufacturing rests in the microwave cavity or on the heating elements, leave the microwave open to ensure good ventilation. In such case, it is recommended to heat a glass of water at high power for several times.

Warning: Do not remove the light brown mica cover that is attached to the microwave cavity to protect the magnetron.

3. PRODUCT INSTALLATION

Countertop installation

Place the appliance on a flat, stable surface.

The minimum installation height is 85 mm.

The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30 cm above the microwave, a minimum clearance of 20 cm is required between the microwave and any adjacent walls.

Do not remove the legs from the bottom of the microwave.

Blocking the intake and/or outlet openings can damage the microwave.

Place the microwave as far away from radios and TV as possible. Operation of microwave may cause interference to your radio or TV reception.

Plug the device into a power supply.

Warning: Do not install microwave over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave could be damaged, and the warranty would be void.

4. OPERATION

Clock settings

When the device is plugged in, it will beep once.

Tap the clock icon to set the time. The hour digits will blink.

Turn the knob to set the correct hour, between 00 and 23.

Tap the clock icon. The minutes digits will blink.

Turn the knob to set the correct minutes, between 00 and 59.

Tap the clock icon to save the time settings.

Note: If the clock is not set, the current time will not be displayed when the device is turned on. During the process of clock setting, tap the Stop/Clear icon to go back to the previous status automatically.

Timer

Turn the Time/weight knob to increase or decrease the cooking time.

Note: If the clock has been set (24-hour system), the display will show the current time.

Pause or cancel

During the cooking process press the Stop/Cancel button once to pause or 2 to cancel the cooking process. During the configuration of the cooking settings, press the button to cancel

ENGLISH

the settings.

Microwave cooking

Tap the On/off icon once. The screen will display "P100".

Tap the On/off icon several times to select the microwave power, from P100 to P20.

Tap the Start/+30s icon to confirm.

Turn the knob to select the desired cooking time. The set time should be 0:05-60:00.

Tap the Start/+30s icon to start cooking.

Microwave power chart

Press	Once	Twice	3 times	4 times	5 times
Microwave power	P100	P80	P60	P40	P20

Weight defrost

Tap the Weight defrost icon once, the display will show "dEF1".

Turn the knob to select the weight of the food to be defrosted.

The weight must be between 100 and 2000 g.

Tap the Start/+30s icon to start the defrost process.

Time defrost

Tap the Time defrost icon once, the display will show "dEF2".

Turn the knob "+" or "-" to set the desired defrost time.

The maximum time is 60 minutes.

Tap the Start/+30sec icon to start the defrost process.

Reheat

The Reheat function is used to reheat cooked food. Press the Reheat button to activate this function. The display will show 0.2 kg-0.4 kg-0.6 kg in cycle. Once the weight is selected, press the start button to start reheating food.

Express cooking

In standby mode, tap the Start/+30s icon to operate the appliance at 100 % power level for 30 seconds. Each touch on the same icon will increase the cooking time by 30 seconds. The maximum time is 60 minutes.

Turn the time knob to select the desired cooking time. After setting the cooking time, tap the Start/+30s icon to start cooking at 100 % power level.

During operation, each touch on the same icon will increase the cooking time by 30 seconds.

Note: This option is not available under Weight defrost or Auto menu cooking modes.

Multi-sequence cooking

A maximum of 2 sequences can be set for a cooking process. If one of the sequences included is defrosting, it should be set as the first one.

Note: Auto menu and Express cooking menu cannot be set as one of the multi-sequences.

Example: Defrost food for 5 minutes, then cook with 80 % microwave power for 7 minutes.

Tap the Weight defrost icon, the display will show "dEF2".

Turn the time knob to select 5 defrost minutes.

Tap the On/off icon twice to select 80 % microwave power.

Tap the Start/+30s icon to confirm.

Turn the time knob to set the cooking time to 7 minutes.

Tap the Start/+30s icon to start cooking.

Checking settings

During operation, tap the On/off icon, the current power level will be displayed for 3 seconds.

During operation, tap the Clock icon, the current time will be displayed for 3 seconds.

Child lock system.

In standby mode, hold down the Stop/Cancel icon for 3 seconds. The device will emit a long beep indicating this function has been activated.

In standby mode, hold down the Stop/Cancel icon for 3 seconds. The device will emit a long beep indicating this function has been deactivated.

Auto menu

In standby mode, tap the corresponding icon to select the Auto menu function.

Turn the knob to set the weight.

Tap the Start/+30s icon to start cooking.

Menus:

Menu	Weight	Display
Pizza	200 g	200
	400 g	400
Meat	250 g	250
	350 g	350
	450 g	450

Vegetables	200 g	200
	300 g	300
	400 g	400
Potato	200 g	200
	400 g	400
	600 g	600
Fish	250 g	250
	350 g	350
	450 g	450
Popcorn	50 g	50
	85 g	85
	100 g	100

The above information correspond to food at 20 °C and 25 °C. If the food is at different temperatures, the cooking effect will be different. Adjust time and temperature according to the food's temperature.

When cooking potatoes, for example, it is recommended to cover the food with a layer of wrap to prevent evaporation of water during cooking.

The shape, weight and temperature of the food will affect the cooking process and results. When using the automatic cooking menu programme, please follow the conditions mentioned. If the cooking result is not satisfactory, modify settings.

Auto reminder

When the cooking or defrost process is completed, the device will emit 3 beeps. If the door is not opened or "Stop/Cancel" button is not pressed, the microwave will beep once every 3 minutes.

5. CLEANING AND MAINTENANCE

The device, as well as food rests, must be cleaned and removed regularly.

Unplug the cable from the power supply before starting the cleaning. Do not immerse the product in water or any other fluid during cleaning.

The lack of maintenance and cleaning of the product may cause a deterioration on its surface and affect its lifespan.

Do not use strong detergents, powder abrasives or metal brushes to clean the device.

Do not remove the mica plate.

When the microwave has been used for a long time, some strong odours may arise from inside.

In order to get rid of them, follow one of the steps below:

Place several lemon slices in a cup and heat them at high power for 2 or 3 minutes.

Place a cup of red tea inside the microwaves and heat it at high power for 2 or 3 minutes.

Place orange peels inside the microwaves and heat it at high power for 1 minute.

Use a dampened soft cloth to clean enclosures, door, interior walls and the door frame.

Warning: All maintenance tasks must be strictly carried out by qualified technical personnel.

6. TROUBLESHOOTING

Problem	Cause	Solution
The device stops working or does not turn on	The power cord is not properly plugged.	Disconnect it and connect it again after 10 seconds.
	Fuse blow or short circuit.	Contact the official Technical Support Service of Cecotec.
	Faulty power outlet.	Test the power outlet with a different appliance.
The device does no heat	The door is not closed properly.	Close the door properly.

7. TECHNICAL SPECIFICATIONS

01675 GrandHeat 2500 Flatbed Touch White

Rated input power: 1280 W

Rated output power: 800 W

230V ~ 50 Hz

Capacity: 25L

Made in China | Designed in Spain

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose

of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

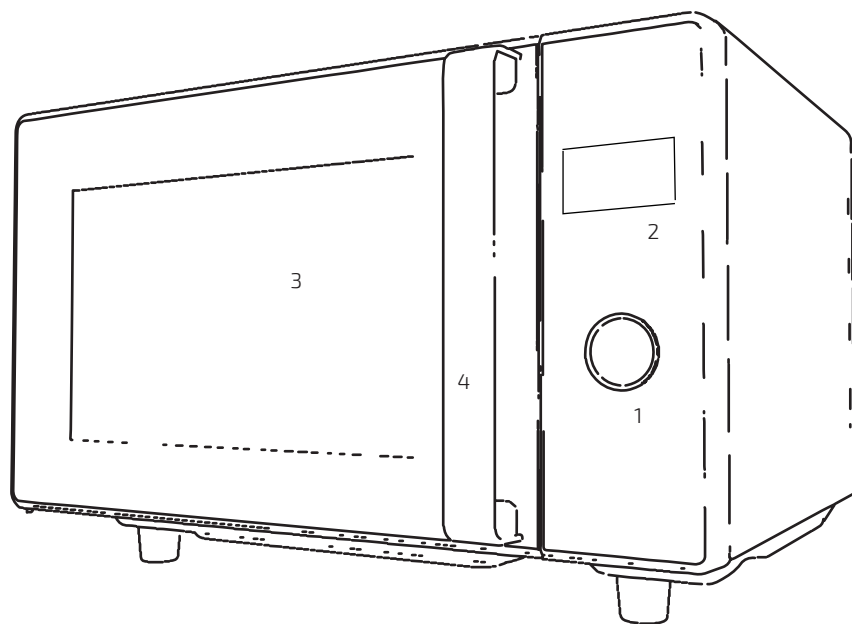


Fig./Img./Abb./Rys./Obr. 1

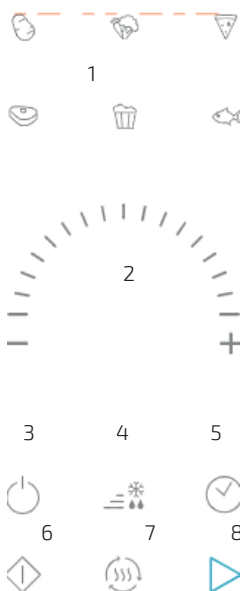


Fig./Img./Abb./Rys./Obr. 2

Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA01210112