


B80

Portable Power Station

User Manual

Please Read This Manual Before Use And Follow Its Guidance.
Keep This Manual For Future Reference.



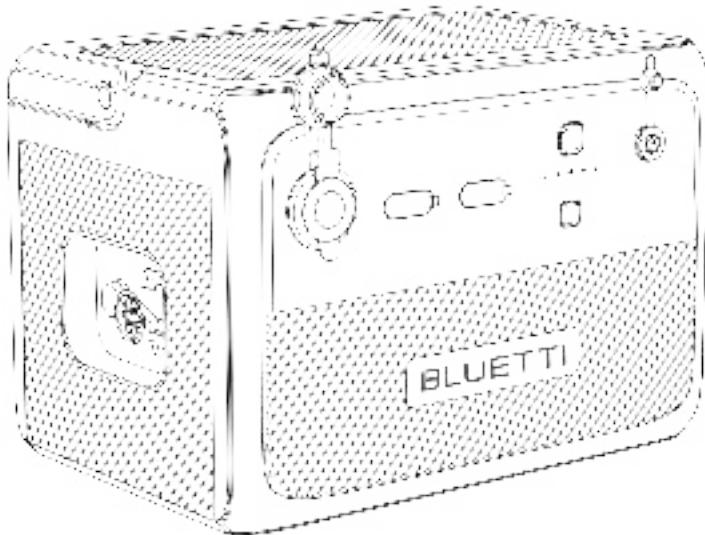

 **Warning**

! Caution: dangerous voltage!

The AC200P contains DC ports with higher voltages than other AC outlets, and these outputs must not be touched.

• A low-voltage alarm will sound if you attempt to plug in a device with a standard AC outlet or a mobile phone charger.

• If the alarm fails to trigger, please do not touch the AC port or the ground.

• If the user fails to connect the AC port to the AC outlet, the AC port will automatically stop operating until it is connected to an AC outlet. This is a safety feature.

Thank You!

Thank you for making B.U.D.® a part of your family.

From the very beginning, ILI UU has tried to stay true to a sustainable future through green energy storage solutions for both indoor and outdoor use while delivering an exceptional eco-friendly experience for our homes and our world. That's why ILI UU makes its presence in 70+ countries and is trusted by millions of customers across the globe.



Contents

1	Safety Instructions	03
1.1	General Safety	03
1.2	Handling	07
1.3	Storage and Usage	07
2	What's In The Box	08
3	Product Overview	10
3.1	Diagram	10
3.2	Specifications	11
4	Operating Instructions	12
4.1	Buttons	12
4.2	Power Indicator	12
4.3	Charging	12
4.4	Discharging	14
5	Appendix	16
5.1	FAQs	16
5.2	Abbreviations	18
5.3	POC Warning	19
5.4	Important Instructions	19

1. Safety Instructions

Read this manual for instructions on the proper use and safety information for the unit.

Follow the warnings and instructions marked on the unit and its accessories.

Pay attention to the 'Instruction', 'Caution', 'Warning' and 'Danger' symbols in this manual and follow the instructions carefully to avoid injury or damage.

The Safety Requirements provided herein are for illustrative purposes that include but are not limited to those listed in this manual. Actual operation shall comply with applicable safety standards.

If you have any questions, feel free to contact BLUETTI support on your local BLUETTI dealer.

1.1. General Safety

- Always operate or store the unit in the conditions specified in this manual.
- The installation and ambient conditions must comply with the regulations in the relevant international, national or regional standards.
- Unauthorized disassembly, alteration of the equipment or modification of the software code is not allowed.

⚠ BLUETTI shall not be liable for the following circumstances:

- Equipment damage caused by force majeure, such as earthquake, fire, storm, flood, mudslide, etc.
- Damage or loss during transportation.
- Damage caused by storage conditions that do not meet the requirements specified in this manual.
- Damage to the hardware or data of the equipment due to customer negligence, improper operation or intentional damage.
- Damage to the system caused by a third party or the customer; including handling and installation that does not meet the requirements specified in this manual.
- This product is not suitable for providing electrical service for equipment and machines that are highly dependent on the reliability of electrical power supply and that involve personal safety such as atomic energy, aviation, medical, etc. Power will not be held responsible for any personal safety accidents, fire accidents, equipment failures, etc. caused by using this product to supply power to the above equipment and machines.
- Damage caused by adjustment, alteration or removal of identification marks.

⚠ To avoid danger, please regulate the operation in the following manner:

- Do not install, use and maintain the unit in adverse weather conditions such as lightning, rain, snow and strong breezes (including but not limited to handling and operating the unit, plugging and unplugging signal connections to outdoor facilities, working at height, outdoor installations, etc.).

- Always turn off the power source before starting any electrical work.
- Do not clean the unit with water.
- Do not disassemble, modify, tamper with or repair the unit on your own.
- Regularly inspect the unit and its accessories for damage or deterioration.
- Use a tester or check for the presence of dangerous voltage before touching any conductor or terminal.
- If the unit itself is damaged during transportation or use, do not use it and contact BLUETT support or your local BLUETT dealer.
- Do not try to modify or rig up and fit the unit outdoors if:

 - In case of fire, EVACUATE the building or other location immediately and call the police, FIRE & ARMED GUARD CALL 9-1-1 on your local emergency phone number.

- Use genuine cables and connectors provided by BLUETT.
- Keep the unit away from heat sources or high temperatures, and do not expose it to direct sunlight.
- Do not store the unit with flammable liquids, gases or explosive materials.
- Make sure the area where you are using the unit is well ventilated and spacious.
- Do not block or cover the vents of the unit, as this may cause irreparable damage to it.
- Use the unit for its intended purpose and avoid placing objects on top of it during storage or use.
- Do not move the unit during operation as the vibrations and shocks associated with movement may cause damage to the internal hardware.
- In case of malfunction, turn off the unit immediately and contact BLUETT support or your local BLUETT dealer if this manual cannot adequately explain the malfunction to you.
- Do not place the unit on an unstable or inclined surface.
- Do not insert foreign objects into any port and vent of the unit.
- Keep away from children and pets.

Legal and Regulatory Requirements

- The transportation, wiring and maintenance shall comply with all applicable laws, regulations and standards.
- User-provided materials and tools required shall meet the requirements specified in applicable laws, regulations and relevant standards.

1.2 Handling

Use mechanics assistance as needed (e.g. trolleysum adjustable height, workbenches).

Recommended number of people based on the weight of product

Weight	Number of people
<18kg	1
10kg-22kg	2
22kg-35kg	3
>35kg	4 or more

1.3 Storage and usage

- When not using the unit for over 3 months, charge it to 40% to 60% SoC to keep it in optimal condition.
- Before reusing the unit, power it off and remove all electrical connections from it.
- Store the unit in a cool and dry place. The ideal temperature range is 10°C to 30°C. The unit can be safely charged and discharged at temperatures from -20°C to 40°C. However, it's NOT recommended to store the unit in harsh temperatures for extended periods of time.
- Fully cycle the unit every 6 months to maintain the battery's best life.

If the SoC drops to 0 (during operation or upon startup), take the following actions to safely restart the unit:

- 1) Shut down immediately.
 - 2) Charging within 48 hours.
 - 3) Safety wait until the ambient temperature is 10°C to 30°C for 24 h to be able charging.
- It is recommended to charge 'near' via AC source. If charging via solar energy, ensure that your solar system provides an output of more than 100W.
- BILLETI shall not be liable for any equipment damage caused by the violation of above instructions.

2. What's In The Box

Standard Packaging

Item	Picture	Qty.
Expansion Battery		1
Battery Expansion Cable (500mm)		1
User Manual		1
Warranty Card		1
Quality Certificate		1


Optional
(Available on official BLUETTI website)

Item	Picture
TYPE C Cable (15A/Charging 2m)	
Car Charging Cable (16AWG, 720mm)	
Solar Charging Cable (16AWG, 1500mm)	
Extended Battery Expansion Cable (255mm)	
Power Bank Output Cable (16AWG, 422mm)	
200W Charger	

3. Product Overview

3.1 Diagram

The BLUETTI EB80 can be used with AC80 as an external expansion battery or as a DC power station to run your devices independently. It offers up to 120W output with 3 DC ports - USB-A, USB-C and a cigarette lighter port, perfect for your phone, laptop, car frigida, and more. While LFPo4 battery cells and an advanced battery management system (BMS) protect your device from a variety of potential risks during daily operation. When connected to AC80, it adds up to 800Wh capacity to the whole power system for longer device runtime.

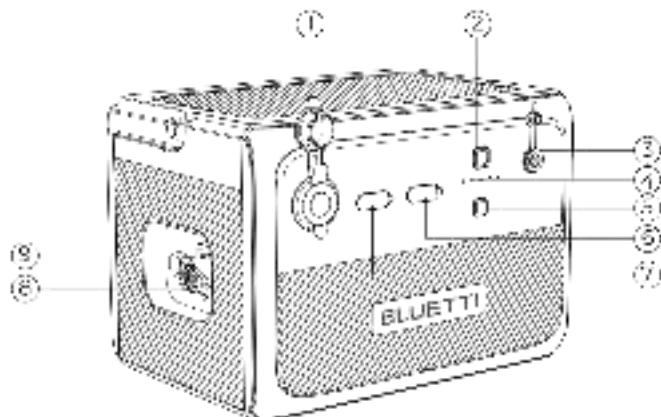

- | | |
|--------------------------|--------------------------|
| ① Cigarette Lighter Port | ④ USB-A Port |
| ② Power Button | ⑤ USB C Port |
| ③ DC Input | ⑥ Battery Expansion Port |
| ⑦ Power Indicator | ⑧ Bleed Valve |
| ⑨ DC Power Button | |


3.2 Specifications

Model	B60
General	
Battery Capacity	8000mAh
Cell type	18650 Li-ion
Charging Temperature	-20°C ~ 40°C (32°F ~ 104°F)
Discharging Temperature	-20°C ~ 40°C (4°F ~ 104°F)
Storage Temperature	20°C ~ 40°C (68°F ~ 104°F)
Working Humidity	0% ~ 90%
Weight	About 450g/1lb
Dimensions (W*H)	290mm x 100mm x 26.4mm / 142 mm x 8.6mm x 1.0mm
DC Output	
Cigarette Lighter Port	12VDC/10A
USB-A	5VDC/2A, 9VDC/2A, 12VDC/1.5A
USB-C (Type C)	5V/3A/9V/15V/20VDC, 3A, 20VDC, 3A (Built-in eMark certified)
DC Input	
Interface	DC/909
Power	200W/18A MAX.
Voltage	24V~28VDC
Expansion Port	
Rated voltage	22.4VDC
Max. output current	30A
Power Bank Output	15V/20V DC, 100W MAX.

4. Operating Instructions

DANGER: This device is intended to be used indoors only. Do not use outdoors.

4.1 Buttons

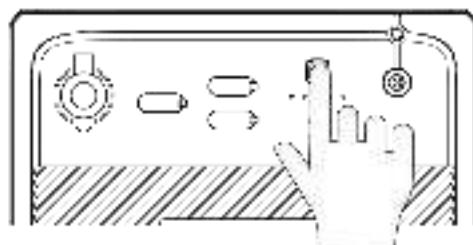

EGO has a power button and a DC output button.

- Press the power button for at least 5s. Press and hold for more than 7 seconds to turn it off.
- Press the DC power button to turn on/off the DC output (cigarette lighter and USB output).

4.2. Power indicator


EGO has 5 LED indicators. From left to right, they represent 20%, 40%, 60%, 80%, 100% SOC, respectively.

4.3 Charging

PGO supports 4 charging methods: AC90 (charging socket, car (cigarette lighter) and adapter).

4.3.1. AC90 Charging

Connect the AC90 and PGO and plug the AC90 into a wall outlet via the AC charging cable. The AC90 will automatically charge the PGO.

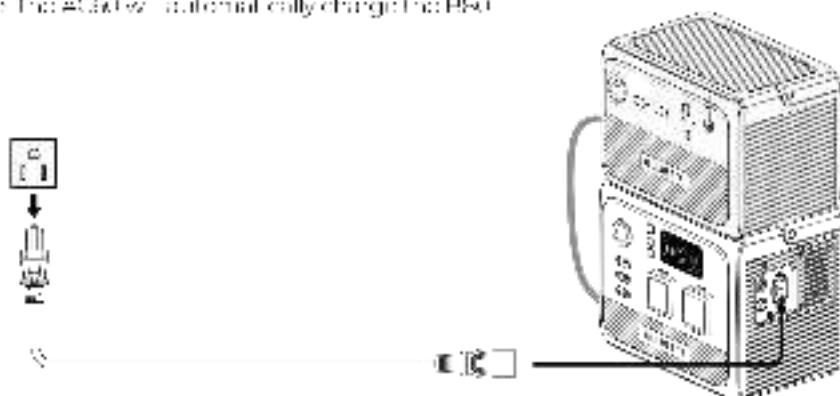


4.3.2. Solar Charging

Connect the solar panels (in series or parallel) to P60 via the solar charging cable.

Note: Please make sure your solar panel complies with:


Voc: 12V-28VDC Input Current: 8A Max. Input Power: 200W Max.

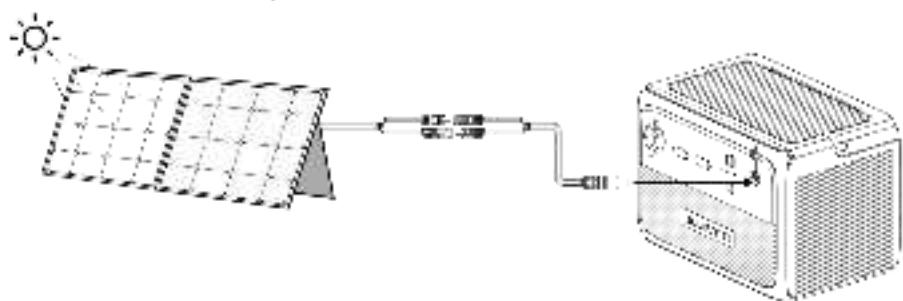

Warning: The open circuit voltage of solar panels can not exceed 28V otherwise it will damage the device (Note: This is not covered in the warranty.)

4.3.3. Car Charging


Connect the P60 to vehicle's 12V cigarette lighter port via the car charging cable.

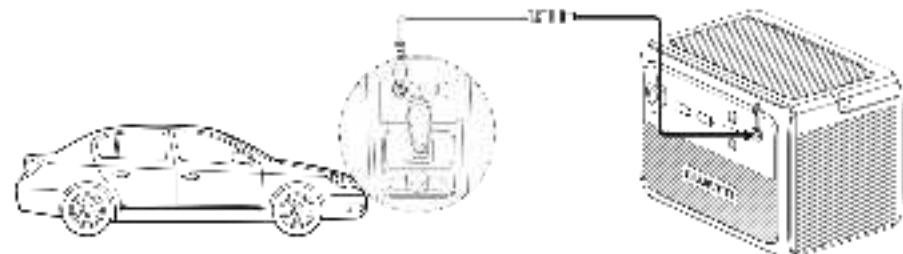

Warning: Cigarette lighter must be completely plugged in, otherwise it may cause instability.

4.3.4. Adapter Charging

The P60 can be charged via adapter. Please make sure the output voltage of adapter is between 12V-28VDC.

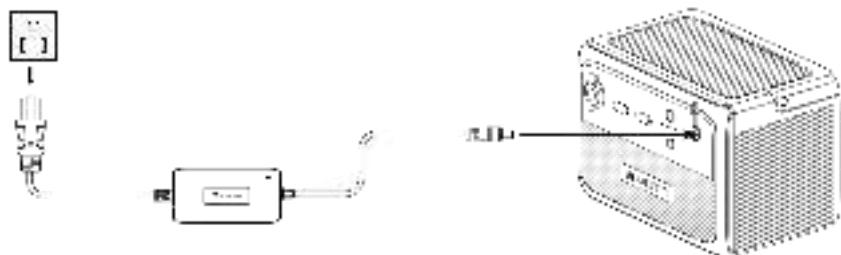

4.4 Discharging

4.4.1 DC Output


The operation time of B60 is subject to many factors, such as ambient temperature, discharge rate, battery capacity, altitude, load characteristics etc.

- 2W/10A DC cigarette lighter
- US-B (12V/2A)/13V/20VDC, 3A; 20VDC, 5A
- US-B-A (5V/5A)/9V/2A; 2W/1.5A
- Expansion Port (12V/25.2VDC, 60W Max)


4.4.2 Connect to AC60

With the battery expansion table AC60 supports up to 2 B60 expansion batteries for a total capacity of 20.8Wh. Turn on AC60 to activate the whole power system.

Note: Make sure the AC60 and B60 are off when connecting and disconnecting cables.

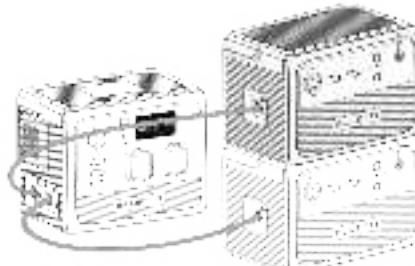

B60-21580

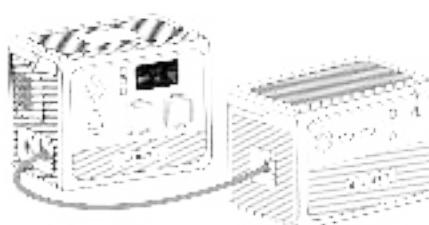


AC60-11580

4.4.3 Power Bank Mode

Connect the B60 expandable power station via the power bank port (purple) to your smartphone or tablet. Press and hold its power button for about 5s and you can recharge the power station directly.

Note:

In Power Bank mode, the B60 delivers a voltage of up to 25VDC. Please connect the DC input voltage of your PI-UTT power station for compatibility.

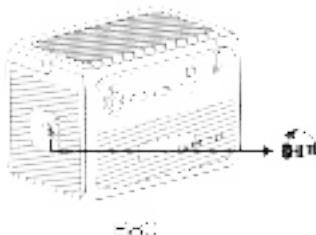

4.4.4. Estimated Operation Time

$$\text{Operation time (estimated)} = \text{Battery capacity (Wh)} \times \text{DoD} \times \eta / (\text{load power})$$

Note:

1) Load power and operation time are measured in watts and hours.

2) DoD refers to depth of discharge. B80 works at 90% DoD for longer battery life. η is the conversion efficiency of the inverter, which is 90% for P80.

Ex. If you run a 40W refrigerator with B80, the operation time will be
 $80\text{Wh} \times 90\% \times 90\% = 40\text{W} \div 16\text{ hrs}$

Note: Low temperature and excess voltages could greatly impact the battery capacity and reduces its actual operation time.

5. Appendix

5.1 FAQs

- Q1:** How can I ensure whether my devices will work well with this product?
- A:** Please evaluate the total constant load of your devices. If it doesn't exceed the Max. output power of B80 (720W) you can use this power station to run your devices.
- Note:** Some devices with built-in motor/compressor may start at 2-3 times the rated power, which can easily exceed the B80.
- Q2:** Can I use third-party solar panels to charge this product?
- A:** Yes, you can. Make sure your solar panels have an open circuit voltage of 12V/24V and have the MC4 connectors. Please do NOT mix different types of solar panels.
- Note:** Time required for the full charge depends on weather condition, the sun shine intensity and the angle of solar panels.
- Q3:** Can I charge and discharge at the same time?
- A:** Yes, it supports pass-through charging. B80 comes with the premium Li-ePOX battery and proprietary Battery Management System to ensure that it can charge and discharge at the same time.
- Q4:** Why does the B80 shut down automatically?
- A:** Two scenarios in which B80 shuts down itself:
- If DC output is not turned on after power on, it will automatically shut down after 4 hours.
 - If DC output is less than 1.5W, it will automatically shut down after 24 hours.
- Q5:** Why is the charging power often too low?
- A:** B80 has a built-in intelligent BMS that automatically adjusts the charging power in response to the battery temperature and SoC, thus protecting the battery and extending its service life.

5.2 Abbreviations

- MPPT: Maximum Power Point Tracking
- SoC: State of Charge
- AC: Alternating Current
- DC: Direct Current
- PV: Photovoltaic (Solar Panels)
- DoD: Depth of Discharge
- ECO mode: It's an energy-saving mode (can be disabled). It can not be turned off. If DC output is not turned on after power on, it will automatically power down after 4 hours.

5.3 FCC Warning

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1) This device may not cause harmful interference;

2) This device must accept any interference received, including interference that may cause undesired operation.

If this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1) Reorient or relocate the receiving antenna.

2) Increase the separation between the equipment and receiver.

3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4) Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CAN ICES-3 (B) / NMB-3 (B)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

This device contains license-exempt transmission equipment that comply with the requirements of RSS-247.

tion, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference;
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'utilisation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

USER MAINTENANCE INSTRUCTIONS

- [1] Please fully charge the machine before using;
- [2] Turn off power buttons;
- [3] To preserve the battery lifespan, close use and recharge at less once every 6 months;
- [4] Wring the cloth with water and wipe to clean in case of dirt.

MOVING AND STORAGE INSTRUCTIONS

- [1] Please proper ventilation while in use or store and keep away from any combustible materials or gases. Do not stack anything on top of the unit in storage or in use. Inadequate ventilation and/or improper storing may cause damage to the unit.
- [2] Avoid exposing the product to rain or using the product in humid environment.
- [3] Use this about the product in a clean and dry environment.
- [4] Keep this product away from children and pet.

5.4 Important Instructions

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

IMPORTANT! SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

WARNING: When using this product, basic precautions should always be followed, including the following:

- (a) Read all the instructions before using the product.
 - (b) To reduce the risk of injury, close supervision is necessary when the product is used near children.
 - (c) Do not put fingers or hands into the product. DO NOT insert foreign objects into any port of the machine. Please open the case carefully and keep children away from it.
 - (d) Use of an attachment not recommended or sold by power pack manufacturer may result in risk of fire, electric shock, or injury to persons.
 - (e) To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
 - (f) Do not use a battery pack or a power source that is damaged or modified. Damaged or modified batteries may exhibit unusual electrode behavior or resulting in fire, explosion or risk of injury.
 - (g) Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
 - (h) DO NOT attempt to replace the internal battery or any other component of the equipment by anyone other than authorized personnel. There are no end-user serviceable components. Do not disassemble the power pack, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
 - (i) To reduce the risk of electric shock, unplug the power pack from the outlet before attempting any instructed servicing.
- [WARNING - RISK OF EXPLOSIVE CASES]** To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of the battery. Review cautionary marking on hardware, cables and chargers.

6 PERSONAL PRECAUTIONS

- (j) Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.

- 2) NEVER sample or allow anyone in vicinity of battery or engine side extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
- b) When changing the internal battery work in a well-ventilated area and do not restrict ventilation in any way.
- c) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- d) DO NOT place the power station near heat sources. It is prohibited to place the equipment in an environment with flammable, explosive gas, or smoke. It is also prohibited to operate the equipment in this environment. Don't expose a power pack to fire or excessive temperatures. Exposure to fire or temperature above 50 °C may cause explosion.
- e) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- f) DO NOT operate in wet conditions. If the equipment becomes wet, please dry the unit completely before using.
- g) Please ensure proper ventilation while in use and do not obstruct Intake/Exhaust. Inadequate ventilation may cause permanent damage to equipment.
- h) DO NOT stack anything on top of the power station while in storage or while in use. DO NOT move the unit while operating as vibrations and sudden impacts may lead to poor connections to the hardware inside.
- i) In case of fire, only a dry powder fire extinguisher is suitable for the product.
- DANGER:** This device is intended to be used indoors only. Do not use outdoors.

CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT : lors de l'utilisation de ce produit, les précautions de base doivent être respectées, y compris : Les éléments suivants :

Allez toutes les instructions avant d'utiliser le produit.

Il peut néanmoins être nécessaire de surveiller le produit lorsque ce dernier est utilisé par des enfants.

C)ne pas mettre les doigts ou les mains dans le produit. Ne cassez pas d'objets étrangers dans les portes de la machine. Veuillez faire attention et être à côté des enfants.

D'utilisation d'un accessoire non recommandé ou vendu par le fabricant du groupe d'interaction peut entraîner un risque d'incendie, de choc électrique ou de blessure.

Et pour réduire les risques d'en dommagement de la prise et du cordon électrique de brancher la prise pluto que le cordon pris soit déconnecté de la centrale.

Il n'est pas de batterie ou d'appareil électronique qui ne soit susceptible d'explosion. Les batteries endommagées ou mal utilisées peuvent présenter un comportement imprévisible et entraîner un incendie, une explosion ou un risque de blessure.

Qui passe faire fonctionner le groupe d'alimentation avec un ciseau ou une clé en commandes ou un ciseau de scie endommagé.

Héritez pas de remplacer la batterie interne ou tout autre composant de l'équipement car quelqu'un d'autre que le personnel autorisé n'a pas de composants utiles pour lui. Si ce n'est pas fait, il démonte la batterie, l'amène à une personne qui peut faire lorsque l'entretien ou la réparation est nécessaire. Un mauvais raccordage peut entraîner un risque d'incendie ou de choc électrique.

Pour réduire le risque de choc électrique, débrancher le bloc d'alimentation de la prise avant de procéder à tout entretien.

AVERTISSEMENT - risque de gaz explosifs. Pour réduire le risque de explosion due à la batterie, suivez ces instructions ainsi que celles publiées par le fabricant de la batterie et le fabricant de tout équipement que vous avez l'intention d'utiliser à proximité de la batterie. Heureusement, le manque de ce risque en garde suffit pour ces produits et sur le marché.

Kipreactie is individueel

Rapportez une protection complète des yeux et des vêtements. Evitez de toucher les yeux en travail avec une batterie.

2) ne jamais fumer ou laisser une étincelle ou une flamme à proximité de la batterie ou du moteur.

S'entre très brusquement ou réécouler le risque de casser un outil métallique sur la batterie. Il peut également entraîner un court-circuit sur une batterie ou une autre carte électrique qui peut également exploser.

plus du changement de la matière interne, la rouille dans une zone bien ventée peut être arrêté par la ventilation.

Si jamais une condensateur cassera, le liquide peut être évacué via la barre d'évacuation. Tous ces matériaux sont étanché, il convient toutefois de faire attention au manutention avec les yeux, pour éviter un malaise. Le liquide est sûr à la barre, cependant prévoir des gants et des lunettes.

N'oubliez pas de placer la centrale à l'abri de l'eau et de ne pas déplacer. Si vous devez faire un entretien ou remplacement, sortez tout du gaz, et faites un espace suffisant entre le moteur et le gaz. Il est également important d'utiliser le matériau d'isolation environnementale pour empêcher une électricité électrique au feu. A un certain point, une température élevée peut entraîner un incendie. À ce point, une température à 120°C peut provoquer une température de combustion de 130°C. Ceci peut être renforcé par un entretien au de 200°F.

Où : enfin nous fournit par un écran de maillage filant, assurant une sécurité des pilotes et évitant que l'identique. Cela garantira la sécurité de la sécurité à ce produit.

Tous ces aspects sont nécessaires dans un moteur. Si le matériau est mouillé, il devra être complètement vaporisé avant utilisation.

Quelques autres bonnes pratiques pendant l'utilisation sont : un revêtement et ouvertures, des surchauffe, etc. La rouille immobilière peut causer des dommages permanents aux éléments.

Toutefois, il est important de faire cela pendant son entretien ou son utilisation. Il faut également faire attention lorsque les vibrations et les chocs sont causés par le moteur. Ces derniers peuvent entraîner la mortalité à l'intérieur.

Si tel n'est pas le cas, il est nécessaire de nettoyer et de sécher complètement au produit.

DANS CERTAINS cas, il est nécessaire d'être utilisé uniquement à l'intérieur. Ne pas utiliser à l'extérieur.

For more information, please visit:

Web: <https://www.bluestoox.com>



@BLUESTT Support

@BLUESTT Official



@bluestt_inc



@bluesttinc



@bluestt_official



service@bluestoox.com

SHENZHEN POWEROAK NEWENER CO., LTD.

Addr: F9 A-7 No1,Kaisan,Tengding Rd, No 769, Xili Shanzhi,
Nanshan, Shenzhen, China

USA Agent

Company name: BLUESTT POWEROAK INC

Address: 6185 SWALLEY VIEW BLVD STE 3 LAS VEGAS

NEVADA 89118 United States

TIN: 0C3555982Y

Contact Name: Qyao Li

Telephone No: +1-512-966-1898

Email: liqy@bluestt.com



BLUETTI



Just Power On