




## USER MANUAL

### Cooker hood

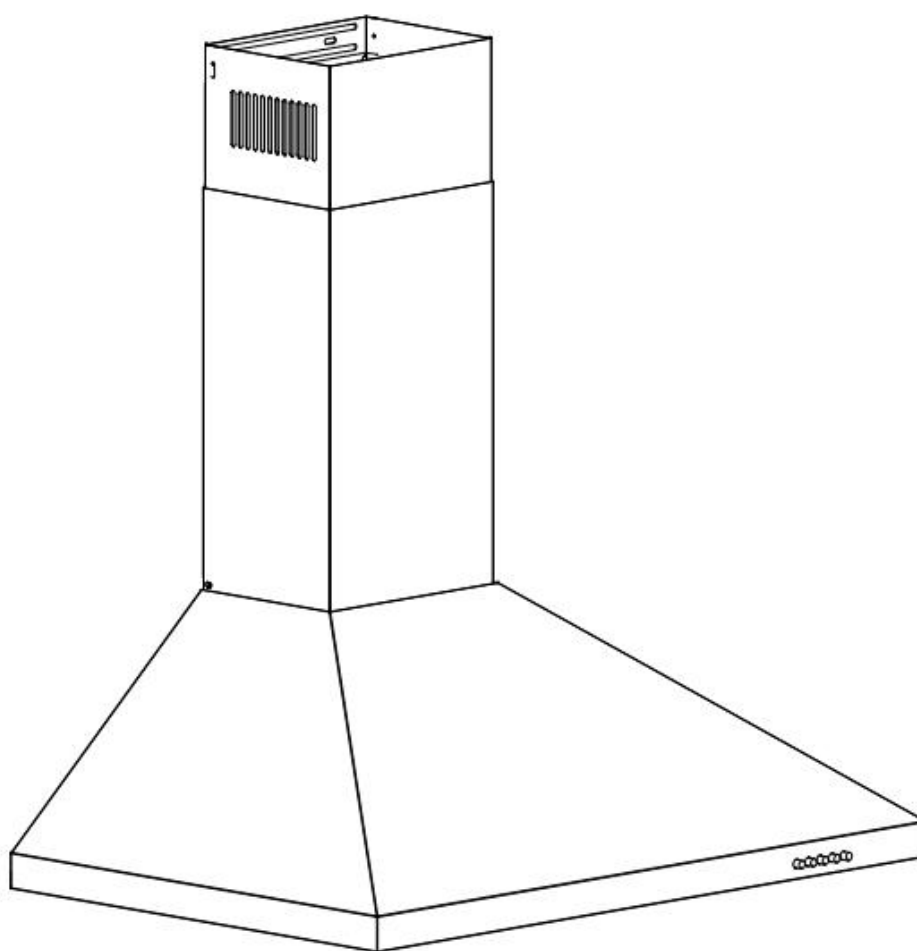

ACPP901AIX

Read this manual carefully and keep it for future reference.

**Dear Customer,**

Congratulations on purchasing this appliance. Please read the following instructions carefully and follow them to prevent possible damages. We assume no liability for damage caused by disregard of the instructions and improper use.

## **Contents**

Safety instructions .....	1
Installation .....	2
Control panel and key functions .....	5
Cleaning and maintenance.....	6
Trouble shooting.....	6
Notes on environmental protection.....	7
Disposal considerations.....	7

**Note:**This appliance is intended for domestic use only!

## **SAFETY INSTRUCTIONS**

- Thank you for purchasing this cooker hood. Please read the instruction manual carefully before you use the cooker hood, and keep it in a safe place.
- The installation work must be carried out by a qualified electrician or competent person. Before you use the cooker hood, make sure that the voltage (V) and the frequency (Hz) indicated on the cooker hood are exactly the same as the voltage and the frequency in your home.
- The manufacturer and the agent will not bear any responsibility for the damage caused by inappropriate installation and usage.
- Children under the age of 8 must not use the cooker hood.
- The appliance is not intended for commercial use, but only for household and similar environments.
- The cooker hood and its filter mesh should be cleaned regularly in order to keep it in good working order.
- Before cleaning, switch the power off at the main supply.
- Clean the cooker hood according to the instruction manual and keep the cooker hood from the danger of burning.
- Prohibit putting the cooker hood by fire.
- If the appliance does not function normally, contact the specialist company.
- This device may be only used by children 8 years old or older and persons with limited physical, sensory and mental capabilities and /or lack of experience and knowledge, provided that they have been instructed in use of the device by a responsible person who understands the associated risks.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the cooker hood is used at the same time as appliances burning gas or other fuels, the room must be adequately ventilated.
- Do not stand under the cooker hood. Accessible parts may become hot when used with cooking appliances.

### **Important hints on installation**


- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room)
- Regulations concerning the discharge of air have to be fulfilled.

## INSTALLATION

### Preparation



If you have an outlet to the outside, your cooker hood can be connecte as below picture by means of an extraction duct (enamel, aluminium, flexible pipe or inflammable material with an interior diameter of 150mm)


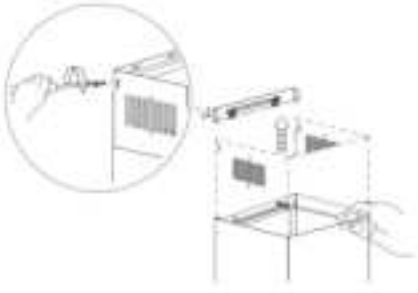
- Before installation, turn the unit off and unplug it from the outlet
- The cooker hood should be placed at a distance of 65-75cm above the cooking zone for best effect.

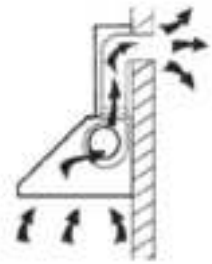

### Installation (Vent outside)

1	2
<p>Mark the wall with the hole positions as shown in the diagram</p>	<p>Install the hanging bracket on the wall with 3pcs flat head screws</p>
3	4
<p>Tighten the screws</p>	<p>Install the valve and tighten the screws</p>

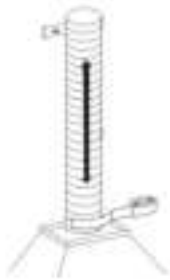5	6
	
Connect the duct	Tighten the screws

7	8
	
Install chimney and tighten screws	Tighten the screws



Note: The illustration is a reference image, your device may differ

#### Installation (Vent inside)



If you do not have an outlet to the outside, exhaust pipe is not required and the installation is similar to the one shown in section “Installation (Vent outside)”.

#### Installing the Carbon Filter

Note: Carbon filter is not included.

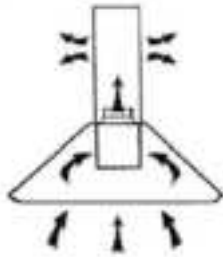



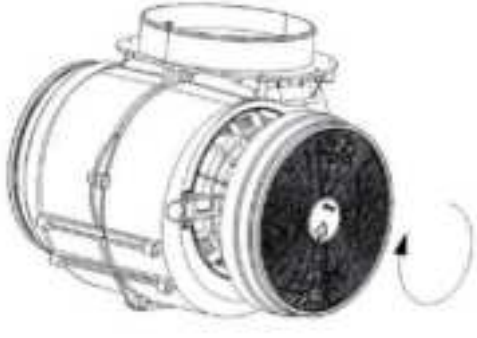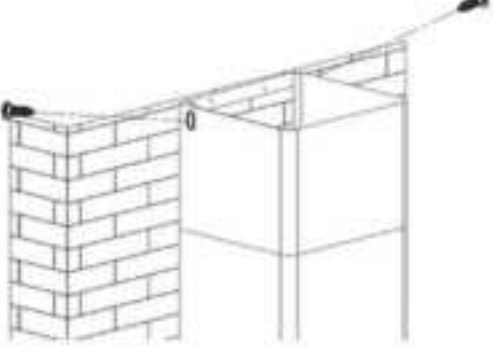

1	2
	
Activated carbon filter can be used to trap odors	In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.

Note: The illustration is a reference image, your device may differ

3	4
	
<p>Plug the activated carbon filter into the unit and turn it in clockwise direction. Repeat the same on the other side. Make sure the filter is securely locked. Otherwise, it would loosen and cause dangerous. When activated carbon filter attached, the suction power will be lower.</p>	<p>Remove all blue protective film on chimney and cooker hood, the installation is now finished.</p>

Note: The illustration is a reference image, your device may differ

#### CONTROL PANEL AND KEY FUNCTIONS

		
	OFF	Off button for extractor fan
	Speed 1	Extractor fan speed 1 button
	Speed 2	Extractor fan speed 2 button
	Speed 3	Extractor fan speed 3 button
	Lighting on/off	On/off button for light

#### CLEANING AND MAINTENANCE

Turn off the cooker hood before cleaning and maintenance and unplug the appliance from the wall outlet. The exterior surfaces are susceptible to scratches and stains. Therefore, do not use abrasive cleaners and wipe away any alkaline or acidic residue (lemon juice, vinegar) immediately after cleaning.

## Control Panel

The control panel can be cleaned with a damp cloth and a mild dishwashing detergent. Before cleaning, make sure the cloth is clean and well wrung. Use a dry, soft cloth to remove the excess moisture after cleaning.

## Monthly Cleaning for Grease Filter

Clean the filter every month can prevent any risk of fire. The filter collects grease, smoke and dust, so the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

## TROUBLE SHOOTING

Fault	Possible Cause	Solution
Light on, but motor does not work	The leaf blocked	Get rid of the blocking
	The capacitor damaged	Replace the capacitor
	The motor jammed, Bearing damaged	Replace the motor
	The internal wire of motor off or a bad smell from the motor	Replace the motor
Light does not work, motor does not work	Light damaged	Replace the lights
	Power cord looses	Connect the wires as per the electric diagram
Shake of the body	The leaf damaged and causes shaking	Replace leaf
	The motor is not tightly hanged	Lock the body tightly
	The body is not tightly hanged	Fix the body tightly
Insufficient suction	The distance between the body and the gas top too long	Readjust the distance
	Too much ventilation from open doors or windows	Choose a new place and resemble the machine

## NOTES ON ENVIRONMENTAL PROTECTION

- During cooking, make sure that there is sufficient air supply so that the cooker hood can operate efficiently and with low operating noise.
- Adjust the fan speed to the amount of steam produced during cooking. Use the intensive mode only when necessary. The lower the fan speed, the less energy is consumed.
- If large amounts of steam are produced during cooking, select a high fan speed in good time. If the cooking steam has already dispersed in the kitchen, the cooker hood must be operated longer.
- Switch off the cooker hood when you no longer need it
- Switch off the lighting when you no longer need it
- Clean the filter at regular intervals and replace it if necessary to increase the effectiveness of the ventilation system and prevent fire hazards.
- Always put the lid on when cooking to reduce cooking steam and condensation.

## DISPOSAL OF PACKAGE AND PRODUCT



Dispose of packaging in an environmentally-friendly manner. This appliance is labelled in accordance with European

Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment -

WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

**PACKAGE INFORMATION:** Packaging materials of the product are manufactured from recyclable materials

in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points

designated by the local authorities



## Product fiche

Description	Symbol	Value	Unit
<b>Model identification</b>	ACPP901AIX		
Annual Energy Consumption	AEC <sub>hood</sub>	46,4	kWh/a
<b>Time increase factor</b>	f	0,9	
<b>Fluid Dynamic Efficiency</b>	FDE <sub>hood</sub>	30,6	
<b>Fluid Dynamic Efficiency class</b>		A	
<b>Energy Efficiency Index</b>	EEl <sub>hood</sub>	51	
<b>Energy Efficiency class</b>		A	
<b>Measured air flow rate at best efficiency point</b>	QBEP	385,1	m <sup>3</sup> /h
<b>Measured air pressure at best efficiency point</b>	PBEP	385	Pa
<b>Maximum air flow</b>	QMAX	623,2	m <sup>3</sup> /h
air flow at minimum and maximum speed in normal use, intensive or boost excluded		300,5/617,2	m <sup>3</sup> /h
air flow at intensive or boost setting		/	m <sup>3</sup> /h
<b>Measured electric power input at best efficiency point</b>	WBEP	134,7	W
<b>Nominal power of the lighting system</b>	WL	3,0	W
<b>Average illumination of the lighting system on the cooking surface</b>	Emiddle	84	Lux
<b>Lighting Efficiency</b>	LE <sub>hood</sub>	28	lx/W
<b>Lighting Efficiency class</b>		B	
<b>Grease Filtering Efficiency</b>	GFE <sub>hood</sub>	75	%
<b>Grease Filtering Efficiency class</b>		D	
<b>power consumption in standby mode</b>	P <sub>s</sub>	/	W
<b>power consumption in off mode</b>	P <sub>o</sub>	0	W
<b>Sound power level</b>	LWA	52/69	dB

[www.aspes.es](http://www.aspes.es)  
[aspes@sareteknika.es](mailto:aspes@sareteknika.es)  
902 99 69 01/944 04 14 08