

## Portable Benchtop 3 Place Dishwasher

KAPBT3PDWZA

Safety & Warnings	3
Overview	5
Components	6
Installation	7
Operation	10
Cleaning & Care	19
Specifications	22
Troubleshooting	23
Notes	25

# Safety & Warnings

To ensure safety and avoid unnecessary injury or property damage caused by misuse, observe the following warnings. Failure to comply may result in accidents.

## Grounding Requirements

- The dishwasher must be properly grounded to prevent the risk of electric shock in the event of a malfunction or damage.
- Use a national standard 3-hole outlet with ground protection. Ensure the ground wire is securely connected to the public power supply's ground after the power is turned on.
- Do not use 2-hole electrical outlets. Avoid outlets with overload protection.

## Prohibited Actions


- The electrical outlet used must have a rated current of at least 6A and should be dedicated to the dishwasher. Using a lower-rated or shared outlet may lead to fire, electric shock, or other hazards.
- Do not place the dishwasher within 150mm of heat sources such as gas stoves or steam outlets.
- Do not use water supply temperatures above 40°C or allow water to freeze below 0°C.
- If abnormal conditions (e.g., burning smells) occur during use, stop operation immediately and disconnect both the water and power supply.
- Do not open the dishwasher while it is running. Steam or hot water may cause burns. Avoid placing hands near the top air outlet to prevent steam burns.
- Ensure that the inlet and drain hoses are properly installed without bending, to prevent clogs and operational failure.
- When placing dishes and cutlery, avoid obstructing the spray arm. Clean the filter of food residue after each wash.
- Do not place heavy objects on the door, as this may cause injury or damage.
- Do not spray or soak the dishwasher with water, as this poses a risk of short circuits or electric shock.
- Do not leave the door open unattended to prevent tipping hazards.

## Warnings

- Do not plug in the dishwasher with wet hands. If the power cord is damaged, cease use immediately and contact **help.Kogan.com** for support.
- Do not use the dishwasher before installation is complete. Only use it for its intended functions.
- When loading the dish rack:
  - Avoid sharp utensils coming into contact with the door seal.
  - Place knives and other sharp items on the upper rack with the blades pointing down or placed horizontally. Avoid damaging the rack coating to prevent rust.
- Dishwasher detergent is alkaline. Avoid contact with skin and eyes. Keep out of reach of children. In case of eye contact, rinse immediately with plenty of water and seek medical attention.
- Only use dishwasher-specific detergent tablets or powder. Do not substitute with dishwashing liquid, soap, or hand sanitiser, as this may damage the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play with the dishwasher. Keep them away when the door is open.
- Use only new hose assemblies when connecting to the water supply. Do not reuse old hoses.
- Do not bend or crush the power cord during installation.
- Always unplug the dishwasher and turn off the water supply during maintenance, cleaning, or extended periods of non-use.
- The maximum allowable water inlet pressure is 1.0 MPa; the minimum is 0.04 MPa.
- Install the dishwasher on a level surface to ensure proper operation.
- The three-way valve cannot endure high water pressure for extended periods. Turn off the tap when the dishwasher is not in use.




# Overview
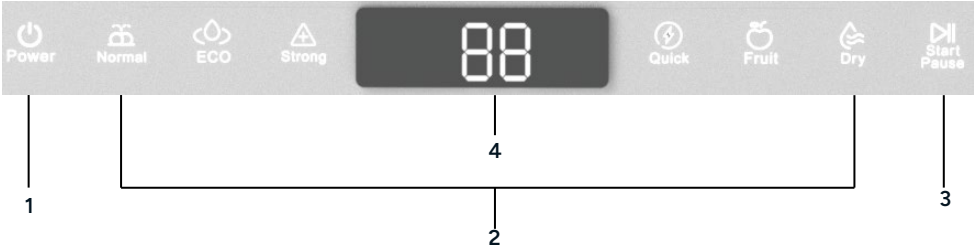
## Control Panel




- 1 Power Button
- 2 Program Buttons
- 3 Start/Pause Button
- 4 Display Screen


## Indicators

Indicator	Description
	Tap Connection
	Low Water
	Drying


# Components

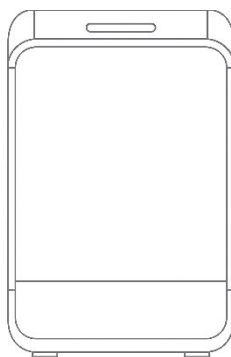


Dishwasher

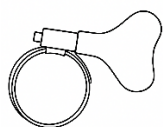


Hose Clamp

 

Suction Cup

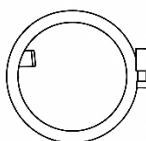

Drainpipe

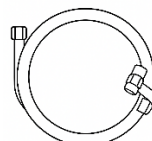

Inlet Pipe




Jug



Basket



Spoon

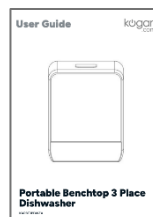

User Guide

## Note:

The product accessories, user interface, and other illustrations in this user guide are schematic diagrams for reference only. Due to ongoing product updates and upgrades, the actual product may differ slightly from the diagrams shown. Refer to the actual product for accuracy.

# Installation

## Installation Requirements

Before setting up the dishwasher, ensure the following conditions are met:

- **Proximity to Connections:** Install the dishwasher close to a water source, drainage connection, and a dedicated electrical outlet. The electrical outlet must be a three-hole grounded outlet with a rated current of at least 6A to ensure electrical safety.
- **Water Inlet Specifications:**
  - Water inlet pressure should be between 0.04-1.0 MPa.
  - Water temperature should not exceed 40°C to avoid damaging internal components.
- **Surface Positioning:** Place the dishwasher on a flat, level surface to ensure proper function.
- **Ventilation:** The air outlet releases hot, humid steam. Avoid installing the unit directly beneath electrical outlets or near other sensitive electrical equipment.

## Water Connection Options

There are 3 recommended water inlet configurations (Options A, B, and C) for connecting the dishwasher to a tap.


### Option A & B: Direct Tap or Pipe Connection

Connect the inlet pipe directly to the tap or plumbing line using a three-way valve. These are suitable options when the tap or outlet is exposed and accessible.

### Option C: Sink-through Method

In situations where the tap is not easily accessible:

1. Drill a hole at the rear of the sink.
2. Route the inlet pipe through the hole and connect it to the tap (using an appropriate adaptor or three-way valve).

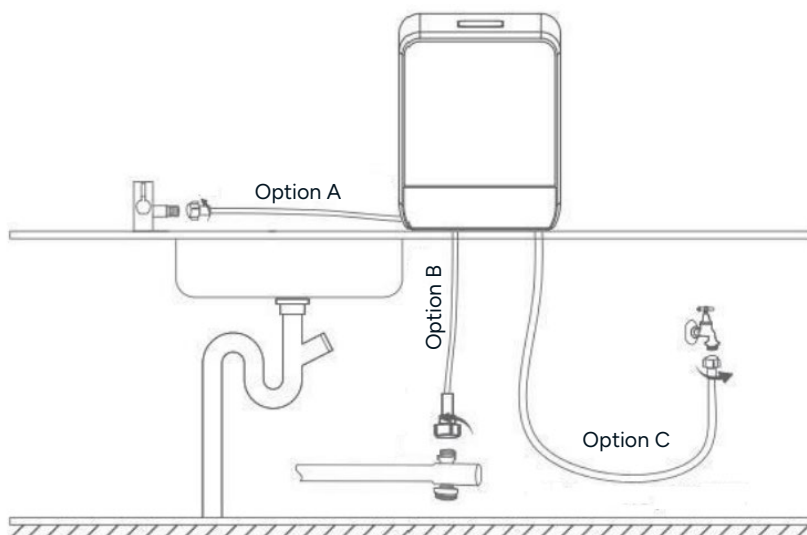


#### Note:

The water inlet pipe uses a ½-inch internal thread and must be connected to a 4-point external threaded faucet outlet.





## Connect the Water Inlet Pipe (Figure 1)

1. Locate the water inlet valve on the rear of the dishwasher.
2. Align the elbow end of the inlet pipe and tighten it securely by hand. Do not overtighten.

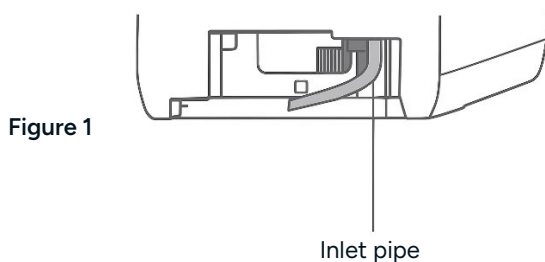

## Connect the Drainpipe (Figures 2 & 3)

1. Attach the elbow end of the drainpipe to the water outlet valve on the rear of the dishwasher.
2. Use the provided hose clamp to secure the pipe in place. Ensure the pipe is firmly attached and does not leak.
3. Mount the pipe onto the dishwasher using the integrated bracket.
4. Secure the other end of the drainpipe to the sink using the suction cup (Fig. 3). Ensure it is positioned securely above the waterline to prevent backflow.

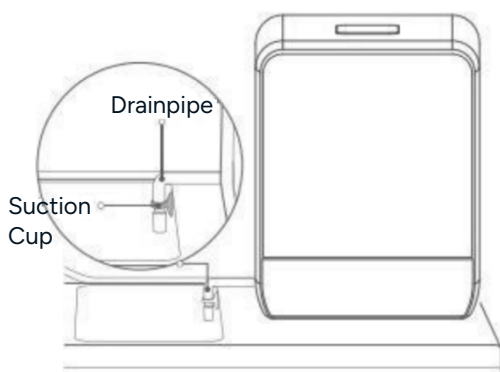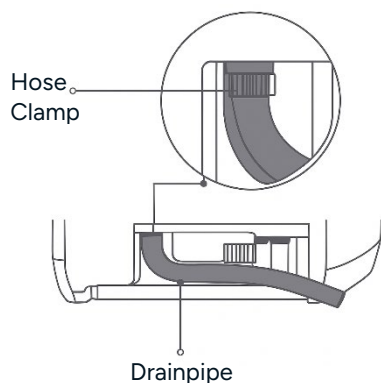



# Operation

## Power On/Off


- Plug the power cord into an electrical outlet. All indicators will illuminate for 1 second, and then the dishwasher will enter standby mode.
- Press the 'Power' button to switch the dishwasher on.
- When the unit is on, press and hold the 'Power' button to switch the dishwasher off.
- If there is no user input within 2 minutes, the dishwasher will automatically turn off.

## Loading the Dishwasher


- Before placing dishes in the dishwasher, remove large food residues to prevent interference with the washing performance.
- Water sprays from the bottom of the dishwasher. Place bowls and cups with their openings facing downward to allow thorough cleaning and prevent water from collecting inside. The tilt angle allows water to drain off the bottom of the dish properly, as the dish opening is angled downward.
- Do not stack or overlap bowls, cups, saucers, or cutlery.
- Avoid placing items upside down on top of each other, as this can hinder effective cleaning and drying.
- After loading, manually rotate the lower spray arm to ensure it moves freely and does not touch any items.

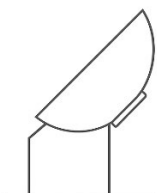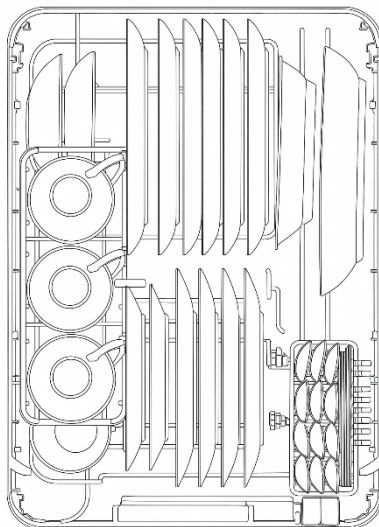

Incorrect

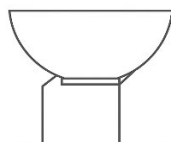


Incorrect

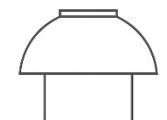

Incorrect


## Tank Mode

- When using Tank mode, power on the dishwasher and add water to the tank until you hear 3 beeps.
- Add approximately 2.5 cups of water until the 'Low Water' indicator turns off and 3 beeps sound.
- Refill the tank before each wash.
- After refilling, select the desired washing program.

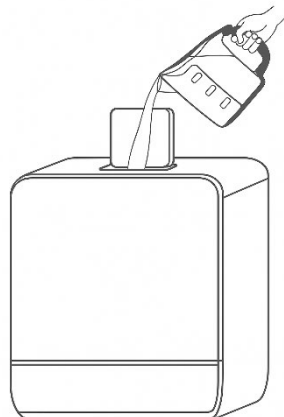

## Adding Dishwashing Powder or Tablet

- It is recommended to use half a cap (approximately 10g) of dishwashing powder. Invert the cap and pour the powder into the detergent dispenser inside the dishwasher.
- If using a dishwashing tablet, one tablet is sufficient per wash.

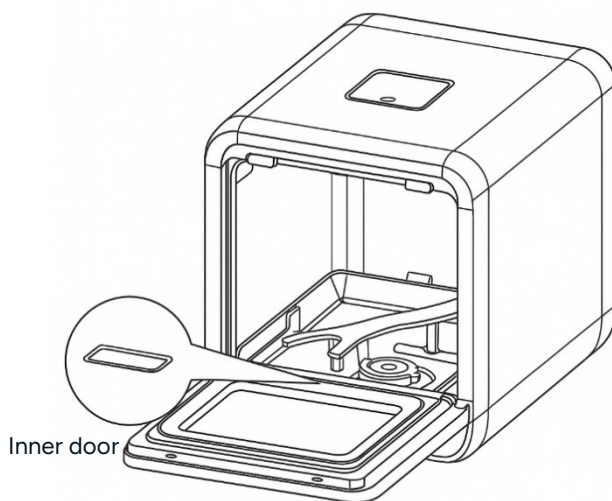

## Program Selection

Mode	Button Sequence
Normal	Press the 'Normal' button, then the 'Start/Pause' button.
Fast	Press the 'Quick' button, then the 'Start/Pause' button.
Strong	Press the 'Strong' button, then the 'Start/Pause' button.
Super Strong	Press and hold the 'Strong' button for 3 seconds, then press the 'Start/Pause' button.
ECO	Press the 'ECO' button, then the 'Start/Pause' button.
Fruit & Veg	Press the 'Fruit' button, then the 'Start/Pause' button.
Dry	Press the 'Dry' button, then the 'Start/Pause' button.

## Programs

### Normal

Description	For regular, everyday dishwashing needs
Procedure	Main Wash → Rinse → Dry
Washing Time	58 minutes
Soaking Time	10 minutes
Temperature	55°C (Main Wash), 68°C (Rinse)
Drying	60 minutes
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	10g (1 piece)
Drying	Yes

**Quick**

Description	For lightly soiled dishes with a short cycle
Procedure	Main Wash → Rinse → Dry
Washing Time	28 minutes
Soaking Time	N/A
Temperature	50°C (Main Wash), 62°C (Rinse)
Drying	60 minutes
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	10g (1 piece)
Drying	Yes

**Strong**

Description	For heavily soiled or oily tableware
Procedure	Main Wash → Rinse → Dry
Washing Time	78 minutes
Soaking Time	N/A
Temperature	55°C (Main Wash), 55°C/70°C (Rinse)
Drying	60 minutes
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	10g (1 piece)
Drying	Yes

## Super Strong

Description	For extremely greasy or stubborn-stained dishes
Procedure	Main Wash → Rinse → Dry
Washing Time	98 minutes
Soaking Time	N/A
Temperature	55°C (Main Wash), 55°C/75°C (Rinse)
Drying	60 minutes
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	10g (1 piece)
Drying	Yes

## ECO

Description	Energy-efficient cycle for lightly soiled dishes
Procedure	Main Wash → Rinse
Washing Time	68 minutes
Soaking Time	N/A
Temperature	43°C (Main Wash), 53°C (Rinse)
Drying	N/A
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	10g (1 piece)
Drying	N/A

## Fruit & Veg

Description	For washing fruits and vegetables with cold water
Procedure	Cold water wash only
Washing Time	19 minutes
Soaking Time	N/A
Temperature	Room temperature
Drying	None
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	No
Drying	No

## Dry

Description	For drying and keeping dishes fresh over time
Procedure	Drying only
Washing Time	N/A
Soaking Time	N/A
Temperature	N/A
Drying	60 minutes
Rinse Aid	No
Rinse Aid Timing	N/A
Detergent	No
Drying	Yes

## Start/Pause

- While washing, press the 'Start/Pause' button to pause the program.
- Press the 'Start/Pause' button again to resume washing.

## Fresh Air Mode

- After the washing program is completed, the dishwasher automatically enters Fresh Air mode to keep the interior clean and dry for an extended period.
- While in Fresh Air mode, the 'Drying' indicator illuminates, and the dishwasher may emit slight sounds and vibrations; this is normal.

## Delayed Start

1. Turn on the dishwasher and select a washing program.
2. Press and hold the chosen 'Program' button for 3 seconds. '4H' (4-hour delay) will illuminate on the display.
3. Press the button again to cycle through delay options (from '2H' to '12H').
4. Press the chosen 'Program' button again to confirm the selected time.
5. Once confirmed, the dishwasher will begin operation after the selected delay. Water will be added when the countdown begins.

## Rinse Aid

- To add rinse aid, pause the machine before the washing program ends (see 'Rinse Aid Timing' for your washing program for guidance).
- Open the door, add rinse aid to the wash chamber, then close the door and continue washing.

## Storage Mode

The dishwasher offers 2 extended storage modes to keep dishes clean and dry for later use. These modes combine a washing cycle, drying phase, and timed ventilation to prevent odours or mildew.



## 72-Hour Storage Mode

This mode provides automatic ventilation and keeps dishes fresh for up to 72 hours. To activate 72-hour storage:

1. Ensure the dishwasher is powered on.
2. Press the 'Dry' button immediately after startup. The display will show '72H'.
3. The dishwasher will start the cycle: Washing → Drying (60 minutes) → 72H Storage.

## 7-Day Storage Mode

This mode is ideal for longer storage needs, maintaining dish freshness for up to 7 days. To activate 7-day storage:

1. Ensure the dishwasher is powered on.
2. Press the 'Dry' button immediately after startup. The display will show '7D'.
3. The dishwasher will start the cycle: Washing → Drying (60 minutes) → 7D Storage.

## Cancelling Storage Mode

To cancel the storage mode at any time, press the 'Dry' button once to switch to standby mode, then press it again to turn off the function.

### Note:

Ensure that dishes are suitable for extended storage and that the door remains closed during the entire storage period for optimal performance.

## Notes

### Material Caution

- Avoid washing items made of gold, silver, aluminium, and other valuable or delicate materials, as repeated washing may reduce their surface finish.
- Antique tableware, glassware, and plastic items that are prone to fading may lose their colour or texture over time.
- Do not wash wood or bamboo tableware, as it may warp or grow mildew; remove these items promptly after washing.

## **Large or Coated Items**

- Do not wash large items such as pots and pans, as they may not clean effectively.
- Items with non-stick or Teflon coatings should also be avoided, as they may degrade over time.

## **Stubborn Stains**

- For heavily soiled dishes, use Strong mode or pre-clean with other tools.
- This is recommended for items like baking trays or teacups with long-standing stains.

## **Residual Water**

- The plastic liner and upper shelf may not dry completely.
- A small amount of water may remain beneath the filter after use; this is normal.

## **Water Stains**

Some minor water stains may appear on dishes due to hard water. This is a normal occurrence and does not indicate a malfunction.

## **Cutlery Size**


Spoons shorter than 230mm should not be placed on the upper rack for optimal cleaning.

# Cleaning & Care


## Cleaning the Filter

- To maintain optimal washing performance, clean the filter system regularly and check both the filter assembly and spray arm.
- The filter separates food particles from water. After each wash:
  - Remove the filter cup,
  - Discard any food residue.
  - Rinse the cup thoroughly.
- It is recommended to clean the entire filter assembly once a week.
- Use a soft brush to clean the flat filter and micro-filter.
- Always reinstall the cleaned filter correctly. An improperly installed or missing filter can reduce washing performance or damage the dishwasher.
- If limescale builds up in the dishwasher:
  - a. Dissolve 20-25g of citric acid in water and pour it into the detergent dispenser.
  - b. Run a Fast program to remove limescale from the interior and tableware.

Food residue may accumulate in certain areas. Clean these areas promptly after use.

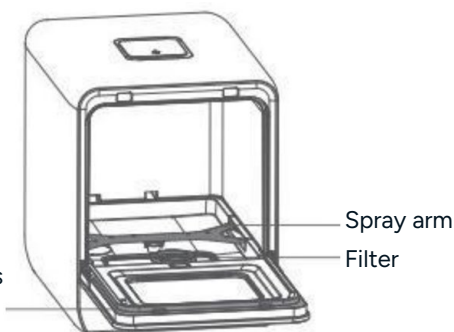

Check the spray arm every 4-6 months. Use a pointed tool to gently clear any food debris from the holes in the spray arm.

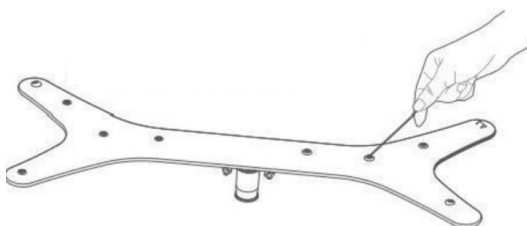


## Filter System

- The filter system is designed to prevent large food scraps and foreign objects from entering the wash pump. Over time, food debris can accumulate and clog the filtration system.
- The filter system consists of the components shown below (filter and flat filter). To maintain proper performance, clean the filter assembly regularly as instructed in this user guide.


### Filter Removal

1. Rotate the filter anticlockwise to unlock it.
2. Pull the filter and flat filter screen upward to remove them from the dishwasher.

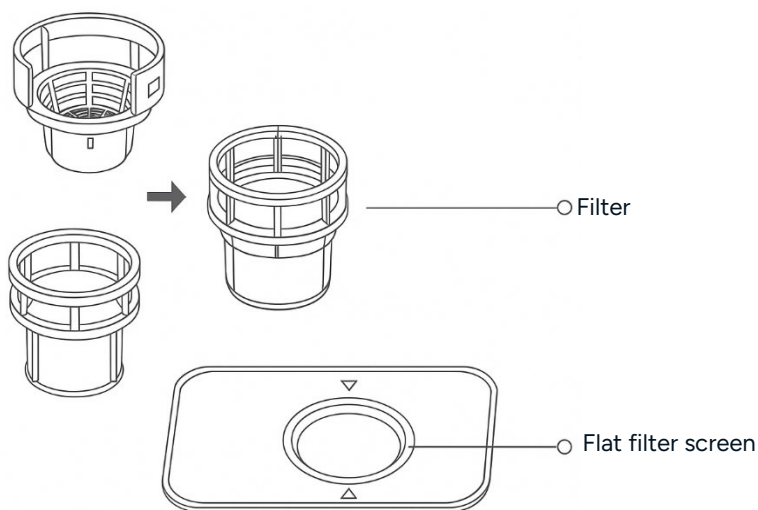

## Air Outlet

- Do not block the air outlet, as this will interfere with the drying process.
- Avoid placing objects too close to the air outlet to prevent exposure to high-temperature steam.
- The dishwasher emits high-temperature and high-humidity steam through the air outlet. Do not position the outlet directly toward electrical outlets or non-water-resistant appliances to avoid damage or safety hazards.

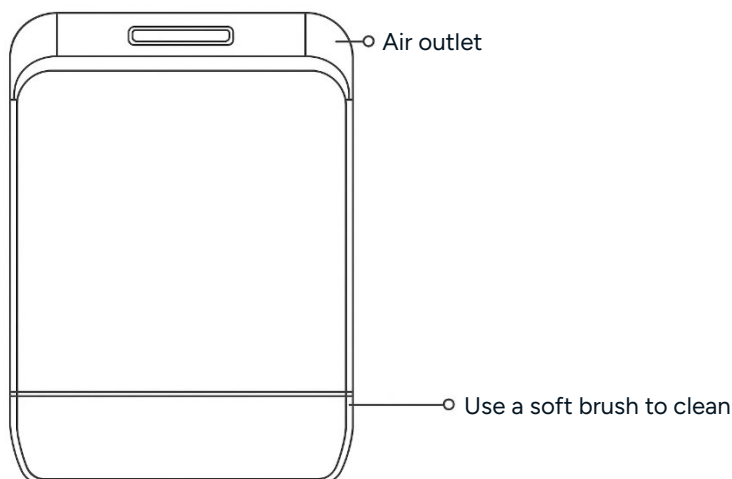

# Specifications

Product size	370 x 510 x 452mm
Rated voltage	220V~
Rated frequency	50Hz
Net product weight	12.8Kg
Rated power	950W
Drying method	Hot air
Rated capacity (set)	3
Rated water pressure	0.04-1.0MPa

# Troubleshooting

Problem	Possible Cause	Solution
Tableware not completely dry.	Tableware not positioned properly.	Set the tableware correctly according to the user guide.
Tableware not clean.	Insufficient detergent.	Add the correct amount of detergent.
	Improper tableware placement.	Arrange tableware properly.
	Filter is clogged.	Clean the filter.
	Incorrect program selected.	Select the appropriate program.
Noise or crashing inside dishwasher.	Spray arm hitting the tableware.	Pause and reposition tableware.
	Loose tableware swaying with water pressure.	Secure lightweight items in place.
Excessive foam in the wash chamber.	Use of incorrect detergent.	Use detergent specifically formulated for dishwashers.
Dish basket discoloration.	Faded tableware.	Do not wash such items in the dishwasher.
'Low Water' indicator is on.	The water supply tap is closed, or water pressure is below 0.04 MPa.	Ensure the tap is open and pressure is sufficient; if not, install a water inlet pump.
	Water inlet pipe is abnormal.	Ensure the inlet pipe is not bent, squeezed, or blocked.
	Water inlet valve malfunction.	Contact <b>help.Kogan.com</b> for support.
'Start/Pause' button not functioning.	Door is open.	Close the door properly.
	Door sensor fault.	Contact <b>help.Kogan.com</b> for support.

## Error Codes

E1	Water Intake Fault	Check the tap and add water if needed.
E2	Drainage Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.
E3	Overflow Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.
E4	Water Temperature Sensor Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.
E5	Communication Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.
E6	Heater Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.
E7	Fan Fault	Contact <a href="https://help.kogan.com">help.Kogan.com</a> for support.



[illegible]

[illegible]

[illegible]

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

