







# SAMSUNG





Accessory type and quantity may vary depending on the model.

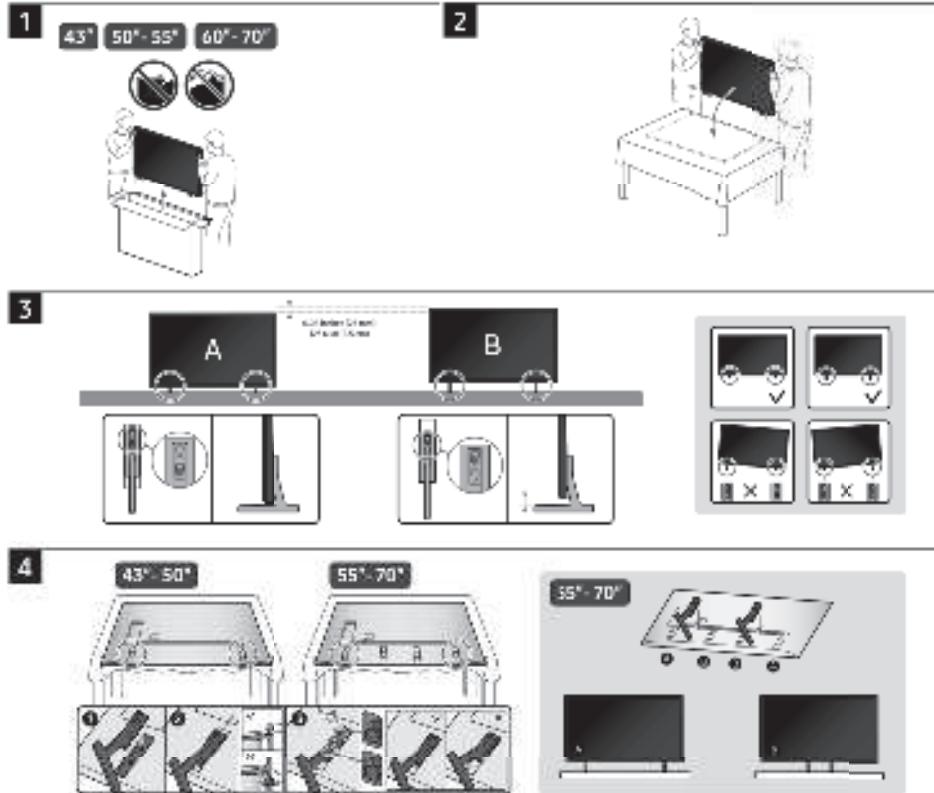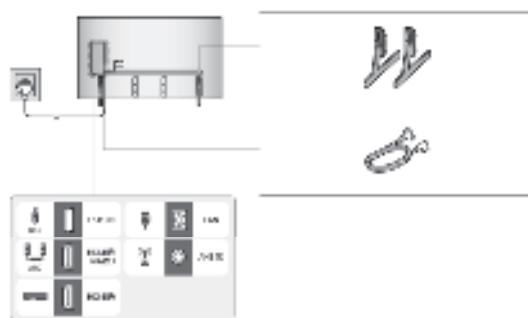

The cables mentioned in this guide is not supplied with your unit.

The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

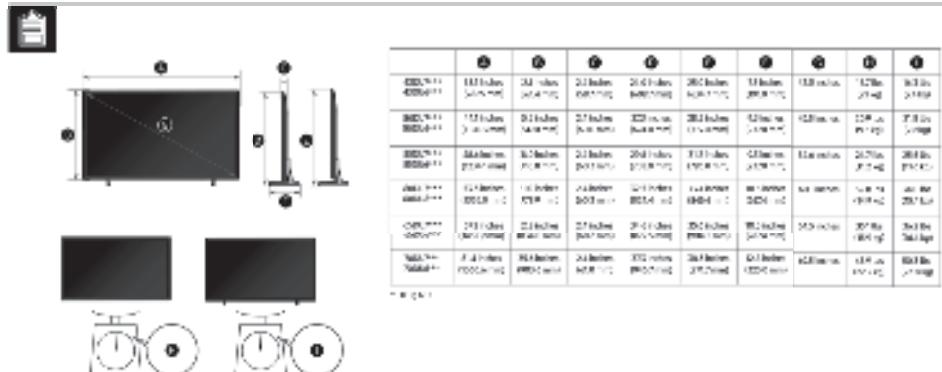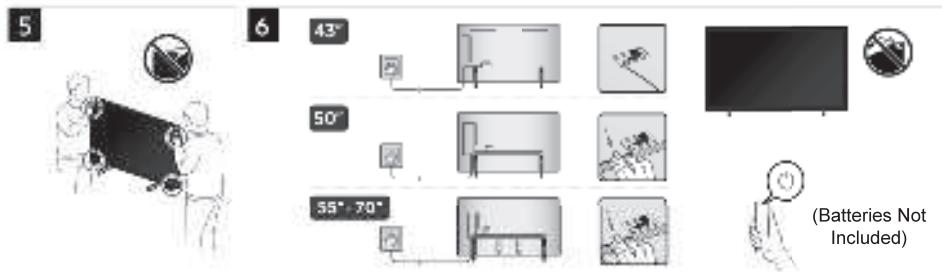

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

The image shown here is for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO / SC: 01-15-2025\_TAB / ELBRD: J.E.  
OBPN: BN68-19258A-01 / SHNMDL: UN50DU6900DXZA\_B  
ADD:UN70DU6900DXZA\_UN65DU6900DXZA\_UN43DU7200BXZA  
UN50DU7200BXZA\_UN55DU7200BXZA\_UN65DU7200BXZA

814000238O

