



Affordable. Reliable. Home Improvement.

SHIPPING SCALE

Model: YF-L90/YF-L80/YF-L100

VEVOR

Affordable. Reliable. Home Improvement.

Sugarcane Juice Machine

MODEL: YF-L90/YF-L80/YF-L100



YF-L90





YF-L80



YF-L100

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Keep children away from the machine for fear of danger.



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

WARNING: Before operating this device, please read this instruction manual completely and keep it handy for future reference.

Always follow basic safety precautions when using these devices. These include:

READ ALL OPERATING INSTRUCTIONS AND PRODUCT SAFETY LABELS! FAILURE TO FOLLOW ALL INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE!

1.**CHECK FOR DAMAGED PARTS:** Before using the machine, check whether all parts work normally and perform the expected functions. Check for alignment, binding and installation of moving parts. and any other conditions that may affect the operation. If any parts are damaged, call the Customer Service number shown in this manual.

2.Always unplug power cord from outlet when not in use, before putting on or taking off parts or accessories, and before cleaning.

3.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

4.Wait until all moving parts have stopped and turn off power before removing any part from the machine.

5.**DO NOT** operates the electrical equipment, with a damaged cord or plug or after the unit malfunctions. **DO NOT ATTEMPT TO REPLACE THE**

CORD. Call Customer Service to arrange to return the machine for examination, repair, or adjustment.

6. DO NOT pull the power cord to disconnect.

7. DO NOT USE WITH EXTENSION CORD. Always plug directly into a grounded wall receptacle.

10. To reduce the risk of unintentional starting, check that the control is OFF before plugging the cord into wall outlet. To disconnect, turn the controller to OFF, then remove plug from wall outlet.

11. NEVER plug the machine in where water may flood the area.

12. To protect against risk of electrical shock, DO NOT submerge the machine in water or other liquids. Be sure the grinder is disconnected from the power source before cleaning.

13. The use of attachments or parts not specifically recommended or sold by the manufacturer for this product will void the warranty and may cause fire, electric shock or injury.

14. **DO NOT** use the machine for other than intended use.

15. The Manufacturer disclaims any responsibility in the case of improper use of the machine. Improper use of the machine voids the warranty.

16. DO NOT REMOVE WARNING LABELS FROM THE MACHINE. Doing so will void the product warranty and may result in serious personal injury.

17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

18. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS!

PRODUCT PRESENTATION

This type of Sugarcane Juice extractor is very popular with users all over the world. It is designed with 5-grade gear transmission for less power consumption, driven by durable motor and controlled by pressing buttons. It has 3-4 stainless steel rollers, can crush the cane to very perfect result. With a stainless steel body and 3-4 castors, this particular model offers a better appearance and convenient use to juice shop owner anywhere. It also can be used in hotel, restaurant, super market etc.

SIZE OF PRODUCT

Model	Voltage / frequency	Power rating	Pressure governing	Work efficiency	Inlet size	Accessory
YF-L80	AC115V 60Hz	750W	manual operation	300kg/h	62mm (2.4inch)	bark knife* 2pcs
	220-240V ~ 50/60Hz	750W		300kg/h	62mm (2.4inch)	
YF-L90	AC115V 60Hz	800W	NO	300kg/h	62mm (2.4inch)	
	220-240V ~ 50/60Hz	800W	NO	300kg/h	62mm (2.4inch)	
YF-L100	AC115V 60Hz	800W	Automatic sizing function	300kg/h	62mm (2.4inch)	
	220-240V ~ 50/60Hz	800W		300kg/h	62mm (2.4inch)	

NOTE: Work efficiency: It can crush 300kg of sugar cane per hour.

PAY SPECIAL ATTENTION TO

- The machine must be turn off before SHIFTING direction. Failure to follow this safety rule will damage the unit seriously and void your warranty.

- Read carefully and understand all INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.
- Always keep children away from this machine, PROHIBIT children to operate the machine.
- Never touch the RUNNING Parts or insert ware into the machine.
- Always unplug when assembling or disassembling the unit.
- Never inset hands inside the entrance, use a food pusher when the cane rolled into the feed entrance if necessary.
- Press the Off switch once to turn off the machine. Press the FW button to turn on the machine in Forward direction. The multiple times may damage the machine.
- Don't insert anything except the cane, failure to follow this rule will damage the machine.

INSTRUCTION

Before Use

1. Make sure that the voltage and frequency indicated on the nameplate are the same as your local supply. And the external earthing wire must be reliable connected.
2. Electrical connection must be made by a qualified person in accordance codes and regulations.
3. Insure that the Switch is on off before plugging in the unit.

Assembly

1. Insert the juice collection Pan (with a stainless Steel filter) into the entrance rightly.
2. Assemble the Cup Tray on the motor housing with two screw (screwed into the hole of the body)
3. Tighten the two locking knobs on top of the body, but not too tight for better working effect.

warranty.

Step 1. Wash the cane first

Step2. Cut he cane into short piece.

Step3. Plug the machine.

Step4. Turn on the unit before inset the cane into the entrance.

Step5. After use.,clean the unit and unplug.

Please check the height of the two pressure adjusting rods before juicing, otherwise it will affect the juicing effect.



CARE AND MAINTENANCE

1. Adhere to the regular maintenance system, disassemble the guard every other month to apply lubricating oil to the chain gear.
2. The body is equipped with a grounding screw, such as the end of the grounding screw rust or oil dirt, should be cleaned in time.
3. Strictly follow the steps for maintenance.
4. Pay attention to prevent oil and water intrusion into the base and keep clean.
5. After the end of the work, timely cleaning, maintenance work.

