



# UHD TV

Chassis : UWP60

Model : UN40KU7000F  
UN43KU7000F  
UN49KU7000F  
UN55KU7000F  
UN65KU7000F

# *SERVICE* Manual

## UHD TV



UN\*\*KU7000F

## Contents

1. Precautions
2. Product specifications
3. Disassembly and Reassembly
4. Troubleshooting
5. Wiring Diagram

# Contents

<b>1. Precautions</b> .....	<b>1-1</b>
1-1. Safety Precautions .....	1-1
1-1-1. Warnings.....	1-1
1-1-2. Servicing the LED TV .....	1-1
1-1-3. Fire and Shock Hazard .....	1-1
1-1-4. Product Safety Notices .....	1-2
1-2. Servicing Precautions.....	1-3
1-2-1. General Servicing Precautions .....	1-3
1-3. Static Electricity Precautions .....	1-4
1-4. Installation Precautions .....	1-5
<b>2. Product Specifications</b> .....	<b>2-1</b>
2-1. Product information .....	2-1
2-2. Product specification .....	2-3
2-2-1. Specifications .....	2-3
2-2-2. Detailed Specifications .....	2-4
2-3. Accessories .....	2-24
2-4. Viewing the Functions .....	2-25
2-4-1. 2016' Smart Hub.....	2-25
2-4-2. Picture .....	2-28
2-4-3. Smart Things .....	2-29
2-4-4. Viewing the Panel.....	2-30
2-4-5. The Samsung Smart Control .....	2-33
2-4-6. Using Voice Interaction .....	2-34
2-4-7. Supported Resolutions for UHD Input Signals .....	2-35
2-4-8. Supported Formats.....	2-36
<b>3. Disassembly and Reassembly</b> .....	<b>3-1</b>
3-1. Disassembly and Reassembly .....	3-1
<b>4. Troubleshooting</b> .....	<b>4-1</b>
4-1. Previous Check .....	4-1
4-2. How to Check Fault Symptom .....	4-2
4-2-1. Power .....	4-2
4-2-2. Video.....	4-6
4-2-3. Audio.....	4-9
4-2-4. Network.....	4-10
4-2-5. Smart Hub .....	4-11
4-2-6. Bluetooth / WiFi Module .....	4-13
4-3. Factory Mode.....	4-14
4-4. Factory Mode Adjustments.....	4-18
4-4-1. Detail Factory Option .....	4-18
4-4-2. Factory Data .....	4-23

4-5. RS-232C.....	4-36
4-6. AV Control Tab.....	4-37
4-7. Updating the TV's Software.....	4-45
<b>5. Wiring Diagram.....</b>	<b>5-1</b>
5-1. Wiring Diagram.....	5-1
5-2. Connector.....	5-3
<b>ANNEX. Exploded View &amp; Part List [UN40KU7000FXZA DA01] .....</b>	<b>ANNEX-1</b>
1-1. Exploded View.....	ANNEX-1
1-1-1. Parts List.....	ANNEX-1
2-1. Electrical Parts List.....	ANNEX-2
<b>ANNEX. Exploded View &amp; Part List [UN43KU7000FXZA AA01] .....</b>	<b>ANNEX-1</b>
1-1. Exploded View.....	ANNEX-1
1-1-1. Parts List.....	ANNEX-1
2-1. Electrical Parts List.....	ANNEX-2
<b>ANNEX. Exploded View &amp; Part List [UN49KU7000FXZA FA01].....</b>	<b>ANNEX-1</b>
1-1. Exploded View.....	ANNEX-1
1-1-1. Parts List.....	ANNEX-1
2-1. Electrical Parts List.....	ANNEX-2
<b>ANNEX. Exploded View &amp; Part List [UN55KU7000FXZA FA01].....</b>	<b>ANNEX-1</b>
1-1. Exploded View.....	ANNEX-1
1-1-1. Parts List.....	ANNEX-1
2-1. Electrical Parts List.....	ANNEX-2
<b>ANNEX. Exploded View &amp; Part List [UN65KU7000FXZA FA01].....</b>	<b>ANNEX-1</b>
1-1. Exploded View.....	ANNEX-1
1-1-1. Parts List.....	ANNEX-1
2-1. Electrical Parts List.....	ANNEX-2



**This Service Manual is a property of Samsung Electronics Co.,Ltd.  
Any unauthorized use of Manual can be punished under applicable  
International and/or domestic law.**

**© 2016 Samsung Electronics Co.,Ltd.  
All rights reserved.  
Printed in Korea**

# 1. Precautions

## 1-1. Safety Precautions

Follow these safety, servicing and ESD precautions to prevent damage and to protect against potential hazards such as electrical shock.

### 1-1-1. Warnings



For continued safety, do not attempt to modify the circuit board.  
Disconnect the AC power and DC power jack before servicing.


### 1-1-2. Servicing the LED TV

1. When servicing the LED TV, Disconnect the AC line cord from the AC outlet.
2. It is essential that service technicians have an accurate voltage meter available at all times. Check the calibration of this meter periodically.

### 1-1-3. Fire and Shock Hazard

Before returning the monitor to the user, perform the following safety checks:

1. Inspect each lead dress to make certain that the leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the monitor.
2. Inspect all protective devices such as nonmetallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor/capacitor networks, mechanical insulators, etc.
3. Leakage Current Hot Check:

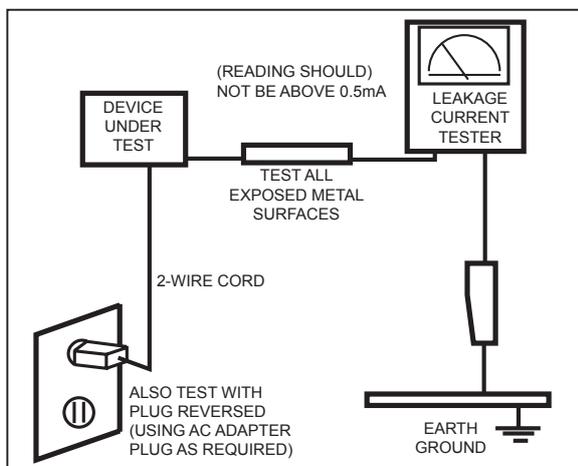

Do not use an isolation transformer during this test.

Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI C101.1, Leakage Current for Appliances), and Underwriters Laboratories (UL Publication UL1410, 59.7).

4. With the unit completely reassembled, plug the AC line cord directly into a 120V AC outlet. With the unit's AC switch first in the ON position and then OFF, measure the current between a known earth ground (metal water pipe, conduit, etc.) and all exposed metal parts, including: metal cabinets, screwheads and control shafts. The current measured should not exceed 0.5 milliamp. Reverse the power-plug prongs in the AC outlet and repeat the test.

### **1-1-4. Product Safety Notices**

Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection. The protection they give may not be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by  on schematics and parts lists. A substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire and/or other hazards. Product safety is under review continuously and new instructions are issued whenever appropriate.

---

## 1-2. Servicing Precautions



An electrolytic capacitor installed with the wrong polarity might explode.



Before servicing units covered by this service manual, read and follow the Safety Precautions section of this manual.



If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions.

### 1-2-1. General Servicing Precautions

1. Always unplug the unit's AC power cord from the AC power source and disconnect the DC Power Jack before attempting to: (a) remove or reinstall any component or assembly, (b) disconnect PCB plugs or connectors, (c) connect a test component in parallel with an electrolytic capacitor.
2. Some components are raised above the printed circuit board for safety. An insulation tube or tape is sometimes used. The internal wiring is sometimes clamped to prevent contact with thermally hot components. Reinstall all such elements to their original position.
3. After servicing, always check that the screws, components and wiring have been correctly reinstalled. Make sure that the area around the serviced part has not been damaged.
4. Check the insulation between the blades of the AC plug and accessible conductive parts (examples: metal panels, input terminals and earphone jacks).
5. Insulation Checking Procedure: Disconnect the power cord from the AC source and turn the power switch ON. Connect an insulation resistance meter (500 V) to the blades of the AC plug. The insulation resistance between each blade of the AC plug and accessible conductive parts (see above) should be greater than 1 megohm.
6. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.

### 1-3. Static Electricity Precautions

Some semiconductor (solid state) devices can be easily damaged by static electricity. Such components are commonly called Electrostatically Sensitive Devices (ESD). Examples of typical ESD are integrated circuits and some field-effect transistors. The following techniques will reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging wrist-strap device. To avoid a shock hazard, be sure to remove the wrist strap before applying power to the monitor.
2. After removing an ESD-equipped assembly, place it on a conductive surface such as aluminum foil to prevent accumulation of an electrostatic charge.
3. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESDs.
4. Use only a grounded-tip soldering iron to solder or desolder ESDs.
5. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESDs.
6. Do not remove a replacement ESD from its protective package until you are ready to install it. Most replacement ESDs are packaged with leads that are electrically shorted together by conductive foam, aluminum foil or other conductive materials.
7. Immediately before removing the protective material from the leads of a replacement ESD, touch the protective material to the chassis or circuit assembly into which the device will be installed.



Be sure no power is applied to the chassis or circuit and observe all other safety precautions.

8. Minimize body motions when handling unpackaged replacement ESDs. Motions such as brushing clothes together, or lifting your foot from a carpeted floor can generate enough static electricity to damage an ESD.

---

## 1-4. Installation Precautions


1. For safety reasons, more than a people are required for carrying the product.
2. Keep the power cord away from any heat emitting devices, as a melted covering may cause fire or electric shock.
3. Do not place the product in areas with poor ventilation such as a bookshelf or closet. The increased internal temperature may cause fire.
4. Bend the external antenna cable when connecting it to the product. This is a measure to protect it from being exposed to moisture. Otherwise, it may cause a fire or electric shock.
5. Make sure to turn the power off and unplug the power cord from the outlet before repositioning the product. Also check the antenna cable or the external connectors if they are fully unplugged. Damage to the cord may cause fire or electric shock.
6. Keep the antenna far away from any high-voltage cables and install it firmly. Contact with the highvoltage cable or the antenna falling over may cause fire or electric shock.
7. When installing the product, leave enough space (0.4m) between the product and the wall for ventilation purposes. A rise in temperature within the product may cause fire.
8. If an equipment is provided with a replaceable battery, and if replacement by an incorrect type could result in an explosion (for example, with some lithium batteries), the following applies:

**CAUTION**

- Risk of explosion if battery is replaced by an incorrect type dispose of used batteries according to the instructions.
- Do not dispose of batteries in a fire.
- Do not short circuit, disassemble or overheat the batteries.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not be exposed to excessive heat such as sunshine, fire or the like.

## 2. Product Specifications

### 2-1. Product information

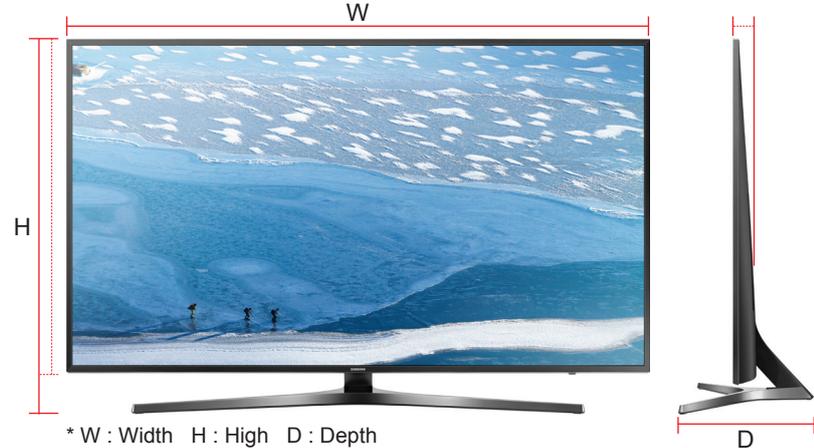Model	UN**KU7000F		
Front View	 <p>* W : Width H : High D : Depth</p>		
Detail View			
Color	Front : DARK TITAN / Stand : TITAN SILVER		
Dimensions (W x H x D)	40"	Without Stand	35.6 x 20.5 x 2.1 inches (903.7 x 519.8 x 54.1 mm)
		With Stand	35.6 x 22.6 x 12.0 inches (903.7 x 575.2 x 304.0 mm)
	43"	Without Stand	38.1 x 22.2 x 2.2 inches (966.8 x 564.2 x 55.0 mm)
		With Stand	38.1 x 24.4 x 12.0 inches (966.8 x 619.0 x 304.0 mm)
	49"	Without Stand	43.3 x 25.1 x 2.2 inches (1099.4 x 638.7 x 55.3 mm)
		With Stand	43.3 x 27.9 x 13.2 inches (1099.4 x 709.0 x 334.1 mm)
55"	Without Stand	48.6 x 28.2 x 2.2 inches (1235.2 x 715.1 x 54.7 mm)	
	With Stand	48.6 x 31.0 x 13.2 inches (1235.2 x 786.7 x 334.1 mm)	
Weight	40"	Without Stand	20.3 lbs (9.2 kg)
		With Stand	23.1 lbs (10.5 kg)
	43"	Without Stand	23.1 lbs (10.5 kg)
		With Stand	26.5 lbs (12.0 kg)
	49"	Without Stand	30.9 lbs (14.0 kg)
		With Stand	35.5 lbs (16.1 kg)

## 2. Product specifications

---

<b>Model</b>	<b>UN**KU7000F</b>		
<b>Weight</b>	55"	Without Stand	37.3 lbs (16.9 kg)
		With Stand	42.1 lbs (19.1 kg)
	65"	Without Stand	51.1 lbs (23.2 kg)
		With Stand	58.9 lbs (26.7 kg)
<b>Flash</b>	1 x eMMC5.0		
<b>DDR</b>	LPDDR4 1.25GHz 64bit		

## 2-2. Product specification

### 2-2-1. Specifications

Model	UN40KU7000F	UN43KU7000F	UN49KU7000F	UN55KU7000F	UN65KU7000F
Item	Description				
Screen Size (Diagonal)	40 inches	43 inches	49 inches	55 inches	65 inches
LCD Panel	UHD 60Hz				
Scanning Frequency	Horizontal : 270KHz (TYP) Vertical : 120Hz (TYP)				
Display Colors	16.7M (True Display) / 1.07B (Dithered 10bit)				
Display Resolution	3840 x 2160				
Input Signal	Analog 0.7 Vp-p $\pm$ 5% positive at 75 $\Omega$ , internally terminated				
Input Sync Signal	H/V Separate, TTL, P. or N.				
Maximum Pixel Clock Rate	76.5MHz x 4 (Typ 74.25MHz x 4)				
AC Power Voltage & Frequency	AC 110-120V 60Hz				
Environmental Considerations	Operating Temperature : 50°F ~ 104°F (10°C ~ 40°C) Operating Humidity : 10% ~ 80%, non-condensing Storage Temperature : -4°F ~ 113°F (-20°C ~ 45°C) Storage Humidity : 5% ~ 95%, non-condensing				
Sound (Output)	20 W				
<b>Note</b> : Media Bridge, Allshare, Internet TV, Built-in WiFi, Full Browser, Bluetooth					

## 2-2-2. Detailed Specifications



### NOTE

Design and specifications are subject to change without prior notice.

	Item	UN40KU7000FXZA
<b>General Information</b>	Product	UHD
	Series	7
	Country	UNITED STATES
<b>Display</b>	Screen Size	40"
	Resolution	3,840 × 2,160
	Ultra Black	N/A
	Quantum Dot Display	N/A
	Ultra Clear Panel	Ultra Clear
	Screen Curvature	N/A
	10 bit Support	N/A
<b>Video</b>	Picture Engine	UHD Up-Scaling
	Motion Rate	120
	PQI (Picture Quality Index)	1500
	HDR (High Dynamic Range)	HDR Premium
	Dynamic Contrast Ratio	Mega Contrast
	Micro Dimming	UHD Dimming
	Precision Black (Local Dimming)	N/A
	Quantum Dot Color	N/A
	Active Crystal Color	Yes
	Wide Color Enhancer (Plus)	N/A
	PurColor	N/A
	Auto Depth Enhancer	N/A
	Contrast Enhancer	Yes
	Auto Motion Plus	Yes
	Film Mode	Yes
	Natural Mode Support	Yes
Peak Illuminator	N/A	
<b>Audio</b>	Dolby Digital Plus	Yes
	DTS Codec	Yes
	Sound Output (RMS)	20W
	Speaker Type	2CH(Down Firing w/Bass Reflex)
	Woofer	N/A
	Wallmount Sound Mode	Yes
	Multiroom Link	Yes
	TV SoundConnect	Yes

	Item	UN40KU7000FXZA
<b>Audio</b>	BT Headset Support	Yes
<b>Smart TV</b>	Samsung SMART TV	Yes
	Apps	Yes
	Games	Yes
	Cloud Game	Yes
	Billing	Yes
	EXTRA	Yes
	TV Plus	N/A
	Automated Content Recognition (ACR)	Yes(US)
	Skype™ on Samsung TV	N/A
	Web Browser	Yes
<b>Smart Interaction</b>	Voice Recognition	Yes
<b>Convergence</b>	TV to Mobile - Mirroring	Yes
	Mobile to TV - Mirroring, DLNA	Yes
	Family Square with S-Cloud	N/A
	Together Play	Yes
	Easy Setup	Yes
	Samsung SMART View	Yes
	App Casting	Yes
	Wireless TV On - Samsung WOL	Yes
	Wired TV On - Samsung WOL	Yes
	Bluetooth Low Energy	Yes
	Briefing On TV	Yes
	RVU	Yes
	WiDi	N/A
	WiFi Direct	Yes
<b>IoT Service</b>	TV as Hub Support	N/A
	TV as Things Support	Yes
	IoT Client Application	Yes
<b>Tuner/Broadcasting</b>	Digital Broadcasting	ATSC
	Analog Tuner	Yes
<b>Connectivity</b>	HDMI	3
	USB	2
	Component In (Y/Pb/Pr)	1
	Composite In (AV)	1(Common Use for Component Y)
	Ethernet (LAN)	Yes
	Headphone	N/A
	Audio Out (Mini Jack)	N/A

2. Product specifications

	Item	UN40KU7000FXZA
<b>Connectivity</b>	Digital Audio Out (Optical)	1
	RF In (Terrestrial / Cable input / Satellite input)	1/1(Common Use for Terrestrial)/0
	Ex-Link ( RS-232C )	N/A
	CI Slot	N/A
	Scart	N/A
	MHL	N/A
	HDMI A / Return Ch. Support	Yes
	HDMI Quick Switch	Yes
	Wireless LAN Adapter Support	N/A
	Wireless LAN Built-in	Yes
	Anynet+ (HDMI-CEC)	Yes
<b>Design</b>	Design	2016 Champfer
	Bezel Type	VNB
	Slim Type	Slim
	Front Color	Dark Black
	Light Effect (Deco)	N/A
	Stand Type	Y-Shape
	Swivel (Left/Right)	N/A
<b>Additional Feature</b>	Samsung 3D	N/A
	Instant On	Yes
	Processor	Quad-Core
	SCSA Support	N/A
	Accessibility	Voice Guide/Enlarge/High Contrast
	Digital Clean View	Yes
	One Connect (Jack)	N/A
	Auto Channel Search	Yes
	Auto Power Off	Yes
	BD Wise Plus	N/A
	Caption (Subtitle)	Yes
	Channel List USB-Clone	N/A
	Connect Share™ (HDD)	Yes
	ConnectShare™ (USB 2.0)	Yes
	Embedded POP	Yes
	EPG	Yes
	Extended PVR	N/A
	Game Mode	Yes
	OSD Language	English, Spanish, French
	BT HID Built-in	Yes

---

Item		UN40KU7000FXZA
<b>Additional Feature</b>	USB HID Support	Yes
	Smart Evolution Support	N/A
	Teletext (TTX)	N/A
	Time Shift	N/A
	V-Chip	Yes
	MBR Support	Yes
	Ultra Clean View	Yes
<b>Eco Feature</b>	Energy Star	Yes
	Eco Sensor	Yes
	Energy Efficiency Class	N/A

## 2. Product specifications

	Item	UN43KU7000FXZA
<b>General Information</b>	Product	UHD
	Series	7
	Country	UNITED STATES
<b>Display</b>	Screen Size	43"
	Resolution	3,840 × 2,160
	Ultra Black	N/A
	Quantum Dot Display	N/A
	Ultra Clear Panel	Ultra Clear
	Screen Curvature	N/A
	10 bit Support	N/A
<b>Video</b>	Picture Engine	UHD Up-Scaling
	Motion Rate	120
	PQI (Picture Quality Index)	1500
	HDR (High Dynamic Range)	HDR Premium
	Dynamic Contrast Ratio	Mega Contrast
	Micro Dimming	UHD Dimming
	Precision Black (Local Dimming)	N/A
	Quantum Dot Color	N/A
	Active Crystal Color	Yes
	Wide Color Enhancer (Plus)	N/A
	PurColor	N/A
	Auto Depth Enhancer	N/A
	Contrast Enhancer	Yes
	Auto Motion Plus	Yes
	Film Mode	Yes
	Natural Mode Support	Yes
	Peak Illuminator	N/A
<b>Audio</b>	Dolby Digital Plus	Yes
	DTS Codec	Yes
	Sound Output (RMS)	20W
	Speaker Type	2CH(Down Firing w/Bass Reflex)
	Woofer	N/A
	Wallmount Sound Mode	Yes
	Multiroom Link	Yes
	TV SoundConnect	Yes
	BT Headset Support	Yes
<b>Smart TV</b>	Samsung SMART TV	Yes
	Apps	Yes

	Item	UN43KU7000FXZA
<b>Smart TV</b>	Games	Yes
	Cloud Game	Yes
	Billing	Yes
	EXTRA	Yes
	TV Plus	N/A
	Automated Content Recognition (ACR)	Yes(US)
	Skype™ on Samsung TV	N/A
	Web Browser	Yes
<b>Smart Interaction</b>	Voice Recognition	Yes
<b>Convergence</b>	TV to Mobile - Mirroring	Yes
	Mobile to TV - Mirroring, DLNA	Yes
	Family Square with S-Cloud	N/A
	Together Play	Yes
	Easy Setup	Yes
	Samsung SMART View	Yes
	App Casting	Yes
	Wireless TV On - Samsung WOL	Yes
	Wired TV On - Samsung WOL	Yes
	Bluetooth Low Energy	Yes
	Briefing On TV	Yes
	RVU	Yes
	WiDi	N/A
	WiFi Direct	Yes
<b>IoT Service</b>	TV as Hub Support	N/A
	TV as Things Support	Yes
	IoT Client Application	Yes
<b>Tuner/Broadcasting</b>	Digital Broadcasting	ATSC
	Analog Tuner	Yes
<b>Connectivity</b>	HDMI	3
	USB	2
	Component In (Y/Pb/Pr)	1
	Composite In (AV)	1(Common Use for Component Y)
	Ethernet (LAN)	Yes
	Headphone	N/A
	Audio Out (Mini Jack)	N/A
	Digital Audio Out (Optical)	1
	RF In (Terrestrial / Cable input / Satellite input)	1/1(Common Use for Terrestrial)/0
	Ex-Link ( RS-232C )	N/A

## 2. Product specifications

	Item	UN43KU7000FXZA
<b>Connectivity</b>	CI Slot	N/A
	Scart	N/A
	MHL	N/A
	HDMI A / Return Ch. Support	Yes
	HDMI Quick Switch	Yes
	Wireless LAN Adapter Support	N/A
	Wireless LAN Built-in	Yes
	Anynet+ (HDMI-CEC)	Yes
<b>Design</b>	Design	2016 Champfer
	Bezel Type	VNB
	Slim Type	Slim
	Front Color	Dark Black
	Light Effect (Deco)	N/A
	Stand Type	Y-Shape
	Swivel (Left/Right)	N/A
<b>Additional Feature</b>	Samsung 3D	N/A
	Instant On	Yes
	Processor	Quad-Core
	SCSA Support	N/A
	Accessibility	Voice Guide/Enlarge/High Contrast
	Digital Clean View	Yes
	One Connect (Jack)	N/A
	Auto Channel Search	Yes
	Auto Power Off	Yes
	BD Wise Plus	N/A
	Caption (Subtitle)	Yes
	Channel List USB-Clone	N/A
	Connect Share™ (HDD)	Yes
	ConnectShare™ (USB 2.0)	Yes
	Embedded POP	Yes
	EPG	Yes
	Extended PVR	N/A
	Game Mode	Yes
	OSD Language	English, Spanish, French
	BT HID Built-in	Yes
	USB HID Support	Yes
	Smart Evolution Support	N/A
	Teletext (TTX)	N/A

---

Item		UN43KU7000FXZA
<b>Additional Feature</b>	Time Shift	N/A
	V-Chip	Yes
	MBR Support	Yes
	Ultra Clean View	Yes
<b>Eco Feature</b>	Energy Star	Yes
	Eco Sensor	Yes
	Energy Efficiency Class	N/A

## 2. Product specifications

	Item	UN49KU7000FXZA
<b>General Information</b>	Product	UHD
	Series	7
	Country	UNITED STATES
<b>Display</b>	Screen Size	49"
	Resolution	3,840 × 2,160
	Ultra Black	N/A
	Quantum Dot Display	N/A
	Ultra Clear Panel	Ultra Clear
	Screen Curvature	N/A
	10 bit Support	N/A
<b>Video</b>	Picture Engine	UHD Up-Scaling
	Motion Rate	120
	PQI (Picture Quality Index)	1500
	HDR (High Dynamic Range)	HDR Premium
	Dynamic Contrast Ratio	Mega Contrast
	Micro Dimming	UHD Dimming
	Precision Black (Local Dimming)	N/A
	Quantum Dot Color	N/A
	Active Crystal Color	Yes
	Wide Color Enhancer (Plus)	N/A
	PurColor	N/A
	Auto Depth Enhancer	N/A
	Contrast Enhancer	Yes
	Auto Motion Plus	Yes
	Film Mode	Yes
	Natural Mode Support	Yes
Peak Illuminator	N/A	
<b>Audio</b>	Dolby Digital Plus	Yes
	DTS Codec	Yes
	Sound Output (RMS)	20W
	Speaker Type	2CH(Down Firing w/Bass Reflex)
	Woofer	N/A
	Wallmount Sound Mode	Yes
	Multiroom Link	Yes
	TV SoundConnect	Yes
	BT Headset Support	Yes
<b>Smart TV</b>	Samsung SMART TV	Yes
	Apps	Yes

	Item	UN49KU7000FXZA
<b>Smart TV</b>	Games	Yes
	Cloud Game	Yes
	Billing	Yes
	EXTRA	Yes
	TV Plus	N/A
	Automated Content Recognition (ACR)	Yes(US)
	Skype™ on Samsung TV	N/A
	Web Browser	Yes
<b>Smart Interaction</b>	Voice Recognition	Yes
<b>Convergence</b>	TV to Mobile - Mirroring	Yes
	Mobile to TV - Mirroring, DLNA	Yes
	Family Square with S-Cloud	N/A
	Together Play	Yes
	Easy Setup	Yes
	Samsung SMART View	Yes
	App Casting	Yes
	Wireless TV On - Samsung WOL	Yes
	Wired TV On - Samsung WOL	Yes
	Bluetooth Low Energy	Yes
	Briefing On TV	Yes
	RVU	Yes
	WiDi	N/A
	WiFi Direct	Yes
<b>IoT Service</b>	TV as Hub Support	N/A
	TV as Things Support	Yes
	IoT Client Application	Yes
<b>Tuner/Broadcasting</b>	Digital Broadcasting	ATSC
	Analog Tuner	Yes
<b>Connectivity</b>	HDMI	3
	USB	2
	Component In (Y/Pb/Pr)	1
	Composite In (AV)	1(Common Use for Component Y)
	Ethernet (LAN)	Yes
	Headphone	N/A
	Audio Out (Mini Jack)	N/A
	Digital Audio Out (Optical)	1
	RF In (Terrestrial / Cable input / Satellite input)	1/1(Common Use for Terrestrial)/0
	Ex-Link ( RS-232C )	N/A

2. Product specifications

	Item	UN49KU7000FXZA
<b>Connectivity</b>	CI Slot	N/A
	Scart	N/A
	MHL	N/A
	HDMI A / Return Ch. Support	Yes
	HDMI Quick Switch	Yes
	Wireless LAN Adapter Support	N/A
	Wireless LAN Built-in	Yes
	Anynet+ (HDMI-CEC)	Yes
<b>Design</b>	Design	2016 Champfer
	Bezel Type	VNB
	Slim Type	Slim
	Front Color	Dark Titan
	Light Effect (Deco)	N/A
	Stand Type	Y-Shape
	Swivel (Left/Right)	N/A
<b>Additional Feature</b>	Samsung 3D	N/A
	Instant On	Yes
	Processor	Quad-Core
	SCSA Support	N/A
	Accessibility	Voice Guide/Enlarge/High Contrast
	Digital Clean View	Yes
	One Connect (Jack)	N/A
	Auto Channel Search	Yes
	Auto Power Off	Yes
	BD Wise Plus	N/A
	Caption (Subtitle)	Yes
	Channel List USB-Clone	N/A
	Connect Share™ (HDD)	Yes
	ConnectShare™ (USB 2.0)	Yes
	Embedded POP	Yes
	EPG	Yes
	Extended PVR	N/A
	Game Mode	Yes
	OSD Language	English, Spanish, French
	BT HID Built-in	Yes
	USB HID Support	Yes
	Smart Evolution Support	N/A
	Teletext (TTX)	N/A

---

Item		UN49KU7000FXZA
<b>Additional Feature</b>	Time Shift	N/A
	V-Chip	Yes
	MBR Support	Yes
	Ultra Clean View	Yes
<b>Eco Feature</b>	Energy Star	Yes
	Eco Sensor	Yes
	Energy Efficiency Class	N/A

## 2. Product specifications

	Item	UN55KU7000FXZA
<b>General Information</b>	Product	UHD
	Series	7
	Country	UNITED STATES
<b>Display</b>	Screen Size	55"
	Resolution	3,840 × 2,160
	Ultra Black	N/A
	Quantum Dot Display	N/A
	Ultra Clear Panel	Ultra Clear
	Screen Curvature	N/A
	10 bit Support	N/A
<b>Video</b>	Picture Engine	UHD Up-Scaling
	Motion Rate	120
	PQI (Picture Quality Index)	1500
	HDR (High Dynamic Range)	HDR Premium
	Dynamic Contrast Ratio	Mega Contrast
	Micro Dimming	UHD Dimming
	Precision Black (Local Dimming)	N/A
	Quantum Dot Color	N/A
	Active Crystal Color	Yes
	Wide Color Enhancer (Plus)	N/A
	PurColor	N/A
	Auto Depth Enhancer	N/A
	Contrast Enhancer	Yes
	Auto Motion Plus	Yes
	Film Mode	Yes
	Natural Mode Support	Yes
Peak Illuminator	N/A	
<b>Audio</b>	Dolby Digital Plus	Yes
	DTS Codec	Yes
	Sound Output (RMS)	20W
	Speaker Type	2CH(Down Firing w/Bass Reflex)
	Woofers	N/A
	Wallmount Sound Mode	Yes
	Multiroom Link	Yes
	TV SoundConnect	Yes
	BT Headset Support	Yes
<b>Smart TV</b>	Samsung SMART TV	Yes
	Apps	Yes

	Item	UN55KU7000FXZA
<b>Smart TV</b>	Games	Yes
	Cloud Game	Yes
	Billing	Yes
	EXTRA	Yes
	TV Plus	N/A
	Automated Content Recognition (ACR)	Yes(US)
	Skype™ on Samsung TV	N/A
	Web Browser	Yes
<b>Smart Interaction</b>	Voice Recognition	Yes
<b>Convergence</b>	TV to Mobile - Mirroring	Yes
	Mobile to TV - Mirroring, DLNA	Yes
	Family Square with S-Cloud	N/A
	Together Play	Yes
	Easy Setup	Yes
	Samsung SMART View	Yes
	App Casting	Yes
	Wireless TV On - Samsung WOL	Yes
	Wired TV On - Samsung WOL	Yes
	Bluetooth Low Energy	Yes
	Briefing On TV	Yes
	RVU	Yes
	WiDi	N/A
	WiFi Direct	Yes
<b>IoT Service</b>	TV as Hub Support	N/A
	TV as Things Support	Yes
	IoT Client Application	Yes
<b>Tuner/Broadcasting</b>	Digital Broadcasting	ATSC
	Analog Tuner	Yes
<b>Connectivity</b>	HDMI	3
	USB	2
	Component In (Y/Pb/Pr)	1
	Composite In (AV)	1(Common Use for Component Y)
	Ethernet (LAN)	Yes
	Headphone	N/A
	Audio Out (Mini Jack)	N/A
	Digital Audio Out (Optical)	1
	RF In (Terrestrial / Cable input / Satellite input)	1/1(Common Use for Terrestrial)/0
	Ex-Link ( RS-232C )	N/A

## 2. Product specifications

	Item	UN55KU7000FXZA
<b>Connectivity</b>	CI Slot	N/A
	Scart	N/A
	MHL	N/A
	HDMI A / Return Ch. Support	Yes
	HDMI Quick Switch	Yes
	Wireless LAN Adapter Support	N/A
	Wireless LAN Built-in	Yes
	Anynet+ (HDMI-CEC)	Yes
<b>Design</b>	Design	2016 Champfer
	Bezel Type	VNB
	Slim Type	Slim
	Front Color	Dark Titan
	Light Effect (Deco)	N/A
	Stand Type	Y-Shape
	Swivel (Left/Right)	N/A
<b>Additional Feature</b>	Samsung 3D	N/A
	Instant On	Yes
	Processor	Quad-Core
	SCSA Support	N/A
	Accessibility	Voice Guide/Enlarge/High Contrast
	Digital Clean View	Yes
	One Connect (Jack)	N/A
	Auto Channel Search	Yes
	Auto Power Off	Yes
	BD Wise Plus	N/A
	Caption (Subtitle)	Yes
	Channel List USB-Clone	N/A
	Connect Share™ (HDD)	Yes
	ConnectShare™ (USB 2.0)	Yes
	Embedded POP	Yes
	EPG	Yes
	Extended PVR	N/A
	Game Mode	Yes
	OSD Language	English, Spanish, French
	BT HID Built-in	Yes
	USB HID Support	Yes
	Smart Evolution Support	N/A
	Teletext (TTX)	N/A

---

Item		UN55KU7000FXZA
<b>Additional Feature</b>	Time Shift	N/A
	V-Chip	Yes
	MBR Support	Yes
	Ultra Clean View	Yes
<b>Eco Feature</b>	Energy Star	Yes
	Eco Sensor	Yes
	Energy Efficiency Class	N/A

## 2. Product specifications

	Item	UN65KU7000FXZA
<b>General Information</b>	Product	UHD
	Series	7
	Country	UNITED STATES
<b>Display</b>	Screen Size	65"
	Resolution	3,840 × 2,160
	Ultra Black	N/A
	Quantum Dot Display	N/A
	Ultra Clear Panel	Ultra Clear
	Screen Curvature	N/A
	10 bit Support	N/A
<b>Video</b>	Picture Engine	UHD Up-Scaling
	Motion Rate	120
	PQI (Picture Quality Index)	1500
	HDR (High Dynamic Range)	HDR Premium
	Dynamic Contrast Ratio	Mega Contrast
	Micro Dimming	UHD Dimming
	Precision Black (Local Dimming)	N/A
	Quantum Dot Color	N/A
	Active Crystal Color	Yes
	Wide Color Enhancer (Plus)	N/A
	PurColor	N/A
	Auto Depth Enhancer	N/A
	Contrast Enhancer	Yes
	Auto Motion Plus	Yes
	Film Mode	Yes
	Natural Mode Support	Yes
	Peak Illuminator	N/A
<b>Audio</b>	Dolby Digital Plus	Yes
	DTS Codec	Yes
	Sound Output (RMS)	20W
	Speaker Type	2CH(Down Firing w/Bass Reflex)
	Woofer	N/A
	Wallmount Sound Mode	Yes
	Multiroom Link	Yes
	TV SoundConnect	Yes
	BT Headset Support	Yes
<b>Smart TV</b>	Samsung SMART TV	Yes
	Apps	Yes

	Item	UN65KU7000FXZA
<b>Smart TV</b>	Games	Yes
	Cloud Game	Yes
	Billing	Yes
	EXTRA	Yes
	TV Plus	N/A
	Automated Content Recognition (ACR)	Yes(US)
	Skype™ on Samsung TV	N/A
	Web Browser	Yes
<b>Smart Interaction</b>	Voice Recognition	Yes
<b>Convergence</b>	TV to Mobile - Mirroring	Yes
	Mobile to TV - Mirroring, DLNA	Yes
	Family Square with S-Cloud	N/A
	Together Play	Yes
	Easy Setup	Yes
	Samsung SMART View	Yes
	App Casting	Yes
	Wireless TV On - Samsung WOL	Yes
	Wired TV On - Samsung WOL	Yes
	Bluetooth Low Energy	Yes
	Briefing On TV	Yes
	RVU	Yes
	WiDi	N/A
	WiFi Direct	Yes
<b>IoT Service</b>	TV as Hub Support	N/A
	TV as Things Support	Yes
	IoT Client Application	Yes
<b>Tuner/Broadcasting</b>	Digital Broadcasting	ATSC
	Analog Tuner	Yes
<b>Connectivity</b>	HDMI	3
	USB	2
	Component In (Y/Pb/Pr)	1
	Composite In (AV)	1(Common Use for Component Y)
	Ethernet (LAN)	Yes
	Headphone	N/A
	Audio Out (Mini Jack)	N/A
	Digital Audio Out (Optical)	1
	RF In (Terrestrial / Cable input / Satellite input)	1/1(Common Use for Terrestrial)/0
	Ex-Link ( RS-232C )	N/A

## 2. Product specifications

	Item	UN65KU7000FXZA
<b>Connectivity</b>	CI Slot	N/A
	Scart	N/A
	MHL	N/A
	HDMI A / Return Ch. Support	Yes
	HDMI Quick Switch	Yes
	Wireless LAN Adapter Support	N/A
	Wireless LAN Built-in	Yes
	Anynet+ (HDMI-CEC)	Yes
<b>Design</b>	Design	2016 Champfer
	Bezel Type	VNB
	Slim Type	Slim
	Front Color	Dark Black
	Light Effect (Deco)	N/A
	Stand Type	Y-Shape
	Swivel (Left/Right)	N/A
<b>Additional Feature</b>	Samsung 3D	N/A
	Instant On	Yes
	Processor	Quad-Core
	SCSA Support	N/A
	Accessibility	Voice Guide/Enlarge/High Contrast
	Digital Clean View	Yes
	One Connect (Jack)	N/A
	Auto Channel Search	Yes
	Auto Power Off	Yes
	BD Wise Plus	N/A
	Caption (Subtitle)	Yes
	Channel List USB-Clone	N/A
	Connect Share™ (HDD)	Yes
	ConnectShare™ (USB 2.0)	Yes
	Embedded POP	Yes
	EPG	Yes
	Extended PVR	N/A
	Game Mode	Yes
	OSD Language	English, Spanish, French
	BT HID Built-in	Yes
	USB HID Support	Yes
	Smart Evolution Support	N/A
	Teletext (TTX)	N/A

---



Item		UN65KU7000FXZA
<b>Additional Feature</b>	Time Shift	N/A
	V-Chip	Yes
	MBR Support	Yes
	Ultra Clean View	Yes
<b>Eco Feature</b>	Energy Star	Yes
	Eco Sensor	Yes
	Energy Efficiency Class	N/A

## 2-3. Accessories


 **NOTE**

- The items' colors and shapes may vary depending on the model.
- Cables not included in the package contents can be purchased separately.
- The part code for some accessories may differ depending on your region.
- The provided accessories may vary depending on the model.

Product	Code. No	Product	Code. No
• Samsung Smart Remote	BN59-01241A	• User Manual	BN68-07920F (40"/43"/65") BN68-07920A (49"/55")
• Batteries (AA x 2)	4301-000101	• Regulatory Guide	BN68-04972E
• Power Coard	3903-001117		

  Image	Product	Code. No
	• Component In	BN39-02190A
	• AV IN Adapter	BN39-02189A
	• Wall Mount Adapter x 4EA	BN61-13518A
	• Cable Guide	BN61-13777A

- **Arranging the cables with the cable guide**

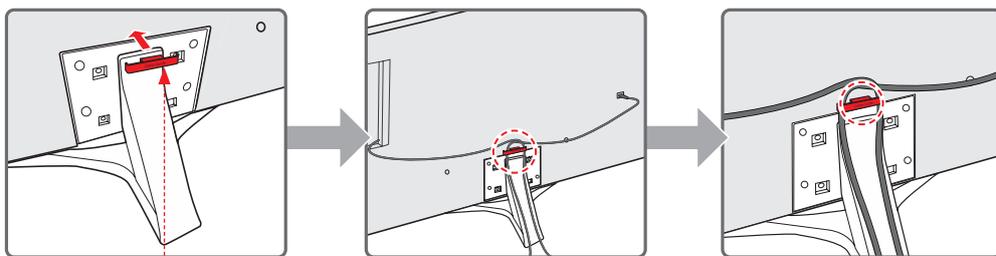


Cable Guide

## 2-4. Viewing the Functions

### 2-4-1. 2016' Smart Hub

#### ■ Content, source, functon, channel list

2015'Y

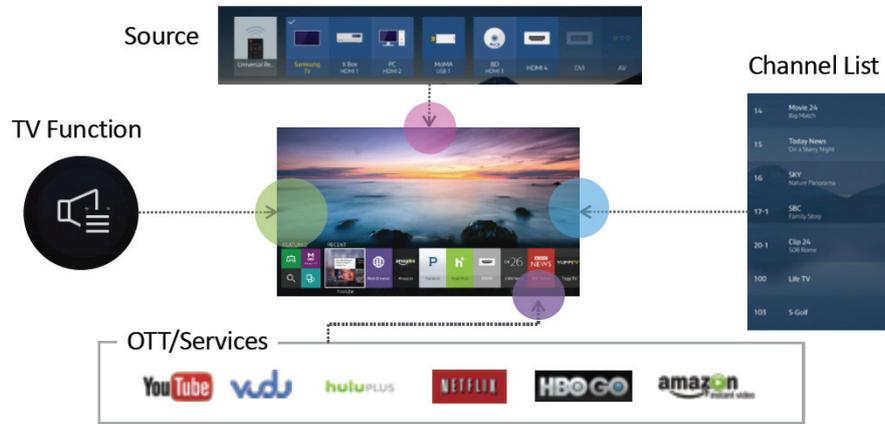

[Content, source, functon, channel list'on four sides]


2016'Y



[Select any of the four from the bottom of the'screen]

## ■ Selection method for the Contents

2015'Y

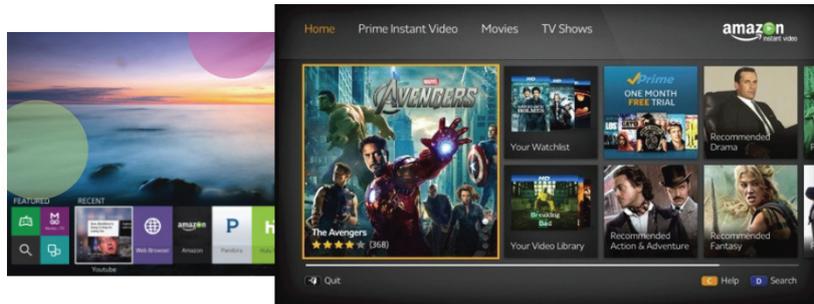

[Select App & Contents]




2016'Y





[Select Contents from the Launcher Screen]

■ Auto Detection

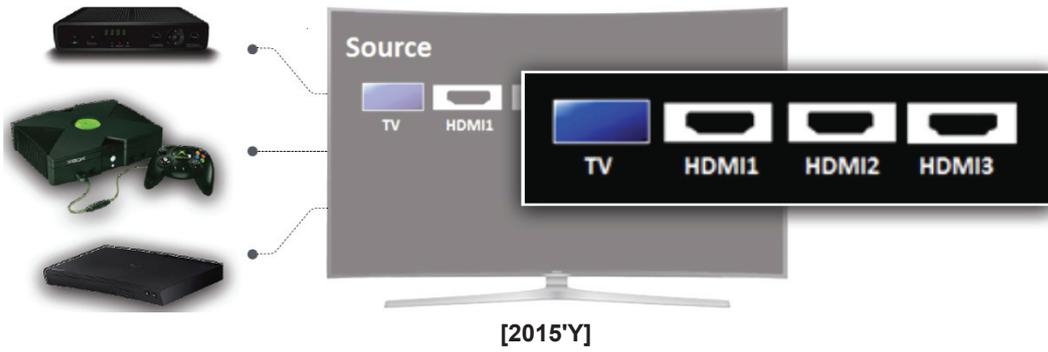


## 2-4-2. Picture

<b>Device</b>	<b>Quantum Dot Color</b> Quantum Dot / 10bit	<b>HDR</b> 1000nits / Ultra Black
<b>Engine</b>	<b>SUHD Remastering Engine</b>	

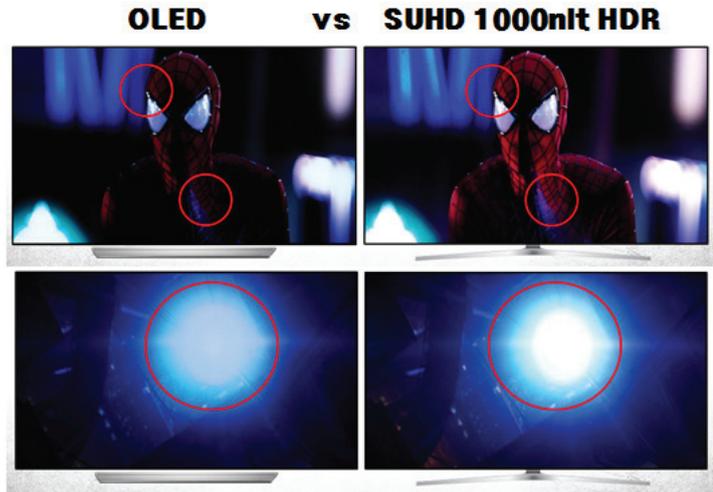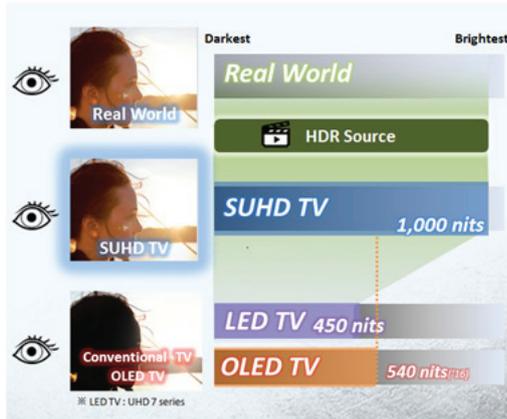


## 2-4-3. Smart Things

### ■ Smart Things

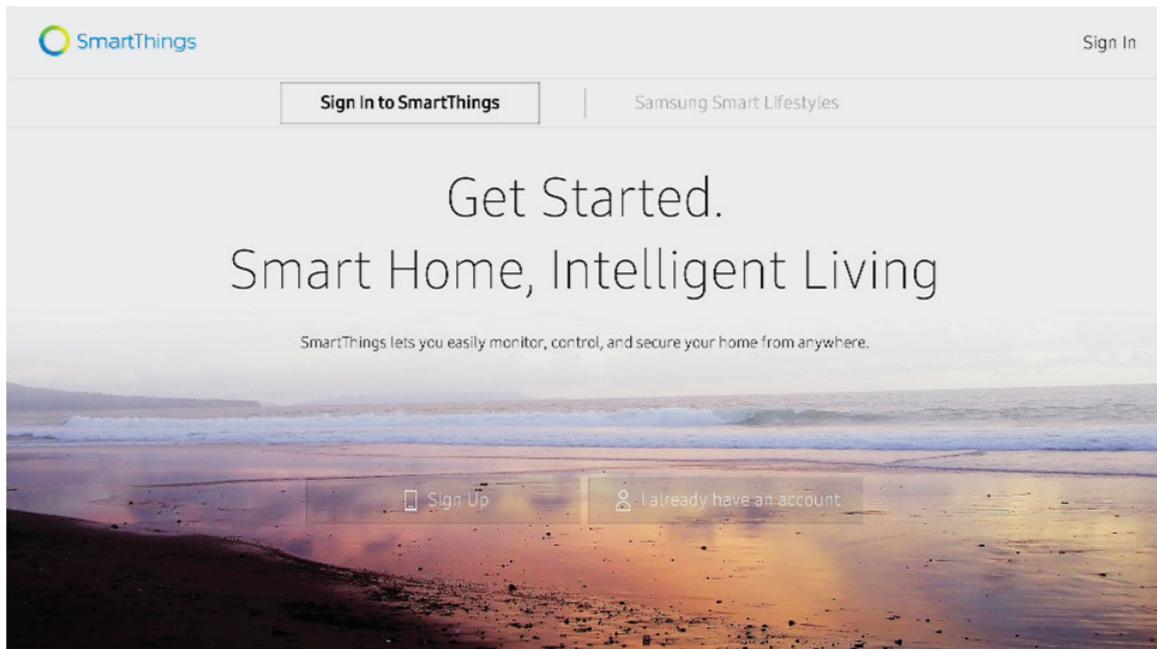

[Smart Things Sign in]

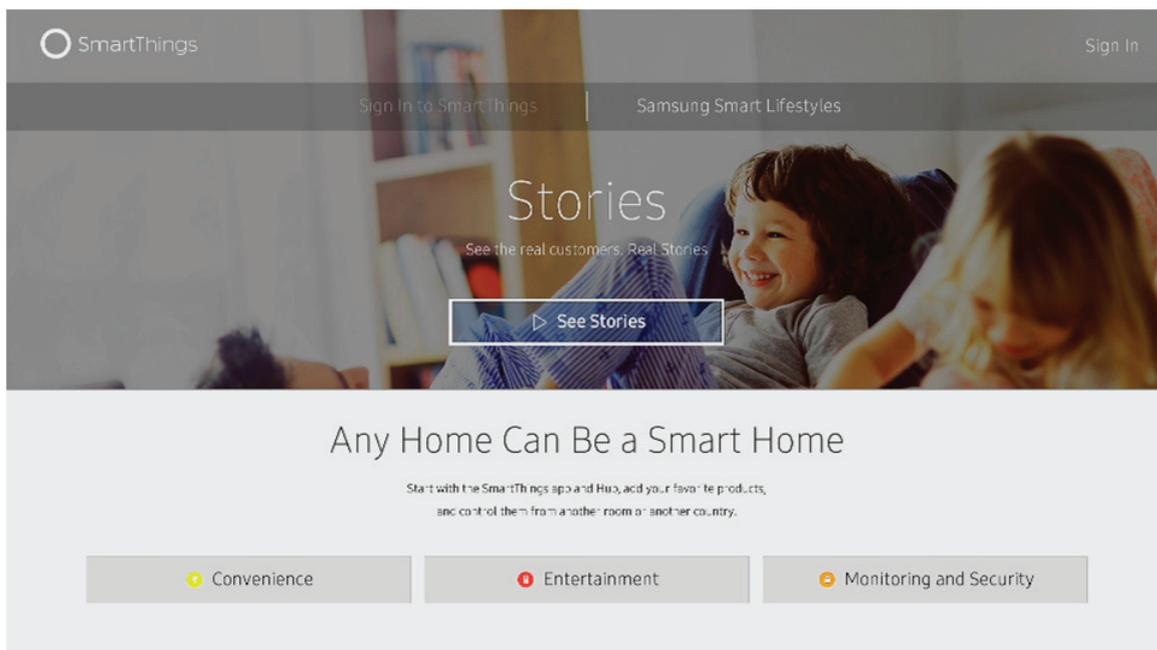

[Smart Things first screen]

#### NOTE



[Dongle]

- IoT Dongle required.


## 2-4-4. Viewing the Panel

### NOTE

- The image on your TV may differ from the image above depending on your model and geographical area.

### ■ Smart Hub

View descriptions of Smart Hub's basic functions.

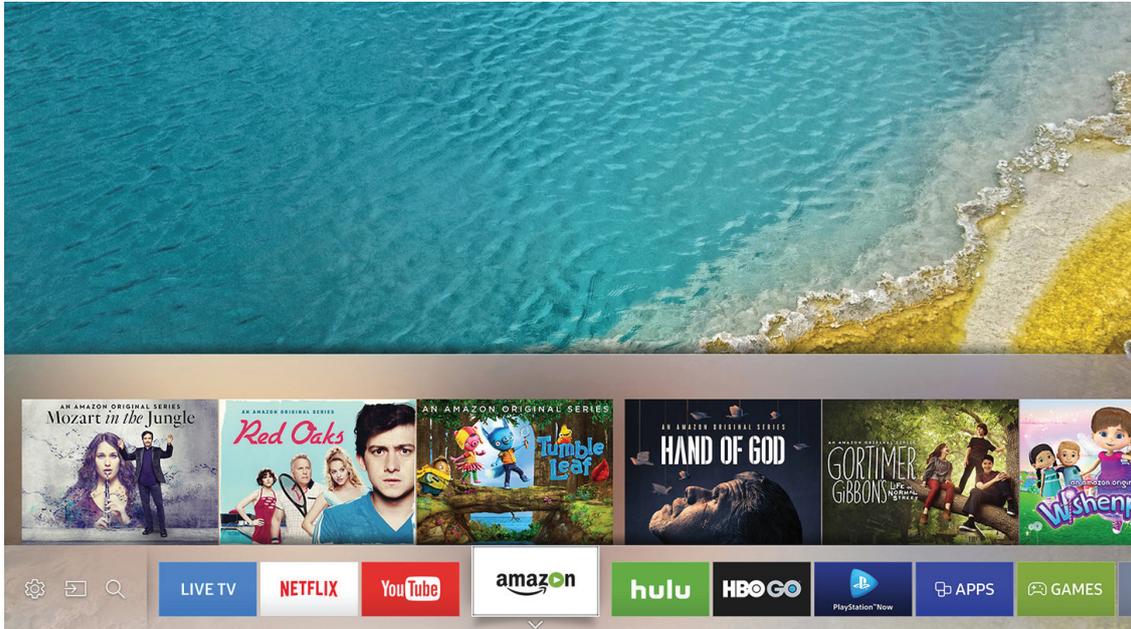


After pressing the  button on your remote control, you can surf the web and download apps with Smart Hub.

- Some of the **Smart Hub** services are paid services. To use a paid service, you must have an account with the service provider or a Samsung account. For more information, refer to "Using a Samsung account."
- To use Smart Hub, the TV must be connected to the Internet.
- Some **Smart Hub** features may not be available depending on the service provider, language, or region.
- Smart Hub service outages can be caused by disruptions in your Internet service.
- You can view the entire text of the **Terms & Policy** document by navigating to **Support** > **Terms & Policy**. If you want to stop using **Smart Hub**, you can cancel the agreement.

## ■ GAMES


Enjoy games provided with Smart Hub.

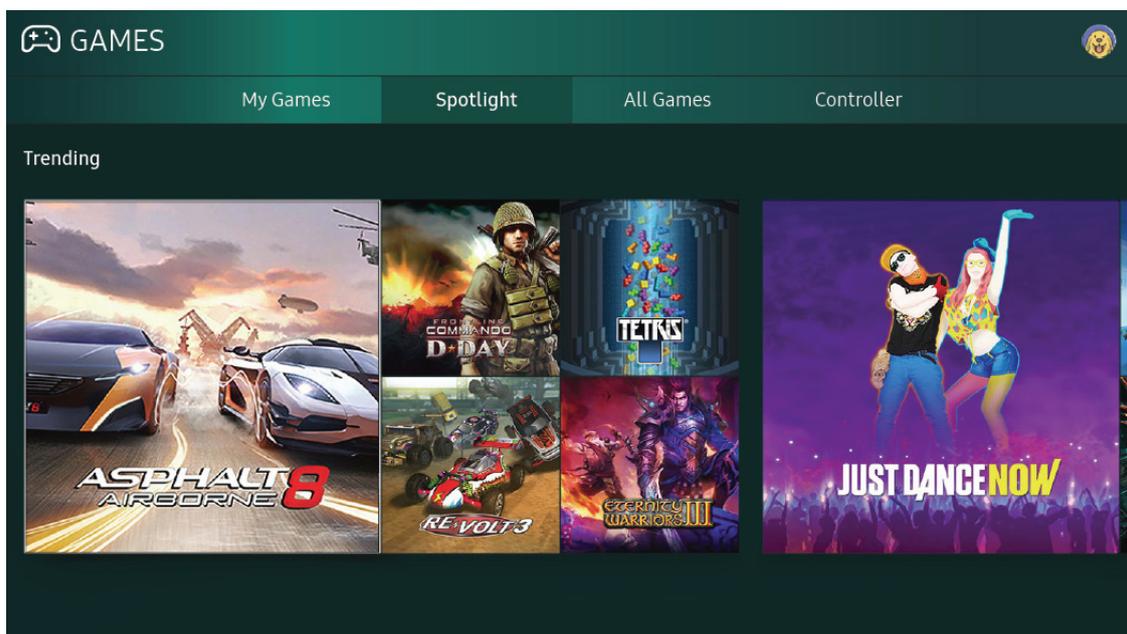

You can install or run games. The installed games are stored in My Games.

## ■ APPS

Download and run various apps from Smart Hub.

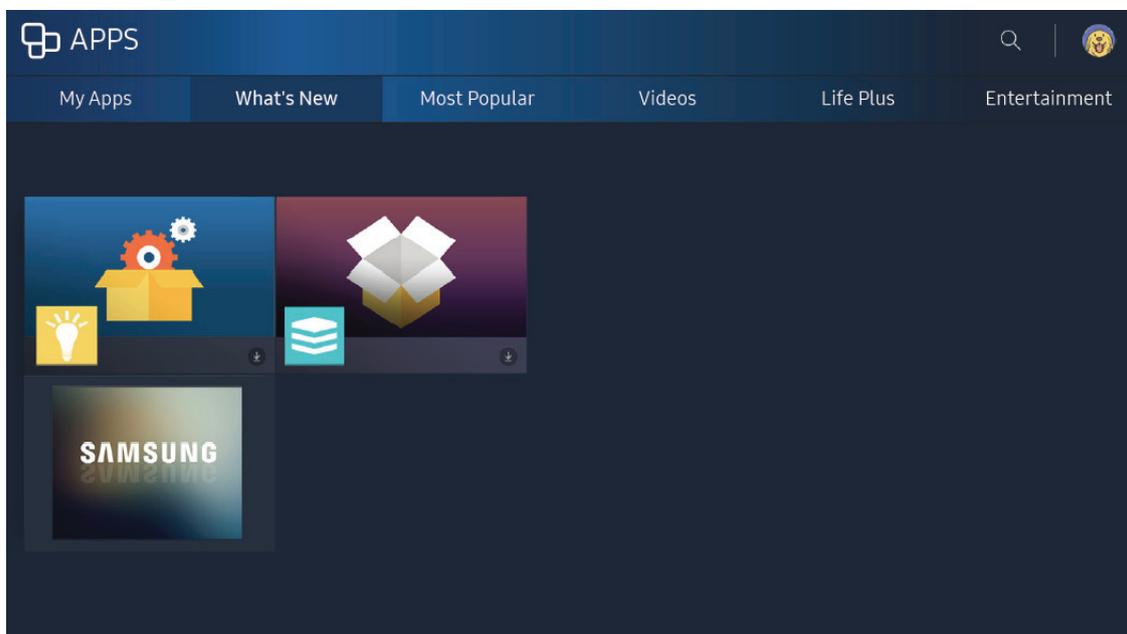


You can enjoy a wide range of content including news, sports, weather, and games by installing the corresponding apps on your TV.

- To use this feature, the TV must be connected to the Internet.
- When Smart Hub is launched for the first time, the default apps are automatically installed. The default apps may differ with the geographical area.

## ■ Pictures/Video/Music


Play media content stored on your TV, USB devices, smartphones, cameras, PCs, etc.

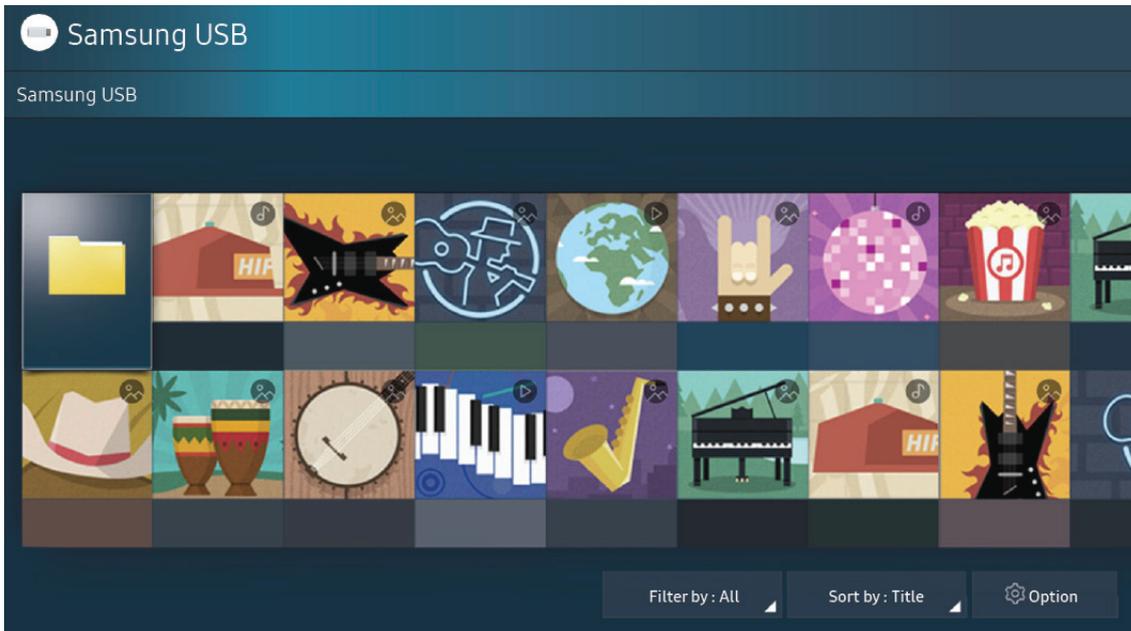

You can play media content saved on storage devices, such as USB devices, mobile devices, and cameras, on the TV.

- You cannot play media content if the content or the storage device is not supported by the TV. For more information, refer to "Read Before Playing Photo, Video, or Music Files."
- Backup important files before connecting a USB device. Samsung is not responsible for damaged or lost files.
- To connect the TV to a computer, refer to "Connecting a Computer."
- To connect the TV to a mobile device, refer to "Connecting a Mobile Device."

## 2-4-5. The Samsung Smart Control

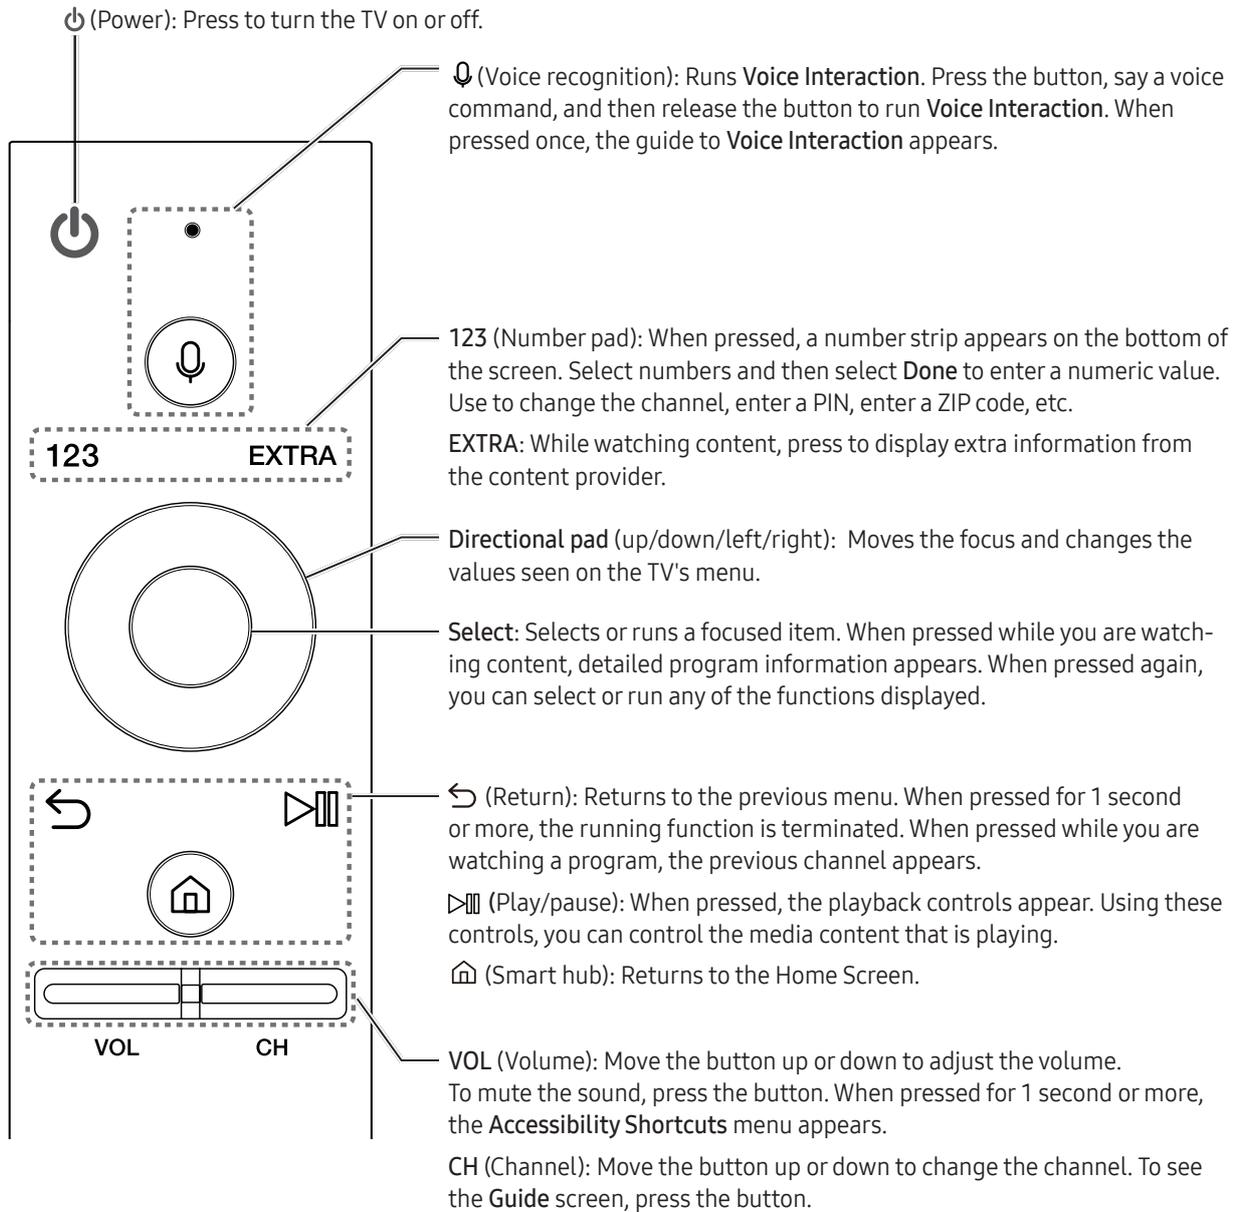

### ■ Pairing the TV to the Samsung Smart Control



When you turn on the TV for the first time, the Samsung Smart Control pairs to the TV automatically. If the Samsung Smart Control does not pair to the TV automatically, point it at the remote control sensor of the TV, and then press and hold the buttons labeled ❶ and ❶ in the figure on the left simultaneously for 3 seconds or more.


## 2-4-6. Using Voice Interaction

Access and run certain menu options and functions using voice commands.

### ■ Running Voice Interaction

Press and hold the  button, say a command, and then release the  button. The TV recognizes the voice command.

- If the command is not recognized, try again with correct pronunciation.

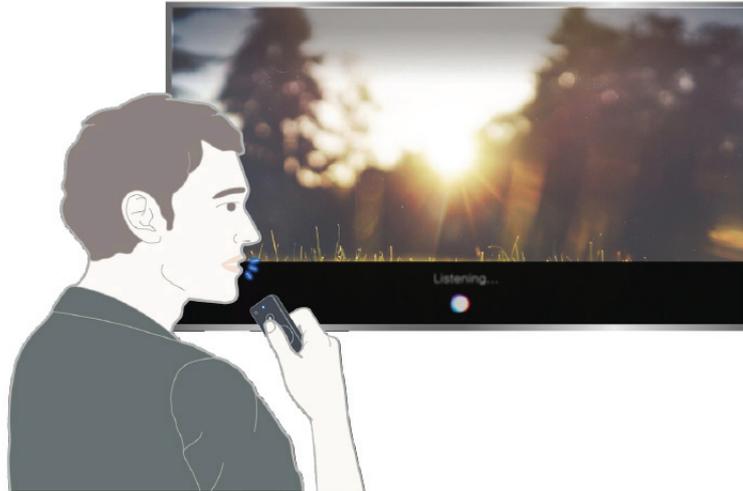

## 2-4-7. Supported Resolutions for UHD Input Signals

Check the supported resolution for UHD input signals.

- Resolution: 3840 x 2160p, 4096 x 2160p



### NOTE

An HDMI connection with **HDMI UHD Color** set to **Off** supports up to UHD 50P/60P 4:2:0 input signals, while an HDMI connection with **HDMI UHD Color** set to **On** supports up to UHD 50P/60P 4:4:4 and 4:2:2 input signals.

### ■ If HDMI UHD Color is set to Off

Frame rate (fps)	Color Depth / Chroma Sampling	RGB 4:4:4	YCbCr 4:4:4	YCbCr 4:2:2	YCbCr 4:2:0
50 / 60	8 bit	-	-	-	○

### ■ If HDMI UHD Color is set to On

Frame rate (fps)	Color Depth / Chroma Sampling	RGB 4:4:4	YCbCr 4:4:4	YCbCr 4:2:2	YCbCr 4:2:0
50 / 60	8 bit	○	○	○	○
	10 bit	-	-	○	○
	12 bit	-	-	○	○



### NOTE

For the SUHD models, each HDMI connection can be individually optimized for **HDMI UHD Color**. For the UHD models, make sure to connect to the HDMI IN 1 port of the TV.

## 2-4-8. Supported Formats

### ■ Supported external subtitles

Name	Format
MPEG-4 Timed text	.txt
SAMI	.smi
SubRip	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass
Powerdivx	.psb
SMPTE-TT Text	.xml

### ■ Supported internal subtitles

Name	Format
Xsub	AVI
SubStation Alpha	MKV
Advanced SubStation Alpha	MKV
SubRip	MKV
VobSub	MKV
MPEG-4 Timed text	MP4
TTML in smooth streaming	MP4
SMPTE-TT Text	MP4
SMPTE-TT PNG	MP4

### ■ Supported image formats and resolutions

File extension	Format	Resolution
*jpg *jpeg	JPEG	15360 x 8640
*png	PNG	4096 x 4096
*bmp	BMP	4096 x 4096
*mpo	MPO	15360 x 8640

## ■ Supported music formats and codecs

File extension	Format	Codec	Note
*.mp3	MPEG	MPEG1 Audio Layer 3	
*.m4a *.mpa *.aac	MPEG4	AAC	
*.flac	FLAC	FLAC	Supports up to 2 channels
*.ogg	OGG	Vorbis	Supports up to 2 channels
*.wma	WMA	WMA	Supports up to 10 Pro 5.1 channels. WMA lossless audio is not supported. Supports up to the M2 profile.
*.wav	wav	wav	
*.mid *.midi	midi	midi	Supports type 0 and type 1. Seek is not supported. Supports USB device only.
*.ape	ape	ape	
*.aif *.aiff	AIFF	AIFF	
*.m4a	ALAC	ALAC	

## ■ Supported video codecs

File format	Container	Video codecs	Resolution	Frame rate (fps)	Bitrate (Mbps)	Audio codecs	
*.avi *.mkv *.asf *.wmv *.mp4 *.mov *.3gp *.vro *.mpg *.mpeg *.ts *.tp *.trp *.mov *.flv *.vob *.svi *.m2ts *.mts *.divx	AVI MKV ASF MP4 3GP MOV FLV VRO VOB PS TS SVAF	H.264 BP/MP/HP	4096 x 2160	4096X2160: 30 3840X2160: 60	60	Dolby Digital LPCM ADPCM(IMA, MS) AAC HE-AAC WMA Dolby Digital Plus MPEG(MP3) DTS(Core, LBR) G.711(A-Law, $\mu$ -Law)	
		HEVC (H.265 - Main, Main10, Main4:2:2 10)		60	80		
		Motion JPEG		30	80		
		MVC	1920 x 1080	60	60		20
		DivX 3.11 / 4 / 5 / 6					
		MPEG4 SP/ASP					
		Window Media Video v9(VC1)					
		MPEG2					
		MPEG1					
		Microsoft MPEG-4 v1, v2, v3					
		Window Media Video v7(WMV1) ,v8(WMV2)			30		20
		H.263 Sorrenson					
		VP6					
*.webm	WebM	VP8	1920 x 1080	60	20	Vorbis	
		VP9	4096 x 2160	4096 x 2160: 30 3840 x 2160: 60	40		

### ■ Other Restrictions

- Codecs may not function properly if there is a problem with the content.
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is has an error, the Seek (Jump) function will not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the TV.
- HEVC codec is only available in MKV/MP4/TS containers.

### ■ Video decoders

- H.264 FHD is supported up to Level 4.1. FMO/ASO/RS are not supported.
- H.264 UHD is supported up to Level 5.1.
- HEVC FHD is supported up to Level 4.1, and HEVC UHD is supported up to Level 5.1.
- VC1 AP L4 is not supported.
- All video codecs excluding WMV v7, v8, MSMPEG4 v3, MVC, and VP6:
  - Below 1280x720: 60 frame max
  - Above 1280x720: 30 frame max
- GMC 2 or above is not supported.
- Supports SVAFF Top/Bottom, Side by Side, and Left/Right view sequence type (2ES) only.
- Supports BD MVC specs only.

### ■ Audio decoders

- WMA 10 Pro supports up to 5.1 channels. Supports up to the M2 profile. WMA lossless audio is not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 2 channels.
- Dolby Digital Plus is supported for up to 5.1 channels.
- The DTS LBR codec is only available for MKV / MP4 /TS containers.
- The supported sample rates are 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 KHz, and differ by the codec.

### 3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LED TV.





**CAUTION**





1. Disconnect the LED TV from the power source before disassembly.
2. Follow these directions carefully.
  - Use the Samsung Service tool to disassemble the cabinet.
    - Recommend to use the Samsung Service tool.
  - Recommended Torque for Cabinet/Stand screws : 22.0 ~ 26.5lbf
    - A strength of Torque can be changed depending on the situation.


Required Jigs & Tools		
	<ul style="list-style-type: none"> <li>• Open Jig Tool</li> </ul>	BN81-12884A
	<ul style="list-style-type: none"> <li>• Protective Cushion</li> </ul>	BN81- 10739A

#### 3-1. Disassembly and Reassembly



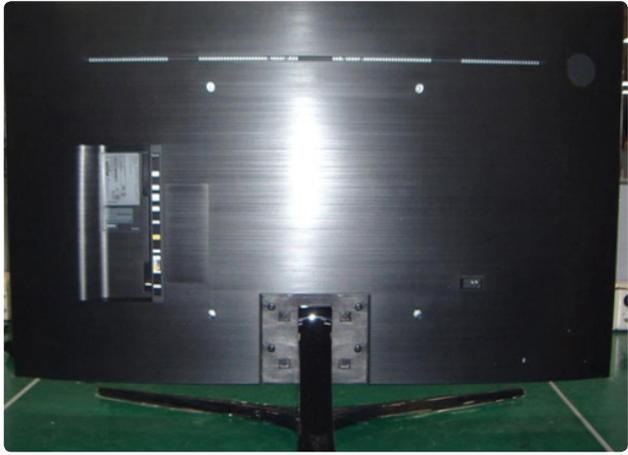
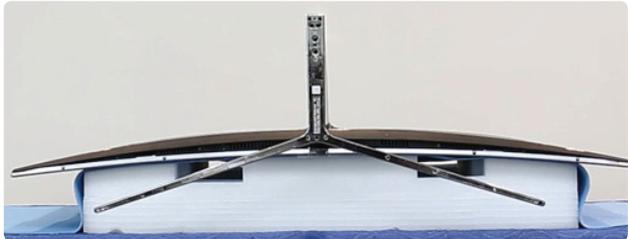
Description & Screws	Picture Description
<p><b>1</b> Carefully position the TV so that the screen is facing downwards. Make sure to place the TV upon a soft cushion or any material that will prevent damage to the screen.</p> <ul style="list-style-type: none"> <li>• Place TV face down on the Protective Cushion.</li> </ul>	 



3. Disassembly and Reassemble

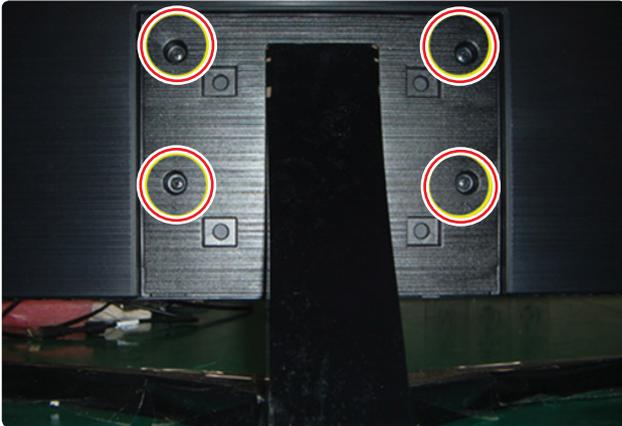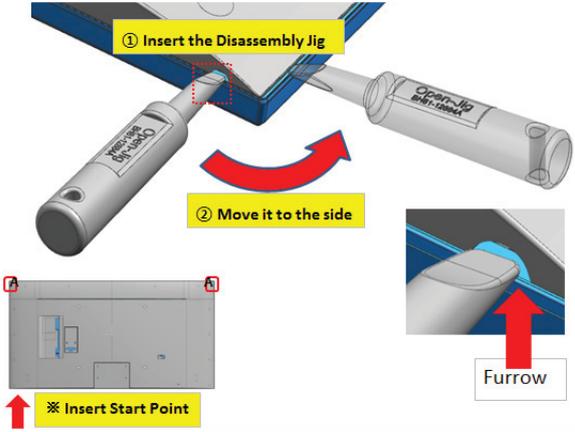
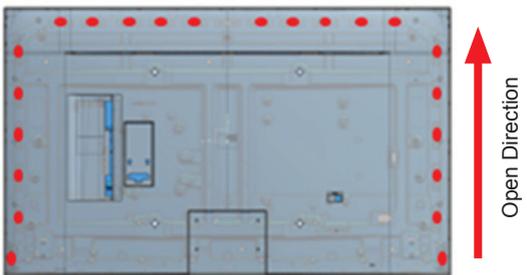
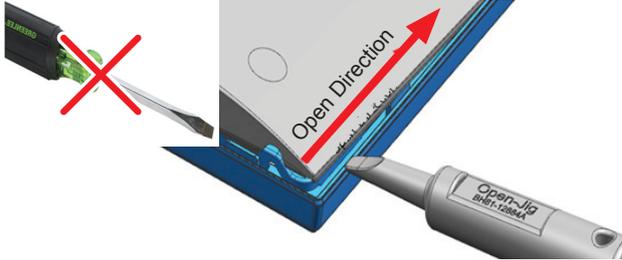
Description & Screws	Picture Description
<p><b>2</b> Remove the screws connecting the ASSY GUIDE P-STAND to the TV.</p> <p>Then carefully remove the ASSY STAND.</p> <ul style="list-style-type: none"> <li>• 40" : 4 EA</li> <li>• 43" : 4 EA</li> <li>• 49" : 4 EA</li> <li>• 55" : 4 EA</li> <li>• 65" : 4 EA</li> </ul> <p><b>Screws</b></p> <p> <b>6003-001334</b> SCREW-TAPTYPE : M4 x L14, ZPC(BLK)</p>	
<p><b>3</b> Remove the ASSY COVER P-REAR.</p> <ul style="list-style-type: none"> <li>• Insert Open Jig in a Disassembly furrow to Open the furrow. And Move Open Jig to the side.</li> </ul> <p>• Continue moving the disassembly Jig to the 'Open Direction' to lift 'Hook'</p> <div data-bbox="255 1256 778 1554" style="background-color: #f0f0f0; padding: 5px;"> <p><b>! CAUTION</b></p> <ul style="list-style-type: none"> <li>• The Open Jig and the Cushion must be used otherwise panel may be damaged.</li> <li>• Never use a screddriver or any other objects other than the Open Jig to remove the back cover.</li> <li>• Do not use the Open Jig on the bottom side of screen.</li> </ul> </div>	  <p>&lt;Red Points are Hook Location&gt;</p>  


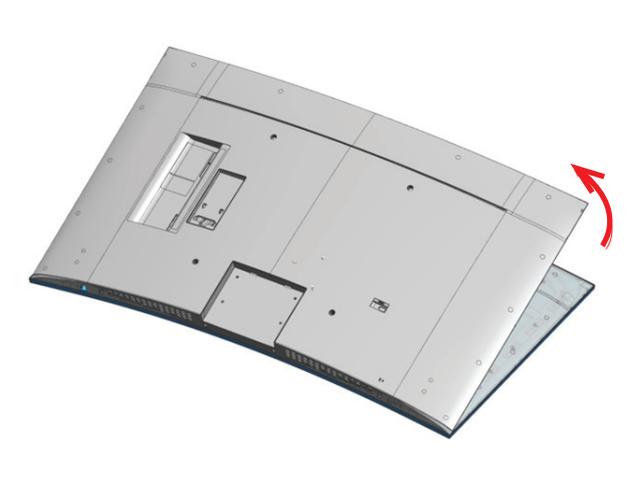
Description & Screws	Picture Description
<ul style="list-style-type: none"> <li>Disassemble all Hooks of Cover Rear along the three side.</li> <li>Lift top side then pull back to remove the back cover.</li> <li>Panel Back Side View</li> </ul>	  
<p><b>4</b> Remove the Electric tapes, Remove them.</p> <p> <b>NOTE</b></p> <ul style="list-style-type: none"> <li>When assembling the TV, the electric tapes must be applied on the same locations. Please remember to take a picture of where the tapes were first applied.</li> <li>When assembling the Boards, please make sure All Board <b>Mounting Clips</b> are securely inserted.</li> </ul>	 <p> Caution</p> <p> Dressing</p> <p> Mounting Clip</p>

3. Disassembly and Reassemble

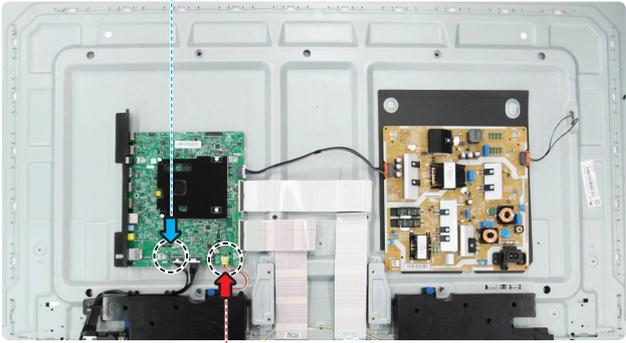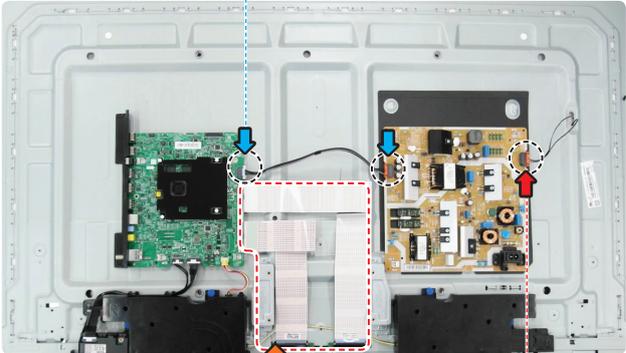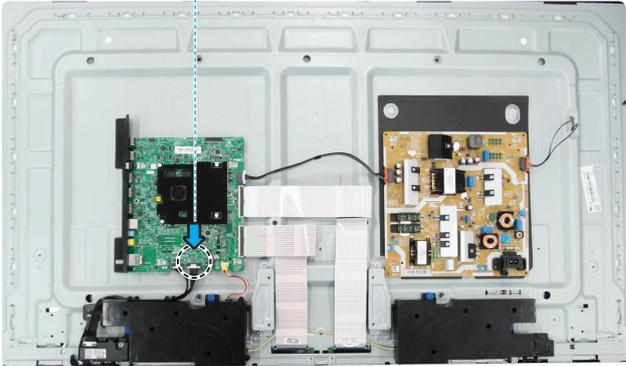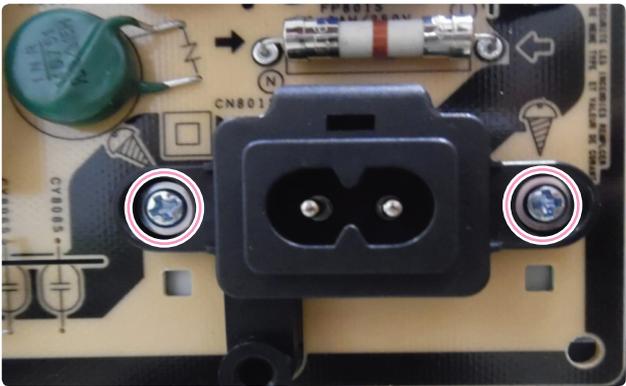Description & Screws	Picture Description
<p><b>5</b> Remove the All Cables.</p> <ul style="list-style-type: none"> <li>•  ASSY BOARD P-FUNCTION TACT Cable</li> <li>•  ASSY SPEAKER P-FRONT (R/L) Cable</li> </ul> <ul style="list-style-type: none"> <li>•  Power Cable</li> <li>•  BLU Cable</li> <li>•  USI-T Cables</li> </ul> <ul style="list-style-type: none"> <li>•  NETWORK-WLAN CLIENT Cable</li> </ul>	<p>ASSY BOARD P-FUNCTION TACT Cable</p>  <p>ASSY SPEAKER P-FRONT (R/L) Cable</p> <p>Power Cable</p>  <p>USI-T Cables      BLU Cable</p> <p>NETWORK-WLAN CLIENT Cable</p> 
<p><b>6</b> Remove the screws from DC VSS-PD BOARD.</p> <p><b>Screws</b></p> <p> <b>6001-003016</b> SCREW-MACHINE : M3 x L5, ZPC(WHT)</p>	

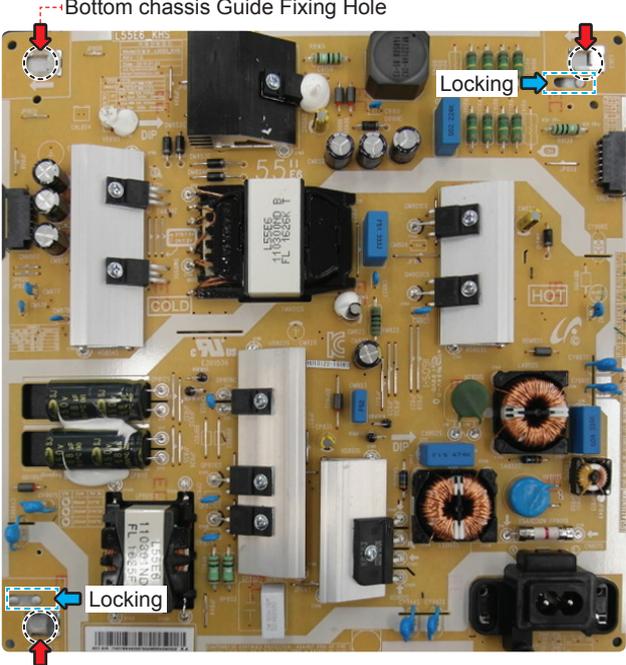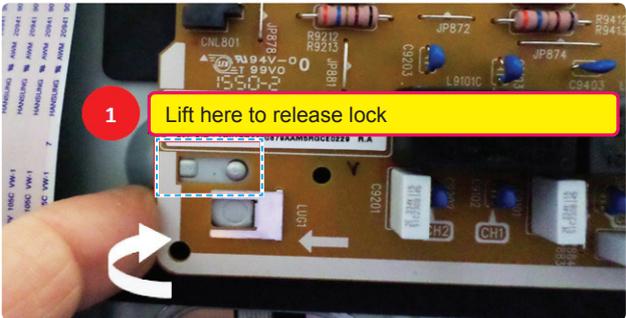Description & Screws	Picture Description
<p><b>7</b> Remove the DC VSS-PD BOARD.</p> <ul style="list-style-type: none"> <li>Use both hands to hold the <b>SMPS</b> and gently lift up at point indicated by the arrow to release the lock.</li> </ul> <ul style="list-style-type: none"> <li>Lift here to release lock.</li> </ul> <ul style="list-style-type: none"> <li>Slide the board to the Right side to release the board.</li> </ul>	 <p>Bottom chassis Guide Fixing Hole</p> <p>Locking</p> <p>Locking</p>  <p>1 Lift here to release lock</p>  <p>2 Side to the right to release the board</p>  <p>OK</p> <p>NG</p>

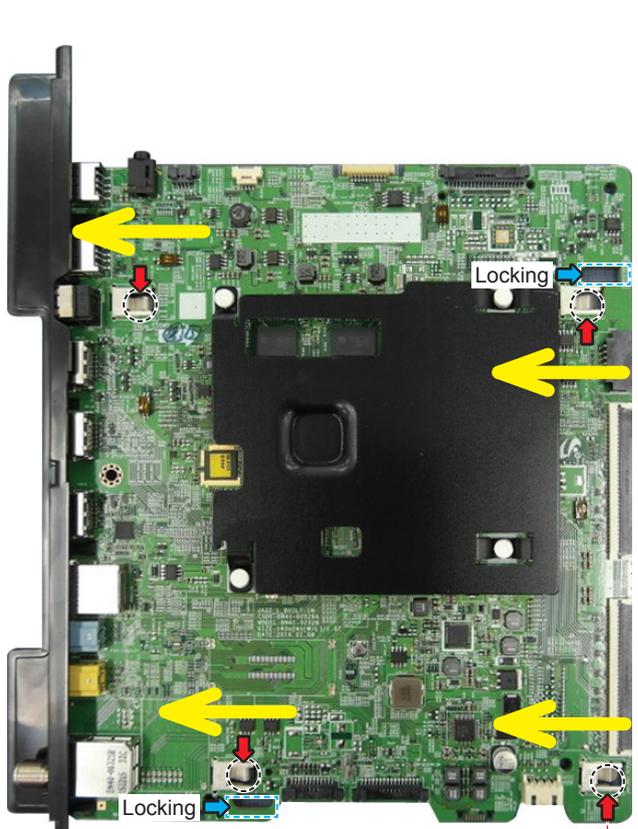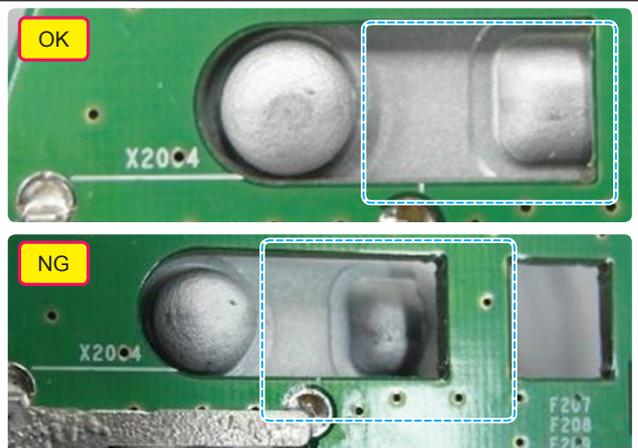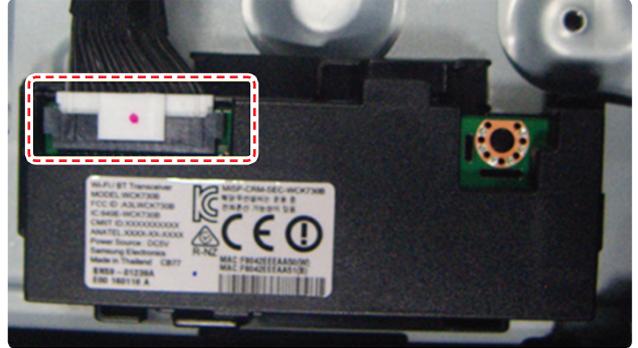Description & Screws	Picture Description
<p><b>8</b> Remove the ASSY PCB MAIN BOARD.</p> <ul style="list-style-type: none"> <li>Gently lift up to release the lock (Locking →).</li> <li>Use both hands to hold (Bottom chassis Guide Fixing Hole →) the board and slide to the left to release the board.</li> </ul> <p><b>NOTE</b></p> <p>When installing the ASSY PCB MAIN BOARD, verify the board is properly positioned in all 4 mounting slots.</p> <p>• Locking →</p>	 <p>The main board disassembly diagram shows a green PCB with a black heat sink. Four locking mechanisms are indicated by blue arrows and labeled 'Locking'. Four yellow arrows point to the bottom chassis guide fixing holes. A red arrow points to the bottom chassis guide fixing hole.</p> <p>Bottom chassis Guide Fixing Hole →</p>  <p>The OK and NG examples show the correct and incorrect placement of the bottom chassis guide fixing hole. The OK example shows the hole correctly aligned with the board. The NG example shows the hole misaligned.</p>
<p><b>9</b> Remove the NETWORK-WLAN CLIENT(BT/WIFI unit).</p>	 <p>The Network-WLAN Client unit is shown with a white connector and a red dot. The unit is labeled with technical specifications and a barcode.</p>

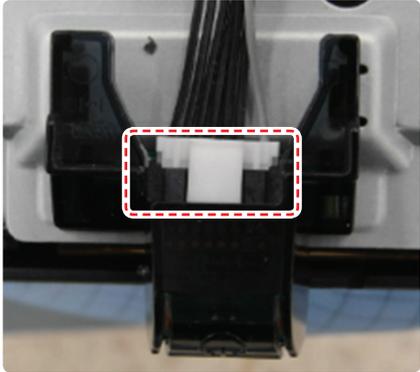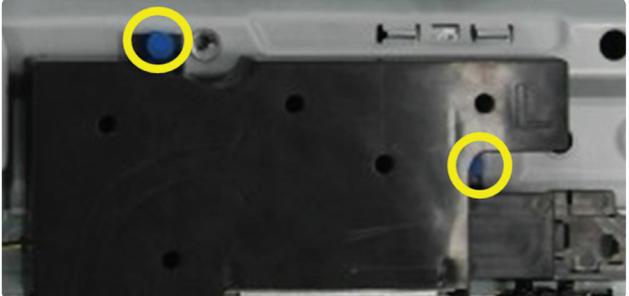Description & Screws	Picture Description
<b>10</b> Remove the ASSY BOARD P-FUNCTION TACT(Function/IR unit).	
<b>11</b> Remove the ASSY SPEAKER P-FRONT (R/L) on both sides.	
<b>12</b> Completed the disassembly.	

 **NOTE**

Reassembly procedures are in the reverse order of disassembly procedures.

## 4. Troubleshooting

### 4-1. Previous Check

#### ■ Check list for initial operation


1. Check the various cable connections first.
  - Check to see if there is a burnt or damaged cable.
  - Check to see if there is a disconnected or loose cable connection.
  - Check to see if the cables are connected according to the connection diagram.
2. Check the power input to the Main Board.
3. How to distinguish if the problem is caused by Main Board.
  - No Video

<b>Symptom</b>	If the problem is No Video but BLU is on and Indication LED is blinking repeatedly and faster than normal booting.
<b>Check Points</b>	• Replace the Main Board.

- Distorted Picture :

<b>Check Points</b>	• Check the inner patterns.
---------------------	-----------------------------

#### ■ Inner View

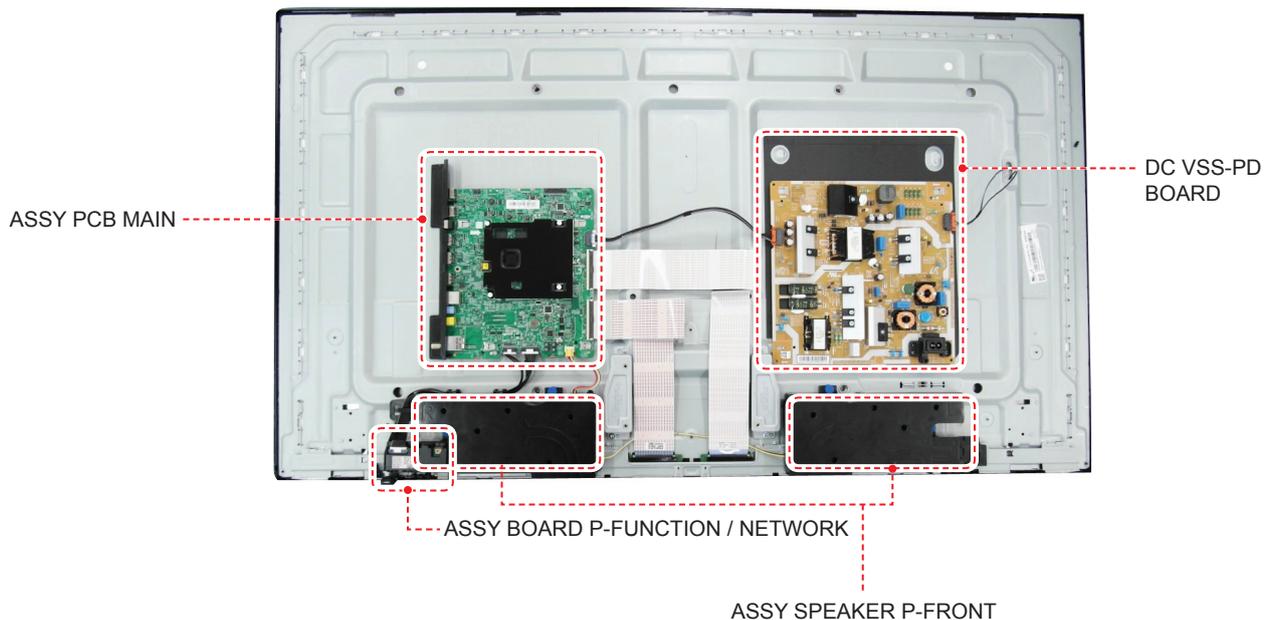

## 4-2. How to Check Fault Symptom

### 4-2-1. Power

#### ■ TV POWER STANDBY

##### 1. TV in Standby

###### Standby LED Indicator

- If Not Lit:
  - ✓ AC 120Vac Line
- If missing:
  - ✓ 120Vac Source and Power Cord
- If OK:
  - ✓ Resistance on SMPS **Fuse** after first removing AC power cord.

##### 2. If fuses are open replace SMPS.

- If fuses are OK:
  - ✓ **Standby: A13V** (Always On) to Main Board. Should all be approx. 9 **VDC**
- If any missing remove the SMPS connector to Main Board .
  - ✓ Standby A13V again for 9VDC.
    - If OK replace **Main Board**.
    - If still missing replace **SMPS**.

## ■ FUNCTION/IR Control



<Function/IR>

Main Board - CN1101 (FUNCTION/IR)			
1	IR 3.3Vdc to 2.5Vdc (Effective DC)	2	GND
3	A3.3V_PW	4	AMP_SCL_I2C 3.3Vdc (effective DC)
5	AMP_SDA_I2C 3.3 Vdc (effective DC)	6	KEY_INPUT1 (1.8dc to 0V with PWR On command)
7	KEY_INPUT2 (1.8Vdc to command)	8	LED_STB_OUT 1.7Vdc STBY
9	N/C	10	N/C
11	N/C	12	N/C

- TV in Standby

### LED Status

- If **LED** is **OFF**

- ✓ LED 1.7Vdc (pin 8) and VCC for 3.3Vdc

- If missing suspect **Function Assy/Cable Assy/Main Assy**.

- If **LED** is **ON**

- ✓ Switch Operation activates on screen display.

### If missing:


1. Check the STBY voltage from SMPS to Main Board.
  - ✓ If STBY is OK suspect **Main Board**.
2. Check Jog Shuttle 5 SW Operation (**Key 1 & Key 2**) for command changes. If incorrect suspect a **stuck Jog switch** which also holds data to Main preventing operation.
3. Check **SDA, SCL** for effective 3.3Vdc (after power on).
4. Check **IR** with Standard Remote command changes. (3.3V to 2.5V effective DC)

## ■ SMPS POWER

### SMPS Front

CNL802							
1	2+	2	NC	3	NC	4	2-
5	NC	6	NC	7	NC	8	NC
9	1+	10	NC	11	NC	12	1-
13	NC	14	NC	15	IF2	16	IF1

CNM803					
1	Fail Count	2	ANA_DIM	3	A13V
4	OD_ON/OFF	5	A13V	6	BLU_PWM
7	A13V	8	POWER_On/Off	9	GND
10	GND	11	GND	12	GND

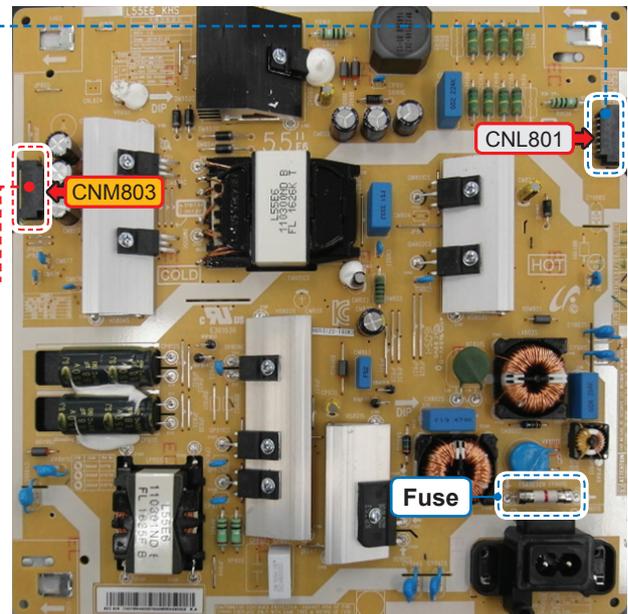

#### 1. Power TV On.

- ✓ **PS\_ON**. 2Vdc (when off) changes to 3.3Vdc (on)
  - PS\_On stays active for approx 20 sec. after TV is placed in Standby. It also remains ON for approx 2 min. after initial AC Power Cord is connected, even though standby indicator is lit.

#### 2. if voltage error or no change.

- ✓ Jog Function Control Test

#### 3. If OK replace Main Board.

- ✓ All **A13V** supplies to full voltage level **12.7VDC**.

#### 4. If any wrong voltage, remove the SMPS connector to Main Board.

- ✓ A13V again for 12.7VDC.

#### 5. If OK replace Main Board.

#### 6. If still wrong voltage replace SMPS.

- ✓ **OD** (Over Voltage Detect) : 3.3Vdc (Operating Normal)

#### 7. If 0V or changing, an SMPS or Panel error exists.

#### 8. Perform Backlight Test.

- ✓ **BLU\_PWM** 0V- Off to approx 1 - 3.3 V pending Backlight dim level.

- ✓ If missing/error replace **Main Board**.

## ■ BACKLIGHTS

### Simplified : 40" ~ 55"

#### 1. Activate Backlights Test

- Disconnect Lead Cable from Main Board to Power Supply. **(CN202)**
- ✓ TV Screen for active backlight LEDs.

#### 2. If NO BACKLIGHTS

- ✓ Plus (+) & Minus (-) pin voltages on the Panel Connector.
  - If no pin voltages replace SMPS.
  - If voltages exist but no backlight.
- ✓ The highest pin voltage (BL Drive Supply).
  - Remove Panel connector and measure again to compare.
  - If the voltage was high and stays the same high reading a string of Panel LEDs are open.
    - Replace the Panel.
  - If the **voltage was low** and remains low the **SMPS** is defective.
  - If the voltage was low and goes high a string of panel LEDs are shorted replace the **Panel**.

#### 3. BACK LIGHT DIMMING PROBLEMS

- Go to Menu/Picture/Expert/Backlight and vary level (0 - 20).
- If no backlight changes are observed:
  - ✓ Panel Connector pin voltages and BLU\_PWM voltages **(CNM801)** while changing backlight level.
- If Panel voltages don't change, and BLU\_PWM changes, replace **SMPS**.
- If BLU\_PWM doesn't change replace **Main Board/T-Con Board**.

### Simplified : 65"

#### 1. Activate Backlights Test

- Disconnect Lead Cable from Main Board to Power Supply. **(CN202)**
- ✓ TV Screen for active backlight LEDs.

#### 2. If NO BACKLIGHTS

- ✓ Minus (Control) pins & Plus (Supply) pins voltages on the Panel Connector.
  - If no pin voltages replace **SMPS**.

#### 3. If BACKLIGHTS ON BUT PANEL SECTION(S) OFF (for SMPS wired in parallel)

- ✓ The Supply Drive + pins should each measure the same voltages. And the - pins should each measure the same voltages. This verifies the SMPS is wired with LED Strings in parallel and operating correctly.
  - If a Minus (-) pin measures low (near 0 volts), a string(s) of LEDs are likely open.
    - **Replace Panel.**
  - If a plus pins measures higher than the others, a string of LEDs is also likely opened.
    - **Replace Panel.**
  - Can remove Panel connector and verify same open backlight voltage condition.
    - **Replace Panel.**
  - If a Plus pin measures low: Remove the Panel connector, if it stays low Replace SMPS. If it goes high like the other plus pins, the **Replace Panel**.

## 4-2-2. Video

### ■ MAIN / T-CON Board

#### 1. Main Board Section



Video Operation : **Generated on Main Section.**

#### 1. If OK:

- ✓ Source & Input Cables.
- ✓ Other inputs.
- ✓ One Connect Cable/Box.

#### 2. If Noisy:

- ✓ T-CON Section Test Patterns.

#### 2. PRE FRC of T-CON Section



Video Operation : **Generated at Pre FRC, of T-CON Section.**

#### 1. If OK:

- ✓ Main Section.

#### 2. If Noisy:

- ✓ Post FRC Pattern.

#### 3. POST FRC of T-CON Section



Video Operation : **Generated at Post FRC of T-CON Section.**

#### 1. If OK:

- ✓ Main / T-CON Board (defective).

#### 2. If Noisy:

- ✓ Mute - 369 - Mute.

---

#### 4. T-CON Section



#### NOTE

May not be available for Larger models over 70 inches.

Video Operation : **Generated at T-CON Section.**

**1. If OK:**

- ✓ Main / T-CON Board (defective).

**2. If Noisy:**

- ✓ Main / T-CON Board.

■ **PANEL**




**1. If Noisy:**

- ✓ Panel (defective).

## 4-2-3. Audio

### ■ AUDIO

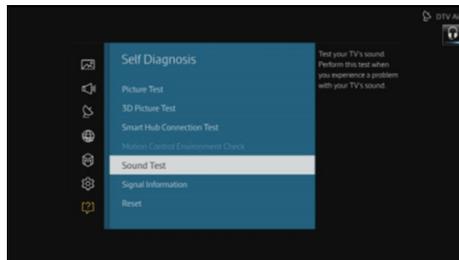

#### Source

- **No TV Sound**
  - ✓ Menu → Audio → Speaker Settings set to **TV Speaker**
- **Noisy / Distorted TV Audio**
  - ✓ Customer Menu → Support → **Sound Test**
- **If **Sound Test** FAILS : (Missing / Noisy Audio)**
  - ✓ Speakers (compare resistance/quality)
    - Compare audio level out to speakers with multi meter.
  - ✓ Replace defective Speakers or Main Board or Cable.
- **IF **Sound Test** OK :**
  - ✓ Audio Source & External Cables.
  - ✓ With external Audio Generator (device or App).
  - ✓ Other Inputs.
  - ✓ One Connect Mini.
- **Optical Digital Out Errors**
  - ✓ Red light from Optical Digital Out.
    - If missing replace One Connect Mini
- **No HDMI Audio**
  - ✓ Source / HDMI Cable & One Connect Mini Connectors.
    - Swap with other HDMI Inputs/Sources.
    - Perform **EDID Write** in Factory Mode (Can restore missing HDMI Audio).
  - ✓ Bulletins and Latest firmware on TV.
    - If not restored replace One Connect Mini/Main.
    - Check Audio Format PCM/Dolby based on external Receiver.
- **ARC Issues**
  - ✓ HDMI Cable is input to the ARC Designated HDMI port.
  - ✓ ARC (HDMI Control) is enabled on the external Receiver.
- **Bluetooth Audio "**Sound Share**" Connection Issues**
  - ✓ Sound Bar is in TV Mode.
    - To Connect, Press & Hold Play Button until Sound Bar pairing mode begins.

### 4-2-4. Network




#### ■ TV to Router "Failure"



- **Wired & Wireless MAC Address** in Customer Support Menu.
  - ✓ **No Wired MAC Address:** Replace Main Board.
  - ✓ **No Wireless MAC Address:** Module cabling & voltages from Main Board.
  - ✓ If operating voltages are OK but signal missing.
    - Replace WiFi Module (WiFi/Bluetooth Module).
- Proper **security passcode**
  - ✓ Check Wi-Fi signal strength at TV (use WiFi Analyzer or similar App).
    - Try another source (Hot spot or Test Router).
  - ✓ Check related Bulletins.
  - ✓ Check **Factory Mode** → **SVC** → **Info** → **WiFi Error Count** (replace module for high error counts).

#### ■ Router to Network "Failure"

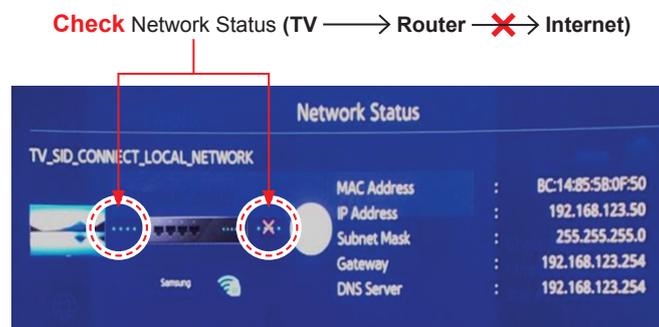

- Instruct the customer the TV has proper connection to the router and is likely OK.
  - ✓ Check other devices using network are OK. If they test OK this does not mean the TV should be working.
- Try another source (Hotspot) to test/show TV Network operation.

## 4-2-5. Smart Hub

Go to [Menu](#) > [Support](#) > [Self Diagnosis](#) > [Smart Hub Connection Test](#)



### 1. Network / Gateway

- **If it Fails:**
  - ✓ TV to Router Connection Test in "[Network Trouble shooting](#)"

### 2. DNS Test

- **If it Fails:**
  - ✓ DNS setting in "[Network Settings](#)"
- **If DNS is set manually:**
  - ✓ Settings are correct (may be set to 8.8.8.8 to prevent Netflix issues)
- **If it still fails:**
  - ✓ DNS Test with setting to Auto Mode
- If it fails both Manual & Auto problem is ISP or Router.

### 3. ISP Blocking

- **If it Fails:**
  - ✓ Internet Service Provider is Active.
  - ✓ With DNS setting at 8888.
  - ✓ With Hot Spot.

### 4. Samsung Server Test

- **If it Fails:**
  - ✓ Network Status.
- **If OK:**
  - ✓ Reset Smart Hub.
  - ✓ Terms of Agreement are accepted.

### 5. Samsung Apps

- **If it Fails:**
  - ✓ Reset Smart Hub.
  - ✓ Samsung Apps load correctly.
  - ✓ Perform "[Apps Reset](#)" in Factory Mode.
  - ✓ Go to Smart Hub and complete Terms of Agreement and set up information.
  - ✓ Samsung Apps load correctly.
  - ✓ Before selecting an App, allow Apps to load or failure wilre-occur.

#### 4. Troubleshooting

---

##### **For Netflix Operation/Connection Issues:**

- Check Certificate & Netflix ESN Status in Factory Mode.
  - If Certificate and ESN exists, "**CO**", "**Nfo**", change the **DNS** to **8.8.8.8**
  - If Certificate is missing, "**C**/" replace the TV's Main Board.
  - If ESN number is missing: **NF**/ do not replace the Main Board.
    - Reset TV Clock and check for correct Time & Date. Netflix relies on correct settings.
    - Reset Smart Hub. / Reset Apps In Factory Mode.

##### **For Streaming Issues:**

- Go to TV Web Browser / Go to speedof.me / testmy.net
  - ✓ **Check Speed** for at least 5 Mbps(HD streaming) / 25 Mbps (4K Streaming).
  - ✓ **Check Latency** for less than 50ms.


### 4-2-6. Bluetooth / WiFi Module



BT / WIFI			
1	BT_NRESET	2	BT_POWER_DET
3	BT_WAKE	4	-
5	BT_D-_USB	6	BT_D+_USB
7	-	8	BT_WELCOME
9	WIFI_PHY_ON	10	-
11	WIFI_D+_USB	12	WIFI_D-_USB
13	-	14	WIFI_5V
15	WIFI_WOL	16	WIFI_NRESET


Pins	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
<b>Standby</b>	3.3 Vdc	0	3.3 Vdc	NC	0	0	0	0V	0V	0	3 Vdc	0	0	5 Vdc	3.3 Vdc	3.3 Vdc
<b>Power ON</b>	3.3 Vdc	3.3 Vdc	3.3 Vdc		0.7V eff.dc BT Sig (DM) 4V p-p	2.5V eff.dc BT Sig (DM) 4V p-p	0	0V	3.3 Vdc	0	2.5V eff.dc WIFI Sig (DP) 0.5V p-p	2.5V eff.dc WIFI Sig (DM) 0.5V p-p	0	5 Vdc	3.3 Vdc	3.3 Vdc

Go to [Menu](#) > [Support](#) > [Contact Samsung](#)

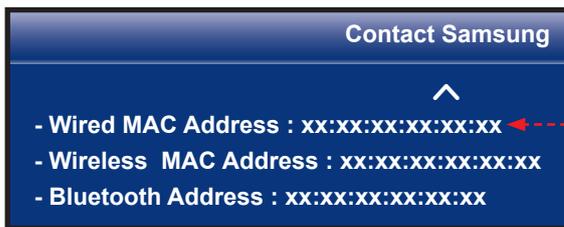

Missing or Error : Replace **Main Board**.

- If **Bluetooth Address** or **Wireless MAC Address** are missing or errors exist.
- BT & Wi-Fi Connector Voltages.
  - If Voltages are OK but no BT or Wi-Fi Signals voltage(s), replace defective Module.

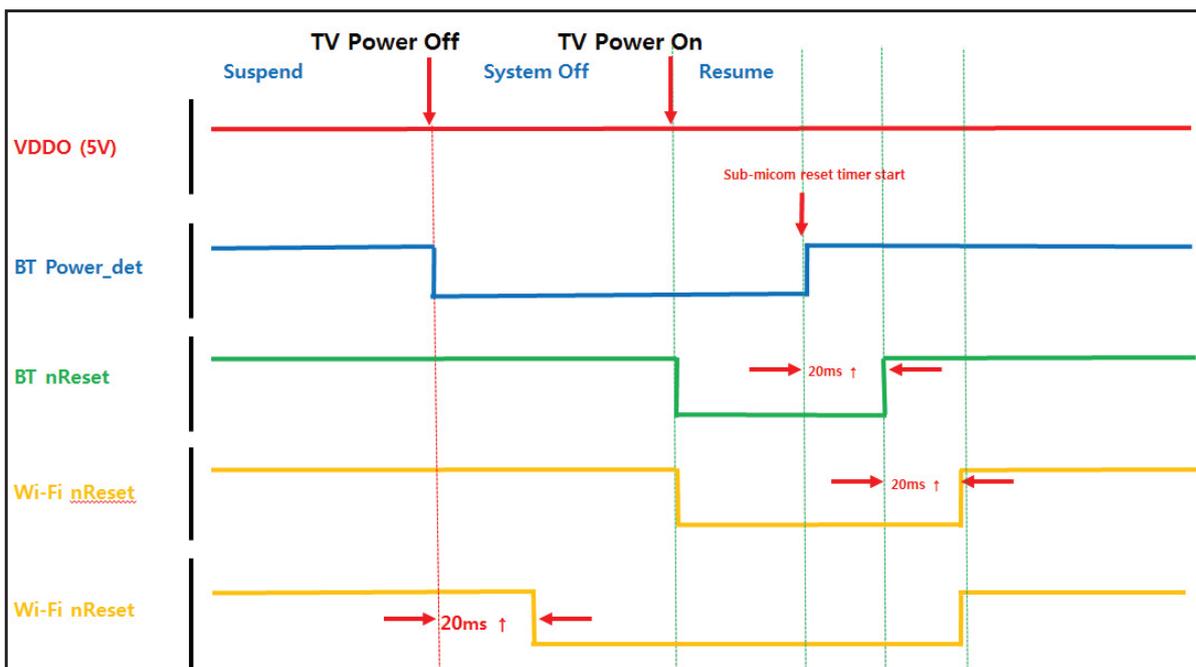

### 4-3. Factory Mode

#### ■ Factory Remote

1. Power TV ON.
2. Select TV Source.
3. **Info** → **Factory**.
4. Use **MENU** for return.

#### ■ Samsung IR Remote (Limited Operation)

1. TV Power Standby.
2. Press as follows.
  - Remote Button : **Power OFF** → **MUTE** → **1** → **8** → **2** → **Power ON**
- **Option** (must set Option Bytes when replacing Main Board.)
- Option → **Factory Reset** (returns TV to out of box condition. Does not reset Apps.)
- SVC → **Test Patterns**
- SVC → Info → **ER Count** (Important to check for errors.)
  - Resets to 0 with Factory Reset.

#### First Screen Appearing in Factory Mode

- Ex. SAMPLE Model

The screenshot shows the 'Option' menu in Factory Mode. The menu items on the left are: Option, Control, Debug, SVC, ADC/WB, and Advanced. The main display area shows the following text:

```

MODE : CATV, RES : NOSIGNAL
Option
Control
Debug
SVC
ADC/WB
Advanced
T-JZL6AKUC-XXXX.XX
T-JZMAKUS-XXXX
tztv-X.X.-main2016-jazz-m_XXXXXXXXX.X
BT Version : BLUETOOTH-VER-XXXX
E-Manual:---
CAMERA:****
Blaster Version : Not support
E-POP Version : JAZZLUHD-XXXX.X
EDID SUCCESS
HDCP SUCCESS
CALIB : AV/COMP/PC/HDMI/
Option : NONE_16,NONE,7000,NONE
DTCP Not Support
FRC-[JAZZ-L/?][NON FRC][HW:0x00]
TCON Version:----
Model : UN**KU7000F***
Wired MAC SUCCESS
Wireless MAC SUCCESS
WIFI Version : BCM43569_16210_WLC_E_STATUS_
ABORT
CO NfO WO MO D/ HX P/ AO O S/ N/ RO SC/ SiO(P)
NS//
Factory Data Ver : XXX / Fixed Ver : XX
EERC Version : 75 / WB Ver : 8
CPLD/LD : N/A
SmartControl : 0
Board Info : 2015/12/29/PV/12/BN41-02528A
Factory Reset In Production : ----
SID : ----
Date of purchase : --/--/----
    
```

Red dashed arrows point from the following items to the right, where they are labeled as 'Testing Items':

- ✓ T-JZL6AKUC-XXXX.XX → Main SW Version
- ✓ T-JZMAKUS-XXXX → Sub SW Version
- ✓ Wired MAC SUCCESS → Wired MAC (Status)
- ✓ Wireless MAC SUCCESS → Wireless MAC (Wi-Fi Module)
- ✓ CO NfO WO MO D/ HX P/ AO O S/ N/ RO SC/ SiO(P) → CO NfO WO. etc.
  - Certificate
  - Netflix
  - Wide Vine
  - etc. Status

## ■ Factory Reset



- Ex. SAMPLE Model

Factory Reset	
Type	49A6AU0KK
Local Set	US
SW Model	UKU6400
BOM Model	7000
TUNER	-
Ch Table	NONE

### Setting Option Bytes

1. Enter Factory Mode with **Service Remote** (only).
2. Check Option Byte Table located on **GSPN** (Fast Track or Tips).
3. Select each item to change.
4. Soft power TV Off to load.

## ■ SVC > Test Patterns

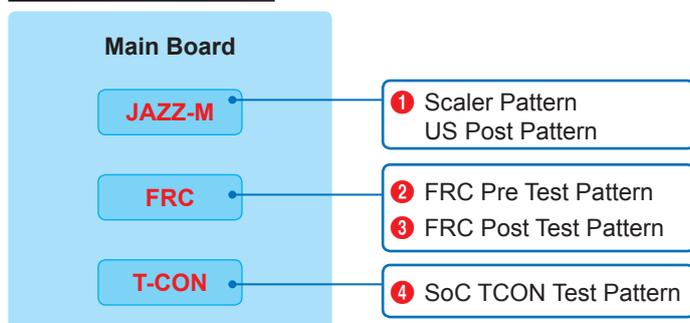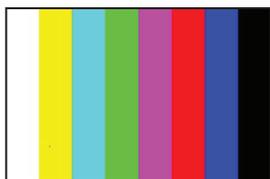

### Check Test Patterns

1. Verify "Scaler Pattern" and "US Post Pattern".
2. Verify "FRC Pre Test Pattern".
3. Verify "FRC Post Test Pattern".
4. Verify "SoC TCON Test Pattern".

■ SVC > Info > ER Count

MAIN : SVC, MODE : CATV, RES : NOSIGNAL

WD Count	0	Serdes Error Count	0
AR Count	0	Serdes Reset Count	0
RS Count	0	Serdes WatchDog On/Off	ON
WIFI NO DETECTION COUNT	0	SMPS FET Fail Detect	0
WIFI DETACHMENT COUNT	0	Vcc Fail Count	0
BT NO DETECTION COUNT	0		
BT DETACHMENT COUNT	0		
BT MGT OPEN FAIL COUNT	0		
BT MGT DISCONNECT COUNT	0		
BT TV AUDIO DROP	0		
BT AUDIO TIMER EXP	0		
Camera ER Count			
FRC3D Emergency Reboot On/Off	ON		
FRC3D ER Count	0		
Fan Error Count	0		

- **WD Count:** Watch Dog (Hardware related issue).
- **AR Count:** Auto Reset (software (i.e. Apps) related).
  - **important Error Count** Status Screen.
- Verify each item listed.

## ■ Factory Mode > Control > EDID

1. Remove ALL **HDMI** connections.
2. Factory Mode → Control → **EDID**. (→ **Enter** Key)

Option	EDID
Control	Sub Option
Debug	Hotel Option
SVC	Shop Option
ADC/WB	Asia Option
Advanced	Sound

3. Select EDID/OFF to ON. (→ **Right Arrow** Key)

EDID ON/OFF	ON
-------------	----

4. Select EDID WRITE ALL. (→ **Enter** Key)

EDID WRITE ALL	Success
----------------	---------

5. Wait to Success. (→ **Right Arrow** Key)

EDID WRITE ALL	Wait
----------------	------

6. Confirm EDID WRITE ALL Success. (→ **Menu** Key)

EDID WRITE ALL	Success
----------------	---------

## 4-4. Factory Mode Adjustments

### 4-4-1. Detail Factory Option



#### NOTE

If you replace the main board with new one, please change the factory option as well.  
The options you must change are "**Type**".

#### ■ UN40KU7000FXZA

Inches		40"
		DA01
PANEL	Vendor	INX
	Code	BN95-02648C
	Spec.	CY-KK040HGNV3V/H
SMPS	Vendor	SOLUM
	Code	BN44-00875A
	Spec.	L40E6_KSM
MAIN	ASSY CHASSIS	BN91-17254A
	ASSY PCB MAIN	BN94-10778A
Byte	Item	
0	Factory Reset	-
1	Type	<b>40D6AU0KK</b>
2	Local set	US
3	SW Model	UKU6400
4	BOM Model	7000
5	Tuner	-
6	Ch table	NONE
7	Front Color	U-C-F-KU64

## ■ UN43KU7000FXZA

Inches		43"
		AA01
PANEL	Vendor	AUO
	Code	BN95-02655C
	Spec.	CY-KK043HGAV3V/H
SMPS	Vendor	SOLUM
	Code	BN44-00875A
	Spec.	L40E6_KSM
MAIN	ASSY CHASSIS	BN91-17255A
	ASSY PCB MAIN	BN94-10779A
Byte	Item	
0	Factory Reset	-
1	Type	43L6AU0KK
2	Local set	US
3	SW Model	UKU6400
4	BOM Model	7000
5	Tuner	-
6	Ch table	NONE
7	Front Color	U-C-F-KU64

■ UN49KU7000FXZA

Inches		49"
		FA01
PANEL	Vendor	SDC
	Code	BN95-02653C
	Spec.	CY-KK049HGLV3V/H
SMPS	Vendor	HANSOE
	Code	BN44-00876A
	Spec.	L55E6_KHS
MAIN	ASSY CHASSIS	BN91-17256A
	ASSY PCB MAIN	BN94-10780A
Byte	Item	
0	Factory Reset	-
1	Type	49A6AU0KK
2	Local set	US
3	SW Model	UKU6400
4	BOM Model	7000
5	Tuner	-
6	Ch table	NONE
7	Front Color	U-C-F-KU64

## ■ UN55KU7000FXZA

Inches		55"
		FA01
PANEL	Vendor	SDC
	Code	BN95-02655C
	Spec.	CY-KK055HGLV3V/H
SMPS	Vendor	HANSOE
	Code	BN44-00876A
	Spec.	L55E6_KHS
MAIN	ASSY CHASSIS	BN91-17257A
	ASSY PCB MAIN	BN94-10781A
Byte	Item	
0	Factory Reset	-
1	Type	55A6AU0KK
2	Local set	US
3	SW Model	UKU6400
4	BOM Model	7000
5	Tuner	-
6	Ch table	NONE
7	Front Color	U-C-F-KU64

## ■ UN65KU7000FXZA

Inches		65"
		FA01
PANEL	Vendor	SDC
	Code	BN95-02725C
	Spec.	CY-KK065HGLV3V/H
SMPS	Vendor	SOLUM
	Code	BN44-00876A
	Spec.	L65E6N_KSM
MAIN	ASSY CHASSIS	BN91-17258A
	ASSY PCB MAIN	BN94-10782A
Byte	Item	
0	Factory Reset	-
1	Type	65A6AU0KK
2	Local set	US
3	SW Model	UKU6400
4	BOM Model	7000
5	Tuner	-
6	Ch table	NONE
7	Front Color	U-C-F-KU64

## 4-4-2. Factory Data

### ■ Option

Factory Menu Name		Data	Range
<b>Factory Reset</b>		-	
<b>Type</b>	40"	40D6AU0KK	
	43"	43L6AU0KK	
	49"	49A6AU0KK	
	55"	55A6AU0KK	
	65"	65A6AU0KK	
<b>Local Set</b>		US	
<b>SW Model</b>		UKU6400	
<b>BOM Model</b>		7000	
<b>TUNER</b>		-	
<b>Ch Table</b>		NONE	
<b>MRT Option</b>			

### ■ Control

Factory Menu Name		Data	Range
<b>EDID</b>			
EDID ON/OFF		OFF	
EDID WRITE ALL		...	
EDID WRITE HDMI		...	
EDID WRITE PC		...	
HDMI EDID Ver		...	
HDMI EDID Port		...	
<b>Sub Option</b>			
RS-232 Jack		UART	
EXT Link Support		ON	
Serial Log On/Off		OFF	
Watchdog		ON	
FRC Monitoring		OFF	
Checksum		0x0000	
Fast Boot In Production		ON	
USB Serial		OFF	
ECO IC TYPE		MC8121	
Info Link Server Type		development	
Info Link Country		None	

#### 4. Troubleshooting

Factory Menu Name	Data	Range
TTX Group	UserOSD	
Visual Test	Diabile	
OPTION_SWU		
RF Remocon Support	OFF	
CDD mode	...	
DPMS Support	OFF	
T-CON Device	JazzFT	
RM Server Type	Operating	
LMF LEAVE THRESHOLD	160	
LMF TRIM THRESHOLD	120	
LMF TERM THRESHOLD	80	
EOS Click	OFF	
BP PMS Reset	1	
FAnet Thread	2	
CI CPLD Version	1	
ACM_MC	ON	
UNIQUE TRIPLET	ON	
FS_FAV	OFF	
Private Range USE	ON	
SCSA Support	OFF	
OCM Reboot	ON	
SPI Protection		
FKP Server Type	Default	
OCM Support	ON	
Preloading Support	ON	
Multitasking Support	ON	
Browser preloading Support	FULL	
EXT IR Boot Support	OFF	
APP BOOTING SUPPORT	ON	
NagSam Support	OFF	
EWBS Support	OFF	
MVPD MBR Provider	COMCAST	
cloudscan Always Upload	OFF	
FirstScreen Cach Size	300	
<b>Hotel Option</b>		
Hospitality Mode	OFF	
Power On		

Factory Menu Name	Data	Range
Menu OSD		
Operation		
Music Mode		
External Source		
Eco Solution		
Cloning		
<b>Shop Option</b>		
Exhibition Mode	OFF	
Peak Mode	ON	
Metadata	ON	
Shopmode Picture Reset	ON	
<b>Asia Option</b>		
Unbalance	OFF	
AF Level adjust	0	
TX Power Level	0	
Mono Last Memory	OFF	
H Shaking	0	
<b>SOUND</b>		
High Devi	OFF	*If the broadcast signal is not good, TV will complement the characteristics of the signal (most use when weak signal comes from the growing area countries)
Carrier_Mute	ON	*If the noise comes from weakness-electromagnetic field, TV will be set Mute automatically(Only default on in North America)
Pilot Level High Thld	0x20h	* The High threshold value of stereo signal(If Pilot level is greater than High threshold value, recognize Stereo signal)
Pilot Level Low THLD	0x10h	* The Low threshold value of stereo signal(If Pilot level is less than Low threshold value, recognize Mono signal)
Carrier2 Amp High ThLD	9	
Carrier2 Amp Low THLD	6	
Amp Volume	0xc4h	
Amp Scale	0x3ch	
Amp EQ Check Sum	0x000057B5	
Subwoofer Support	3	
Woofer Type	0	
Woofer Volume	0xc7h	
Woofer Scale	0x3fh	
Woofer Check sum	0x0000A273	
PEQ Inx	76	

#### 4. Troubleshooting

Factory Menu Name	Data	Range
PEQ Test	Ready	
Speaker EQ	ON	
Bottom Checksum	NONE	
Wall Filter Type	3	
SRS Tuning Parm	0	
SPDIF PCM Gain	-9	
AudioDock BT Delay	90	
3D_Glass BT delay	50	
Mic Scale	OFF	
India Sound	0	
Speaker Delay Normal	0	
NTV CU Delay	NORMAL	
Lipsync Inx	1	
Lipsync Checksum	0x4972	
Lipsync USB Test	Ready	
Lipsync BT Checksum	0x0000	
TP volume	0xc4h	
TP Scale	0x6ch	
TP EQ CheckSum	NONE	

#### ■ Debug

Factory Menu Name	Data	Range
<b>Spread Spectrum</b>		
LVDS Spread	0	
DDR Spread	0	
Period	0	
Amplitude	0	
HD DDR SSC ON OFF	OFF	
HD DDR SSC Value	0	
FHD DDR SSC ON OFF	OFF	
FHD DDR SSC Value	4	
UHD DDR SSC ON OFF	ON	
UHD DDR SSC Value	0	
P eBus SSC ON/OFF	OFF	
P eBus Value	0	
LVDS SSC ON/OFF	OFF	
LVDS SSC Value	0	

Factory Menu Name	Data	Range
AP Vx1 SSC ON/OFF	ON	
AP Vx1 Value	12	
N Vx1 SSC ON/OFF	ON	
N Vx1 Value	0	
FRC Vx1 SSC ON/OFF	OFF	
FRC Vx1 SSC Period	0	
FRC Vx1 SSC Modulation	0	
FRC LVDS ON/OFF	ON	
FRC LVDS SSC MFR	3	
FRC LVDS SSC MRR	2	
FRC DDR SSC ON/OFF	ON	
FRC DDR SSC Period	1	
FRC DDR SSC Modulation	2	
ADV7619 Data strength	1	
ADV7619 Clock strength	1	
ADV7619 H_V_DE strength	1	
AP DDR SSC ON/OFF	OFF	
AP DDR SSC Value	0	
AP USIT SSC ON/OFF	ON	
AP USIT SSC Value	13	
OCM Vx1 SSC ON/OFF	OFF	
OCM Vx1 SSC Value	0	
TCON USIT SSC ON/OFF	BYPASS	
<b>DDR Margin</b>		
A CTRL_OFFSET_0_3	0	
A CTRL_OFFSET_D	0	
B CTRL_OFFSET_0_3	0	
B CTRL_OFFSET_D	0	
<b>BT_ON_OFF</b>	ON	
<b>RF Mute Time</b>	600ms	
<b>Tuner Margin</b>	3	European specifications
<b>FRC</b>		
FRC FDISPLAY ON/OFF	OFF	
3D FDISPLAY ON/OFF	OFF	
PC Mode ON/OFF	OFF	
FRC VX1 RX EQ SETTING	OFF	
FRC VX1 TX Pre_emphasis setting	0	

#### 4. Troubleshooting

Factory Menu Name	Data	Range
Netflix OSD Threshold	179	
<b>TCON</b>		
TCON_TEMP READ	34	
TEMP LAST	6000	
DCC VERSION	0x0	
TCON Demura Bypass	OFF	
TCON FDisplay	OFF	
Panel Code 1		
Panel Code 2		
Panel Revision		
Panel Menu Week		
Panel S/N 1		
Panel S/N 2		
Panel S/N 3		
Panel S/N 4		
<b>MPEG Margin</b>	20	
<b>H.264 Margin</b>	15	
<b>CAM Wait Time</b>	15	
<b>Voice Debug</b>	OFF	
<b>Power Management</b>		
<b>Cert Option</b>	Waiting	
<b>RM_BIST_DTV</b>	0	
<b>RM_BIST_ATV</b>	0	
<b>RM_BIST_CABLE</b>	0	
<b>SerDES Check</b>		
SerDES Tuner	Failure	
HDMI SW	Failure	
HDMI Rx	Failure	
MP	Failure	
Main SerDES	Failure	
Jack SerDES	Failure	
<b>Stress Mode</b>	OFF	
<b>Log Analyzer</b>	ON	
<b>Error Popup On/Off</b>	OFF	
<b>DeadLock KILL</b>	OFF	
<b>CES Option</b>	OFF	
<b>CES Convergence Option</b>	OFF	

Factory Menu Name	Data	Range
<b>CES ATSC 3_0</b>	OFF	
<b>CES OOBE MVPD SUPPORT</b>	OFF	
<b>BT DUT</b>	OFF	
<b>BT Throughput</b>	Failure	
<b>Reproduce Module</b>	ON	
<b>21_9</b>		
L-DETECT STABLE TIME	7	
L-DETECT UNSTABLE TIME	3	
L-DETECT CAPTION THRESHOLD	720	
L-DETECT RAGION THRESHOLD	720	
L-DETECT B-LEVEL THRESHOLD	32	
L-DETECT USB SUPPORT	0	
<b>DB Download</b>		
MRT Option Dump	Failure	
Picture Data Dump	Failure	
VCONF Dump	Failure	
<b>Read Eco Sensor Data</b>	0	
<b>No Signal Power OFF</b>	ON	
<b>Alert Option</b>	ON	
<b>Default HDMI1 Booting</b>	OFF	

## ■ SVC

Factory Menu Name	Data	Range
<b>Self Test(for HW)</b>		* the Output of test pattern from each IC
<b>Info</b>		
<b>Reset</b>		
Apps Reset		
SVC Reset		
SPI Flash Reset		
Data Sync Reset		
Factory Data Reset		
<b>OPTION_HDMI</b>		
DVI/HDMI SOUND	Auto	
HDMI HOT PLUG	Disable	
HOTPLUG SWITCHING	Auto	
HOT PLUG DURATION	800ms	
CLK TERM DURATION	300ms	

#### 4. Troubleshooting

Factory Menu Name	Data	Range
HDMI FLT CNT SIG	0ms	
HDMI FLT CND SIG2		
HDMI FLT CNT LOS	0ms	
UNSTABLE BAN CNT	1250ms	
HDMI ROBIN	0	
HDMI Callback	ON	
HDMI CTS Thld	0	
HDMI CTS Cnt1	0	
HDMI EQ	0	
HDMI Write Type	0	
HDMI Switch	0	
DVI SET TIME	0	
H Write	0	
HDMI Sync	0	
HDMI 3D DET	1	
HOT PLUG OFF HOLD TIME	600ms	
HDMI MUTE TIME	0ms	
HDMI NFST UNMUTE TIME	800ms	
HDMI FST UNMUTE TIME	0ms	
REPEAAUDIO PKT	OFF	
HDMI Stable Count	3	
HDMI HDCP EN	OFF	
HDMI HDCP EN FLAG	85	
POWER ON FLT CNT LOS		
HDCP UPDATE SPI	READY	
SPI VERSION	0	
HdmiRx EQ	0	
HDMI TMDS ERR DET	1	
<b>DVB CI</b>		
TS Clock delay TC	0	
TS Clock delay S	0	
CI Control Buf ON	ON	
TS Clock delay CPU	1	
TS Clock delay TC2	0	
TS Clock delay S2	0	
CI Control Buf ON2	1	
TS Clock delay CPU2	0	

Factory Menu Name	Data	Range
<b>Test Pattern</b>		
Scaler Pattern	OFF	
US Post Pattern	OFF	
FRC Pre Pattern	0	
FRC Post Pattern	0	
SOC TCON Pattern	0	
SOC TCON Pattern Level	255	
FRC OSD Pre Pattern	0	
FRC OSD Post Pattern	0	
FRC2 Pre Pattern	0	
FRC2 Post Pattern	0	
SOC TCON2 Pattern	0	
SOC TCON2 Pattern Level	255	
<b>Upgrade</b>		
T-CON DATA UPGRADE		
T-CON FW UPGRADE		
T-CON CheckSum		
T-CON2 Usb Download		
T-CON2 CheckSum		
PANEL EEPROM UPGRADE		
PANEL FLASH UPGRADE		
Logic Usb D/L		
SUBMICOM UPGRADE		* Upgrade Sub-Micom Program
SUBMICOM JP USB UPGRADE		
BT UPGRADE		* Upgarde BT(There is upgrade program in Main-Image)
BT FREPAIRING		
Function Upgrade		
FRC3D FW UPGRADE		
FRC3D SRP UPGRADE		
FRC3D LD UPGRADE		
FRC2 3D FW UPGRADE		
Camera Upgade		* Upgarde Camera module(There is upgrade program in Main-Image)
Mic Upgrade		* Upgarde MIC in Camera module(There is upgrade program in Main-Image)
Jump UPGRADE		
IR Blaster Upgrade		
IR Blaster delay time		

#### 4. Troubleshooting

Factory Menu Name	Data	Range
NTV CU UPDATE		
UD LDC PROFILE UPGRADE		
Pic Data USB Update		
Audio Data USB Update		
Eco Data USB Update		
CI CPLD Upgrade		
SC ADK Upgrade		
<b>Other Setting</b>		
Delete S/N		
IPERF	Stopped	
Expert		
CAL Data Backup	...	
CAL Data Restore		
MICOM POWER OFF	ON	
NTV CU FW VER	0	
ATV IF AGC SPEED	0	
Upgrade UHD OSD Test	0	
Main USB Path		
JackP USB Path		
Source Direct On/Off	OFF	
Apps Update		
Auto Power	LAST POWER	
SMCE Control		
Motor Test		
Cube Test		
V APP	OFF	
Picture Direct On/Off	OFF	
<b>SVC Panel</b>	ORIGINAL	
<b>S/N</b>		
Serial number		
Writing S/N		

#### ■ ADC/WB

Factory Menu Name	Data	Range
<b>ADC</b>		
AV Calibration		
Comp Calibration		

Factory Menu Name	Data	Range
PC Calibration		
HDMI Calibration		
<b>ADC Result</b>		
1st_Y_GH	0	
1st_Y_GL	0	
1st_Cb_BH	0	
1st_Cb_BL	0	
1st_Cr_RH	0	
1st_Cr_RL	0	
2nd_R_L	128	
2nd_G_L	128	
2nd_B_L	128	
2nd_R_H	69	
2nd_G_H	69	
2nd_B_H	69	
<b>White Balance</b>		
R-Offset	128	
G-Offset	128	
B-Offset	128	
R-Gain	128	
G-Gain	128	
B-Gain	128	
WB-W2_R_Offset	128	
WB_W2_B_Offset	128	
WB_W2_R_Gain	136	
WB_W2_B_Gain	76	
WB_N_R_Offset	128	
WB_N_B_Offset	128	
WB_N_R_Gain	131	
WB_N_B_Gain	119	
<b>MGA</b>		
MGA On/Off	OFF	
R1_Gain		
G1_Gain		
B1_Gain		
R2_Gain		
G2_Gain		

#### 4. Troubleshooting

Factory Menu Name	Data	Range
B2_Gain		
R3_Gain		
G3_Gain		
B3_Gain		
R4_Gain		
G4_Gain		
B4_Gain		
R5_Gain		
G5_Gain		
B5_Gain		
R6_Gain		
G6_Gain		
B6_Gain		
R7_Gain		
G7_Gain		
B7_Gain		
R8_Gain		
G8_Gain		
B8_Gain		
R9_Gain		
G9_Gain		
B9_Gain		
R10_Gain		
G10_Gain		
B10_Gain		
<b>SPI White Balance</b>		
SPI White Balance On/Off		
SPI R-Offset		
SPI G-Offset		
SPI B-Offset		
SPI R-Gain		
SPI G-Gain		
SPI B-Gain		
SPI N Rgain		
SPI N Bgain		
SPI N Roffset		
SPI N Boffset		

---


<b>Factory Menu Name</b>	<b>Data</b>	<b>Range</b>
SPI W2 Rgain		
SPI W2 Bgain		
SPI W2 Roffset		
SPI W2 Boffset		
<b>SPI MGA</b>		
<b>WB Data to SPI</b>		

**■ Advanced**

## 4-5. RS-232C

- **RS232C Control**

- Port : COM#(Serial)
- Bit rate : 115200
- Data Bit : 8 bit
- Parity : None
- Stop Bits : 1
- Flow Control : None

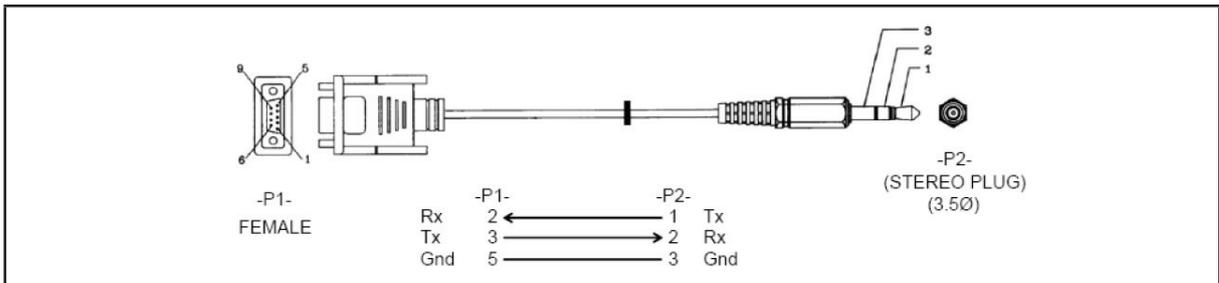

- **Description of RS232C**

Pin#	Name	Full Name	Pin#	Name	Full Name	Pin#	Name	Full Name
1	CD	Carrier Detect	4	DTR	Data Terminal Ready	7	RTS	Request To Send
2	RxD	Received Data	5	GND	Signal Ground	8	CTS	Clear To Send
3	TxD	Transmitted Data	6	DSR	Data Set Ready	9	RI	Ring Indicator

## 4-6. AV Control Tab

Control Item			Cmd1	Cmd2	Cmd3	Value	
General	Power	Power	0x00	0x00	0x00	0x00	
		Off				0x01	
		On				0x02	
	Volume	Direct	0x01	0x00	0x00	(0~100)	
		Up			0x01	0x00	
		Down			0x02	0x00	
	Mute		0x02	0x00	0x00	0x00	
	Ch.	Direct		0x04	-		
		Continuous	Up	0x03	0x00	0x01	0x00
			Down			0x02	0x00
Input	Source List	TV	TV	0x0a	0x00	0x00	0x00
		AV	AV1			0x01	0x00
			AV2				0x01
			AV3				0x02
		S-Video	S-Video1			0x02	0x00
			S-Video2				0x01
			S-Video3				0x02
		Component	Component1			0x03	0x00
			Component2				0x01
			Component3				0x02
		PC	PC1			0x04	0x00
			PC2				0x01
			PC3				0x02
		HDMI	HDMI1			0x05	0x00
			HDMI2				0x01
			HDMI3				0x02
			HDMI4				0x03
		DVI	DVI1			0x06	0x00
			DVI2				0x01
			DVI3				0x02
		RVU	RVU			0x07	0x00
		PICTURE	Mode	Dynamic(Entertain)		0x0b	0x00
Standard							0x01
Movie							0x02
Natural							0x03
CAL-NIGHT							0x04
CAL-DAY							0x05
BD Wise							0x06
Relax							0x07

4. Troubleshooting

Control Item			Cmd1	Cmd2	Cmd3	Value		
PICTURE	BackLight(CellLight)		0~20		0x01	0x00	(0~20)	
	Contrast		0~100		0x02	0x00	(0~100)	
	Brightness		0~100		0x03	0x00	(0~100)	
	Sharpness		0~100		0x04	0x00	(0~100)	
	Color		0~10		0x05	0x00	(0~100)	
	Tint	G/R			0x06	0x00	(0~100)	
	Advanced Settings	Black Tone	Off			0x07	0x00	0x00
			Dark					0x01
			Darker					0x02
			Darkest					0x03
		Dynamic Contrast	Off				0x01	0x00
			Low					0x01
			Medium					0x02
			High					0x03
		Gamma		-3 ~ 3			0x03	(-3~3)
		RGB Only Mode	Off				0x05	0x00
			Red					0x01
			Green					0x02
			Blue					0x03
		Color Space	Auto				0x06	0x00
			Native					0x01
			Custom					0x02
		White Balance	R-Offset(LCD)				0x07	(-50~50)
		White Balance	G-Offset(LCD)				0x08	(-50~50)
		White Balance	B-Offset(LCD)				0x09	(-50~50)
		White Balance	R-Gain(LCD)				0x0a	(-50~50)
		White Balance	G-Gain(LCD)				0x0b	(-50~50)
		White Balance	B-Gain(LCD)				0x0c	(-50~50)
		White Balance	Reset(LCD)				0x0d	0x00
		Flesh Tone			-15 ~ 15			0x0e
	xvYCC	Off					0x10	0x00
		On						0x01
	Motion Lighting	Off					0x11	0x00
		On						0x01
	Color Space Custom Color	Red					0x12	0x00
		Green						0x01
Blue							0x02	
Yellow							0x03	

Control Item				Cmd1	Cmd2	Cmd3	Value	
PICTURE	Advanced Settings	Color Space Custom Color	Cyan				0x04	
			Magenta				0x05	
		Color Space Custom Color Red Value	0~100			0x13	0~100	
		Color Space Custom Color Green Value	0~100			0x14	0~100	
		Color Space Custom Color Blue Value	0~100			0x15	0~100	
		Reset				0x16	0x00	
		LED Motion Plus	Off			0x0a	0x07	0x00
			On(Normal)					0x01
			Cinema					0x02
			Ticker					0x03
		10p White Balance	Off			0x0e	0x00	0
			On				0x00	1
			Red			0x0f	(1~10)	(-50~50)
			Green			0x10	(1~10)	(-50~50)
			Blue			0x11	(1~10)	(-50~50)
			Reset			0x12	0	(1~10)
			10 Point			0x13	0x00	0x00
	Interval				0x14	0x00	0x00	
	Picture Option	Color Tone	Cool			0x0a	0x00	0x00
			Standard					0x01
			Warm1					0x02
			Warm2					0x03
		Digital Noise Filter	Off				0x02	0x00
			Low					0x01
			Medium					0x02
			High					0x03
			Auto					0x04
			Auto Visualization					0x05
		MPEG Noise Filter	Off				0x03	0x00
			Low					0x01
			Medium					0x02
			High					0x03
Auto							0x04	
HDMI Black Level	Normal				0x04	0x00		
HDMI Black Level	Low					0x01		
Film Mode	Off				0x05	0x00		

4. Troubleshooting

Control Item				Cmd1	Cmd2	Cmd3	Value
<b>PICTURE</b>	<b>Picture Option</b>	Film Mode	Auto1				0x01
			Auto2				0x02
			Cinema Smooth				0x03
		Auto Motion Plus	Off			0x06	0x00
			Clear				0x01
			Standard				0x02
			Smooth				0x03
			Custom				0x04
		Blur Reduction			0x07	value	
		Judder Reduction			0x08	value	
		LED Clear Motion			0x09	Off	
		Reset			0x10	0x00	
		HDMI UHD Color	Off			0x11	0x00
			On				0x01
		Analog Clean View	On			0x12	0x00
			Off				0x01
	<b>Screen Adjustment</b>	Picture Size	16:9	0x0c	0x0a	0x01	0x00
			Zoom1				0x01
			Zoom2				0x02
			Wide Fit				0x03
			4:3				0x04
			Screen Fit				0x05
			Smart View I				0x06
			Smart View II				0x07
			Auto Wide				0x08
			Wide Zoom				0x09
			Zoom				0x0a
			Fit to Screen	Off		0x0b	0x00
		Zoom	Zoom1		0x0c	0x00	0x00
			Zoom2				0x01
			Zoom3				0x02
			Zoom4				0x03
Position	Position1			0x01	0x00		
	Position2				0x01		
	Position3				0x02		
	Position4				0x03		
<b>Screen Adjustment</b>	Reset		0x0d	0x00	0x00		
<b>Reset Picture</b>	Reset Picture		0x0d	0x0b	0x00	0x00	

Control Item				Cmd1	Cmd2	Cmd3	Value
PICTURE	3D	3D Mode	Off	0x0e	0x0c	0x00	0x00
			2D->3D				0x01
			Side By Side				0x02
			Top Bottom				0x03
			Line By Line				0x04
			Vertical Line				0x05
			Checker BD				0x06
			Frame Sequence				0x07
		3D->2D	Off			0x01	0x00
			On				0x01
		3D View Point				0x02	(-5~5)
		Depth				0x03	(1~10)
		3D Auto View	Off			0x05	0x00
			Message Notice				0x01
			On				0x02
			Auto1				0x03
			Auto2				0x04
		3D Light Control	Low			0x06	0x00
			High				0x01
		L/R Change	L to R			0x07	0x00
	R to L					0x01	
	3D Perspective				0x08	value	
	Optimize				0x09	value	
	Factory-SVB	Expert-N/D Adj	On	0x0b	0x0d	0x00	0x00
			Off				0x01
			Fix				0x02
	Apply Picture Mode	All Sources		0x0f	0x00	0x00	0x00
		Current Source					0x01
	Pip	Pip	Off	0x11	0x00	0x00	0x00
			On				0x01
		Antenna	Cable			0x01	0x00
			Air				0x01
		Channel	DTV Cable			0x02	0x00
			DTV Terrestrial				0x01
		Size	Size1			0x03	0x00
			Size2				0x01

4. Troubleshooting

Control Item				Cmd1	Cmd2	Cmd3	Value
PICTURE	Pip	Size	Size3				0x02
			Size4				0x03
		Position	Position1			0x04	0x00
			Position2				0x01
			Position3				0x02
			Position4				0x03
		Sound Select	Main			0x05	0x00
			Sub				0x01
	Picture Off			0x12	0x00	0x00	0x00
	Sound	Sound Mode	Standard		0x0c	0x00	0x00
Music							0x01
Movie							0x02
Clear Voice							0x03
Amplify							0x04
Equalizer		Balance			0x01	0x00	(0~20)
		100hz				0x01	(0~20)
		300hz				0x02	(0~20)
		1khz				0x03	(0~20)
		3khz				0x04	(0~20)
		10khz				0x05	(0~20)
		Reset				0x06	0x00
SRS TruSurround HD		Off			0x02	0x00	0x00
Virtual Surrond		On					0x01
SRS TruDialog		Off			0x03	0x00	0x00
Dialog Clarify		On					0x01
Preferred Language		English			0x04	0x00	0x00
		Spanish					0x01
		French					0x02
		Korean					0x03
		Japanese					0x04
Multi-Track Sound		Mono			0x05	0x00	0x00
		Stereo					0x01
		SAP					0x02
Auto Volume		Off			0x06	0x00	0x00
Auto Volume		Normal					0x01
		Night					0x02
Speaker Select		TV Speaker			0x07	0x00	0x00
		External Speaker					0x01

Control Item				Cmd1	Cmd2	Cmd3	Value	
Sound	Speaker Select	Audio Out					0x01	
	Sound Select	Main			0x08	0x00	0x00	
		Sub						0x01
	Sound Reset	Sound Reset			0x09	0x00	0x00	
	3D Audio	Off				0x0a	0x00	0x00
		Low						0x01
		Medium						0x02
		High						0x03
	Auto Stereo	Manual				0x0b	0x00	0x00
		Auto						0x01
	TV Installation Type	Stand				0x0c	0x00	0x00
		Wallmount						0x01
	Audio Delay	Dealy Value (0~250)				0x0d	0x00	0~250 (0x00~0xFA)
	SRS CS Headphone	Off				0x0e	0x00	0x00
	Balance					0x0f	0x00	0x00
	Add New Device	On				0x10	0x00	0x00
		Off						0x01
	Audio Multi-Output	Off				0x11	0x00	0x00
	Multiroom Link Settings	Multiroom				0x12	0x00	0x00
	HDMI Audio Input Format	Bitstream				0x13	0x00	0x00
		PCM						0x01
	Audio Format	PCM				0x14	0x00	0x00
		Dolby Digital						0x01
		DTS						0x02
		DTS Neo 2:5						0x03
		AAC/HEAAC						0x04
	Dolby Digital Comp	RF				0x15	0x00	0x01
HD Audio	Off				0x16	0x00	0x00	
	On						0x01	
KEY	Key Generation			0x0d	0x00	0x00	*Refer for Table	
OSD	Show/Hide Control	Show			0x0e	0x00	0x00	
		Hide					0x01	
Get Status	Power (On/Off)			0xf0	0x00	0x00	0x00	
Get Status	Volume(0~100)			0xf0	0x01	0x00	0x00	
	Mute (On/Off)			0xf0	0x02	0x00	0x00	
	Channel Number			0xf0	0x03	0x00	0x00	

4. Troubleshooting

Control Item		Cmd1	Cmd2	Cmd3	Value
<b>Get Status</b>	<b>Source (TV/AV/.../HDMI/...)</b>	0xf0	0x04	0x00	0x00
	<b>Picture Size</b>	0xf0	0x05	0x00	0x00
	<b>3D (On/Off)</b>	0xf0	0x06	0x00	0x00
	<b>Picture Mode</b>	0xf0	0x07	0x00	0x00
	<b>Sound Mode</b>	0xf0	0x08	0x00	0x00

\* Refer for Table

KEY	Value
<b>Up</b>	96 (0x60)
<b>Down</b>	97 (0x61)
<b>Left</b>	101 (0x65)
<b>Right</b>	98 (0x62)
<b>Menu</b>	26 (0x1A)
<b>Enter(OK)</b>	104 (0x68)
<b>EXIT</b>	45 (0x2D)

---

## 4-7. Updating the TV's Software

View your TV's software version and update it if necessary.

- [Settings](#) → [Support](#) → [Software Update](#)

### ■ Updating the TV's software to the latest version

- [Settings](#) → [Support](#) → [Software Update](#) → [Update now](#)

You can update your TV's software by downloading the update from the Internet directly to your TV or copying the update from a USB device that contains it to your TV.

- Updating from the Internet requires an active Internet connection.
- To update using a USB flash drive, download the update package from Samsung.com to your computer. Then, save the update package in the USB device's top-level folder. Otherwise, the TV will not be able to locate the update package.



DO NOT turn off the TV's power until the update is complete. The TV will turn off and on automatically after completing the software update. All video and audio settings return to their default settings after a software update.

### ■ Updating the TV automatically


- [Settings](#) → [Support](#) → [Software Update](#) → [Auto Update](#)

If the TV is connected to the Internet, you can have the TV's software update itself automatically while you are watching the TV. When the background update is completed, it is applied the next time the TV is turned on.


- This function may take a longer time if another network function is running concurrently.
- This function requires an Internet connection.
- If you agree to the Smart Hub terms and conditions, [Auto Update](#) is set to **On** automatically. If you do not want the TV's software to update itself automatically, set [Auto Update](#) to **Off**.

## 5. Wiring Diagram


### 5-1. Wiring Diagram

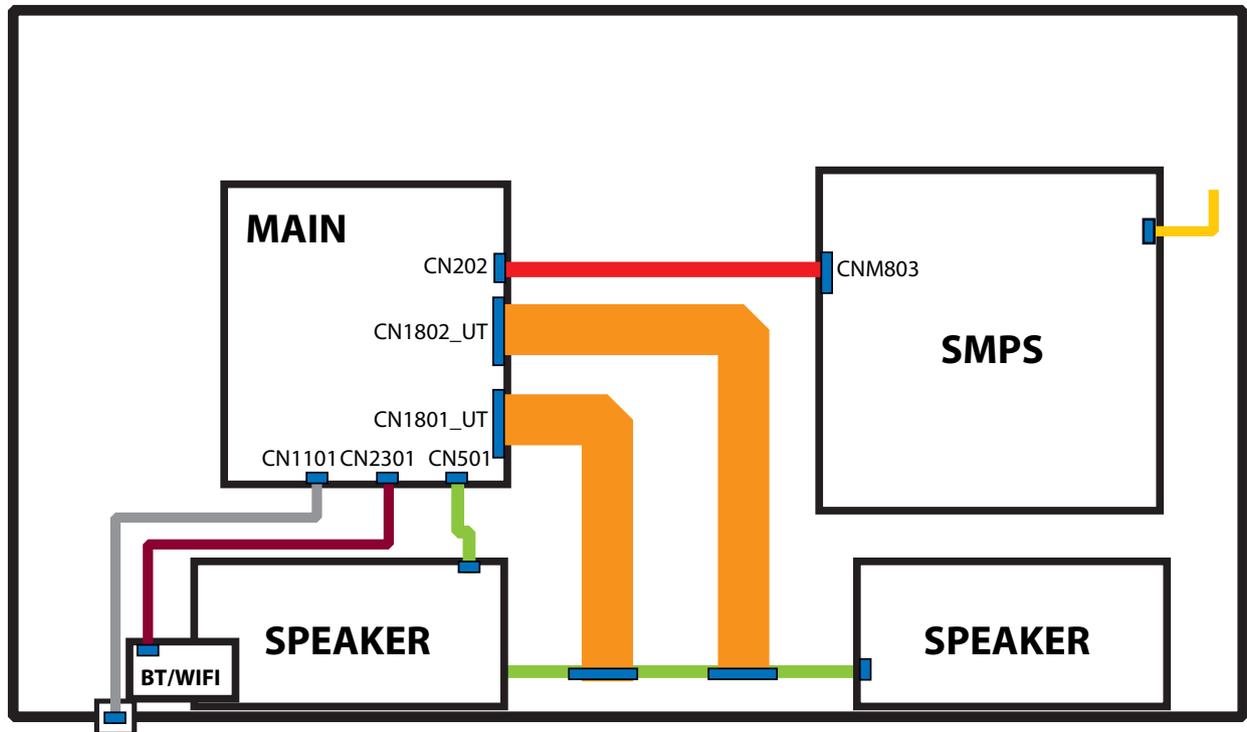

FUNCTION/IR

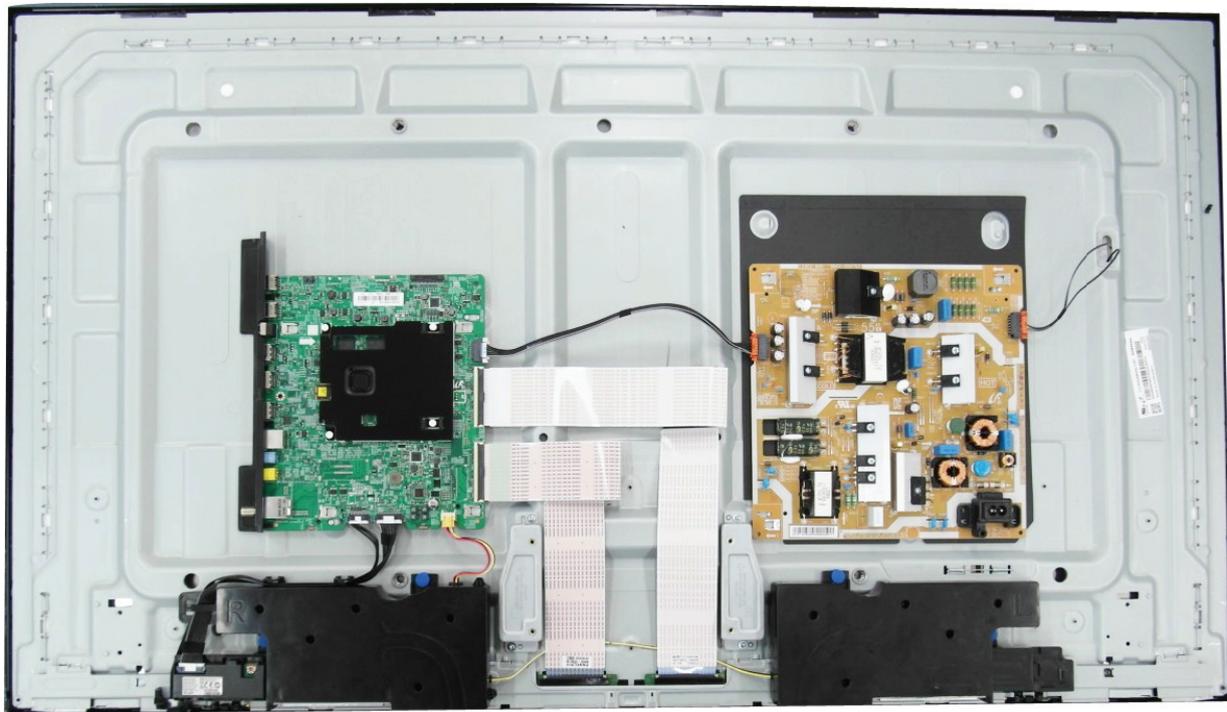


■ Cables

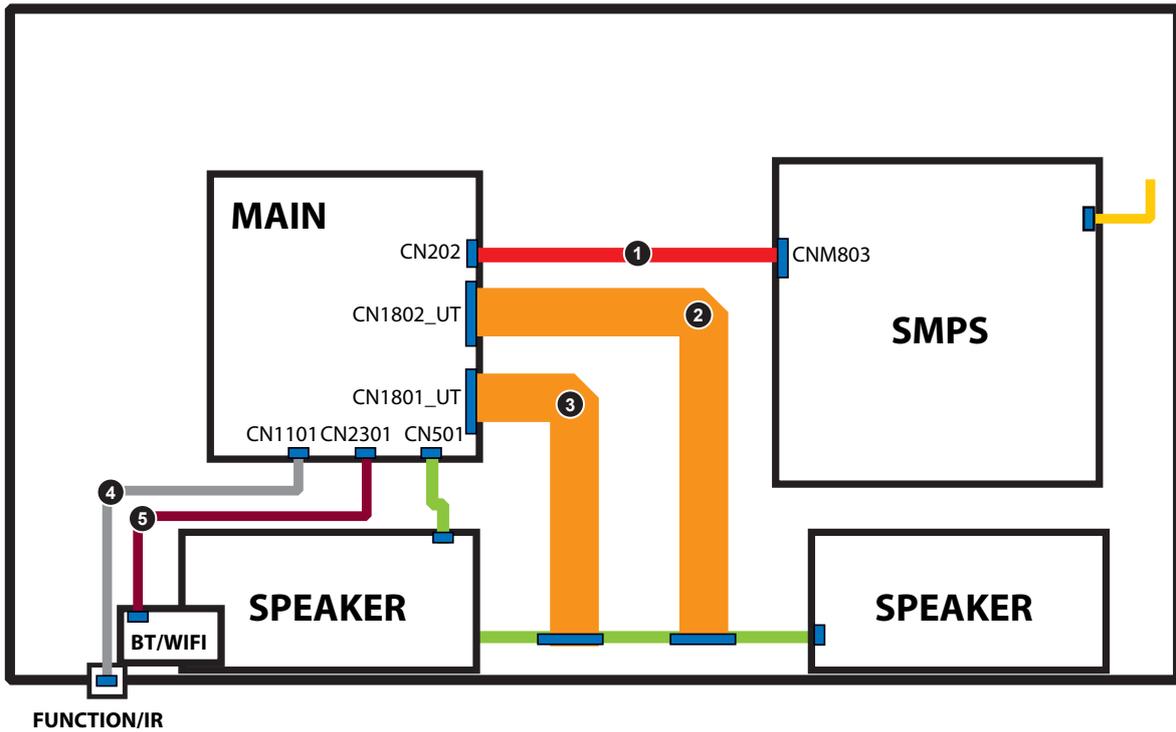

Cable Name	40"	43"	49"	55"	65"
① LEAD CONNECTOR-POWER SMPS - MAIN (12P)	BN39-02217D	BN39-02217D	BN39-02217C	BN39-02217C	BN39-02217E
② FFC CABLE MAIN - FT (96P)	BN96-39904B	BN96-39904B	BN96-39820B	BN96-39820B	BN96-39904B
③ FFC CABLE MAIN - FT (96P)	BN96-39821C	BN96-39821C	BN96-39821B	BN96-39821D	BN96-39821C
④ LEAD CONNECTOR-SUB ASSY MAIN - FUNCTION/Deco	BN39-02231D	BN39-02231D	BN39-02231D	BN39-02231D	BN39-02231C
⑤ LEAD CONNECTOR-SUB ASSY MAIN - BT/WIFI	BN39-02219E	BN39-02219D	BN39-02219E	BN39-02219D	BN39-02219D

## 5-2. Connector

### ■ Main Board

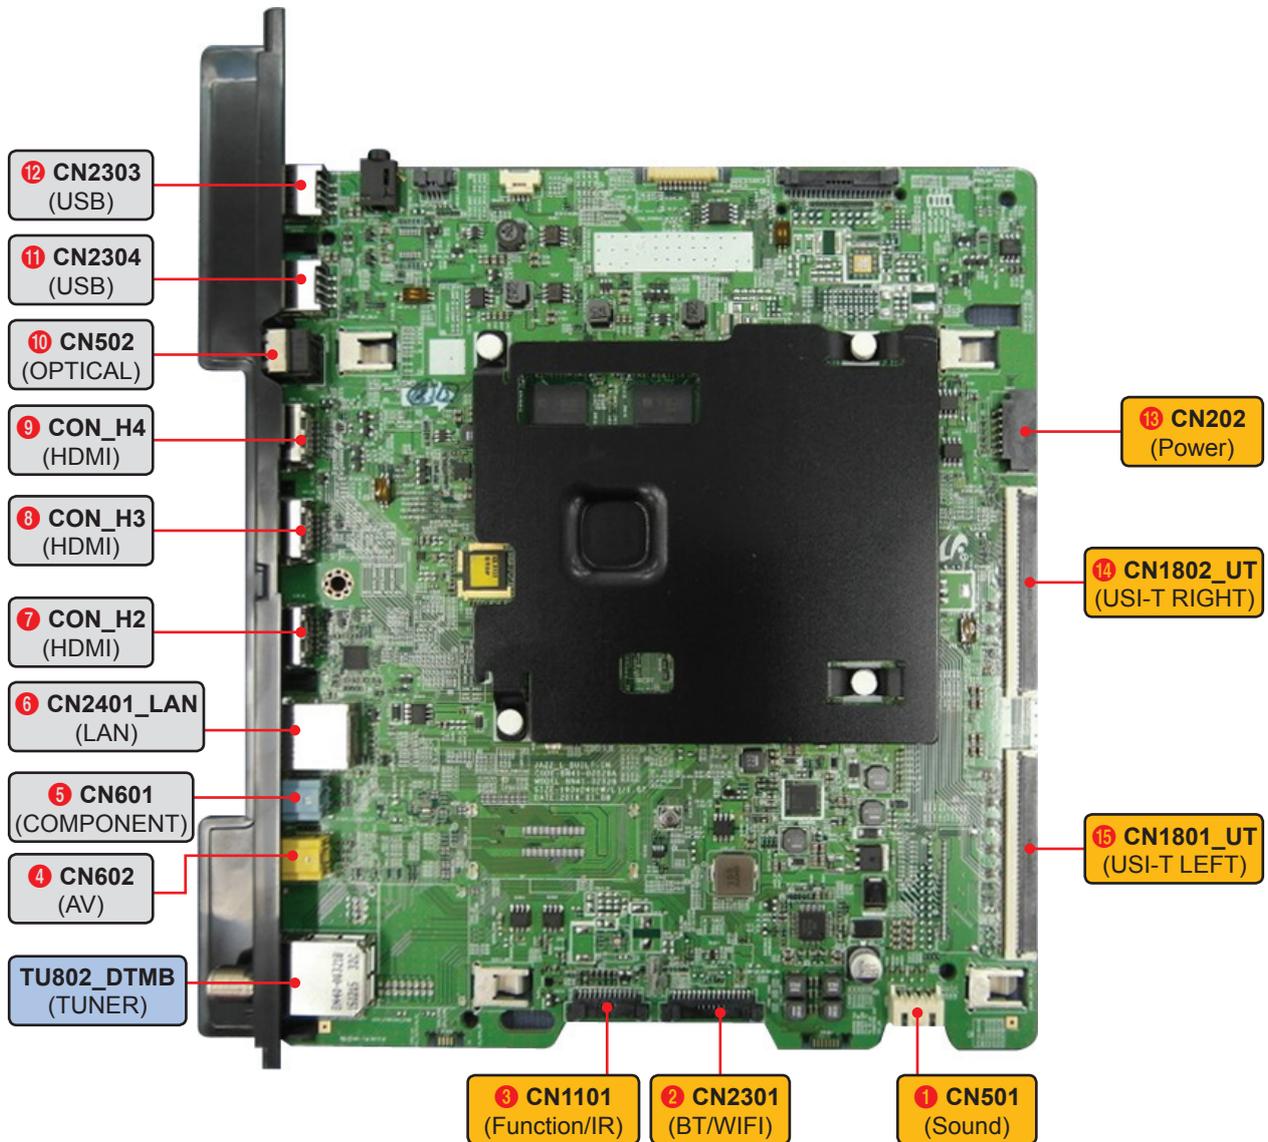

### ■ Main Board Pin Map

1 CN501 (SOUND)				2 CN2301 (BT/WIFI)			
1	OUT_C	3	OUT_D	1	BT_NRESET	9	WIFI_PHY_ON
2	OUT_A	4	OUT_B	2	BT_MODULE_WAKE	10	GND
				3	BT_WAKE	11	WIFI_D+_USB
				4	GND	12	WIFI_D-_USB
				5	BT_D-_USB	13	GND
				6	BT_D+_USB	14	A5V_PW
				7	GND	15	WIFI_WOL
				8	BT_WELCOME	16	WIFI_NRESET

## 5. Wiring Diagram

<b>3 CN1101 (FUNCTION/IR)</b>			
1	IR	7	KEY_INPUT2
2	GND	8	LED_STB_OUT
3	A3.3V_PW	9	NC
4	AMP_SCL_I2C	10	NC
5	AMP_SDA_I2C	11	NC
6	KEY_INPUT1	12	NC

<b>4 CN602 (AV)</b>			
1	GND	5	TEST_SR
2	AV1_CVBS_IN	6	TEST_SL
3	COMP_AV1_SR_IN	7	COMP_AV1_SL_IN
4	IDENT_VIDEO	8	

<b>5 CN601 (COMPONENT)</b>			
1	GND	5	TEST_PR
2	COMP_PB	6	GND
3	COMP_PR	7	GND
4	IDENT_COMP		

<b>6 CN2401_LAN (LAN)</b>			
1	LAN_TXD+_LAN	5	GND
2	GND	6	LAN_RXD-_LAN
3	LAN_TXD-_LAN	7	NC
4	LAN_RXD+_LAN	8	GND

<b>7 CON_H2 (HDMI)</b>			
1	HDMI2_RX2+_HDMI	11	GND
2	GND	12	HDMI2_RXC-_HDMI
3	HDMI2_RX2-_HDMI	13	CEC
4	HDMI2_RX1+_HDMI	14	GND
5	GND	15	HDMI2_SCL_DDC_BUFFER
6	HDMI2_RX1-_HDMI	16	HDMI2_SDA_DDC_BUFFER
7	HDMI2_RX0+_HDMI	17	GND
8	GND	18	HDMI2_IDENT
9	HDMI2_RX0-_HDMI	19	HDMI2_HPD
10	HDMI2_RXC+_HDMI	20	

<b>8 CON_H3 (HDMI)</b>			
1	HDMI3_RX2+_HDMI	11	GND
2	GND	12	HDMI3_RXC-_HDMI
3	HDMI3_RX2-_HDMI	13	CEC
4	HDMI3_RX1+_HDMI	14	GND
5	GND	15	HDMI3_SCL_DDC_BUFFER
6	HDMI3_RX1-_HDMI	16	HDMI3_SDA_DDC_BUFFER
7	HDMI3_RX0+_HDMI	17	GND
8	GND	18	HDMI3_IDENT
9	HDMI3_RX0-_HDMI	19	HDMI3_HPD
10	HDMI3_RXC+_HDMI	20	

<b>9 CON_H4 (HDMI)</b>			
1	HDMI4_RX2+_HDMI	11	GND
2	GND	12	HDMI4_RXC-_HDMI
3	HDMI4_RX2-_HDMI	13	CEC
4	HDMI4_RX1+_HDMI	14	GND
5	GND	15	HDMI4_SCL_DDC_BUFFER
6	HDMI4_RX1-_HDMI	16	HDMI4_SDA_DDC_BUFFER
7	HDMI4_RX0+_HDMI	17	GND
8	GND	18	HDMI4_IDENT
9	HDMI4_RX0-_HDMI	19	HDMI4_HPD
10	HDMI4_RXC+_HDMI	20	

<b>10 CN502 (OPTICAL)</b>			
1	SPDIF_OUT	3	GND
2	B5V_PW		

<b>11 CN2304 (USB)</b>			
1	B5V_USB1_PW	3	JACK_D+_USB1
2	JACK_D-_USB1	4	GND

<b>12 CN2303 (USB)</b>			
1	B5V_USB2_PW	3	JACK_D+_USB2
2	JACK_D-_USB2	4	GND

<b>13 CN202 (POWER)</b>			
1	GND	7	A13V_PW
2	GND	8	PWM_DIMMING_OUT1
3	A13V_PW	9	A13V_PW
4	GND	10	OVD_ON_OFF
5	A13V_PW	11	SMPS_FET_FAIL_DEFECT
6	SW_Power	12	ANA_DIMMING


14 CN1802_UT (USI-T RIGHT)							
1	FB_TRDY_E	2	GND	3	AVDD_17V_PW	4	AVDD_17V_PW
5	AVDD_17V_PW	6	AVDD_17V_PW	7	U_H_CELL	8	U_L_CELL
9	HAVDD_8.5V_PW	10	L_H_CELL	11	L_L_CELL	12	VCCB_1.8V_PW
13	VCCA_1.9V_PW	14	PI_DSIF_MONITOR	15	PORTNUM	16	GND
17	-	18	-	19	-	20	GND
21	SFC1	22	GND	23	JM_USIT_TX_CH8_A+	24	JM_USIT_TX_CH8_A-
25	GND	26	JM_USIT_TX_CH8_B+	27	JM_USIT_TX_CH8_B-	28	GND
29	JM_USIT_TX_CH9_A+	30	JM_USIT_TX_CH9_A-	31	GND	32	JM_USIT_TX_CH9_B+
33	JM_USIT_TX_CH9_B-	34	GND	35	JM_USIT_TX_CH10_A+	36	JM_USIT_TX_CH10_A-
37	GND	38	JM_USIT_TX_CH10_B+	39	JM_USIT_TX_CH10_B-	40	GND
41	JM_USIT_TX_CH11_A+	42	JM_USIT_TX_CH11_A-	43	GND	44	JM_USIT_TX_CH11_B+
45	JM_USIT_TX_CH11_B-	46	GND	47	JM_USIT_TX_CH12_A+	48	JM_USIT_TX_CH12_A-
49	GND	50	JM_USIT_TX_CH12_B+	51	JM_USIT_TX_CH12_B-	52	GND
53	JM_USIT_TX_CH13_A+	54	JM_USIT_TX_CH13_A-	55	GND	56	JM_USIT_TX_CH13_B+
57	JM_USIT_TX_CH13_B-	58	GND	59	JM_USIT_TX_CH14_A+	60	JM_USIT_TX_CH13_A-
61	GND	62	JM_USIT_TX_CH13_B+	63	JM_USIT_TX_CH14_B-	64	GND
65	JM_USIT_TX_CH15_A+	66	JM_USIT_TX_CH13_A-	67	GND	68	JM_USIT_TX_CH13_B+
69	JM_USIT_TX_CH15_B-	70	GND	71	SFC2	72	GND
73	-	74	ASG_MON_R_MB4	75	STVP_MB4	76	CKVB4_MB4
77	CKVB3_MB4	78	CKVB2_MB4	79	CKVB1_MB4	80	CKV4_MB4
81	CKV3_MB4	82	CKV2_MB4	83	CKV1_MB4	84	-
85	VOFF_-11V_PW	86	VSS_-7.5V_PW	87	-	88	VCOM3_CELL
89	FB_VCOM3_CELL	90	VCOM2_CELL	91	VCOM1_CELL	92	FB_VCOM4_CELL
93	PANEL_3.3V_PW	94	PANEL_3.3V_PW	95	FB_TRDY_3	96	GND

## 5. Wiring Diagram

15 CN1801_UT (USI-T LEFT)							
1	FB_TRDY_1	2	GND	3	PANEL_3.3V_PW	4	PANEL_3.3V_PW
5	FB_VCOM1_2CELL	6	VCOM1_CELL	7	VCOM2_CELL	8	VCOM3_CELL
9	VSS_-7.5V_PW	10	VOFF_-11V_PW	11	-	12	CKV1_MB4
13	CKV2_MB4	14	CKV3_MB4	15	CKV4_MB4	16	CKVB1_MB4
17	CKVB2_MB4	18	CKVB3_MB4	19	CKVB4_MB4	20	STVP_MB4
21	ASG_MON_L_MB4	22	-	23	GND	24	GND
25	DEMURA_SSPHOLD_SPI	26	DEMURA_SSPWP_SPI	27	DEMURA_SSPRXD_SPI	28	DEMURA_SSPTXD_SPI
29	DEMURA_SSPFRM_SPI	30	DEMURA_SSPCLK_SPI	31	GND	32	JM_USIT_TX_CH0_A+
33	JM_USIT_TX_CH0_A-	34	GND	35	JM_USIT_TX_CH0_B+	36	JM_USIT_TX_CH0_B-
37	GND	38	JM_USIT_TX_CH1_A+	39	JM_USIT_TX_CH1_A-	40	GND
41	JM_USIT_TX_CH1_B+	42	JM_USIT_TX_CH1_B-	43	GND	44	JM_USIT_TX_CH2_A+
45	JM_USIT_TX_CH2_A-	46	GND	47	JM_USIT_TX_CH2_B+	48	JM_USIT_TX_CH2_B-
49	GND	50	JM_USIT_TX_CH3_A+	51	JM_USIT_TX_CH3_A-	52	GND
53	JM_USIT_TX_CH3_B+	54	JM_USIT_TX_CH3_B-	55	GND	56	JM_USIT_TX_CH4_A+
57	JM_USIT_TX_CH4_A-	58	GND	59	JM_USIT_TX_CH4_B+	60	JM_USIT_TX_CH4_B-
61	GND	62	JM_USIT_TX_CH5_A+	63	JM_USIT_TX_CH5_A-	64	GND
65	JM_USIT_TX_CH5_B+	66	JM_USIT_TX_CH5_B-	67	GND	68	JM_USIT_TX_CH6_A+
69	JM_USIT_TX_CH6_A-	70	GND	71	JM_USIT_TX_CH6_B+	72	JM_USIT_TX_CH6_B-
73	GND	74	JM_USIT_TX_CH7_A+	75	JM_USIT_TX_CH7_A-	76	GND
77	JM_USIT_TX_CH7_B+	78	JM_USIT_TX_CH7_B-	79	GND	80	SFC1
81	GND	82	PI_DSF_MONITOR	83	PORTNUM	84	VCCA_1.9V_PW
85	VCCB_1.8V_PW	86	L_L_CELL	87	L_H_CELL	88	HAVDD_8.5V_PW
89	U_L_CELL	90	U_H_CELL	91	AVDD_17V_PW	92	AVDD_17V_PW
93	AVDD_17V_PW	94	AVDD_17V_PW	95	-	96	FB_TRDY_2

## ANNEX. Exploded View & Part List [UN40KU7000FXZA DA01]

### 1-1. Exploded View

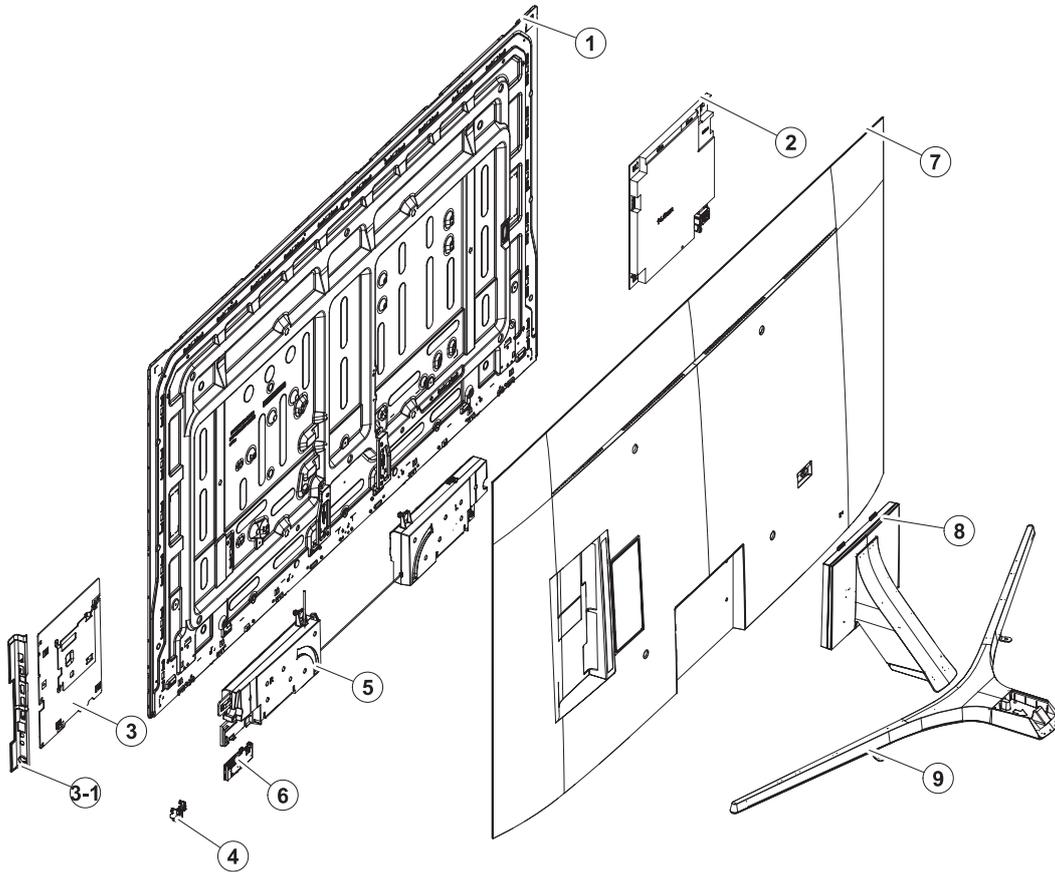

### 1-1-1. Parts List

No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
1	BN95-02648C	PRODUCT LCD-INX; CY-KK040HGNV3V/H,KU6400,	1	SA	
2	BN44-00875A	DC VSS-PD BOARD; L40E6_KSM,AC/DC,138W,100	1	SA	
3	BN94-10778A	ASSY PCB MAIN; LED 6K TV	1	SA	
3-1	BN63-15666A	COVER-TERMINAL SIDE; 43KU6500,HIPS,MOLD,H	1	SNA	
4	BN96-39802C	ASSY BOARD P-FUNCTION TACT; KS7000/7500/K	1	SA	
5	BN96-39964A	ASSY SPEAKER P-FRONT; TV-SPK,KU6400,6ohm,	1	SA	
6	BN59-01239A	NETWORK-WLAN CLIENT; WCK730B,USB 2.0,16P,	1	SA	
7	BN96-40121A	ASSY COVER P-REAR; 40KU6400,PC+ABS+ED20%,	1	SA	
8	BN96-40156A	ASSY GUIDE P-STAND; 43KU6400,PC+GF20%,BLA	1	SA	
9	BN96-40160B	ASSY STAND P-BOTTOM; 43KU6400,PC+ABS,TITA	1	SA	

## 2-1. Electrical Parts List

Service Bom (**SA**: SERVICE AVAILABLE, **SNA**: SERVICE NOT AVAILABLE)

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
			UN40KU7000FXZA (DA01)			
1	R001A	BN90-08099A	ASSY COVER REAR;LED TV 6K	1	SNA	
0.2	R001A	BN96-40121A	ASSY COVER P-REAR;40KU6400,PC+ABS+ED20%,	1	SA	
..3	R001	BN63-15231A	COVER-REAR;40KU6400,PC+ABS+ED20%,MOLD,V-	1	SNA	
..3		BN64-03571A	INLAY-TERMINAL SIDE;43KU6500,PET,T0.125,	1	SNA	
..3		BN68-07835A	LABEL-STICKER LICENSE;40K5500,PET,0.125,	1	SNA	
1	S001A	BN90-08119B	ASSY STAND;LED TV 6K	1	SNA	
0.2	SG01A	BN96-40156A	ASSY GUIDE P-STAND;43KU6400,PC+GF20%,BLA	1	SA	
..3		6902-002059	BAG PE;HDPE/PE FOAM,T0.015/T0.5,W300,L40	1	SNA	
..3	SG03	BN61-13609A	GUIDE-STAND;43KU6400,PC+GF20%,MOLD,V-2,B	1	SNA	
..3		BN63-11875X	SHEET-PROTECTION COVER;55KS7000,PO,T0.06	1	SNA	
..3		BN63-15463A	COVER-STAND NECK FRONT;43KU6400,PC+ABS,M	1	SNA	
..3		BN63-15467A	COVER-STAND NECK REAR;43KU6400,PC+ABS,MO	1	SNA	
..3		BN96-36261A	ASSY ACCESSORY-SCREW;JU7000 75",6003-001	1	SNA	
...4	SCREW	6003-001334	SCREW-TAPTYPE;BH,+,S,M4,L14,ZPC(BLK),SWR	4	SA	
...4		6902-002476	BAG SCREW;LDPE,T0.05*,W70,L90,TRP,RECYCL	1	SNA	
..3		BN96-40204A	ASSY COVER P-STAND DECORATION;43KU6400,P	1	SNA	
...4		BN61-13387A	HOLDER-COVER;55KU6500,TPE,BK0007,V-2,NYL	4	SNA	
...4		BN63-15473A	COVER-STAND DECORATION REAR;43KU6400,PC+	1	SNA	
0.2	SB02A	BN96-40160B	ASSY STAND P-BOTTOM;43KU6400,PC+ABS,TITA	1	SA	
..3	SCREW	6002-000126	SCREW-TAPPING;FH,+,-,2S,M3,L10,ZPC(BLK),	2	SA	
..3	SCREW	6003-001001	SCREW-TAPTYPE;FH,+,-,B,M3,L8,ZPC(BLK),SW	6	SA	
..3		6902-002463	BAG PE;HDPE/PE FOAM,T0.015/T0.5,W100,L40	2	SNA	
..3		6902-002469	BAG PE;HDPE/PE FOAM,T0.015/T0.5,W160,L30	1	SNA	
..3		BN60-00162E	SPACER-FOAM;PE FOAM,ROLL,GRAY,T0.5,W20	0	SNA	
..3		BN61-13595A	BRACKET-STAND BOTTOM;43KU6500,ALDC,MOLD,	1	SNA	
..3	RF01	BN67-00398L	FOOT-RUBBER;SILICONE,GRAY,T2	6	SNA	
..3		BN95-02793B	ASSY COVER STAND SMT-TOP;KU6500,43,TITAN	1	SNA	
...4		0204-007390	COATING;CVM92000(VOC,Mat3%),CLEAR,1.06	6	SNA	
...4		BN01-00160A	TARGET-CHROMIUM CY;Chromium,99.95%,1800x	0	SNA	
...4		BN63-11118P	SHEET-PROTECTION COVER;55K6200,PET,T0.04	1	SNA	
...4		BN63-15457A	COVER-STAND TOP;43KU6400,PC+ABS,MOLD,V-0	1	SNA	
..3		BN96-18013B	ASSY ACCESSORY-SCREW;ALL MODEL,6002-0012	1	SNA	
...4	SCREW	6002-001294	SCREW-TAPPING;BH,+,M4,L16,ZPC(BLK)	4	SA	
...4		BN69-08203B	BAG SCREW;LDPE,0.05,70,90,TRP,Vinyl pack	1	SNA	
1		BN90-08332C	ASSY W/I;UKU6400Q	1	SNA	
0.2		BN81-08159Z	A/S PART SET-ELEC W/I;LED TV ELEC spec-C	1	SNA	
0.2		BN81-12851Q	A/S PART SET-MECH W/I;UKU6400Q,U40KQ*	1	SNA	
1	M0017	BN91-17254A	ASSY CHASSIS;LED TV 6K	1	SNA	
0.2	M0014	BN94-10778A	ASSY PCB MAIN;LED 6K TV	1	SA	
..3		BN46-00524A	S/W MICOM;K4006U0F,INX,40D6AU**K,Flat	1	SNA	
..3		BN62-00817A	HEAT SINK-PS;55KU6000,A1050,T1.5,W115,L1	1	SNA	
..3		BN63-15666A	COVER-TERMINAL SIDE;43KU6500,HIPS,MOLD,H	1	SNA	
..3	T0527	BN68-00513A	LABEL-E PASS;ALL MODEL,WW,YUPO,W50,L15,W	1	SNA	

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...3		BN97-10915A	ASSY DRM;JAZZ-L,ATSC,NagSam, MAC, HDCP	1	SNA	
...4		BN46-00109H	KEY CODE-CERTIFICATION;MAC,TV/AV,General	1	SNA	
...4		BN46-00110P	KEY CODE-CERTIFICATION;MIRACAST(HDCP2.2)	1	SNA	
...4		BN46-00499A	KEY CODE-CERTIFICATION;JAZZ-L,Nagra CSC	1	SNA	
...3		BN97-10968A	ASSY SMD;LED 6K	1	SNA	
...4		0202-001976	SOLDER-CREAM;LST-309M-K21,20~38um,96.5Sn	4	SNA	
...4	DS01A	0401-001056	DIODE-SWITCHING;MMBD4148SE,100V,200mA,SO	1	SA	
...4		0403-001164	DIODE-ZENER;MMSZ5232B,5.32~5.88V,500mW,S	1	SA	
...4		0403-001783	DIODE-ZENER;BZB84-C6V2,5.8~6.6V,300mW,SO	3	SNA	
...4		0403-001831	DIODE-ZENER;KDZ12B,12~13.5V,1000mW,SOD-1	2	SA	
...4		0404-001307	DIODE-SCHOTTKY;SSC54,40V,5000mA,DO-214AB	1	SA	
...4		0404-001404	DIODE-SCHOTTKY;BAT721C,40V,200mA,SOT-23,	5	SA	
...4		0404-001640	DIODE-SCHOTTKY;SS1060HEWS,60V,1000mA,SOD	1	SA	
...4		0404-001881	DIODE-SCHOTTKY;SS3040-HE,40V,3000mA,SOD-	1	SA	
...4		0404-001953	DIODE-SCHOTTKY;MBRA340F-HAF,40V,3000mA,S	3	SA	
...4		0406-001200	DIODE-TVS;RClamp0504F,6V,1MAV,TP	2	SA	
...4		0406-001628	DIODE-TVS;AOZ8804ADI,6V,1MAV,5A,TP	1	SA	
...4		0406-001635	DIODE-TVS;SMF5.0A,6.4V,6.7V,7V,200MAV,20	1	SA	
...4		0406-001643	DIODE-TVS;1SMA33AT3G,36.7V,38.65V,40.6V,	1	SNA	
...4		0501-000002	TR-SMALL SIGNAL;KSA812,PNP,150mW,SOT-23,	1	SNA	
...4		0501-000445	TR-SMALL SIGNAL;KTC3875S-Y,NPN,150mW,SOT	7	SC	
...4		0502-001346	TR-POWER;FCX591A,PNP,1000mW,SOT89,TR,30/	1	SA	
...4		0504-000126	TR-DIGITAL;KSR1101,NPN,200mW,4.7K/4.7K,S	1	SA	
...4		0505-001844	FET-SILICON;SI4435DDY-T1-GE3,P,30V,-11.4	1	SA	
...4		0505-002560	FET-SILICON;AO6415,P,20V,-3.3A,0.15ohm,1	1	SA	
...4		0505-002598	FET-SILICON;AP2317GN,P,20V,-4.2A,0.052oh	1	SA	
...4		0505-002660	FET-SILICON;Si2308BDS,N,60V,2.3A,0.156oh	1	SNA	
...4		0505-002893	FET-SILICON;AO4801AS,P,30V,-5A,2W,SOIC-8	2	SA	
...4		0505-003205	FET-SILICON;DMG4435SSS-13,P,30V,-7.3A,1.	1	SA	
...4		0505-003391	FET-SILICON;AOD2922,N,100V,8A,140Mohm,18	1	SA	
...4		0505-003397	FET-SILICON;2N7002K,N,60V,0.38A,1.19ohm,	1	SA	
...4		0505-003507	FET-SILICON;AO3424,N,30V,3.8A,1.4W,SOT-2	5	SA	
...4		1001-001998	IC-ANALOG MULTIPLEX;NX3DV221GM,USB switc	2	SA	
...4		1103-001564	IC-EEPROM;S-24C512CI-J800,512Kbit,64Kx8,	1	SA	
...4		1105-002704	IC-DDR4 SDRAM;K4F8E304HB-MGCH,LPDDR4-SDR	1	SA	
...4		1105-002751	IC-DDR4 SDRAM;K4F2E3S4HM-MGCJ,LPDDR4-SDR	1	SA	
...4		1201-000166	IC-OP AMP;LM358,SOP,ST,8P,150MIL,DUAL,10	1	SA	
...4		1201-003690	IC-AUDIO AMP;TAS5747PHPR,QFP,48P,DUAL,PL	1	SA	
...4		1203-004364	IC-VOL. DETECTOR;RT9818C-42PV,SOT-23,3P,	1	SA	
...4		1203-008102	IC-POSI.FIXED REG.;S-13A1D12-E800,HSOP,8	1	SNA	
...4		1203-008104	IC-POSI.FIXED REG.;S-13A1D18-E800,HSOP,8	1	SNA	
...4		1203-008105	IC-POSI.FIXED REG.;S-13A1D33-E800,HSOP,8	1	SNA	
...4		1203-008319	IC-DC/DC CONVERTER;BM81233,QFN,32P,5x5mm	1	SNA	
...4		1203-008391	IC-DC/DC CONVERTER;AOZ1269QI-02,QFN-23L,	1	SA	
...4		1203-008392	IC-VOL. DETECTOR;S-6414AAB-L800X,TSOT-23	1	SA	
...4		1203-008454	IC-DC/DC CONVERTER;TPS56528,HSOP8,8,4,89	2	SA	
...4		1203-008522	IC-DC/DC CONVERTER;SN1501019DDCR,SOT-23,	2	SNA	

ANNEX. Exploded View & Part List

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4		1203-008655	IC-DC/DC CONVERTER;BM81249MWW,QFN,56,7x7	1	SA	
...4		1203-008732	IC-DC/DC CONVERTER;SYD104ADC,TSOT-23,6,3	1	SA	
...4		1203-008733	IC-DC/DC CONVERTER;AOZ1236QI-02,QFN,23,4	2	SA	
...4		1204-003697	IC-DECODER;SDP1531,FCPBGA,1046P,31x31,GL	1	SA	
...4		1205-004822	IC-SWITCH;TPS22965DSGR,SON,8P,2x2x0.75mm	3	SNA	
...4		1205-005325	IC-REPEATER;PS8409QFN48GTR2-A1,QFN,48P,6	1	SNA	
...4		1205-005519	IC-SWITCH;ET20163,SOT23-5,5P,2.95x3.02mm	2	SA	
...4		1405-001232	VARISTOR;6.4V,5.6Vdc,30A,1.6x0.8mm,TP,19	2	SNA	
...4		1405-001271	VARISTOR;35V,20VDC,5A,1.0x0.5mm,TP,100V,	15	SA	
...4		1405-001381	VARISTOR;11V,8VDC,30A,1.6x0.8mm,TP,25V,5	2	SA	
...4		1405-001382	VARISTOR;24.5V,16VDC,120A,2.0x1.25mm,TP,	1	SA	
...4		2007-000039	R-CHIP;0ohm,1%,1/10W,TP,1608	7	SA	
...4		2007-000043	R-CHIP;1Kohm,1%,1/10W,TP,1608	1	SA	
...4		2007-000052	R-CHIP;10Kohm,1%,1/10W,TP,1608	2	SA	
...4		2007-000066	R-CHIP;20Kohm,1%,1/10W,TP,1608	1	SNA	
...4		2007-000070	R-CHIP;0ohm,5%,1/10W,TP,1608	6	SA	
...4		2007-000143	R-CHIP;4.7Kohm,5%,1/16W,TP,1005	16	SA	
...4		2007-000171	R-CHIP;0ohm,5%,1/16W,TP,1005	29	SA	
...4		2007-000173	R-CHIP;22ohm,5%,1/16W,TP,1005	5	SA	
...4		2007-000683	R-CHIP;3.3Kohm,1%,1/10W,TP,1608	1	SA	
...4		2007-000726	R-CHIP;300ohm,1%,1/10W,TP,1608	3	SA	
...4		2007-000736	R-CHIP;30Kohm,1%,1/10W,TP,1608	1	SA	
...4		2007-000779	R-CHIP;33ohm,1%,1/10W,TP,1608	2	SA	
...4		2007-000932	R-CHIP;470ohm,5%,1/16W,TP,1005	3	SA	
...4		2007-000999	R-CHIP;510ohm,1%,1/10W,TP,1608	1	SA	
...4		2007-001125	R-CHIP;68Kohm,1%,1/10W,TP,1608	2	SA	
...4		2007-001288	R-CHIP;18ohm,5%,1/16W,TP,1005	4	SA	
...4		2007-001292	R-CHIP;33ohm,5%,1/16W,TP,1005	25	SA	
...4		2007-001298	R-CHIP;51ohm,5%,1/16W,TP,1005	10	SNA	
...4		2007-007107	R-CHIP;100Kohm,1%,1/16W,TP,1005	14	SNA	
...4		2007-007131	R-CHIP;13Kohm,1%,1/16W,TP,1005	4	SA	
...4		2007-007132	R-CHIP;15Kohm,1%,1/16W,TP,1005	2	SA	
...4		2007-007136	R-CHIP;4.7Kohm,1%,1/16W,TP,1005	65	SNA	
...4		2007-007137	R-CHIP;1.2Kohm,1%,1/16W,TP,1005	3	SA	
...4		2007-007138	R-CHIP;27Kohm,1%,1/16W,TP,1005	3	SA	
...4		2007-007139	R-CHIP;47Kohm,1%,1/16W,TP,1005,T0.35	14	SA	
...4		2007-007142	R-CHIP;10Kohm,1%,1/16W,TP,1005	27	SA	
...4		2007-007306	R-CHIP;100ohm,1%,1/16W,TP,1005	26	SNA	
...4		2007-007309	R-CHIP;12Kohm,1%,1/16W,TP,1005,T0.35	1	SA	
...4		2007-007310	R-CHIP;8.2Kohm,1%,1/16W,TP,1005	1	SA	
...4		2007-007312	R-CHIP;20Kohm,1%,1/16W,TP,1005	11	SA	
...4		2007-007313	R-CHIP;6.8Kohm,1%,1/16W,TP,1005	4	SA	
...4		2007-007318	R-CHIP;1Kohm,1%,1/16W,TP,1005	13	SA	
...4		2007-007334	R-CHIP;200Kohm,1%,1/16W,TP,1005	5	SA	
...4		2007-007488	R-CHIP;75Kohm,1%,1/16W,TP,1005	5	SNA	
...4		2007-007517	R-CHIP;240ohm,1%,1/16W,TP,1005	6	SNA	
...4		2007-007528	R-CHIP;1.5Kohm,1%,1/16W,TP,1005	5	SA	

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4		2007-007720	R-CHIP;300Kohm,1%,1/10W,TP,1608	1	SA	
...4		2007-007723	R-CHIP;75Kohm,1%,1/10W,TP,1608	2	SA	
...4		2007-007766	R-CHIP;2Kohm,1%,1/16W,TP,1005	19	SA	
...4		2007-007767	R-CHIP;200ohm,1%,1/16W,TP,1005	8	SA	
...4		2007-007798	R-CHIP;10ohm,1%,1/16W,TP,1005	9	SA	
...4		2007-007847	R-CHIP;16Kohm,1%,1/10W,TP,1608	5	SA	
...4		2007-007942	R-CHIP;1Mohm,1%,1/16W,TP,1005	1	SNA	
...4		2007-007981	R-CHIP;180Kohm,1%,1/16W,TP,1005	1	SNA	
...4		2007-008015	R-CHIP;75ohm,1%,1/16W,TP,1005	9	SA	
...4		2007-008263	R-CHIP;3Kohm,1%,1/16W,TP,1005	2	SA	
...4		2007-008269	R-CHIP;51Kohm,1%,1/16W,TP,1005	3	SA	
...4		2007-008298	R-CHIP;49.9ohm,1%,1/16W,TP,1005	4	SA	
...4		2007-008391	R-CHIP;6.34Kohm,1%,1/16W,TP,1005	2	SA	
...4		2007-008596	R-CHIP;0.1ohm,1%,1/4W,TP,3216	2	SC	
...4		2007-008779	R-CHIP;0ohm,1%,1/16W,TP,1005	3	SA	
...4		2007-009117	R-CHIP;49.9Kohm,1%,1/16W,TP,1005	1	SA	
...4		2007-009322	R-CHIP;1.3Kohm,1%,1/16W,TP,1005	2	SA	
...4		2007-009777	R-CHIP;4.99Kohm,1%,1/16W,TP,1005	2	SA	
...4		2011-001264	R-NETWORK;10ohm,5%,1/16W,L,CHIP,8P,TP,2.	8	SNA	
...4	AD480	2203-000233	C-CER,CHIP;0.1nF,5%,50V,C0G,TP,1005	4	SA	
...4	AD480	2203-000254	C-CER,CHIP;10nF,10%,16V,X7R,TP,1005	5	SA	
...4	AD480	2203-000278	C-CER,CHIP;0.01nF,0.5pF,50V,C0G,TP,1005	2	SA	
...4	AD480	2203-000359	C-CER,CHIP;0.15nF,5%,50V,C0G,TP,1005,0.5	3	SA	
...4	AD480	2203-000386	C-CER,CHIP;0.015nF,5%,50V,C0G,TP,1005	3	SA	
...4	AD480	2203-000438	C-CER,CHIP;1nF,10%,50V,X7R,TP,1005	10	SA	
...4	AD480	2203-000489	C-CER,CHIP;2.2nF,10%,50V,X7R,TP,1005	3	SA	
...4	AD480	2203-000585	C-CER,CHIP;0.22nF,10%,50V,X7R,TP,1005	3	SA	
...4	AD480	2203-000812	C-CER,CHIP;0.033nF,5%,50V,C0G,TP,1005	5	SA	
...4	AD480	2203-000838	C-CER,CHIP;0.39nF,5%,50V,C0G,TP,1608	1	SA	
...4	AD480	2203-000940	C-CER,CHIP;0.47nF,10%,50V,X7R,TP,1005	1	SA	
...4	AD480	2203-002285	C-CER,CHIP;10nF,10%,50V,X7R,TP,1005	5	SNA	
...4	AD480	2203-002398	C-CER,CHIP;22nF,10%,50V,X7R,TP,1608	1	SNA	
...4	AD480	2203-005054	C-CER,CHIP;0.0047nF,0.25pF,50V,NP0,TP,10	2	SA	
...4	AD480	2203-005083	C-CER,CHIP;220nF,10%,50V,X7R,TP,1608,0.8	6	SA	
...4	AD480	2203-005249	C-CER,CHIP;100nF,10%,50V,X7R,TP,1608	4	SA	
...4	AD480	2203-005968	C-CER,CHIP;4.7nF,10%,50V,X7R,TP,1005,0.5	2	SNA	
...4	AD480	2203-006048	C-CER,CHIP;100nF,10%,10V,X7R,TP,1005	8	SA	
...4	AD480	2203-006126	C-CER,CHIP;47nF,10%,16V,X7R,TP,1005	3	SNA	
...4	AD480	2203-006158	C-CER,CHIP;100nF,10%,16V,X7R,TP,1005,T0.	106	SA	
...4	AD480	2203-006324	C-CER,CHIP;2200nF,10%,10V,X5R,TP,1608	16	SA	
...4	AD480	2203-006348	C-CER,CHIP;1000nF,10%,25V,X5R,TP,1608,0.	2	SA	
...4	AD480	2203-006562	C-CER,CHIP;1000nF,10%,10V,X5R,TP,1005	28	SNA	
...4	AD480	2203-006698	C-CER,CHIP;1000nF,10%,25V,X7R,TP,1608,0.	7	SA	
...4	AD480	2203-006824	C-CER,CHIP;4700nF,10%,10V,X5R,TP,1608	5	SNA	
...4	AD480	2203-006838	C-CER,CHIP;2200nF,10%,6.3V,X5R,TP,1005	9	SA	
...4	AD480	2203-006844	C-CER,CHIP;470nF,10%,10V,X5R,TP,1005	2	SA	
...4	AD480	2203-006890	C-CER,CHIP;10000nF,20%,6.3V,X5R,TP,1608	30	SNA	

ANNEX. Exploded View & Part List

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4	AD480	2203-007176	C-CER,CHIP;10000nF,10%,16V,X5R,TP,2012,1	23	SNA	
...4	AD480	2203-007240	C-CER,CHIP;22000nF,20%,6.3V,X5R,TP,1608(	72	SA	
...4	AD480	2203-007269	C-CER,CHIP;22000nF,20%,10V,X5R,TP,2012(2	12	SA	
...4	AD480	2203-007306	C-CER,CHIP;10000nF,10%,25V,X5R,TP,2012,1	36	SNA	
...4	AD480	2203-007513	C-CER,CHIP;10000nF,10%,10V,X5R,TP,1608,0	21	SA	
...4	AD480	2203-007544	C-CER,CHIP;100nF,10%,50V,X7R,TP,1005,0.5	36	SA	
...4	AD480	2203-008315	C-CER,CHIP;22000nF,20%,25V,X5R,TP,2012,T	4	SA	
...4		2402-001268	C-AL,SMD;100uF,20%,25V,WT,TP,8x6.3mm	1	SA	
...4		2409-001240	C-ORGANIC,SMD;33uF,20%,25V,LR,TP,7343(1.	1	SA	
...4		2409-001338	C-POLYMER ,CHIP;47uF,20%,6.3V,TP,3.2x1.6	1	SA	
...4		2703-000213	INDUCTOR-SMD;470nH,10%,1.35Ohm,35mA,15,M	1	SA	
...4		2703-001938	INDUCTOR-SMD;56nH,5%,1005,1.5Ohm,200mA,1	3	SA	
...4		2703-003149	INDUCTOR-SMD;2.2uH,20%,0.055Ohm,3000mA,W	1	SA	
...4		2703-003747	INDUCTOR-SMD;22uH,20%,6060,0.135ohm,1300	2	SA	
...4		2703-003862	INDUCTOR-SMD;10uH,20%,6060,0.065ohm,1900	3	SA	
...4		2703-003913	INDUCTOR-SMD;2.2uH,20%,2520,1.2T,0.116Oh	1	SNA	
...4		2703-003937	INDUCTOR-SMD;1uH,20%,7.0x6.47x3.0mm,0.00	3	SA	
...4		2703-004630	INDUCTOR-SMD;2.2uH,20%,5.0T,0.0025Ohm,66	1	SNA	
...4		2703-004724	INDUCTOR-SMD;8.2uH,20%,4T,0.072Ohm,2300m	4	SA	
...4		2703-005191	INDUCTOR-SMD;1.5uH,20%,4.5,0.02Ohm,5300m	1	SA	
...4		2703-005193	INDUCTOR-SMD;2.2uH,20%,4.5,0.024Ohm,5100	2	SA	
...4		2703-005376	INDUCTOR-SMD;10uH,20%,10x10.7mm,4.0T,0.0	1	SA	
...4		2801-004021	CRYSTAL-SMD;24.576MHz,20ppm,28-AAN,12pF,	1	SA	
...4		3301-001364	BEAD-SMD;1000ohm,1608,TP,1085ohm/108MHz,	4	SNA	
...4		3301-002039	BEAD-SMD;26ohm,1608,TP	33	SA	
...4		3601-001374	FUSE-SURFACE MOUNT;32V,5A,FAST-ACTING,PL	3	SA	
...4		3601-001376	FUSE-SURFACE MOUNT;32V,3A,FAST-ACTING,Hi	2	SNA	
...4		3701-001967	CONNECTOR-HDMI;19P,A,FEMALE,AU,0.5mm,BLK	3	SA	
...4		3707-001103	CONNECTOR-OPTICAL;ANGLE,SPDIF,2.5PI	1	SA	
...4		3708-003241	CONNECTOR-FPC/FFC/PIC;96P,0.5mm,SMD-A,AU	2	SNA	
...4	EH01	3711-007803	HEADER-BOARD TO CABLE;BOX,12P,1R,1.25mm,	1	SA	
...4	EH01	3711-008098	HEADER-BOARD TO CABLE;BOX,20P,1R,1.25mm,	1	SNA	
...4	EH01	3711-008131	HEADER-BOARD TO CABLE;BOX,4P,1R,2.5mm,AN	1	SA	
...4	EH01	3711-008859	HEADER-BOARD TO CABLE;BOX,12P,2R,2mm,ANG	1	SA	
...4		3711-009090	CONNECTOR-HEADER;BOX,16P,1R,1.25mm,SMD-A	1	SA	
...4		3722-003199	JACK-MODULAR;8P/8C,Y,ANGLE,NONE,AU,1PORT	1	SA	
...4		3722-003457	JACK-USB;4P/1C,NI,BLK,ANGLE,A,2.0,13.1x1	2	SA	
...4		3722-003814	JACK-PHONE;1P/7C,NI/SN,YEL,ANGLE,3.5PI,1	1	SA	
...4	JACK	3722-003873	JACK-PHONE;1P/7C,AU/SN,BLU,ANGLE,3.5PI,1	1	SA	
...4		6302-001376	GASKET-SMD;,,CONDUCTIVE FABRIC,T14,W43,L	7	SNA	
...4		BN13-00067B	IC-PLD;MAXQ636V-2605+T,9,3.3,1.64,3.6,0t	1	SNA	
...4		BN40-00321B	TUNER-DTV AIR CABLE;GVTH-6A21,GVTH-6A21,	1	SA	
...4		BN41-02528A	PCB-MAIN;KU6000,FR-4,4L,1.6T,193x241mm,1	1	SNA	
...4	CB07	BN61-13312B	BRACKET-PCB;55KS8000,SK5,0.3,13.7,11.4,S	4	SNA	
...4		BN68-04746A	LABEL-SMD;all model,POLY*,polyester,comm	1	SNA	
...4		BN97-10863A	ASSY MICOM-SUB;JMMICOM_TV,UWP60,W25Q40CL	1	SNA	
...5		1107-002226	IC-NOR FLASH;W25Q40CLSSIP,4Mbit,SOIC,8P,	1	SA	

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4		BN97-10927A	ASSY MICOM;TCON,KU6k,40-INX-Flat,W25Q80D	1	SNA	
....5		1107-002339	IC-NOR FLASH;W25Q80DV,8Mbit,SOP,5.28x5.2	1	SNA	
....5		BN46-00515A	S/W MICOM;Jazz M-L,TCON F/W	1	SNA	
...4		BN97-10946A	ASSY MICOM;T-JZMAKUC,UWP60,THGBMHG6C1LBA	1	SNA	
....5		1107-002422	IC-EMMC;8GB,64Gbx1,BGA,153P,11.50 x 13.0	1	SA	
1		BN91-17323A	ASSY SHIELD;LED TV 6K	1	SNA	
0.2	SCREW	6001-003016	SCREW-MACHINE;PWH,+,M3.0,L5.0,ZPC(WHT),S	2	SA	
0.2		BN02-00102K	TAPE-FILAMENT;FILAMENT,T0.15,W25,ROLL,WH	0	SNA	
0.2		BN39-02217D	LEAD CONNECTOR-POWER;43K5500,UL21016,12P	1	SA	
0.2		BN39-02219E	LEAD CONNECTOR-SUB ASSY;55K6200,UL21016,	1	SA	
0.2		BN39-02231D	LEAD CONNECTOR-SUB ASSY;43KU6400,UL21016	1	SA	
0.2		BN44-00875A	DC VSS-PD BOARD;L40E6_KSM,AC/DC,138W,100	1	SA	
0.2	WIFI	BN59-01239A	NETWORK-WLAN CLIENT;WCK730B,USB 2.0,16P,	1	SA	
0.2		BN96-39802C	ASSY BOARD P-FUNCTION TACT;KS7000/7500/K	1	SA	
0.2		BN96-39821C	FFC CABLE;49KU6500,Fold,L350,96P	1	SA	
0.2		BN96-39904B	FFC CABLE;65KU6400,Fold,L550,96P	1	SA	
0.2		BN96-39964A	ASSY SPEAKER P-FRONT;TV-SPK,KU6400,6ohm,	1	SA	
1		BN92-19769A	ASSY LABEL;LED TV 6K	1	SNA	
0.2		BN68-05050A	LABEL-RATING;ALL MODEL,SS,PE,T0.05,W93,L	1	SNA	
0.2		BN68-07841D	LEAFLET-QUICK SETUP GUIDE;KU7000,ZA,W/P,	1	SNA	
0.2		BN68-07964T	LABEL-ENERGY;UN40KU7000FXZA,PET,T0.1,W38	1	SNA	
0.2		BN74-00053G	TAPE-PAPER;PAPER,3M2307,0.14T,W10,60M,WH	0	SNA	
1		BN92-19794A	ASSY BOX;LED TV 6K	1	SNA	
0.2		BH68-00697A	LABEL BOX;ALL,ART,90g,W60,L100,WHT,NO SI	1	SNA	
0.2		BN69-13623B	BOX UNIT;39.5KU7000,CB,SW2,F1,L1023,W155	1	SNA	
1		BN92-19818A	ASSY P/MATERIAL;LED TV 6K	1	SNA	
0.2		6902-001612	BAG ROLL;HDPE/PE FOAM,T0.5/T0.015,W1200,	1	SNA	
0.2		6922-000013	BAND;PP,W18,L2300/L2900,TRP	1	SNA	
0.2		BH69-00418A	WRAP;762,1828M,SAMEX FACTORY	1	SNA	
0.2		BN02-00319B	TAPE-OPP;OPP,T0.05,W75,L800m,CLEAR	2	SNA	
0.2	AS080	BN63-07229A	SHEET-PROTECTION COVER;rose70",PET,T0.05	1	SNA	
0.2		BN68-02422B	LABEL-WARNING;ALL,ART,T0.05,W240,L100,Wh	1	SNA	
0.2		BN69-00391U	PACKING ANGLE;PAPER	1	SNA	
0.2		BN69-13183A	CUSHION-SET;39.5KU6400,EPS,16.7g/l,WHT,Y	1	SNA	
1	ACCE1	BN92-20003D	ASSY ACCESSORY;LED TV 6K	1	SNA	
0.2		BN96-35090D	ASSY ACCESSORY-MANUAL CABLE;LED_H6K	1	SNA	
..3	T0268	3903-001117	CBF-POWER CORD;DT,USA,Angle,2P(C7),125V,	1	SA	
..3		4301-000101	BATTERY-ALKALINE;1.5V,1650mAH,LR6,14.5x5	2	SNA	
..3		6801-002215	CARD COUPON;7 Series and SUHD, SEA,PLAST	1	SNA	
..3		6902-001962	BAG PE;LDPE,BIOBASED,T0.05,W400,L300,TRP	1	SNA	
..3	EC03	BN39-02189A	GENDER CABLE;DC to RCA Cable,3P,L100,UL2	1	SA	
..3	EC03	BN39-02190A	GENDER CABLE;DC to RCA Cable,2P,L100,UL2	1	SA	
..3		BN59-01241A	REMOCON-SMART CONTROL;2016 TV,Samsung,14	1	SA	
..3		BN68-04972E	LEAFLET-REGULATORY GUIDE;ALL,SAMSUNG,W/W	1	SNA	
..3		BN68-05723A	LABEL-ACCESSORY;ALL MODELS,YUPO,T0.2,W20	1	SNA	
..3		BN68-07920F	MANUAL USERS;KU7000,ZA,W/P,ISO B5	1	SNA	
..3		BN96-40152A	ASSY HOLDER P-CABLE;65KS7500,ABS,BK0007,	1	SNA	

## ANNEX. Exploded View &amp; Part List

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4		BN61-04692A	ADHESIVE-AA;SHEET,CLEAR,C043	0	SNA	
...4		BN61-05704A	TAPE-DOUBLE FACE;T1.1,W8,Dark Gray,3M #4	0	SNA	
...4	AH089	BN61-13777A	HOLDER-CABLE;55KS7500,ABS,T15,BK0007,HB,	1	SNA	
...4	AS080	BN63-07556W	SHEET-PROTECTION COVER;F-LED,PO,W12,ROLL	0	SNA	
..3	EH03A	BN96-40460A	ASSY HOLDER P-RING;55KS7500,ABS,BLACK,V-	1	SNA	
...4		6902-001404	BAG PE;LDPE,T0.05,W80,L100,TRP,N	1	SNA	
...4		BN61-13518A	HOLDER-WALL RING;55KS7500,ABS,MOLD,BK000	4	SA	
1	PANEL	BN95-02648C	PRODUCT LCD-INX;CY-KK040HGNV3V/H,KU6400,	1	SA	
0.2		BN68-05595A	LABEL-STICKER;ART 100G,T0.2,W80X23,WHITE	1	SNA	
0.2		BN74-00053E	TAPE-PAPER;PAPER,3M2307,0.14T,W20,50m,WH	0	SNA	
0.2		BN90-08239A	ASSY MISC-BLU;Y16,LCM	1	SNA	
..3		6001-002912	SCREW-MACHINE;CH,+,M3,L3,ZPC(BLK),SWRCH1	8	SA	
..3		BN61-13837A	LGP;16Y_KU6400_39.5INCH_LGP,MS,BOTTOM LE	1	SNA	
..3		BN61-13850A	OPTICAL SHEET-REFLECTOR;16Y_KU6400_39.5I	1	SNA	
..3		BN61-13851A	OPTICAL SHEET-COMPLEX;16Y_KU6400_39.5INC	1	SNA	
..3		BN61-14082A	HOLDER-LGP;55KS7000,PC,MOLD,WT0044,V-2	1	SNA	
..3		BN96-39627A	ASSY LED BAR P;39.5 KU6400(INX),Left,ALU	1	SNA	
..3		BN96-39628A	ASSY LED BAR P;39.5 KU6400(INX),Right,AL	1	SNA	
..3		BN96-40443A	ASSY CHASSIS REAR P;40KU6400,EGI-SECC,NA	1	SNA	
...4	SCREW	6001-003016	SCREW-MACHINE;PWH,+,M3.0,L5.0,ZPC(WHT),S	4	SA	
...4		6041-001068	RIVET-PH;SWRCH10A,OD3.2,L4.3,ZPC(WHT)	10	SNA	
...4		BN02-00102B	TAPE-FILAMENT;#8917,0.15,25,50,WHITE	0	SNA	
...4		BN02-00352H	TAPE PET;49"MEGA 2,PET,T0.05,W15,L18,BLA	2	SNA	
...4		BN02-00493A	TAPE PET;55KS9000,PET,T0.05,W5,L50,BLACK	3	SNA	
...4		BN02-00508A	TAPE PET;65KS7000,PET,T0.05,W13,L70,BLAC	3	SNA	
...4		BN39-02184A	LEAD CONNECTOR-BLU;39.5KU6400,UL21016,12	1	SNA	
...4		BN60-00988T	SPACER-SILICONE;55KS9000,SI,L10,BLACK,T2	2	SNA	
...4		BN60-01460A	SPACER-FOAM;78KS9800,PU FOAM,ROLL,BLACK,	0	SNA	
...4		BN60-01463B	SPACER-SILICONE;43KU6400,SI,L10,GRAY,T2.	2	SNA	
...4		BN61-08235A	HOLDER-LGP;SNB,SWRCH10A,BLACK,PRESS	2	SNA	
...4		BN61-08235F	HOLDER-LGP;55KS7500,SWRCH10A,EXTRUSION,S	1	SNA	
...4		BN61-11982B	HOLDER-WALL RIVET;55KS7000,CR-SPCC,EXTRU	4	SNA	
...4		BN61-13324A	BRACKET-LED PCB;40KU6400,AI,T1.5,NATURAL	1	SNA	
...4		BN61-13327A	HOLDER-SHEET;55KS7500,ABS,BK0007,HB,COMM	3	SNA	
...4		BN61-13557A	BRACKET-WIRE;KS7000,SW-C,1,60,SILVER	4	SA	
...4		BN61-13557L	BRACKET-WIRE;40KU6400,SW-C,T1,NATURAL,ZI	4	SA	
...4	CB18	BN61-13606A	BRACKET-STAND LINK;55KU6400,EGI-SECC,T1.	1	SNA	
....5		BN61-09605A	STUD-PEM;LED TV F6100,SUM24L,L8	4	SNA	
...4	CB18	BN61-13607A	BRACKET-STAND LINK;55KU6400,EGI-SECC,T1.	1	SNA	
...4		BN63-15673A	INSULATOR-SOURCE PCB;40KU6400,PET,BLACK,	1	SNA	
...4		BN63-15674A	INSULATOR-SMPS;43KU6400,PC,BLACK,L250,W1	1	SNA	
...4	CC04	BN64-03429A	CHASSIS-REAR;EGI-SECC,SECC-AG,39.5"	1	SNA	
...4	T0527	BN68-00513A	LABEL-E PASS;ALL MODEL,WW,YUPO,W50,L15,W	1	SNA	
..3		BN96-40446A	ASSY FRAME P-MIDDLE;40KU6400,PC+GF10%,V-	1	SNA	
...4		BN60-01126L	SPACER-SILICONE;40KU6400,SI,L886,GRAY,T0	2	SNA	
...4		BN60-01126M	SPACER-SILICONE;40KU6400,SI,L485,GRAY,T0	2	SNA	
...4		BN60-01479A	SPACER-FOAM;40KU6400,PU FOAM,L886,WHITE,	1	SNA	

Level	Location No.	Code No.	Description & Specification	Q'ty	SA/SNA	Remark
...4		BN61-13509A	FRAME-MIDDLE;40KU6400,PC+GF10%,V-2,BK004	1	SNA	
0.2		BN96-30948A	ASSY OPEN CELL;V400DK1-QS1,16:9,39.5inch	1	SNA	
..3		BN81-12989A	A/S-IC DRIVER SOURCE;IC DRIVER SOURCE,61	1	SNA	
..3		BN81-12990A	A/S-IC DRIVER GATE;IC DRIVER GATE,6101B0	1	SNA	
..3		BN81-12991A	A/S-POLARIZER CF;POLARIZER CF,4101B003S6	1	SNA	
..3		BN81-12992A	A/S-POLARIZER TFT;POLARIZER TFT,4101B003	1	SNA	
..3		BN81-13143A	A/S-SOURCE PCB LEFT;SOURCE PCB LEFT,6B01	1	SNA	
..3		BN81-13144A	A/S-SOURCE PCB RIGHT;SOURCE PCB RIGHT,6B	1	SNA	
0.2		BN96-40463A	ASSY COVER P-SOURCE PCB;40KU6400,EGI-SEC	1	SNA	
..3		BN63-15389A	COVER-SOURCE PCB;40KU6400,EGI-SECC,T0.6,	1	SNA	
..3		BN63-15783A	INSULATOR-SOURCE PCB COVER;40KU6400,PET,	1	SNA	
0.2		BN96-40640C	ASSY CHASSIS FRONT P;40KU6400,AI,DARK TI	1	SNA	
..3		BN60-00715A	SPACER-CONDUCTIVE;Y13 Slim F-LED,CONDUCT	2	SNA	
..3		BN60-00715D	SPACER-CONDUCTIVE;LCM MNT 28,CONDUCTIVE	4	SNA	
..3		BN60-01178P	SPACER-CONDUCTIVE;40KU6400,CONDUCTIVE FA	2	SNA	
..3		BN60-01178Q	SPACER-CONDUCTIVE;40KU6400,CONDUCTIVE FA	2	SNA	
..3		BN61-09308A	ADHESIVE-TP;F8K,GREEN,ACRYL	0	SNA	
..3		BN63-11118G	SHEET-PROTECTION COVER;55K6200,PET,T0.04	1	SNA	
..3		BN64-03583A	BADGE-INLET;55KU6500,Ni,0.06,W30,Silver	1	SNA	
..3	CD01A	BN95-02795B	ASSY DECORATION SMT;KU6400,40,TITAN SILV	1	SNA	
...4		0204-007315	COATING;CVM92000(VOC),CLEAR,1.06	10	SNA	
...4	FD01	BN63-15396A	COVER-DECORATION;40KU6400,PC+ABS+MF17%,M	1	SNA	
..3		BN96-40702C	ASSY CHASSIS FRONT P;40KU6400,AI,SUB-ASS	1	SNA	
...4		BN61-09308A	ADHESIVE-TP;F8K,GREEN,ACRYL	0	SNA	
...4		BN61-13545A	BRACKET-CORNER;55KU6400,EGI-SECC,T0.5,NA	2	SNA	
...4		BN63-15554A	SHEET-PROTECTION COVER;49K6200,PO,T0.048	2	SNA	
...4		BN63-15858A	SHEET-PET;55KU6400,PET,T0.1,W2,L12.8,BLA	2	SNA	
...4	AC155	BN64-03486C	CHASSIS-FRONT;40KU6400,AI,-,EXTRUSION,NA	1	SNA	