

Installation guide

Electric expansion valve Type ETS 6

English

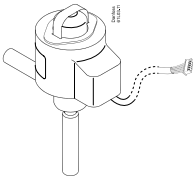
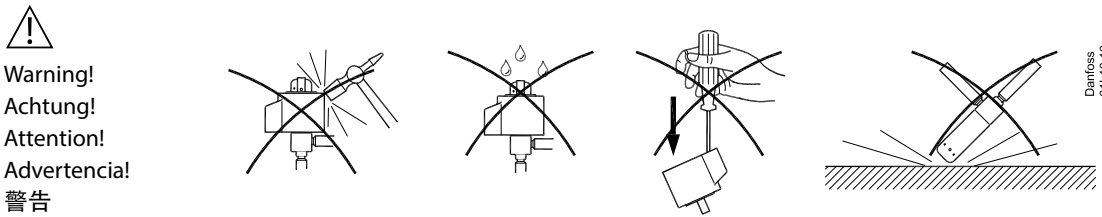
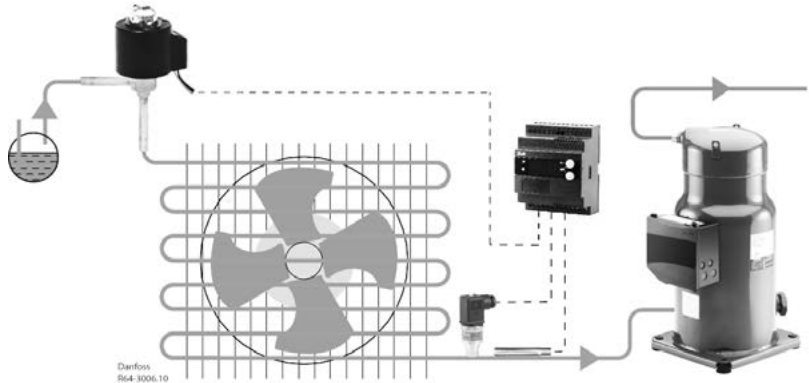
Deutsch

French

español

汉语

034R9800

Refrigerants Kältemittel Fluides Refrigerantes 适用的冷媒 R134a, R404A, R407C, R410A, R22	Refrigerant temperature Kältemitteltemperaturbereich Température du fluide Temperatura líquida 流体温度 t_{Min.} : -30 °C / -22 °F, t_{Max.} : 70 °C / 158 °F		Max. working pressure Max. Betriebsdruck Pression de service max Máxima presión de trabajo 最大工作压力 PS / MWP: 47 bar / 682 psig	
Allowable ambient temperature Zulässige Umgebungstemperatur Température ambiante admissible Temperatura ambiente permisible 允许的运行温度 -30 °C / -22 °F - 70 °C / 158 °F	Stepper motor type Schrittmotortype Type de moteur pas à pas Tipo de motor a pasos 步进电机形式 Unipolar / 单级	Nominal voltage Nennspannung Tension nominale Voltaje nominal 名义电压 12 V DC	Phase current Phasenstrom Courant de phase Corriente de fase 相电流 260 mA	Resistance Widerstand Résistance Resistencia 电阻 46 Ω
 Warning! Achtung! Attention! Advertencia! 警告 Do not connect directly to AC / DC power source. Connect valve to appropriate controller / driver only. Do not operate valve while assembling or disassembling. Bitte den ETS 6 nicht direkt mit einer Spannungsquelle (Gleich- oder Wechselstrom) verbinden. Schließen Sie das Ventil nur an geeignete Regler/ Steuergeräte an. Ventil bitte nicht in zerlegtem Zustand ansteuern. Ne pas raccorder directement le moteur à une alimentation AC / DC. Raccorder la vanne au régulateur approprié. Ne pas actionner la vanne pendant le montage ou le démontage. No aplicar tensión directamente a la válvula. Conectar la válvula a un controlador/driver adecuado. No haga funcionar la válvula durante el montaje o desmontaje. 请仅将阀门连接于合适的控制器/控制器，勿直接与交流或直流电源连接。 在安装和拆卸阀门时请勿操作电子膨胀阀。			Application Anwendung Application Aplicación 应用 	

034R9800

