

USB RECHARGEABLE MOSQUITO SWATTER

3500V



PSUBRMOSWTA

SAFETY & WARNINGS

Caution!

- **Hot Surface!** Do not touch the metal mesh surface when in operation.
- Do not touch metal mesh surface with metal objects when in operation.
- This device runs at a high voltage of 3200V and may be dangerous to touch.
- Do not operate this device in the vicinity of flammable gas or combustible dust.
- Do not touch the device if it is in water or use this device around water.
- Do not submerge in water. For cleaning instructions, refer to the Cleaning & Care section of this user guide.
- Do not rinse with water or wipe with a wet towel.
- This is not a toy. Keep this device away from children at all times.
- This product is for indoor, domestic use only. It is not suitable for barns, farms, livestock sheds, or similar environments.
- This device may retain residual electric current even after it is turned off. Be careful to not touch the metal mesh surface even after use.
- To avoid damage, do not swat at or near anything but the insects intended for this device. Swatting at hard surfaces or objects may result in damage to the device.
- The LED light bulbs on this device are non-replaceable. Do not attempt to repair or service this device yourself.
- The lithium battery can only be replaced by the supplier or an authorised repair agent. Do not attempt to repair or replace the battery yourself.
- Only use with a charging adapter to the same rating as specified in this user guide (5V DC, 300mA). Using another adapter may damage the device, or provide insufficient power.
- Do not leave the device on charge for longer than 12 hours.
- Do not operate the device while it is charging.

OVERVIEW

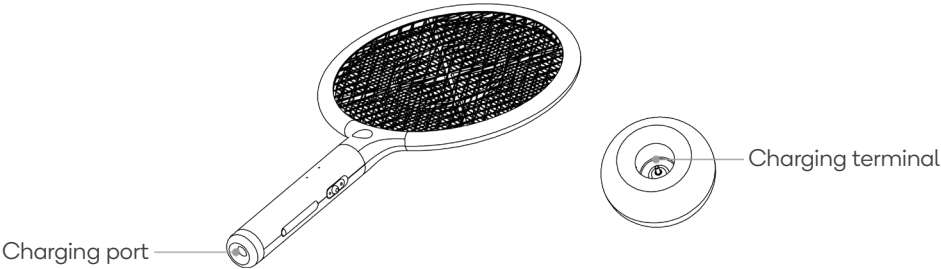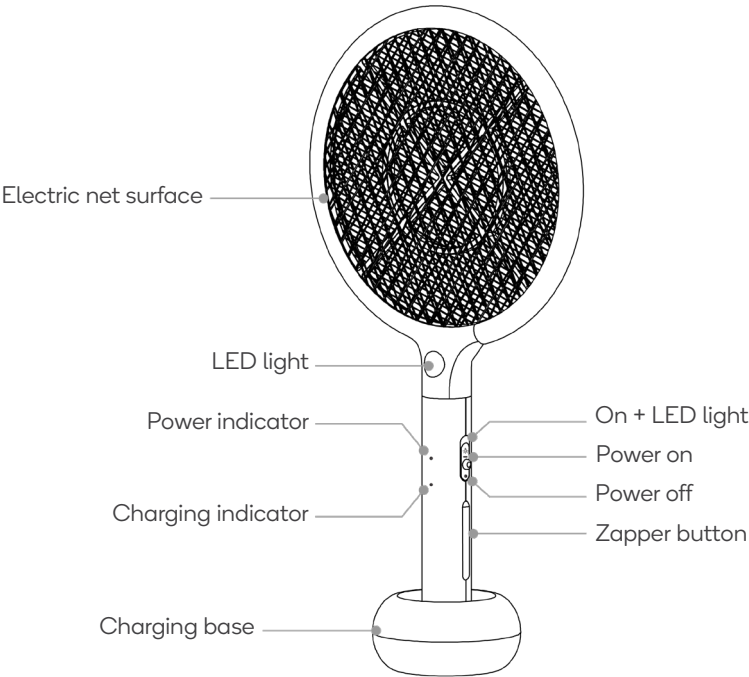

OPERATION

Using the Mosquito Swatter

1. Ensure device is fully charged before use.
2. To turn the Mosquito Swatter on, slide the power switch up to Power on (–) or On + LED light (☼).
3. Hold the Zapper button to activate the electric charge. The power indicator LED will turn on. Do not touch the surface of the swatter while in use.
4. Hold the button down while swatting.
5. When not swatting, release the Zapper button. The power indicator light LED will turn off, however there will still be excess voltage in the metal mesh. Do not touch the metal mesh. After 3-5 seconds, the voltage will be automatically eliminated.
6. When set to On + LED light (☼), the LED light will be on.
7. Slide the switch down to Power off (O) to turn the device off.

Charging

1. Plug the USB charging cable into an adapter or power supply (5V DC, 300mA), ensuring the power supply is turned on.
2. Place the device on the base to commence charging, ensuring the charging port is making connection with the base's charging terminal.
3. When charging, the charging indicator will display red. Once fully charged, it will turn blue.
4. When battery is low or voltage too weak to swat mosquitos, charge the device.
5. When storing the device, or not using for a long time, ensure it is charged once every three months. This will help preserve the battery life.

CLEANING & CARE

- Ensure the device is switched off and left for 3-5 seconds before touching.
- Do not submerge in water.
- Do not rinse with water or wipe with a wet towel.
- Mosquito residue on the net can be removed with a soft brush.
- If the device is emitting a noise during operation, a hair dryer may be used to blow additional residue from the net until noise has ceased. Then continue use.

SPECIFICATIONS

Battery voltage	3.7V
Battery capacity	1200mAh
Charge current	0.3A
Charge voltage	5V
Rating power	2W
Net weight	369 g
Dimensions	238 x 34 x 442mm

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com