

www.subcold.com

APEX SERIES

PLEASE READ & RETAIN USER MANUAL FOR FUTURE REFERENCE

USER MANUAL





Contents

Important Safety Warnings	3-4
Intended Usage & Environment	4-5
Operating Instructions	5-6
Moving & Handling Your Appliance	7
Maintenance	7
Contamination Prevention Guidelines	8
Troubleshooting Guide	9-10
Product Specification	11
EPREL	12
Warranty	12
Environmental Friendly Disposal	12



Important Safety Warnings

- Caution When Positioning: Ensure the appliance's power cable is neither trapped nor damaged during positioning.
- Power Socket: Refrain from positioning portable power sockets or cables at the rear of the appliance.
- Child Entrapment Risk: Exercise caution to prevent the risk of child entrapment.
- Ventilation Clearance Warning: Ensure that ventilation openings around the appliance remain clear and unobstructed at all times. Do not cover or block these openings with any type of door covering. The ventilation openings within the appliance enclosure must also remain free from obstruction to allow proper airflow.
- Ventilation Clearance: Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- Refrigerant Circuit Warning: Avoid damaging the refrigerant circuit.
- Defrosting Caution: Use only recommended methods to defrost; sharp objects or other tools may cause permanent damage.
- Electrical Appliance Use Warning: Refrain from using electrical appliances inside the fridge unless manufacturer recommended.
- Flammable Materials Caution: Never allow children to interact with the appliance, avoid cleaning with flammable liquids, and keep flammable materials away from the appliance.
- Cleaning Instructions: Use non-abrasive cleaners or soapy water for cleaning; avoid solvents.
- Fire Hazard Symbol: Symbol ISO 7010 W021 indicates a fire hazard.



- General Installation Guidelines: Avoid heat sources and direct sunlight, install on a flat, clean, stable surface, and refrain from placing other electrical equipment on the appliance.
- Damp Environment Warning: Ensure the appliance is not placed in damp areas.
- Perishable Food Storage: Avoid storing perishable food in this appliance for extended periods of time, as the indoor temperature may not be sufficiently cold for proper storage.
- Circuitry and Power Plug:
 - The circuitry for the refrigerator must be isolated. The area of cross section of wire must be larger than 0.75mm.
 - The power plug should have its own socket, grounded, as an adapter may cause the socket to overheat.
 - The voltage and frequency of this product should be 220-240V;50Hz. Contact a local qualified electrician or retailer in case of electrical cord damage.
 - Always disconnect the power by pulling the power plug out of the socket directly and not by the cord.

V1 3



Important Safety Warnings

- Supervision and Usage: Persons with low physical, sensory, and mental capabilities (including children below 8 years) are not advised to use this appliance unless they are well supervised/ instructed by a safety person. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance should not be done by children without supervision.
- Disposal Instructions: Before disposing of your old refrigerator or freezer, take off the doors and leave the shelves in place to prevent easy access for children.
- Disposal Precautions: Before disposing of the appliance, remove doors and leave shelves in place.
- Prohibited Storage: Do not store explosive devices/substances such as aerosol cans with a flammable propellant in the appliance.
- Intended Use: This appliance is intended for household and similar applications.
- Replacement of Faulty Parts: All affected or faulty parts (including the light) must be changed by a certified technician.
- Supply Cord Replacement: To avoid hazards, the supply cord must always be replaced by the manufacturer, its service agent, or similarly a certified/qualified person when damaged.
- Built-in Appliance Use: This refrigerating appliance is not intended to be used as a built-in appliance
- Door Openings: Minimise the time the door is open to maintain a stable temperature.

Intended Usage & Environment

- This appliance is designed for both indoor and outdoor use. It features an IPX4-rated design,
 providing protection against water splashes from any direction. This level of ingress protection
 makes the unit suitable for outdoor environments such as covered patios or sheltered garden
 areas. However, it should not be exposed to direct rainfall or immersed in water. Always ensure
 the appliance is placed on a stable, level surface and operated within the specified
 environmental conditions.
- Age Recommendation and Supervision: This appliance is intended for use by individuals aged 8
 years or older. Individuals with reduced physical, sensory, or mental abilities may use this item,
 provided they are under appropriate supervision. Cleaning and user maintenance activities
 should be overseen. It is crucial to provide clear instructions on safe usage and address any
 associated risks.

V1



Intended Usage & Environment

- Child Safety Warning: Refrain from using this product in areas accessible to children, and do not permit unsupervised use by children. The appliance is not designed for play by children.
- Built-in Use: This appliance is not intended for built-in use.
- Food Freezing Warning: It is not suitable for freezing food items.

Operating Instructions

Before Putting Your Appliance Into Use

- Remove all inner and outer packaging components, including adhesive transport tapes.
- Verify that none of the following are missing:
 - Removable Shelves
 - Operating Manual
- Allow the appliance to stand upright for a minimum of 2 hours before connecting it to a power supply. This minimises the risk of refrigeration system malfunction due to transport & handling.
- Clean the inner surfaces of the unit with a soft cloth and warm, soapy water. Avoid using any
 abrasive cleaners or solvents.
- Place the unit on a stable surface that can withstand its weight, making sure to adjust the front
 feet for stability. Ensure the surface is firm, flat, and level to reduce noise and vibration. Tighten
 the adjustable legs to the floor and tilt the appliance slightly backward to ensure the door closes
 tightly.
- Install the appliance away from direct sunlight and heat sources to prevent damage to the coating and reduce power consumption. Extreme temperatures can affect proper operation.
- Maintain a minimum of 3-5cm clearance at the top of the appliance, and a 3-5cm clearance on each side of the appliance for proper ventilation and heat dissipation.
- Before connecting the unit to the power supply, ensure the drip tray above the compressor is properly positioned.

Caution: Keep the unit away from any substances that may cause combustion.



Operating Instructions

Setting the Temperature Control



Key Functions

- 1— Unlock key: long press for 2 seconds to unlock.
- 2— Light/CF key: short press to turn on or off the light; long press to switch between Fahrenheit and Celsius.
- 3— Add key: temperature setting.
- 4— Minus key: temperature setting.

Automatic Locking Function

When all the key no operation for 20 seconds, the key will be locked automatically. After locking, the plus and minus keys cannot be operated. The unlock key and light / CF key operate normally.

Auto Light Off Function

When all the key no operation for 10 minutes, the lamp will turn off automatically.



Moving & Handling Your Appliance

How to Safely Disconnect Your Fridge

Take note of the position of each accessory when packing the appliance.

When re-packing for transportation, ensure everything is securely packed and accessories are securely in place.

Avoid lifting or pulling the door or handle during transport to prevent damage.

Allow a minimum of 2 hours standing time before reconnecting the appliance to power.

Keep the appliance tilted at less than a 45-degree angle from the vertical direction while moving to prevent damage. Minimise exposure to strong vibrations during transportation.

Maintenance

- Preparation for Maintenance
 Disconnect the appliance from the power source and remove all contents.
- Interior Maintenance:
 Clean the inside of the appliance with clean water and a non-hazardous cleaner, then wipe it dry with a cloth. Avoid using any abrasives or solvents during cleaning.
- Door Gasket Maintenance:
 Thoroughly clean the door gaskets to prevent potential damage and increase operational life.
- Outer Maintenance:
 Remove dust using a dry, clean cloth to maintain the external cleanliness of the appliance.

Caution: Do not employ alternative equipment or methods to aid the defrosting process, as it may cause damage to the cooling system.

Note: If there is excessive ice, the drip tray may overflow with surplus water. Wipe with dry cloths/paper towels.

Regular Cleaning and Upkeep:

This appliance requires regular upkeep and cleaning for optimal performance. For safety, always disconnect the plug from the main power source before initiating cleaning procedures.



Contamination Prevention Guidelines

To prevent food contamination and ensure safe usage of your appliance, follow these guidelines:

- Avoid prolonged door openings to prevent a significant increase in internal temperature, which
 can lead to food spoilage.
- Regularly clean surfaces that come in contact with food, such as shelves, drawers, and door seals, using a mild detergent and warm water.
- Ensure accessible drains are also kept clean to prevent the build-up of dirt and bacteria.

If the appliance will be unused for an extended period, take the following steps:

- · Switch off the fridge.
- Clean and dry the interior thoroughly.
- Leave the door open slightly to allow air circulation and prevent the growth of mold and mildew.
- Refrain from storing explosive substances, such as aerosol cans with flammable propellants, in the appliance to avoid potential hazards.
- In the event of a damaged power cable, only a local qualified electrician or retailer should carry out replacement to mitigate potential safety hazards.



Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
The appliance does not work	Ensure proper connection.
	Check if the circuit-breaker is tripped or if the fuse is blown.
	Verify the power socket by connecting another electrical appliance.
	Check the control dial is not set to '0'.
The appliance is not cold enough	Adjust the temperature setting.
	In high ambient temperatures, consider setting the fridge to a colder temperature.
	Limit frequent door openings.
	Ensure the door is fully closed and the seal is positioned correctly.
	Allow sufficient space around the fridge for proper ventilation.
	If ice is present conduct a manual defrost.
The appliance operates continuously	Ensure ambient room temperature is within the operating range. Reduce the number of items inside.
	Minimise door openings.
	Ensure the door is completely closed - confirm the proper positioning of the door seal.
	Check/adjust the temperature control setting.
	Ensure sufficient ventilation space.
The light doesn't work	Check the appliance is connected to a power supply.
	The circuit-breaker is tripped, or a fuse is blown.
	The LED lighting may need replacing.
	Check that the light switch is not at the "OFF" position.



Troubleshooting Guide

PROBLEM	POSSIBLE CAUSES & SOLUTIONS
Vibrations / The appliance seems to be making too much noise.	Ensure the appliance is leveled correctly and adjust feet if necessary. Make sure to properly position the shelves of the appliance within their grooves to minimise noise.
The door does not close properly	Ensure the appliance is leveled correctly and adjust feet if necessary. Adjust shelves or contents that may obstruct proper door closure. Ensure lock & locking plate are in the correct position.
Water under the appliance	Check for correct water collection in the drip tray at the back. Confirm the drip tray is in place and empty it as required. Check the drip tray is not damaged/cracked. If the appliance is disconnected from the power supply to perform defrost the drip tray may overflow with excess water.



Product Specification

Model	APEX95LED
Colours	Black
Cooling System	Compressor
Temperature Range	-6°C—18°C
Climate Class	N
Net Volume	86L
Energy Class	Е
Noise (dB)	41dB
External Dimensions (WxDxH)	495x430x848 (mm)
Internal Dimensions (WxDxH)	420x310x736 (mm)
Packing Dimensions (WxDxH)	591x529x910 (mm)
Gross Weight	33kg
Net Weight	27kg
No. of Shelf	3
Door Material	Plastic/Glass
Lighting (W)	1W
Input Power (W)	85W
Refrigerant gas	R600a
Refrigerant grams	21g
Lock and Key	No
Certification	CE, ROHS, ERP, UKCA
Plugs included	British Standard



EPREL

The appliance's actual consumption is influenced by its usage and location. Please note that this appliance is specifically designed for non-perishable storage. For detailed model information, refer to the product database outlined in Regulation (EU) 2019/2016, accessible via the following link or by scanning the QR Codes below:

https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019



Warranty Registration

To register your product warranty, kindly visit <u>www.subcold.com/pages/product-registration</u> and fill out the online form.

Environmental Friendly Disposal



To avoid any harm to the environment or human health caused by improper disposal of electrical waste, recycle the appliance responsibly to promote the reuse of material resources. Disposal must be done safely at public collection points provided for this purpose.

Older refrigerators may contain CFCs that destroy the ozone layer; contact your nearest waste treatment centre for more details on proper disposal procedures.



sales@subcold.com



01506 440557



@subcoldltd



@subcold_official



Subcold Ltd.

28/2 Firth Road Houstoun Industrial Estate Livingston, EH54 5DJ United Kingdom

Authorised Representative

Eurolink Europe Compliance Limited 25 Herbert Place Dublin, D02 AY86 Republic of Ireland