











五、手机信息推送 新用户打开 APP, 系统会提示 "应用通知权限被禁用",请根据弹窗设置。或

六、界面说明:


- 1. 信息推送: 当有人按门铃时, 手机会收到 APP 推送信息, 点击推送弹窗进 入视频通话
- 2. 视频通话:按住麦克风键对讲,打开喇叭监听。
- 3. 门铃分享: APP 可以将门铃分享给他人, 打开 APP-设置-分享-二维码, 被
- 分享者需下载 APP 及扫描二维码,输入设备默认密码"8888" 4. 低电量提醒: 当电池电量比较低时, APP 会推送低电量提醒, 请及时充电。
- 工作指示灯: 蓝灯闪烁: 未配网
- 蓝灯快闪:配网中 蓝灯常亮: 己配网
- 蓝灯熄灭: 设备休眠
- 红灯常亮: 充电中

- 设备为低功耗门铃,无人按门铃时,设备进入休眠离线,属正常现象。
- 扫码配网时请撕下镜头保护膜。
- 因手机型号不同,推送设置不同,请根据需求及机型设置。
- 仅支持 2.46 WiFi, 暂不支持 5G 或带有中文名字、特别符号的 WIFI。
- 由于金属易干扰 WIFI 信号,请尽量避免将设备安装在金属壁上。使用前先将门铃与叮咚配对,安装在有效区域。



ULooka Video Door Phone It's not just a doorbell



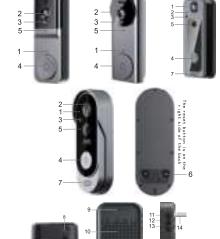

1) Shipping mark 2) camera lens 3) photosensitive 4) Doorbell key 5) pilot lamp 6) Reset hole 7) Doorbell horn 8) Charging port 9) pilot lamp 10) Dingdong horn 11) Pairing key 12) Volume level 13) Music switching 14) USB connector

II.Download method:

1.Android mobile phones can be downloaded in its own application market or by searching [ULooka] on App Store; IOS mobile phone searches [ULooka] in the APP Store to download.

3. 点击下一步,输入WIFI账号与密码。 (注意: 网络请选择2.4G频率的WIFI,切勿选择5G的WIFI)

4. 请将门铃镜头对准手机扫描二维码(扫码时请撕下镜头保护膜),保持10-



2. Open the APP, read the "Privacy Policy", and click "Agree". APP pop-up prompt: message push notification permission, APP Bluetooth connection and location permission, and enabling mobile phone Bluetooth function. Please go to Settings and Confirm.

III.Add equipment (QR code distribution network):

- 1. Press the doorbell key to start the machine, and press and hold RESET for about 3 seconds to hear "drip".
- 2. Open the APP, click "+" to add the device, and select "Video Doorbell with OR code "



(Please remove the lens protector when scanning the code), keep a distance of 10-15cm until you hear the prompt tone, and click "Hear the prompt tone"

3.Click Next and enter the WIFI account and password.

(Note: Please choose 2.4G frequency WIFI, do not choose 5G WIFI)


4.Please aim the doorbell lens at the mobile phone to scan the QR code

5.The device has been added successfully. Click Video Answer to enter the real-time interface

(Note: If the connection is not successful, please check whether the WIFI name and password are correct. Only 2.4G wireless network is supported: Or reset the device and reconnect it according to the above steps)



IV、Door bell and ding Dong machine match:

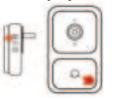

- 1. Ding Dong machine (picture left) to turn on the power supply;

2. Long press the ding Dong machine pairing button for 3 seconds (as shown in the picture), and the indicator light flashes:

3. Press the doorbell button (right), ding dong machine ring, that is, match.

V. Mobile phone information push

New users open the App system will prompt 【Application notifications disabled]. Please set the popup. Or go to the mobile phone **Settings** \rightarrow Apply permission management, find ULooka app to open the permission notification permission.For details, please refer to APP 【About】 -[APP push message guidelines]



VI. Interface Description:

VII、 Function Introduction:

to enter the video call.

device "8888".

5. Working light:

1. Information push: When someone presses the doorbell, the mobile phone

will receive the APP push information, and click the push pop-up window

2. Video call: Hold down the microphone key to speak, open the horn to listen.

APP-Settings-Share-QR Code, the person being shared needs to download

the APP and scan the QR code, and enter the default password of the

4. Low power reminder: When the battery power is relatively low, the APP will

3. Doorbell sharing: APP can share the doorbell with others, open

push a low power reminder, please charge in time.

Blue light flashing: not equipped with the network

Blue light flash flash: in the distribution network Blue light is often bright: already equipped with the network

Blue light out: equipment dormant

Red light is always on: in charging Red light goes off: fully charged VIII、Matters needing attention •The device is a low-power doorbell, and it is normal for the device to go

To said these

Asserted State onto

- to sleep and go offline when no one rings the doorbell. •Please tear off the lens protection film when scanning the code and
- distributing the network. •Due to different mobile phone models, push settings are different,
- please set according to your needs and models. Only support 2.4G WiFi, do not support 5G or WIFI with Chinese name
- and special symbol.
- •Since metal is easy to interfere with WIFI signals, please try to avoid installing the device on metal walls.
- ●Pair the doorbell with the ding-dong before use and install it in the
- effective area.

PCC STATEMENT

1. This device complies with Part 15 of the PCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired oper

Changes or modifications not expressly approved by the party responsible for compliance could void the user'

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, purs 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

isidential installation. his equipment generates uses and can radiate radio frequency energy and, if not installed and used in accorda the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment doe hamful interference to radio or television reception, which can be determined by turning the equipment off an user is encouraged to try to correct the interference by one or more of the following measures:

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm

between the radiator & your body











-