



 
 
Instruction Manual

Explore & Learn Smart TV™



INTRODUCTION

Thank you for purchasing the **VTech® Explore & Learn Smart TV™**! Find discoveries on every channel with this amazing TV! Press the buttons on the remote to magically flip through channels and turn the volume dial on the station to adjust the volume.

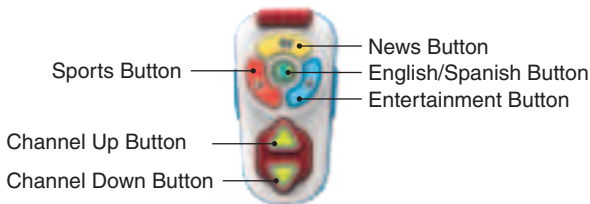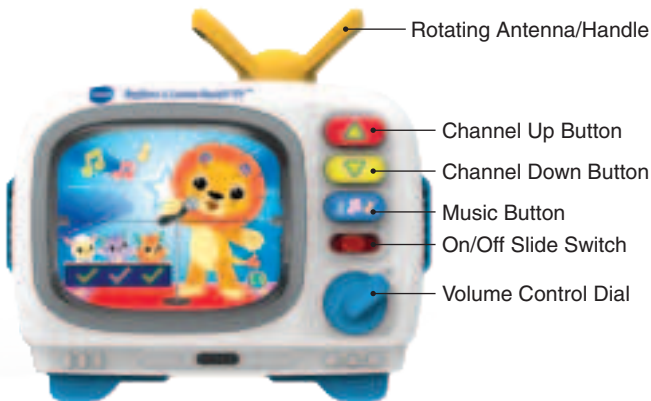

INCLUDED IN THE PACKAGE

- **Explore & Learn Smart TV™**
- 1 Remote Control
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

If there are no locks inside the package, disregard this message.


Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

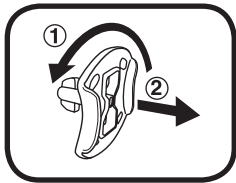

Unlock the Packaging Locks

 - ① Turn the packaging locks counterclockwise several times.
- ② Pull out the packaging locks and discard.

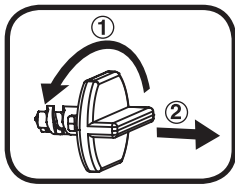

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



 
ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

INSTRUCTIONS


Battery Removal and Installation-TV

1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

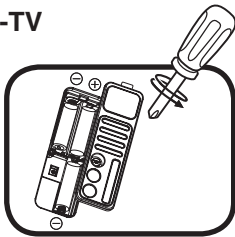

Battery Removal and Installation-Remote Control

 1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/ LR03) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

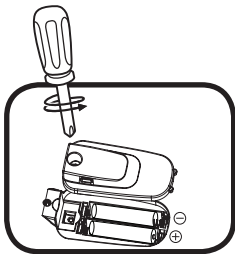

IMPORTANT: BATTERY INFORMATION



- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Slide Switch** to the **On** () position. You will hear fun sounds, a phrase, and a song. To turn the unit **Off**, slide the **On/Off Slide Switch** to the **Off** () position.

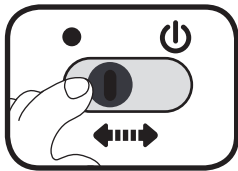

2. Remote Control

The **Remote Control** works up to 13 feet away from the TV unit. Be sure there are no obstructions directly between the **Remote Control** and the **TV**. The **Remote Control** becomes inactive approximately 1 hour after the **TV** enters sleep mode.

3. Automatic Shut-off

To preserve battery life, the **Explore & Learn Smart TV™** will automatically power down after approximately 40 seconds of inactivity. To reactivate the unit, press any of the three light-up buttons on the TV, turn the volume dial, or use the remote control within one hour. Please note, the remote control will not function if the TV has been in sleep mode for approximately one hour.

NOTE

If the TV and remote control power down, the lights fade during play, or the short 'no power' tune is heard, we recommend replacing the batteries.

Television Activities

1. LED Channel Up/Down Button

Press the **LED Channel Up/Down Button** to change the channel, it will go to the previous/next channel of the current channel. You will hear fun sounds, friendly phrases and music. The lights will flash with the sound.



2. LED Music Button

Press the **LED Music Button** to play 12 sing-along songs and 9 melodies with classic, pop and rock styles. The lights will flash with the sound.




3. Volume Control Dial

Turn the **Volume Control Dial** to select the desired volume.




Remote Control Activities

 
1. News Button

Press the **News Button**  to explore channels featuring the Weather Report, Animals, News, and the Art Studio. Enjoy imaginative phrases, engaging sounds, and short tunes, accompanied by flashing lights.




2. Sports Button

Press the **Sports Button**  to explore channels featuring a Soccer Match and a Kart Race. Enjoy imaginative phrases and songs, engaging realistic football and car sounds, accompanied by flashing lights.

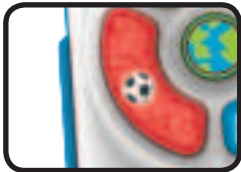


3. English/Spanish Button

Press the **ENG/SPA Button**  to access 5 bilingual channels in English and Spanish. Enjoy dynamic sounds, fun phrases, and songs, with lights that flash along with the sound.



4. **Entertainment Button**

Press the **Entertainment Button**  to explore channels such as a Talent Show, Talk Show, Cooking, and a Movie. Meet new characters and embark on exciting adventures, all accompanied by lively sound effects and flashing lights.



5. **Channel Up/Down Button**

Use the **Channel Up/Down Buttons** to navigate through channels, switching to the previous or next one seamlessly. Each change is accompanied by entertaining sound effects, phrases, and songs, with lights flashing in sync.



MELODIES

1. Für Elise - Beethoven
2. Piano Sonata in C, K545 1st Movement - Mozart
3. Blue Danube Waltz
4. Do You Know the Muffin Man?
5. Yankee Doodle
6. Hickory Dickory Dock
7. Itsy Bitsy Spider
8. Oh Where, Oh Where Has My Little Dog Gone
9. One, Two, Buckle My Shoe

SONG LYRICS

Song 1

Friends near and at home,
Wave your hands high!
The wonderful show begins,
With fun and laughter, oh my!

Song 2

Old MacDonald had a farm, E-I-E-I-O!
And on that farm he beat boxed, boom-buh-boom-buh-Tss!
With a drum kick here and a snare hit there,
Here a beat, there a box, everywhere he beat boxed!
Old MacDonald had a farm, E-I-E-I-O!

Song 3

MacDonald tenía una granja, I-A-I-A-O.

Y en esa granja hacía beatbox, ¡bum-bah-bum-bah-Tss!

Con un bombo aquí [sonido bombo de beatbox],

Platillos allá [sonido platillos “Tss” de beatbox],

Beat aquí, box allá, por todas partes beatbox!

MacDonald tenía una granja, I-A-I-A-O.

Song 4

Friends near and far,

Raise your hands up!

Shine bright like a star!

Shine bright like a star!

Song 5

¡Amigos, atención!

Aquí y allá,

Las manos alzarán

Y como estrellas brillarán.

Song 6

We are the winners!

Hooray, hooray!

We are the winners!

Hooray, hooray!

Song 7

¡Hemos ganado!

¡Hurra, hurra!

¡Hemos ganado!

¡Hurra, hurra!

Song 8

Salads on the menu today,
So let's chop up some leafy greens,
Mix in some red tomatoes,
And throw in some crunchy carrots too!

Song 9

Hoy, ensalada vamos a hacer,
Con lechugas y tomates también,
Y para darle un toque especial
Zanahorias hay que agregar.

Song 10

Elephants are clever, they use their trunks to drink,
Silly monkeys hanging, love to swing and swing!

Song 11

Red, orange, and blue,
Yellow, purple, and green,
Colors bright and true,
Let's paint a rainbow scene!

Song 12

ABCDEFGHIJKLM
NOPQRSTUVWXYZ 'n Z

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5787
Product Name: Explore & Learn Smart TV™
Responsible Party: VTech Electronics North America, L.L.C
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
OPERATION.

CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

