

# **EUREKA<sup>®</sup>**

## **INSTRUCTION MANUAL**

Before operating this unit, please observe the safety precautions indicated in this manual; you will be fully satisfied with the service and the performance rendered by this rice cooker through its long service life.

**EUREKA ELECTRIC APPLIANCES PHILLIPINES CORP.**

 
E. Rodriguez Rd., Oxford Compd., Brgy. Sta Rosa I, Marilao, Bulacan

Service Hotline Nos.:

0998-584-2057 / 0917-814-5356

# **AUTOMATIC RICE COOKER**

# BRIEF INTRODUCTION OF PRODUCTS

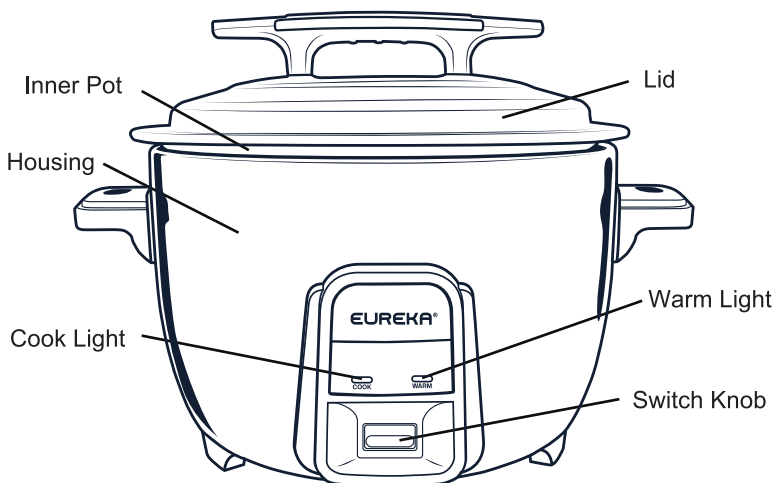

## ACCESSORIES



MEASURING CUP

Used for measuring the amount of rice to be cooked



SPATULA

Used for serving cooked rice



POWER CORD

 
Supply cord for cooker

## SPECIFICATIONS

Model	EDR-15L HD
Power	230V~
Power Consumption	2,500W
Capacity	15L

# RICE COOKING PROCEDURE

- 1 Measure rice using cup provided with the unit. Then pour on the inner Pot.

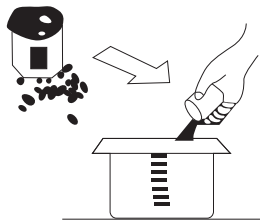


- 2 Wash the rice, Then adjust quantity of water to desired proportion.




No. of cups of rice	1	2	3	4
No. of cups of water	1¼	2¼	3¼	4¼

 - 3 Place the inner pot directly on The Theater plate.  
Wipe the outside surface of the inner pot with a soft dry cloth before putting it inside the body.

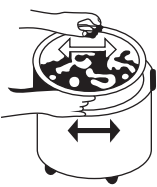

Make sure that the inner pot is properly placed on the heater plate by turning it slightly left and right.

 - 4 Plug to 230V~ 60Hz outlet. Press switch knob and light indicator will transfer to “**COOK.**”

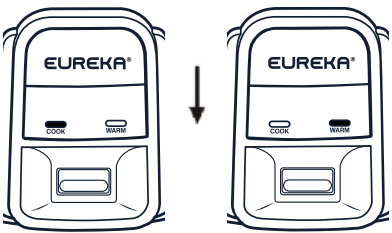


- 5 The lamp will automatically turn “**WARM**” after rice cooking is finished.

# CLEANING METHOD

 
➤ Do not immerse in water when cleaning.

1 Always unplug the unit before cleaning. Remove the inner pot from the unit and use clean, soft dry cloth to clean the body.

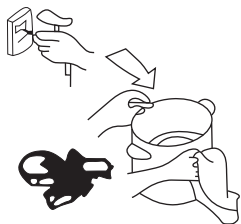

- Do not use abrasive cleaners or steel wool.

 2 Clean the inner pot with detergent soap and wash completely with water.

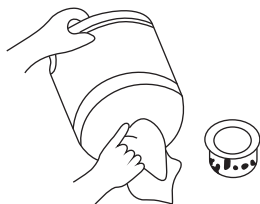


- Then, dry the inner pot by using a soft dry cloth

3 Use a scouring pad in removing cooked rice from the heater plate.



- Clean with non-metal brush or sponge. Do not use steel wool or steel brush to remove cooked rice inside the unit.

 
4 Always keep inner pot cover and steaming plate clean and dry.

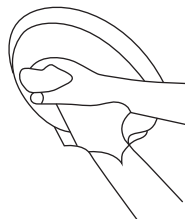

- Use clean and dry cloth to remove dirt and stain.

# PRECAUTIONS

 Do not use inner pot directly in open flame.

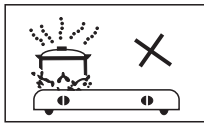


Always unplug the unit when not in use.

- Pull by the plug; never pull on the cord.




 Avoid the heater plate from getting wet.

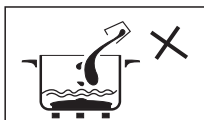


Do not attempt to repair or RECONSTRUCT the unit in case of trouble.

 - Ask authorized service person for repair.

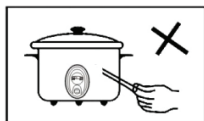


Be sure the inner pot bottom is not dented or deformed.

 - Deformed, inner pot bottom can affect the cooking efficiency.

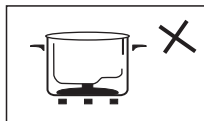

Do not use cooker for other purposes.

 - The heater maybe damaged and will not function properly.

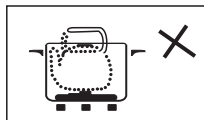

Set unit on a stable surface.


- Do not expose to water, high humidity or heat sources.



## SAFETY NOTE:

 - 1.This apparatus is not prepared to use by the people who have weak corporeity, slow response and mental disorders (including children), unless using under guidance or assistance by secure and responsible personnel.
- 2.The earthed wall socket should be used and the plug must be inserted reliably.Do not use multipurpose socket while using other electric appliance at the same time.
3. If not in use please pull the power cord out of the socket.
- 4.The electric rice cooker can not placed on unstable, wet place or near fire, otherwise it will be damaged or malfunction.
5. When cooking in the steam pot, do not close it by bare hands, use a pot holder to avoid burnt.
- 6.The body and cover of electric rice cooker cannot be washed with water or soak in water, otherwise the insulator will be damaged and become dangerous.
- 7.If the power cord is damaged, it must be changed with a new one produced by the manufacturer.
- 8.Do not let a child operate the product alone. Keep it out of the reach from children to avoid electric shock, burnt and other dangerous accidents.

## CIRCUIT DIAGRAM

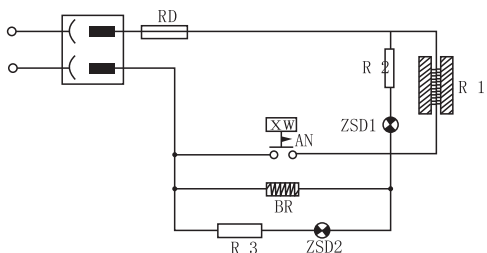

- R1: Heating plate  
 R2 R3: Neon indicator "debasings pressure resistance"  
 ZSD1: Neon indicator "cook"  
 ZSD2: Neon indicator "warm"  
 AN: Clamp knob with hand  
 XW: The component "restricting warm"  
 BR: The component "warm"  
 RD: Thermostate

## TROUBLE SHOOTING

No	Malfunction		Cause	Solution
1	The light is off	Heating plate is not hot	Circuit of electric rice cooker is not connected with power supply	Inspect whether the switch, plug and socket connector, fuse and leading wire of power supply are in good condition and insert the plug reliably.
			1. Wiring connection of indicator light is loosened. 2. Indicator light is damaged.	It should be sent to authorized service department for maintenance.
2	The light is on	Heating plate is hot	1. Wiring in the middle is loosened. 2. Electric-thermal tube is burn out.	
3	Cooked rice is crudity or time of cooking is too long		1. Cooking time is insufficient. 2. Heating plate is deformed. 3. Inner pot is declined and one side is hanging in the air. 4. There is foreign matter between inner pot and heating plate. 5. Inner pot is deformed	1. Cook rice according to required conditions 2. The fine sand paper can be used for correcting slight deformation but the severe deformed one should be sent to service department for replacement. 3. Turn the inside pot lightly to make it return to normal. 4. Clean it up with fine sand paper. 5. Sent to designated service department.
4	The rice is cooked brown.		1. Switch button and its holder action are obstructed. 2. The thermostat is malfunction.	It should be sent to authorized service department for maintenance
5	Do not warm automatically		The warm thermostat is malfunction	Replace it.

Thank you for patronizing our products for  
more comments and suggestions.

Please call our hotline numbers:

0998-584-2057 / 0917-814-5356

**EUREKA ELECTRIC APPLIANCES PHILLIPINES CORP.**



eurekaHomeappliances.com



EurekaHomeAppliances



EurekaHomeAppliancesPH



@EurekaHomeAppliances