

Dino Core DINO TUNER

Wrist Transformation Device with Tyranno Core Disk

Season 1 Official Product Manual

Contents

- 1. Product Introduction
- 2. Product Specifications
- 3. Safety Precautions
- 4. Package Contents
- 5. Operating Instructions
- 6. Maintenance
- 7. Warranty Information

1. Product Introduction

Product Overview: The Dino Core DINO TUNER is an interactive wrist device that includes the Tyranno Core Disk, bringing the excitement of the Dino Core series to life.

Key Features:

- Interactive LCD display
- Sound effects and voice commands
- Removable Tyranno Core Disk
- Adjustable wrist strap
- Role-play transformation features

2. Product Specifications

Power Source	AAA Batteries (2x) - Not included
--------------	-----------------------------------

Display Type	LCD Screen
Audio	Built-in speaker
Material	ABS Plastic
Age Recommendation	5+ years

3. Safety Precautions

Important Safety Warnings:

- Not suitable for children under 3 years due to small parts
- Adult supervision required for battery installation
- Do not expose to water or extreme temperatures
- Keep Core Disk clean and free from debris
- Do not attempt to disassemble the unit

Battery Information:

- Requires 2 AAA batteries (not included)
- Do not mix old and new batteries
- Remove batteries if device won't be used for extended period
- Replace all batteries at the same time

4. Package Contents

- 1x Dino Tuner wrist device
- 1x Tyranno Core Disk
- 1x Adjustable wrist strap
- 1x Instruction manual
- 1x Character card

5. Operating Instructions

Basic Operation:

1. Install batteries following polarity indicators
2. Adjust and secure wrist strap
3. Press power button to activate device
4. Insert Tyranno Core Disk when prompted
5. Follow on-screen instructions for transformation sequences

Special Features:

- Press Mode button to cycle through different functions
- Use arrow buttons to navigate menus
- Hold action button for special moves
- Remove and reinsert Core Disk for transformation sequences

6. Maintenance**Care Instructions:**

- Clean with soft, dry cloth only
- Store in a cool, dry place
- Remove batteries if not in use for long periods
- Keep Core Disk slot free from dust and debris
- Regular battery check recommended

7. Warranty Information

This product includes a standard manufacturer's warranty:

- 90-day warranty against manufacturing defects
- Keep original packaging and receipt
- Contact authorized distributor for warranty claims
- Warranty does not cover water damage or misuse