 


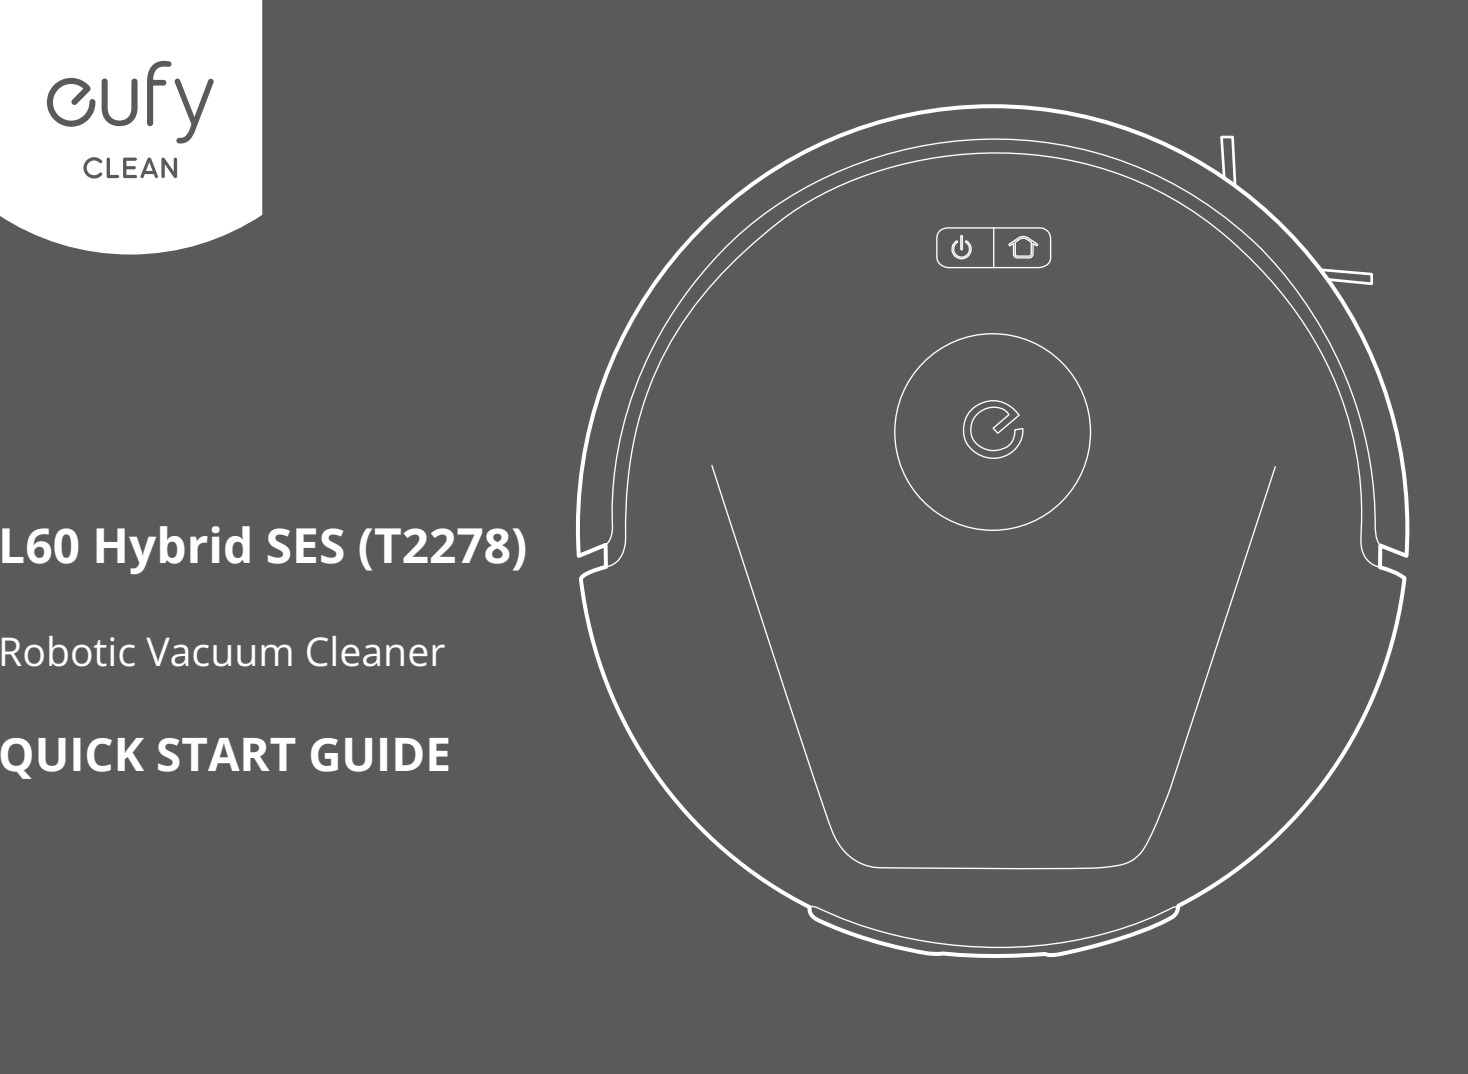


L60 Hybrid SES (T2278)

Robotic Vacuum Cleaner

QUICK START GUIDE

 What's in the Box

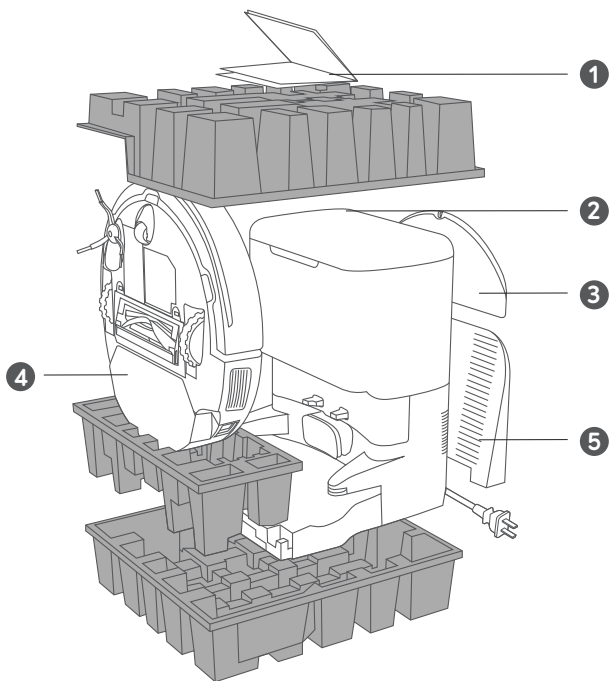


\*The Self Empty Station comes with the Cleaning Tool and Disposable Dust Bag preinstalled.  
\*La Estación de vaciado automático viene con la herramienta de limpieza y la bolsa de polvo desechable preinstaladas.  
\*La Station de vidage automatique est livrée avec l'outil de nettoyage et le sac à poussière jetable préinstallés.

- EN:**
- 1 Documents
  - 2 Self Empty Station and Power Cord
  - 3 Mopping Module
  - 4 Main Unit
  - 5 Detachable Base
- ES:**
- 1 Documentos
  - 2 Estación de vaciado automático y cable de alimentación
  - 3 Módulo de Fregado
  - 4 Unidad principal
  - 5 Base Desmontable
- FR:**
- 1 Documents
  - 2 Station de vidage automatique et cordon d'alimentation
  - 3 Module de Nettoyage
  - 4 Unité principale
  - 5 Base Détachable

T2278 51005004304 V01

PAP 22  
Raccolta Carta

 Overview

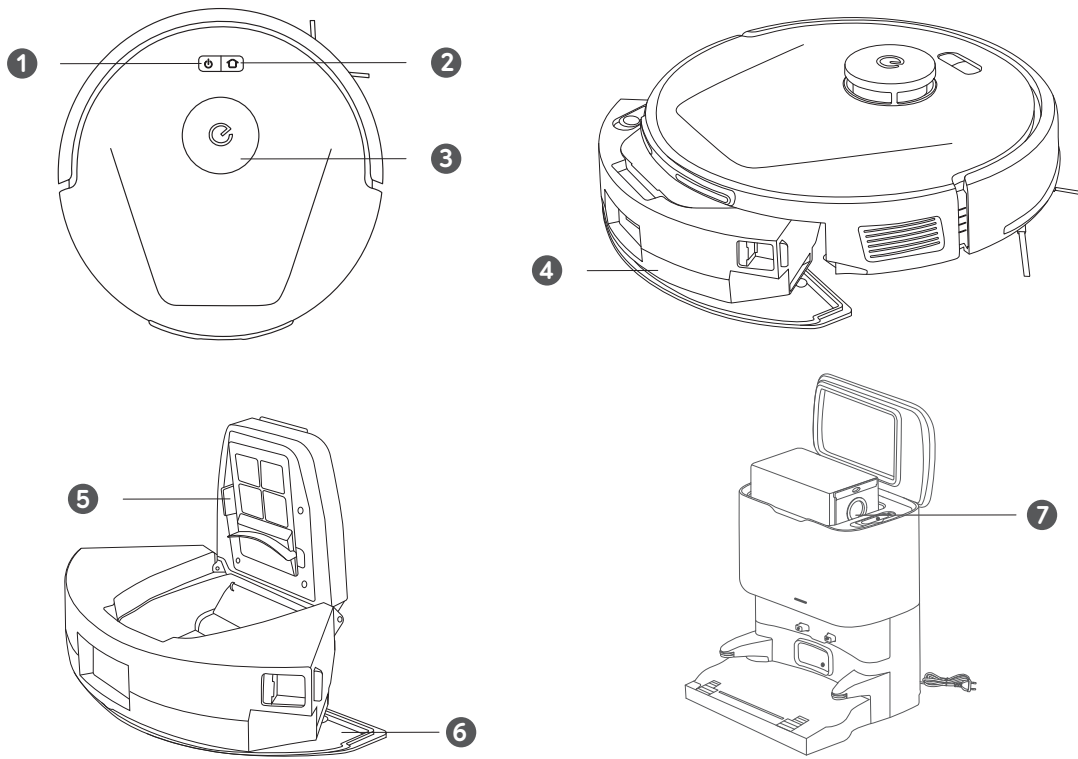

- EN:**
- 1 Cleaning start / pause button
  - 2 Recharge button
  - 3 360° Lidar Navigation Sensor
  - 4 Dust box
  - 5 Filter
  - 6 Mopping Module
  - 7 Disposable dust bag
- ES:**
- 1 Botón de inicio / pausa de limpieza
  - 2 Botón de recarga
  - 3 Sensor de navegación Lidar de 360°
  - 4 Contenedor para polvo
  - 5 Filtro
  - 6 Módulo de Fregado
  - 7 Bolsa de polvo desechable
- FR:**
- 1 Bouton de démarrage / pause de nettoyage
  - 2 Bouton de recharge
  - 3 Capteur de navigation Lidar à 360°
  - 4 Bac à poussières
  - 5 Filtre
  - 6 Module de Nettoyage
  - 7 Sac à poussière jetable


|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>EN:</b> Press and hold for 3 seconds to power on or off<br>Press to pause / finish the current task when working<br><b>ES:</b> Mantenga pulsado durante 3 segundos para encender o apagar<br>Pulse para pausar / finalizar la tarea actual cuando esté funcionando<br><b>FR:</b> Appuyez sur le bouton et maintenez-le enfoncé pendant 3 secondes pour allumer ou éteindre l'appareil<br>Appuyez sur ce bouton pour mettre en pause ou terminer la tâche en cours durant le fonctionnement                                                                                                                                                                                              |
|  | <b>EN:</b> Press to return RoboVac to the Charging Station<br>Press to pause the current task when working<br>Press and hold for 3 seconds to enable or disable Child Safety Lock<br><b>ES:</b> Presione para devolver RoboVac a la estación de carga<br>Presione para pausar la tarea actual mientras trabaja<br>Mantenga presionado durante 3 segundos para habilitar o deshabilitar el bloqueo de seguridad para niños<br><b>FR:</b> Appuyez pour retourner RoboVac à la station de charge<br>Appuyez pour mettre en pause la tâche en cours lorsqu'il travaille<br>Appuyez et maintenez enfoncé pendant 3 secondes pour activer ou désactiver le verrouillage de sécurité pour enfants |
|  | <b>EN:</b> Press and hold simultaneously for 3 seconds to reset the Wi-Fi connection<br><b>ES:</b> Manténgalos pulsados simultáneamente durante 3 segundos para restablecer la conexión Wi-Fi<br><b>FR:</b> Appuyez et maintenez enfoncé simultanément pendant 3 secondes pour réinitialiser la connexion Wi-Fi                                                                                                                                                                                                                                                                                                                                                                            |

Get Started

**1** Install the Self Empty Station in a location that RoboVac can easily access. It is recommended to place it against a wall and on a hard, level surface rather than on rugs or carpets.

**ES:** Instale la Estación de vaciado automático en un lugar al que RoboVac pueda acceder fácilmente. Se recomienda colocarlo contra una pared y sobre una superficie dura y nivelada en lugar de sobre alfombras.

 **FR:** Installez la Station de vidage automatique dans un endroit facilement accessible par RoboVac. Il est recommandé de la placer contre un mur et sur une surface dure et plane plutôt que sur des tapis ou des moquettes.

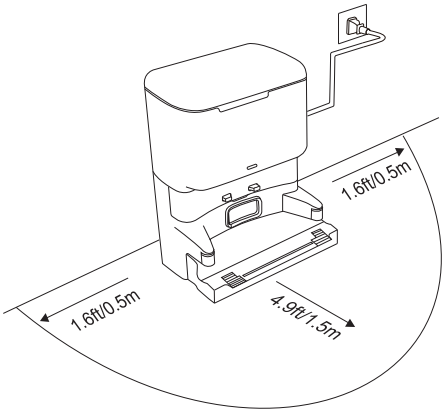


- EN:** Always keep the Self Empty Station plugged in, otherwise RoboVac will not automatically return to it. When the Self Empty Station connects to AC power, the LED indicator on it is steady white.
- ES:** Mantenga siempre la Estación de vaciado automático conectada, de lo contrario RoboVac no volverá automáticamente a ella. Cuando la Estación de vaciado automático se conecta a la corriente eléctrica, el indicador LED en ella es blanco fijo.
- FR:** Gardez toujours la Station de vidage automatique branchée, sinon RoboVac ne reviendra pas automatiquement. Lorsque la Station de vidage automatique se connecte à l'alimentation électrique, le voyant LED sur celle-ci est blanc fixe.

**2** Install the detachable base by pressing down both sides of it firmly until you hear a click.

**ES:** Instale la base desmontable presionando firmemente ambos lados de la misma hasta que escuche un clic.

 
**FR:** Installez la base détachable en appuyant fermement sur les deux côtés jusqu'à ce que vous entendiez un clic.

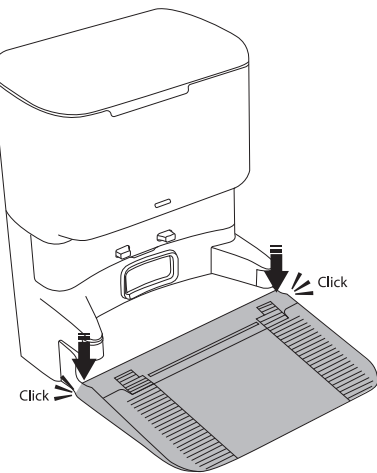

- EN:** Make sure the detachable base is seamlessly connected to the Self Empty Station, otherwise RoboVac will fail to return to the Self Empty Station smoothly.
- ES:** Asegúrese de que la base desmontable esté conectada sin problemas a la Estación de Vacío Automático, de lo contrario, RoboVac no podrá regresar a la Estación de Vacío Automático de manera fluida.
- FR:** Assurez-vous que la base détachable est parfaitement connectée à la Station d'Auto-vidage, sinon RoboVac ne pourra pas retourner à la Station d'Auto-vidage en douceur.


3 Remove the foam blocks beside the bumper before use.

 ES: Retire los bloques de espuma al lado del parachoques antes del uso.  
FR: Retirez les blocs de mousse à côté du pare-chocs avant l'utilisation.

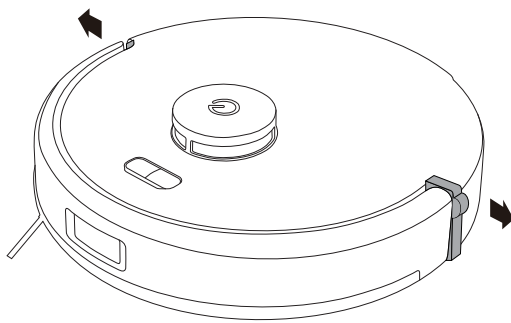

4 Attach RoboVac to the Self Empty Station and turn it on.

 
ES: Conecte RoboVac a la Estación de vaciado automático y enciéndalo.  
FR: Attachez RoboVac à la Station de vidage automatique et allumez-le.

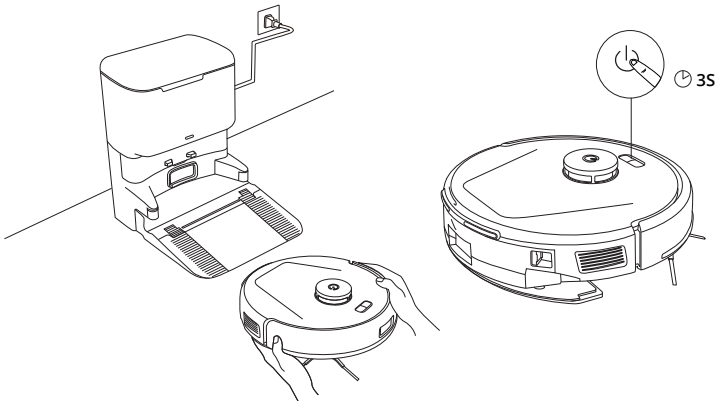

**EN:** Fully charge RoboVac before use. The LED indicator on RoboVac will be solid white when fully charged.  
**ES:** Cargue completamente RoboVac antes de usarlo. El indicador LED en RoboVac será blanco sólido cuando esté completamente cargado.  
**FR:** Chargez complètement RoboVac avant utilisation. Le voyant LED sur RoboVac sera blanc fixe lorsqu'il est complètement chargé.

5 Download the app. Follow the in-app instructions to set up the Wi-Fi connection.

 ES: Descargue la aplicación. Siga las instrucciones de la aplicación para configurar la conexión Wi-Fi.  
FR: Téléchargez l'application. Suivez les instructions de l'application pour configurer la connexion Wi-Fi.

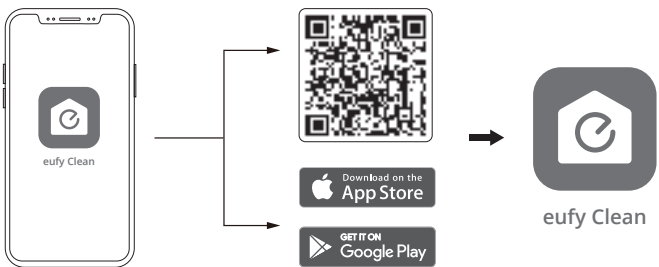

**EN:** You will be informed once a new firmware version is detected when RoboVac has been connected to the Internet. Please update the firmware promptly for an optimal user experience.  
**ES:** Se le informará una vez que se detecte una nueva versión de firmware cuando RoboVac haya sido conectado a Internet. Actualice el firmware de inmediato para una experiencia de usuario óptima.  
**FR:** Vous serez informé dès qu'une nouvelle version du firmware sera détectée lorsque RoboVac aura été connecté à Internet. Veuillez mettre à jour le firmware rapidement pour une expérience utilisateur optimale.

6 Start Quick Mapping in the eufy Clean app, and experience a hassle-free clean powered by RoboVac.

ES: Inicia el Mapeo Rápido en la aplicación eufy Clean y experimenta una limpieza sin complicaciones con la potencia de RoboVac.  
FR: Lancez la Cartographie Rapide dans l'application eufy Clean et profitez d'un nettoyage sans tracas alimenté par RoboVac.



**EN:** For more information on how to use the Intelligent Mapping feature, please refer to the Owner's Manual by scanning the QR code at Customer Service or visiting <https://support.eufylife.com>.

ES:

• Para obtener más información sobre cómo usar la función de Mapeo Inteligente, consulte el Manual del Propietario escaneando el código QR en el Servicio al Cliente o visitando <https://support.eufylife.com>.

FR:

• Pour plus d'informations sur comment utiliser la fonction de Cartographie Intelligente, veuillez vous référer au Manuel de l'Utilisateur en scannant le code QR au Service Client ou en visitant <https://support.eufylife.com>.

Cautions

EN:

 
- When RoboVac has returned to the Self Empty Station, the hair cutting device in the Self Empty Station will automatically turn on. Do not move the Self Empty Station at this time.
- Once you have finished installing the Self Empty Station, do not touch the hair cutting slot on the Self Empty Station.
- Do not flush the main unit with water.
- RoboVac should not be allowed to enter ponding areas.
- Please remove the mopping module when not using the mopping function.
- Do not use the mopping module on carpets or threshold (more than 18mm). If there're carpets in the room, it is recommended to set up a no-go zone or no-mop zone by App before using RoboVac.

ES:

- Cuando RoboVac ha regresado a la Estación de Autovaciado, el dispositivo de corte de pelo en la Estación de Autovaciado se encenderá automáticamente. No mueva la Estación de Autovaciado en este momento.
- Una vez que haya terminado de instalar la Estación de Autovaciado, no toque la ranura de corte de pelo en la Estación de Autovaciado.
- No enjuague la unidad principal con agua.
- El RoboVac no debe entrar en zonas encharcadas.
- Retire el módulo de fregado cuando no utilice la función de fregado.
- No utilice el módulo de fregado sobre alfombras o umbrales (más de 18 mm). Si hay alfombras en la habitación, se recomienda establecer una zona prohibida o una zona de no fregado mediante App antes de utilizar el RoboVac.

FR:

- Lorsque RoboVac est retourné à la Station de Vidage Automatique, le dispositif de coupe de cheveux dans la Station de Vidage Automatique s'allumera automatiquement. Ne déplacez pas la Station de Vidage Automatique à ce moment-là.
- Une fois que vous avez terminé d'installer la Station de Vidage Automatique, ne touchez pas la fente de coupe de cheveux sur la Station de Vidage Automatique.
- Ne pas rincer l'unité principale avec de l'eau.
- RoboVac ne doit pas être autorisé à entrer dans les zones d'accumulation d'eau.
- Veuillez retirer le module de nettoyage lorsque vous n'utilisez pas la fonction de nettoyage.
- Ne pas utiliser le module de nettoyage sur les tapis ou les seuils (plus de 18 mm). S'il y a des tapis dans la pièce, il est recommandé de définir une zone interdite ou une zone sans nettoyage via l'application avant d'utiliser RoboVac.

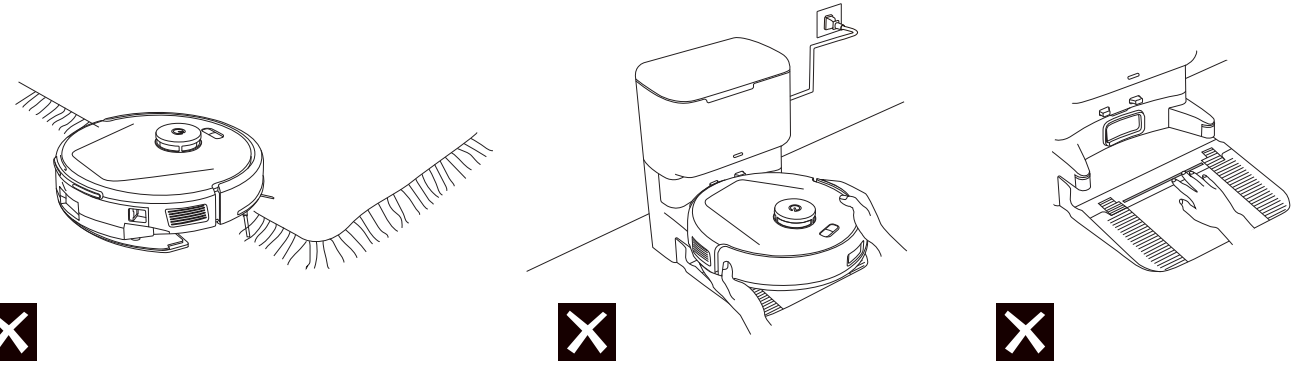

Warranty

|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EN | <b>12-Month Limited Warranty for the main unit (including the battery).</b><br><b>24-Month Limited Warranty for the Self Empty Station.</b><br>• Not applicable to consumables (rolling brush, side brush, mopping cloth, Hair Detangling Mechanism, etc.)<br><b>This limited warranty provided by the manufacturer does in no way affect a potential statutory warranty provided by law.</b>                                                     |
| ES | <b>Garantía limitada de 12 meses para la unidad principal (incluyendo la batería).</b><br><b>Garantía limitada de 24 meses para la Estación de vaciado automático.</b><br>• No aplicable a consumibles (cepillo rodante, cepillo lateral, paño de fregado, mecanismo de desenredado de cabello, etc.)<br><b>Esta Garantía limitada proporcionada por el fabricante no afecta de ningún modo a ninguna posible garantía que establezca la ley.</b> |
| FR | <b>Garantie limitée de 12 mois pour l'unité principale (y compris la batterie).</b><br><b>Garantie limitée de 24 mois pour la Station de vidage automatique.</b><br>• Non applicable aux consommables (brosse rotative, brosse latérale, chiffon de nettoyage, mécanisme de démêlage des cheveux, etc.)<br><b>Cette garantie limitée fournie par le fabricant n'affecte en aucune façon une garantie légale potentielle prévue par la loi.</b>    |

Customer Service

support@eufy.com    www.eufy.com  
(US/CA) +1 (800) 994 3056    (UK) +44 (0) 1604 936200    (DE) +49 (0) 69 9579 7960    (日本) +81 03 4455 7823

|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>EN:</b> For manuals, tutorial videos, FAQs, and more information, please visit: <a href="https://support.eufylife.com">https://support.eufylife.com</a> Or scan the QR code:<br><br><b>ES:</b> Para ver más números de teléfono de asistencia, vaya a: <a href="https://support.eufylife.com/s/phonecontactus">https://support.eufylife.com/s/phonecontactus</a> O escanee el código QR<br><br><b>FR:</b> Pour plus de numéros de téléphone d'assistance, consultez le site: <a href="https://support.eufylife.com/s/phonecontactu">https://support.eufylife.com/s/phonecontactu</a> Ou scannez le code QR |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>EN:</b> For more support phone numbers, please visit: <a href="https://support.eufylife.com/s/phonecontactus">https://support.eufylife.com/s/phonecontactus</a> Or scan the QR code<br><br><b>ES:</b> Para ver más números de teléfono de asistencia, vaya a: <a href="https://support.eufylife.com/s/phonecontactus">https://support.eufylife.com/s/phonecontactus</a> O escanee el código QR<br><br><b>FR:</b> Pour plus de numéros de téléphone d'assistance, consultez le site: <a href="https://support.eufylife.com/s/phonecontactu">https://support.eufylife.com/s/phonecontactu</a> Ou scannez le code QR |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

@EufyOfficial    @EufyOfficial    @EufyOfficial    @EufyOfficial

## **1. About Your L60 Hybrid SES (T2278)**

1.1 What's in the box

1.2 Overview

1.3 Buttons Control

1.4 LED Indication

## **2. Preparing Your L60 Hybrid SES (T2278)**

2.1 Important Tips Before Use

2.2 Preparation

2.3 Power On / Off

## **3. Using the Mopping System**

## **4. Using Your L60 Hybrid SES (T2278) with the eufy Clean App**

4.1 Download the App

4.2 Reset the Wi-Fi Connection

4.3 Quick Mapping and Floor Plan

4.4 Set Up No-Go Zone and Virtual Wall (Available on the App Only)

4.5 Select a Cleaning Mode

4.6 Select a Suction Power Level

4.7 Use RoboVac with Amazon Alexa / The Google Assistant

## **5. Cleaning and Maintenance**

5.1 Clean the Dust Box and Filter

5.2 Clean the Rolling Brush

5.3 Clean the Mopping Cloth

5.4 Clean the Side Brush

5.5 Clean the Sensors and Charging Pins

 
5.6 Clean the Hair Collection Box

## **6. Troubleshooting**


## **7. Specifications**

# 1. About Your L60 Hybrid SES (T2278)


## 1.1 What's in the box

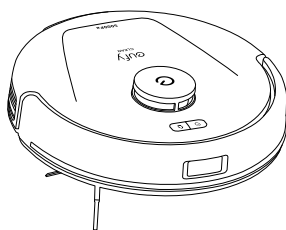


Main Unit

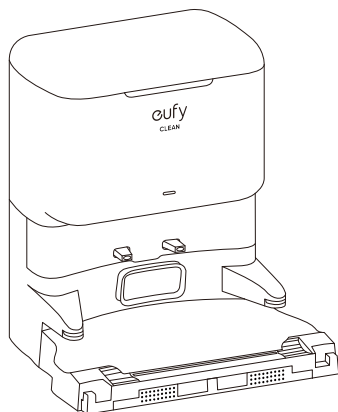 

Self Empty Station and Power Cord

 

Documents

 


Detachable Base




Mopping Module


## 1.2 Overview

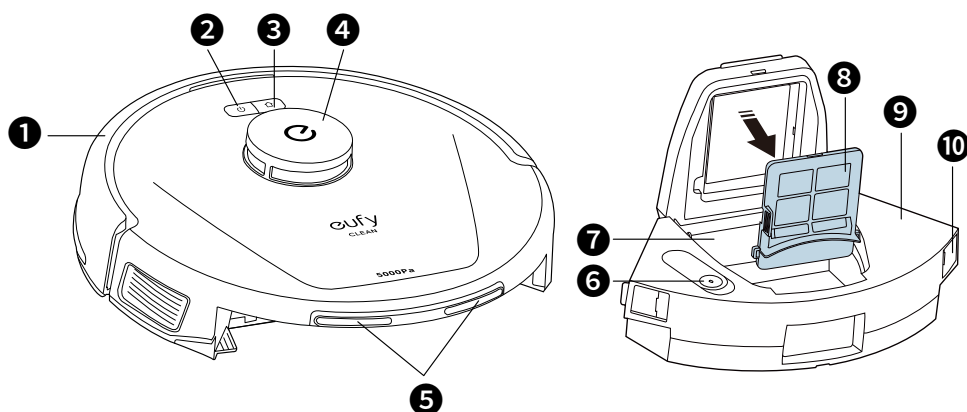 

 - ❶ Bumper
- ❷ Cleaning Start / Pause button
- ❸ Recharge Button
- ❹ 360° Lidar Navigation Sensor
- ❺ Charging Pins
- ❻ Water Inlet
- ❼ Back Flow Prevention Flap
- ❽ Filter
- ❾ Dust Box
- ❿ Dust Box Release Buttons (×2)

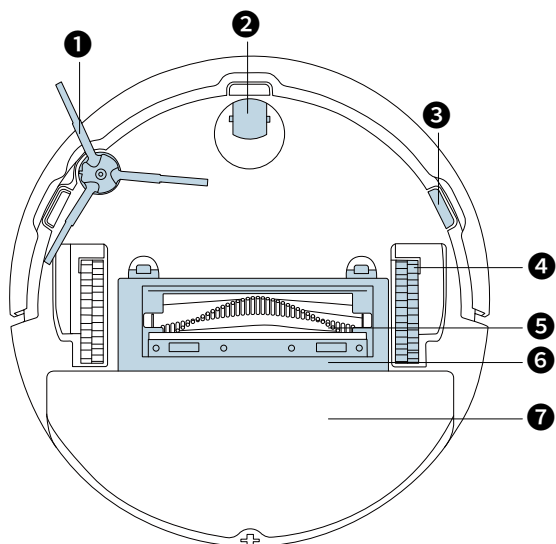

 
- ❶ Side Brush
- ❷ Swivel Wheel
- ❸ Anti-drop Sensors (×3)
- ❹ Wheels (×2)
- ❺ Rolling Brush
- ❻ Brush Guard
- ❼ Mopping Module

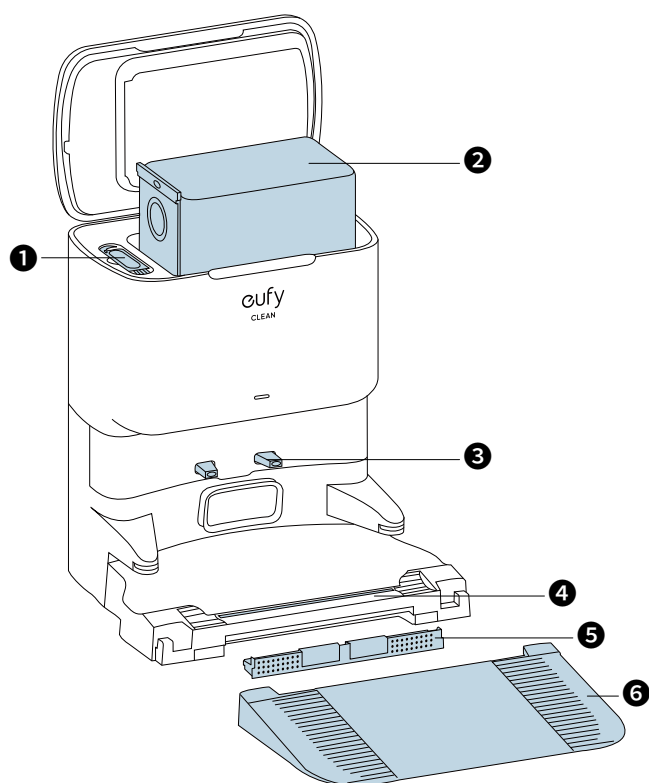

- ❶ Cleaning Tool
- ❷ Disposable Dust Bag
- ❸ Charging Pins
- ❹ Automatic Hair Detangling Slot\*
- ❺ Hair Collection Box
- ❻ Detachable Base

### \*How Hair Detangling Works

 The Self Empty Station is equipped with an electric rolling blade, which automatically starts detangling hair on the rolling brush once RoboVac has returned to the station.

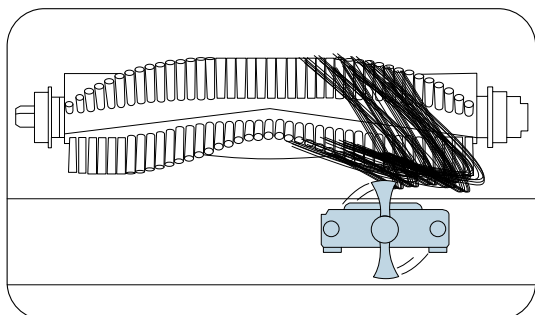



Every time RoboVac returns to the Self Empty Station, the hair cutting blade will be triggered to extend and start detangling the hair on the rolling brush. During the hair cutting process, if a child or pet accidentally lifts up RoboVac by more than 0.11 inch/ 3mm, the blade will stop working immediately and retract into the base to prevent accidental injury.



If there is a sudden power outage at your home, the Self Empty Station will detect the power failure and automatically retract the cutting blade into the station.

-  • If RoboVac returns to the Self Empty Station with a low battery, the Station will hold off the hair detangling process until RoboVac is fully charged. Once RoboVac is fully powered, the Self Empty Station will perform the hair detangling task before RoboVac proceeds to a new cleaning task.

## 1.3 Buttons Control


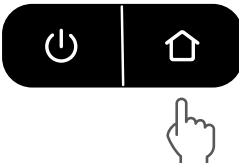 
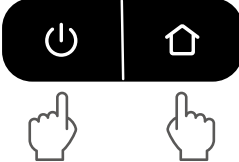 
|                                                                                     |                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>• Long press (3s): Power on or off</li><li>• Short press: Pause / finish the current task when working</li></ul>                                                                            |
|  | <ul style="list-style-type: none"><li>• Short press: Return RoboVac to the Self Empty Station</li><li>• Short press: Pause the current task when working</li><li>• Long press (3s): Enable or disable Child Safety Lock</li></ul> |
|  | <ul style="list-style-type: none"><li>• Long press simultaneously (3s): Reset the Wi-Fi connection</li></ul>                                                                                                                      |

## 1.4 LED Indication
   
| Button                                                                                                                                                                    | LED Indication                                                                                              | RoboVac Status                                                                                                                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | <ul style="list-style-type: none"> <li>• Solid white</li> </ul>                                             | <ul style="list-style-type: none"> <li>• Working normally</li> </ul>                                                                                                                                                                                        |
|         | <ul style="list-style-type: none"> <li>• Pulsing white<br/>(When attached to Self Empty Station)</li> </ul> | <ul style="list-style-type: none"> <li>• Charging, battery level &gt; 12%<br/>(When fully charged for 1 minute, RoboVac switches to Sleep Mode)</li> </ul>                                                                                                  |
|         | <ul style="list-style-type: none"> <li>• Flashing white</li> </ul>                                          | <ul style="list-style-type: none"> <li>• Returning to Self Empty Station</li> </ul>                                                                                                                                                                         |
|     | <ul style="list-style-type: none"> <li>• Flashing red slowly</li> </ul>                                     | <ul style="list-style-type: none"> <li>• Error</li> <li>* Refer to the "Troubleshooting" section in this manual, check in-app instructions, or contact eufy Customer Service for solutions</li> <li>• In Standby mode and battery level &lt; 12%</li> </ul> |
|     | <ul style="list-style-type: none"> <li>• Flashing white quickly</li> </ul>                                  | <ul style="list-style-type: none"> <li>• Wi-Fi connection is being reset</li> </ul>                                                                                                                                                                         |
|     | <ul style="list-style-type: none"> <li>• Solid red</li> </ul>                                               | <ul style="list-style-type: none"> <li>• RoboVac's Wi-Fi connection has dropped</li> </ul>                                                                                                                                                                  |
|     | <ul style="list-style-type: none"> <li>• Off</li> </ul>                                                     | <ul style="list-style-type: none"> <li>• RoboVac switches to Sleep Mode after being idle for 10 minutes</li> </ul>                                                                                                                                          |


## 2. Preparing Your L60 Hybrid SES (T2278)

### 2.1 Important Tips Before Use

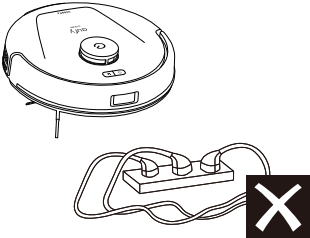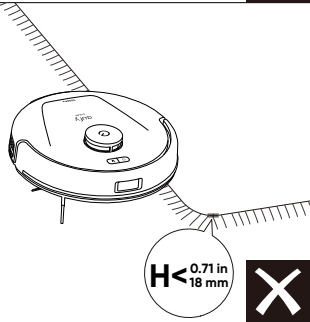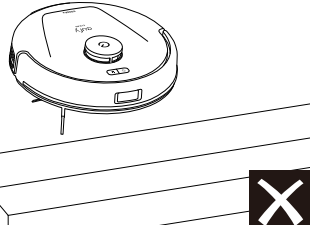
|                                                                                                 |                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b><br>   | <p><b>A.</b> Remove power cords and small objects from the floor that may entangle RoboVac.</p>                                                                                                                                                                                        |
| <b>B</b><br>   | <p><b>B.</b> Fold tasseled edges of rugs underneath to prevent tangling RoboVac. Avoid cleaning high-pile rugs or rugs thicker than 0.71 in / 18 mm as they may cause RoboVac to malfunction.</p>                                                                                      |
| <b>C</b><br>  | <p><b>C.</b> It is strongly recommended to place physical barriers or set a "No-Go" zone via the eufy Clean app in front of fireplaces, the edge of staircase, and certain areas (i.e. air vents) that may cause damage to RoboVac if entered.</p>                                     |
| <b>D</b><br> | <p><b>D.</b> Avoid vacuuming large amounts of water as it may damage the device.</p>                                                                                                                                                                                                   |
| <b>E</b><br> | <p><b>E.</b> RoboVac may climb on top of objects less than 0.79 in / 20 mm in height. Remove these objects if possible.</p>                                                                                                                                                            |
| <b>F</b><br> | <p><b>F.</b> Anti-drop sensors will prevent RoboVac from tumbling down stairs and steep drops in most cases. Sensors are less effective if dirty or used on carpeted / reflective floors. Place physical barriers or set a "No-Go" zone to block off areas where RoboVac may fall.</p> |

## 2.2 Preparation

 1. Remove the foam blocks beside the bumper and all the protective films before use.

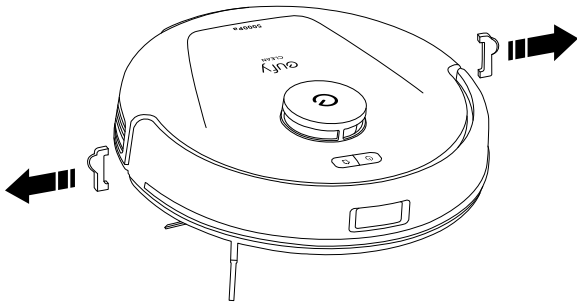


 2. Install the detachable base by pressing down both sides of it firmly until you hear a click.

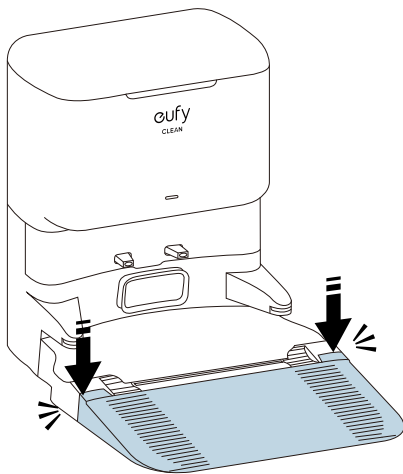


- 💡 • Make sure the detachable base is seamlessly connected to the Self Empty Station, otherwise RoboVac will fail to return to the Self Empty Station smoothly.

 3. Install the Self Empty Station in a location that RoboVac can easily access. It is recommended to place it against a wall and on a hard, level surface rather than on rugs or carpets. Then connect the power cord to the Self Empty Station and a wall outlet.

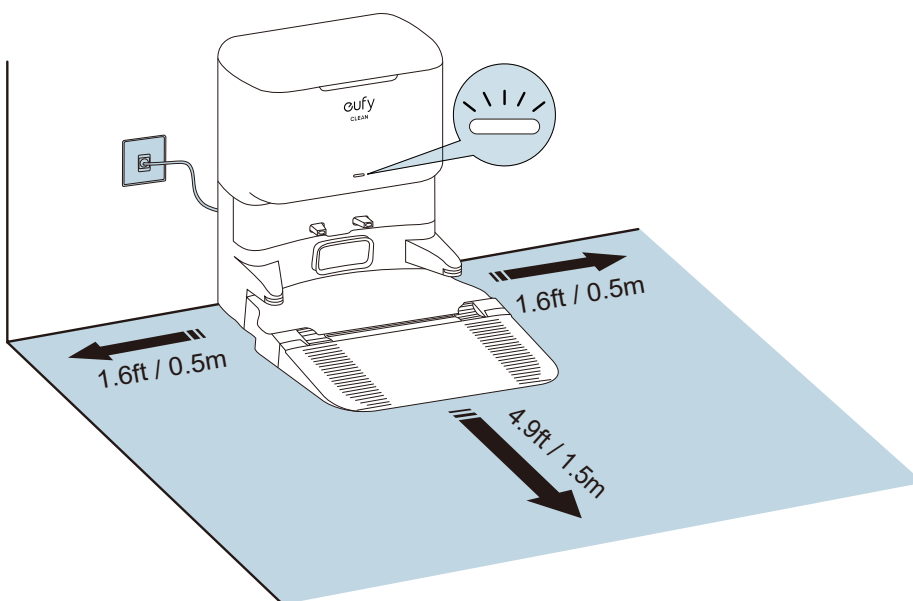

- 💡 • At all times, please do not touch the automatic hair detangling slot with your hands.
- Always keep the Self Empty Station plugged in, otherwise RoboVac will not automatically return to it.

 4. Attach RoboVac to the Self Empty Station by aligning their charging pins.

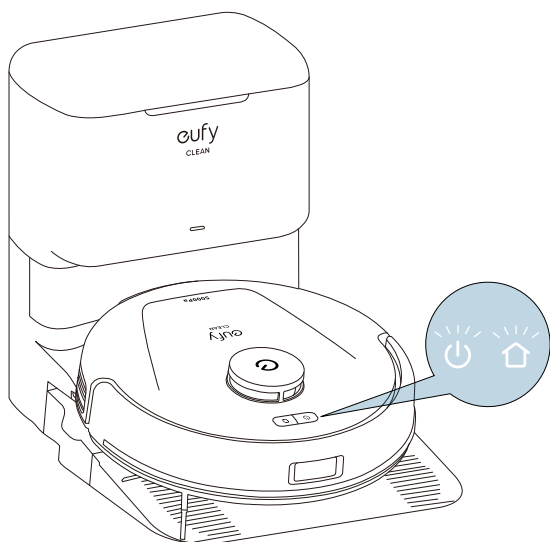

### Auto Recharge and Resume

 
RoboVac returns to the Self Empty Station automatically to recharge when:

- RoboVac has finished cleaning;
- Cleaning is not complete and the battery level becomes low; once recharged to 80% battery capacity, RoboVac will resume and finish the remaining cleaning.

-  Do not move the Self Empty Station during cleaning, otherwise RoboVac may fail to return for recharge. If failed, you have to manually attach it to the Self Empty Station. If the Self Empty Station is moved, start cleaning from the new location. RoboVac will automatically return when it has finished cleaning.
- Whenever RoboVac returns to the Self Empty Station, the Station will automatically start detangling the hair on the rolling brush. During this process, do not move the Self Empty Station or touch the hair detangling slot.


### 2.3 Power On / Off

Press and hold the power and recharge buttons for 3 seconds to power on or off.

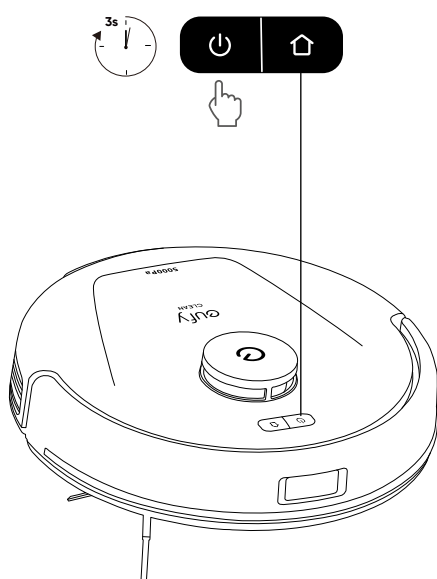

-  After powering on RoboVac, please wait for 20 seconds after the startup music sounds before proceeding to the next operation.

### 3. Using the Mopping System

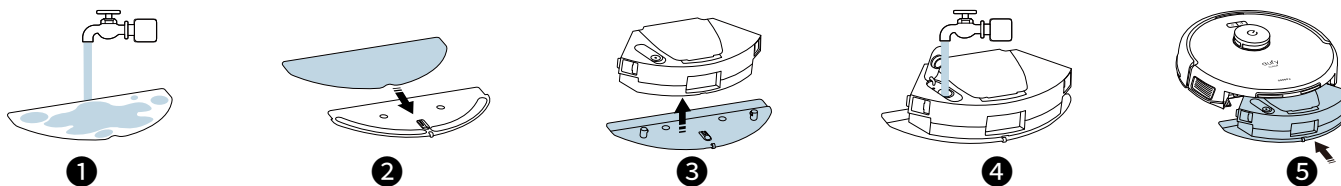 

- ① Wet the mopping cloth and wring it until it does not drip.
- ② Attach the cloth to the mopping module and stick it firmly.
- ③ Attach the mopping module onto the dust box.
- ④ Open the water inlet cover to fill the water tank, then close the cover.
- ⑤ Reinstall the dust box.

- 💡 • Do not use the mopping mode when no one is at home.
- Only use the mopping mode on a floor without carpets.

- ① Wet the mopping cloth and wring it until it does not drip.
- ② Attach the cloth to the mopping module and stick it firmly.
- ③ Open the water inlet cover to fill the water tank, then close the cover.
- ④ Attach the mopping module onto the dust box.
- ⑤ Reinstall the water tank into the bottom of RoboVac until a click is heard.

- 💡 • When reinstalling the dust box, make sure you hear two clicks on both sides to confirm the dust box has been fixed in place.

### 4. Using Your L60 Hybrid SES (T2278) with the eufy Clean App

To enjoy all the available features, it is recommended to control your RoboVac via the eufy Clean app.

**Before you start, make sure:**

- Your smartphone or tablet is running iOS 11 (or above) or Android 8.0 (or above).
- The 2.4GHz band or 5.0GHz band wireless signal is enabled on your wireless router.

 
#### 4.1 Download the App

1. Download the eufy Clean app from the App Store (iOS devices) or Google Play (Android devices), or by scanning the QR code.
2. Open the app and create a user account.
3. Tap the "+" icon to add RoboVac to your eufy Clean account.
4. Follow the instructions in the app to set up the Wi-Fi connection.
  - After connecting successfully, you can control RoboVac via the app.
  - With the app, you can select cleaning modes, select cleaning at your desired suction power, schedule cleaning, view the system status, set up "No-Go" zones, receive notifications, and access additional features.

- 💡 • If RoboVac gets stuck in any space, tap **Find My Robot** in the app to find the device.

#### 4.2 Reset the Wi-Fi Connection

If you bump into issues when connecting your RoboVac to the eufy Clean app, you can try to reset the Wi-Fi connection. To reset the Wi-Fi connection, press and hold the two buttons simultaneously for 3 seconds until you hear a voice prompt.

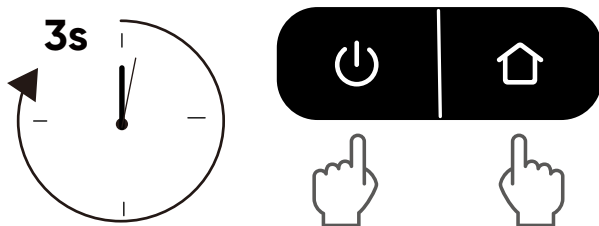

You will hear a voice prompt when the Wi-Fi connection has been reset, and the LED indicators on RoboVac will quickly flash red. Now you can follow the Wi-Fi instructions in the app to set up the Wi-Fi connection.

### 4.3 Quick Mapping and Floor Plan

- For a deep dive into how to use the Mapping feature, click the link below to explore more! (How-to )

Quick mapping helps RoboVac to learn the correct learning path and the environment of your home easily. A floor plan will be built after cleaning.

To create a complete floor plan:

1. Open your doors so that RoboVac can map each room. You can also block off certain areas that you don't want RoboVac to enter, which can improve the success rate of Quick Mapping.
2. Remove any objects that may be in the way or that might entangle RoboVac.

- Do not remove the Self Empty Station after a floor plan is created.

#### 4.4 Set Up No-Go Zone and Virtual Wall (Available on the App Only)

With the eufy Clean app, you can set up a “No-Go Zone” or “Virtual Wall” as a restricted area. This eliminates the need to use physical barriers, including boundary strips. This feature is only designed for dividing the cleaning zones, not for isolating hazardous areas.

- No-Go Zone: RoboVac will not enter the zone to vacuum.
- Virtual Wall: RoboVac will not cross the virtual wall.

- To set a virtual wall, RoboVac must initially perform a cleaning run to create a floor plan.
- Although a virtual wall is set, RoboVac may still enter the restricted zone due to repositioning failure or abnormal sensors.
- Moving the device or changing the environment may lose the virtual wall and cause the mapping to fail and rebuild.

 
## 4.5 Select a Cleaning Mode

You can select multiple cleaning modes via the eufy Clean app.



### 4.5.1 Auto-Cleaning

Press the cleaning/pause button on the main unit or tap "Start" on the eufy Clean app to start cleaning in Auto Mode.

After startup, RoboVac moves from the Self Empty Station and automatically determines its cleaning route, cleaning the edges first and following a Z-shaped cleaning path. When cleaning is finished, RoboVac automatically returns to the Self Empty Station.

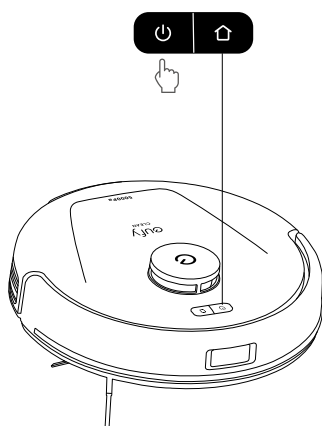

- To pause cleaning, press again.

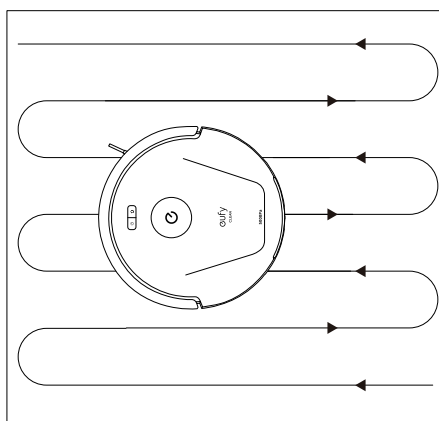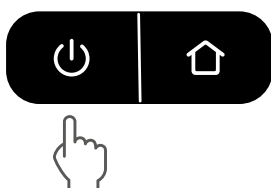  

- By default, RoboVac starts in Auto-cleaning Mode when it is turned on.

#### 4.5.2 Zone Cleaning (Available on App only)

In this mode, you can set up a cleaning zone and customize its size in the eufy Clean app, RoboVac will clean the selected zone only.

#### 4.5.3 Room Cleaning (Available on App only)

In this mode, your house is automatically divided into several rooms for cleaning in the eufy Clean app. You can also customize your room settings in the app. RoboVac will clean the selected rooms only and return to the Self Empty Station after cleaning.

- 💡 • Enable Room Cleaning only after RoboVac has created the map.
- It is recommended that RoboVac moves from the Self Empty Station to start room cleaning.

#### 4.6 Select a Suction Power Level

In the eufy Clean app, select a suction power level according to your needs: Quiet, Standard (Default), Turbo, and Max.

- 💡 • When RoboVac starts cleaning next time, it will clean according to the suction power level you previously selected.

In the eufy Clean app, you can also select the BoostIQ™ feature according to your needs. RoboVac will automatically increase suction power if it detects that stronger power is needed to ensure the best clean. BoostIQ™ is ideal for cleaning thicker carpets and hard-to-sweep messes, which will reduce the total cleaning time but increase the noise level. If the vacuuming noise caused by BoostIQ™ disturbs you, you can disable this feature.

#### 4.7 Use RoboVac with Amazon Alexa / The Google Assistant

Amazon Alexa or the Google Assistant are smart voice control devices that enable you to control RoboVac with your voice.

##### Before you start, make sure:

- RoboVac is attached to the Self Empty Station to ensure there is enough power.
- RoboVac is connected with the eufy Clean app.
- You have an Amazon Alexa-enabled device (i.e. Amazon Echo, Echo Dot, Amazon Tap, Echo Show, or Echo Spot) or a device enabled with the Google Assistant (i.e. Google Home, Google Home Mini). These devices are sold separately.
- The Amazon Alexa app or Google Home app is already installed on your smart device, and you have created an account.

##### To control RoboVac with Amazon Alexa or the Google Assistant:

1. Open the eufy Clean app and find "Smart Integrations" in the top left.
2. Follow the on-screen instructions to complete the setup.

## 5. Cleaning and Maintenance

Prior to cleaning and maintaining, power off the device and unplug the power adapter. Any other servicing should be performed by an authorized service representative.

For optimal performance, follow the instructions below to clean and maintain RoboVac regularly. The cleaning and replacement frequency will depend on your RoboVac usage habits.

 
### Recommended Cleaning and Replacement Frequency

 Click the link to shop for accessories: [https://us.eufy.com/collections/ap-accessory?ref=navimenu\\_1\\_8\\_copy&Product%20Name=L60%20Hybrid%20SES](https://us.eufy.com/collections/ap-accessory?ref=navimenu_1_8_copy&Product%20Name=L60%20Hybrid%20SES)

| RoboVac Part        | Cleaning Frequency | Replacement Frequency                      |
|---------------------|--------------------|--------------------------------------------|
| Dust Box            | After each use     | -                                          |
| Filter              | Once a week        | Every 3 months                             |
| Side Brush          | Once a month       | Every 3-6 months<br>(or when visibly worn) |
| Brush Guard         | Once a month       | Every 3-6 months<br>(or when visibly worn) |
| Rolling Brush       | Once a week        | Every 6-12 months                          |
| Sensors             | Once a month       | -                                          |
| Charging Pins       | Once a month       | -                                          |
| Swivel wheel        | Once a month       | -                                          |
| Hair collection box | Once a month       | -                                          |

## 5.1 Clean the Dust Box and Filter


- ① Press the release buttons on both sides to detach the dust box from RoboVac.
- ② Open the lid of the dust box.
- ③ Empty the dust box.
- ④ Take out the filter.
- ⑤ Dust off the remains on the filter.
- ⑥ Clean the filter with water.
- ⑦ Air dry the filter before next use.
- ⑧ Place the filter back to the dust box.
- ⑨ Close the dust box.
- ⑩ Reinstall the dust box onto RoboVac.

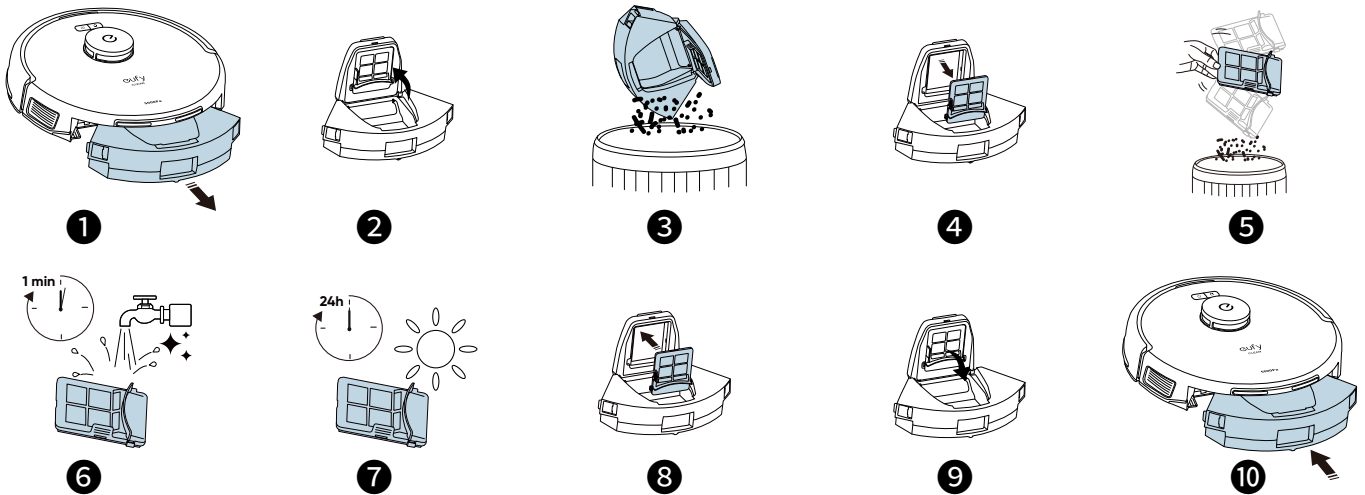


- 💡 • When reinstalling the dust box, make sure you hear two clicks on both sides to confirm the dust box has been fixed in place.
- Do not remove the backflow prevention flap to ensure that debris does not spill out of the dust box during the cleaning process or when pulling out the dust box.

## 5.2 Clean the Rolling Brush

 - ① Turn over the main unit, push the release tabs with both hands to unlock the brush guard.
- ② Take out the rolling brush. Clean the hair entangled on the rolling brush and debris with a scissor or cleaning tool.
- ③ Wash the rolling brush and brush guard with water.
- ④ Air dry the the rolling brush and brush guard before next use.
- ⑤ Reinstall the rolling brush by inserting the fixed protruding end first.
- ⑥ Push back the brush guard until you hear a click.

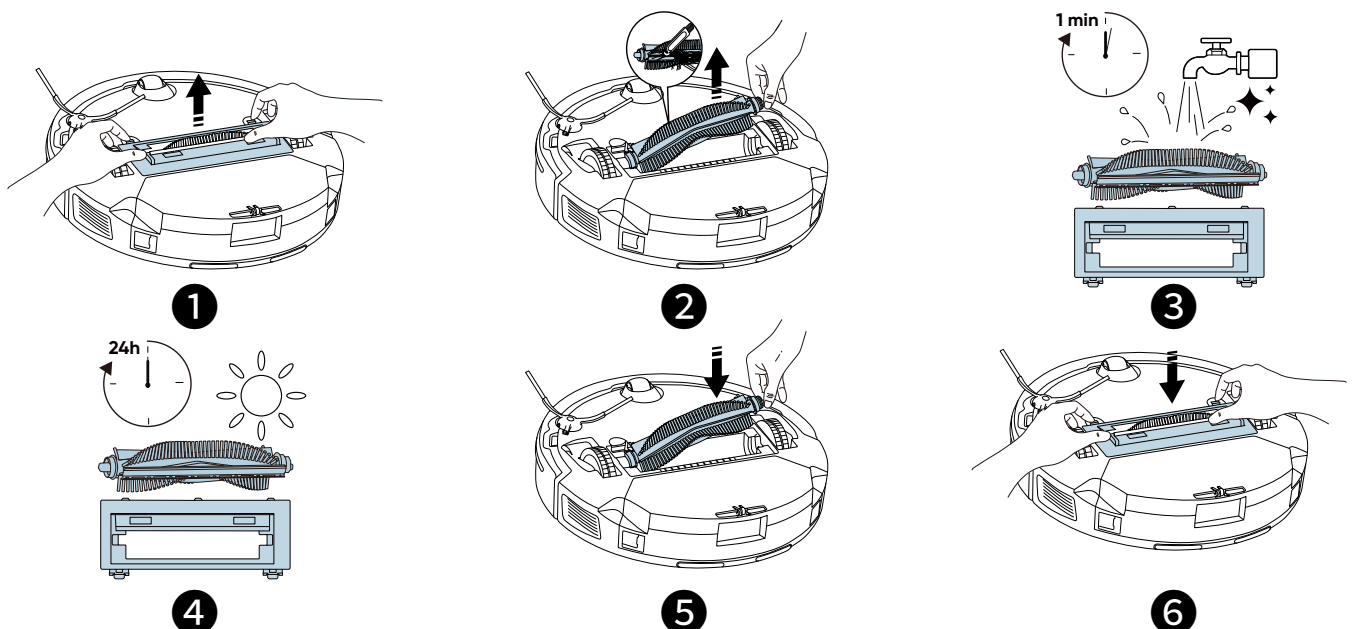

### 5.3 Clean the Mopping Cloth

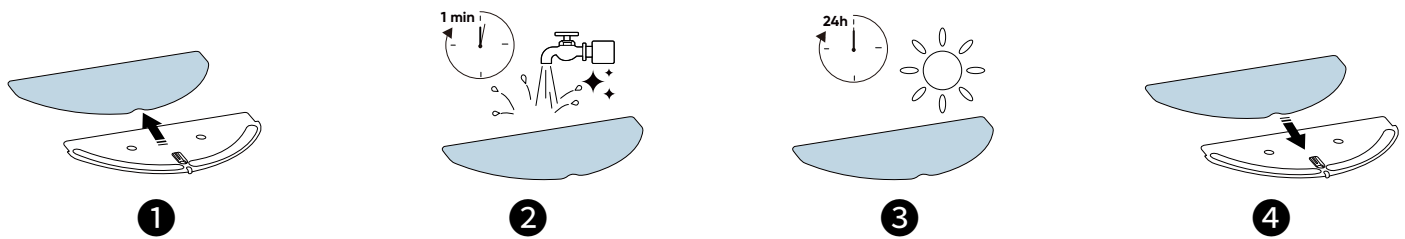 


- ① Detach the mopping cloth from the mopping module.
- ② Carefully wash the mopping cloth with water.
- ③ Sun dry the mopping cloth completely before next use.
- ④ Attach the mopping cloth back onto the mopping module.

### 5.4 Clean the Side Brush

 Foreign substances, such as hair, can easily get tangled in the side brush, so it is best to clean it regularly.


- ① Remove the side brush with a screwdriver.
- ② Carefully unwind and pull off any hair or substances that are wrapped between the main unit and the side brush.
- ③ Clean the side brush with water.
- ④ Air dry the side brush before next use.
- ⑤ Reinstall the side brush on the machine.

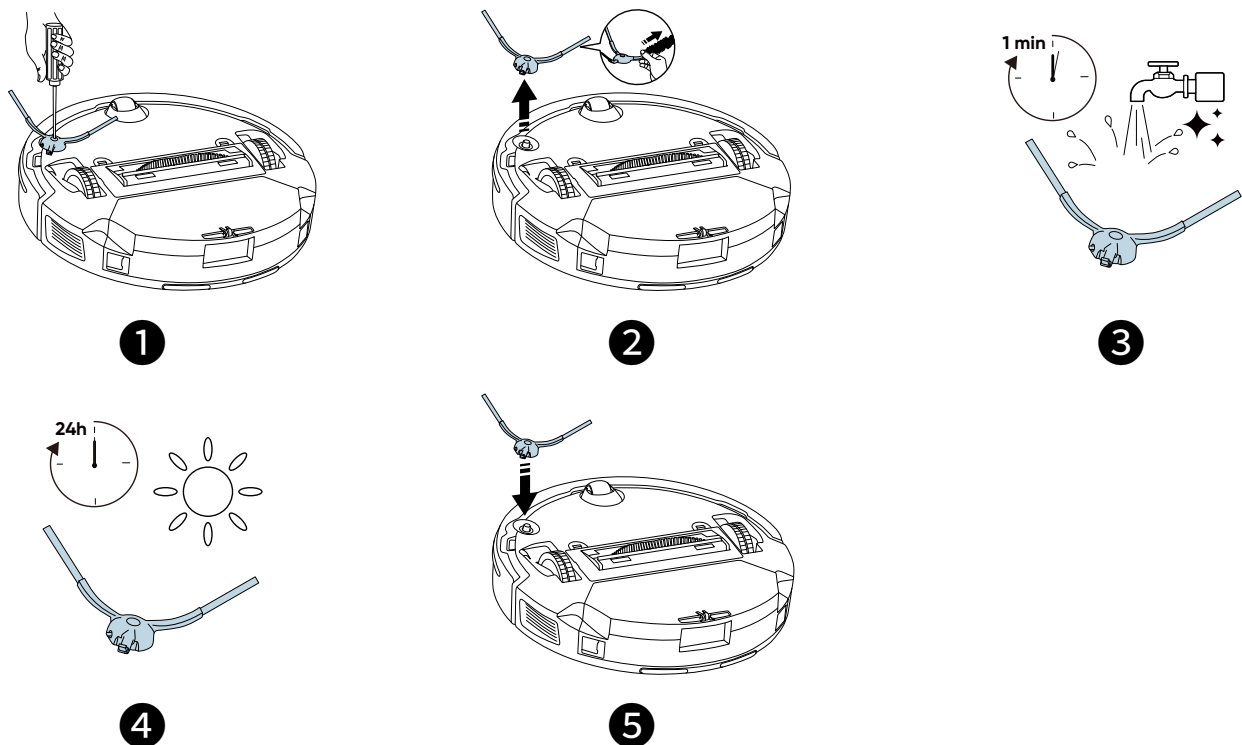

## 5.5 Clean the Sensors and Charging Pins


To maintain the best performance, clean the sensors and charging pins regularly.

 - Dust off the sensors and charging pins using a cloth or cleaning brush.

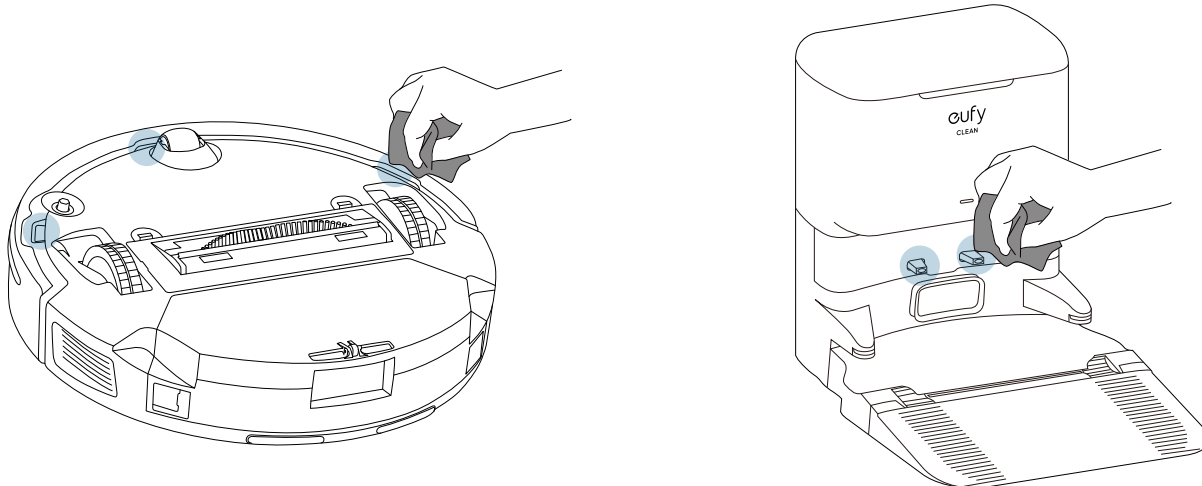

## 5.6 Clean the Hair Collection Box

 - ① Remove the detachable base.
- ② Take out the hair collection box from the Self Empty Station.
- ③ Empty the hair collection box.
- ④ Wash the hair collection box with water.
- ⑤ Air dry the hair collection box before next use.
- ⑥ Reinstall the hair collection box back to the Self Empty Station.
- ⑦ Reinstall the detachable base.

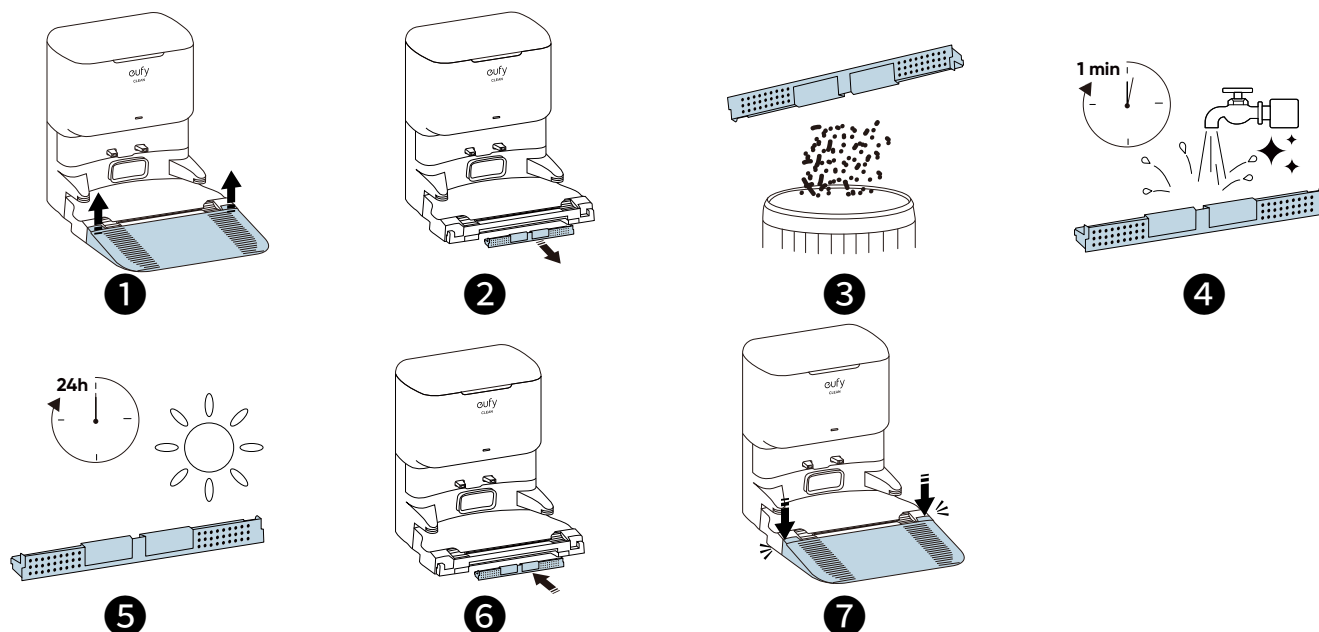



## 6. Troubleshooting

Here are just a few preliminary suggestions. If your problem persists or if you need further troubleshooting information, please visit <https://support.eufylife.com>, go to the eufy Clean app, or contact [support@eufy.com](mailto:support@eufy.com) for help.

| Problems                                        | Solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RoboVac will not turn on.                       | <ul style="list-style-type: none"><li>• Press and hold on RoboVac for 3 seconds to turn it on. Make sure the battery is fully charged.</li></ul>  <ul style="list-style-type: none"><li>• Make sure the battery is fully charged.</li><li>• If it still has no response, turn RoboVac off and then turn it back on.</li></ul>                                                                                                                                                                                           |
| RoboVac suddenly stops working.                 | <ul style="list-style-type: none"><li>• Check if RoboVac is trapped or stuck on an obstacle.</li><li>• Check if the battery level is too low.</li><li>• If your problem persists, turn RoboVac off, wait for 5 seconds, and then turn it back on.</li><li>• Check if RoboVac has alerted you with any voice prompts or LED indicators.</li><li>• Open the eufy Clean app to check the specific error prompt, then refer to the Troubleshooting section of the manual for solutions.</li></ul>                                                                                                            |
| You cannot schedule cleanings.                  | <ul style="list-style-type: none"><li>• Make sure the scheduled time has been set correctly. Check if the time zone in the eufy Clean app is consistent with that on your mobile device.</li><li>• Make sure RoboVac is turned on and the battery is fully charged. Cleaning schedules are erased when RoboVac is powered off. If RoboVac is turned on without Internet access, cleaning schedules will not synchronize and must be reset via the app.</li></ul>                                                                                                                                         |
| Suction power is weak.                          | <ul style="list-style-type: none"><li>• Check if any obstructions are blocking the suction inlet.</li><li>• Empty the dust box.</li><li>• Check if the filter is wet due to water or other liquid on the floor. Air-dry the filter completely before use.</li><li>• Check if the brush guard is correctly installed.</li><li>• Check the suction power level previously selected in the eufy Clean app. Adjust the setting if necessary.</li></ul>                                                                                                                                                       |
| RoboVac cannot be charged.                      | <ul style="list-style-type: none"><li>• Make sure the Self Empty Station is powered on.</li><li>• Dust off the charging pins with a dry cloth.</li><li>• Check if there is any physical damage on RoboVac or the charging pins of Self Empty Station</li><li>• Check if you can hear the "Charging" voice prompt when RoboVac is attached to the Self Empty Station</li></ul>                                                                                                                                                                                                                            |
| RoboVac cannot return to the Self Empty Station | <ul style="list-style-type: none"><li>• Remove objects within 1.6 ft / 0.5 m to the left and right sides and within 4.9 ft / 1.5 m of the front of the Self Empty Station.</li><li>• Make sure the Self Empty Station is powered on.</li><li>• Make sure the Self Empty Station is not placed on carpets.</li><li>• Check if RoboVac is stuck on any objects.</li><li>• Check if the sticker beneath the Self Empty Station has been removed, and the Self Empty Station has been firmly attached to the floor.</li><li>• Clean the charging pins and sensors carefully with a soft dry cloth.</li></ul> |

| Problems                                              | Solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RoboVac's movements or travel paths are abnormal.     | <ul style="list-style-type: none"> <li>• Clean the sensors carefully with a soft dry cloth.</li> <li>• Restart RoboVac by turning RoboVac off and on.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                               |
| RoboVac cannot connect to a Wi-Fi network.            | <ul style="list-style-type: none"> <li>• Make sure you entered the Wi-Fi password correctly.</li> <li>• Make sure your RoboVac, router, and phone are close enough to ensure a strong signal strength.</li> <li>• Make sure your Wi-Fi router supports the corresponding frequency band of RoboVac: 2.4/5.0GHz for L60 (T2277)</li> <li>• Reboot RoboVac and your router.</li> <li>• Try connecting RoboVac to a Wi-Fi network with another phone.</li> </ul>                                                                                                                  |
| You cannot control RoboVac with Amazon Alexa.         | <ul style="list-style-type: none"> <li>• Check if there are any Internet connection problems.</li> <li>• Check whether you have installed the Amazon Alexa app onto your smart device and enabled "eufy Clean - RoboVac" Skill in the Amazon Alexa app. For details, refer to the "Smart Integrations" page in the eufy Clean App.</li> <li>• Make sure you have a eufy Clean account and have connected to RoboVac.</li> <li>• Make sure you are using the correct Alexa voice commands.</li> </ul>                                                                           |
| You cannot control RoboVac with the Google Assistant. | <ul style="list-style-type: none"> <li>• Check if there are any Internet connection problems.</li> <li>• Check if you have installed the Google Home app onto your smart device and initiated the "eufy Clean" action in the Google Home app. For details, refer to the "Smart Integrations" page in the eufy Clean App.</li> <li>• Check if you are using the proper commands when talking to the Google Assistant. When making your request, start by saying the wake phrase "Ok Google".</li> <li>• Repeat your question. Speak clearly to the Google Assistant.</li> </ul> |
  
## 7. Specifications
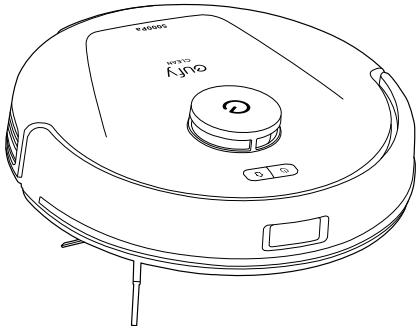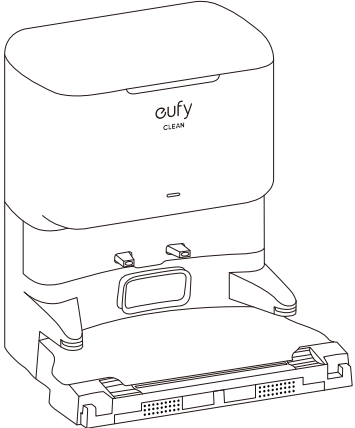
|                                                                                     |                            |                         |
|-------------------------------------------------------------------------------------|----------------------------|-------------------------|
|   | <b>Input</b>               | AC: 100V~240V/0.35A     |
|                                                                                     | <b>Suction Power</b>       | 5,000Pa                 |
|                                                                                     | <b>Wi-Fi Connection</b>    | 2.4G/5G                 |
|                                                                                     | <b>Voice Control</b>       | Alexa, Google assistant |
|                                                                                     | <b>Battery</b>             | 2600mAh                 |
|                                                                                     | <b>Dustbin Capacity</b>    | 260ml                   |
|                                                                                     | <b>Water Tank Capacity</b> | 290ml                   |
|                                                                                     | <b>Navigation</b>          | iPath Laser Navigation  |
|                                                                                     | <b>Climbing Height</b>     | 20mm                    |
|                                                                                     | <b>Product Size</b>        | 326*102*332mm           |
|  | <b>Input</b>               | AC: 100V~240V/6A Max    |
|                                                                                     | <b>Output</b>              | DC: 20V/0.6A Max        |
|                                                                                     | <b>Station Capacity</b>    | 2.5L                    |
|                                                                                     | <b>Product Size</b>        | 440*331*356mm           |