
276说明书-单面印刷

276说明书-2024-05-28 SIZE:360x120mm


Pickup Dynamic Humidifier

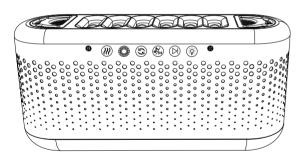

USER MANUAL

Please read this manual carefully before use to ensure that the product can be used correctly

Product Diagram

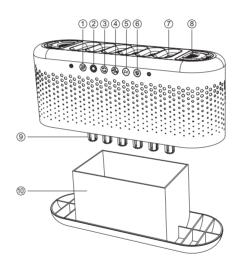

- ① Atomizing key
- 2 Light key
- 3 Mode key
- 4 Bluetooth Play back/Pause
- ⑤ Next song

- 6 Lighting control
- 7 Atomizing outlet
- ® megaphone
- Otton sleeve
- 10 Water tank

Instructions

Short press 1st time, turn on the mist and light of the 1st mist outlet. The machine will be auto power off after 12H. Short press 2nd time, turn on the mist and light of the 3nd mist outlet. The machine will be auto power off after 10H. Short press 3rd time, turn on the mist and light of the 5rd mist outlet. The machine will be auto power off after 8H. Short press 4th time, turn on the mist and light of the 2th mist outlet. The machine will be auto power off after 6H. Short press 5th time, turn on the mist and light of the 4th mist outlet. The machine will be auto power off after 5H. Short press 6th time, turn on the mist and light of the 6th mist outlet. The machine will be auto power off after 5H. Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 5 Press 6 ON/OFF outer ring to shine Tap to switch the outer ring light mode		
Press 1 (i) Press 2 (ii) Press 3 (iii) Press 3 (iii) Press 3 (iii) Press 4 (iii) Press 5 (iii) Press 5 (iii) Press 6 (iii) Press 6 (iii) Press 6 (iii) Press 7 (iii) Press 8 (iii) Press 9 (iii) Press 1 (iii) Press 2 (iii) Press 3 (iii) Press 6 (iii) Press 6 (iii) Press 6 (iii) Press 9 (iii) Press 1 (iiii) Press 1 (iiii) Press 1 (iiii) Press 1 (iiii) Press 2 (iiii) Press 3 (iiii) Press 4 (iiii) Press 6 (iiii) Press 6 (iiii) Press 6 (iiiii) Press 6 (iiiii) Press 6 (iiiiii) Press 6 (iiiiiii) Press 6 (iiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiii	Press1 (77)	
The machine will be auto power off after 8H. Short press 4th time, turn on the mist and light of the 2th mist outlet. The machine will be auto power off after 6H. Short press 5th time, turn on the mist and light of the 4th mist outlet. The machine will be auto power off after 5H. Short press 6th time, turn on the mist and light of the 6th mist outlet. The machine will be auto power off after 4H. Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 6 Press ON/OFF outer ring to shine		
Short press 4th time, turn on the mist and light of the 2th mist outlet. The machine will be auto power off after 6H. Short press 5th time, turn on the mist and light of the 4th mist outlet. The machine will be auto power off after 5H. Short press 6th time, turn on the mist and light of the 6th mist outlet. The machine will be auto power off after 4H. Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Tap the next song Long press ON/OFF outer ring to shine		
The machine will be auto power off after 5H. Short press 6th time, turn on the mist and light of the 6th mist outlet. The machine will be auto power off after 4H. Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 April 1999 Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Tap the next song Long press ON/OFF outer ring to shine		Short press 4th time, turn on the mist and light of the 2th mist outlet. The machine will be auto power off after 6H .
The machine will be auto power off after 4H . Short press 7th time to turn off the mist or long press 2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Tap the next song Long press ON/OFF outer ring to shine		Short press 5th time,turn on the mist and light of the 4th mist outlet . The machine will be auto power off after 5H.
2 seconds to turn off the mist and light. Short press every time to change the modes as below: 7 colors auto changing / fixed color / dazzling light / turn off the light Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 6 A Long press ON/OFF outer ring to shine		Short press 6th time, turn on the mist and light of the 6th mist outlet . The machine will be auto power off after 4H .
Press 2		
Long press 2 seconds to turn off the light any time. Short press to turn on the voice control function for the first time (need to pick up after Bluetooth speaker connection). The machine will be auto power off after 8H. Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press 4 Fress and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 5 D Tap the next song Long press ON/OFF outer ring to shine	Press2	
In the machine will be auto power off after 8H.		Long press 2 seconds to turn off the light any time.
Short press 2nd time, turn on the jumped mist and light mode. The machine will be auto power off after 8H. Press the two modes to switch, press the K1 key to exit both modes. Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 5 D Tap the next song Long press ON/OFF outer ring to shine	Press3 🗇 III	(need to pick up after Bluetooth speaker connection).
Press and hold Bluetooth ON/OFF for 2 seconds Tap play/Pause Press 5		
Tap play/Pause Press5 (公) Tap the next song Long press ON/OFF outer ring to shine		Press the two modes to switch, press the K1 key to exit both modes.
Tap play/Pause Press5	Press4 (%)	Press and hold Bluetooth ON/OFF for 2 seconds
Press6 (文) Long press ON/OFF outer ring to shine		Tap play/Pause
Press6 (-Q-)	Press5 🖂	Tap the next song
Tap to switch the outer ring light mode	Proces (id)	Long press ON/OFF outer ring to shine
	riesso (A)	Tap to switch the outer ring light mode

Product Specification

Executive standard:

GB 4706.1-2005 Made in China GB 4706.48-2009

Product Contents

AtomizerX1、Type-C cableX1、ManualX1、Spare cotton swabs 6

Note

- When using for the first time, please put the absorbent cotton swab into the right amount of water, so that it completely absorbs water, in the use of this will achieve the best results. If a new machine or a long-term unused machine has no spray for about 3 minutes during use, that is a normal phenomenon, this process is used for the absorption of cotton swabs, when the cotton swabs absorb water, it will soon produce atomization effect, and the machine begins to work normally.
- and the machine begins to work normally.

 Please use the included Type-C 2A power cord. If an alternative power cable is used, yes Note that the current specification is 2A, otherwise it will affect the atomization effect.
- During the operation, the sound in the water tank is the atomization sound, which is a normal phenomenon.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.