

WINDPROOF TORCH LIGHTER

Item No. 210469

User Guide

Thank you for purchasing the Windproof Torch Lighter. Please read this manual thoroughly before operating this device.

INSTRUCTIONS FOR USE

Inflation

- Shake the gas bottle gently and evenly distribute the gas inside the cylinder. T
- Then, invert the lighter, align the outlet of the gas tank with the gas injection port of the lighter, press moderately, and inflate vertically.
- If you notice gas overflow, it indicates that the lighter is full. Typically, it takes only 2-3 seconds to fill.

Using Gas Specifically for Lighters

Using poor-quality gas may damage the lighter's performance or render it unusable. Always use gas specifically designed for lighters.

Precautions for Refueling

- Refill gas in a well-ventilated area away from open flames. Use only authentic butane gas pressurized between 3.6 to 4.2 atmospheres.
- Before refueling, adjust the gas regulating wheel towards the [-] direction.

Flame Adjustment

- Use a suitable screwdriver to rotate the adjusting rod at the bottom of the lighter to modify the flame height. Rotate towards the [+] direction to increase the flame; rotate towards the [-] direction to decrease it.
- Adjust the flame to an appropriate height: 1.5-2.0 cm for a windproof lighter, 2.0-2.5 cm for a direct flame lighter, 2.5-3.0 cm for an open flame lighter, and 3.0 cm for a spray gun flame.

Safety Notices

- Keep the lighter away from your face, clothing, and others while in use.
- Store the lighter properly and avoid prolonged exposure to direct sunlight or temperatures above 45°C.
- Do not strike or place the lighter in a fire. Always ensure the lighter is off after use.



WARNING: KEEP OUT OF REACH OF CHILDREN

- Ignite lighter away from face and clothing.
- When filled, the lighter contains flammable fluid.
- Never expose to heat above 122°F [50°C] or prolonged sunlight.
- Never puncture or place in fire.
- Ensure the flame is extinguished after use.
- This lighter does not self-extinguish—close the cover to extinguish the flame.
- Fuel is a skin irritant; do not overfill.

THIS LIGHTER IS NOT CHILD RESISTANT

WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.