 




| Originale                                                                                   | Sostituto                                                                                                | Originale                                                                                                 | Sostituto                                                                                                 |
|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /         |  Di sc 1               |  Shift + 1             |
|  Repeat    |  Green / APP / Repeat   |  FM Mode/ Mut e        |  Menu / Home           |
|  Cancel    |  Exit / Cancel / Clear  |  L Bal ance            |  Shift + Left          |
|  Power     |  Power                  |  Bal ance R            |  Shift + Ri ght        |
|  1         |  1                      |  Tape Di rect ion      |  Pause / Step / Freeze |
|  2         |  2                      |  Tape Di spl ay        |  Di spl ay / Medi a    |
|  3         |  3                      |  SEA Mode              |  D. Menu / Top         |
|  Sl eep    |  Sl eep / Ti ner        |  S. A. Bass            |  Subt itle / EQ        |
|  4         |  4                      |  Up/ PTY Sear ch       |  Up                    |
|  5         |  5                      |  Pl ay                 |  Pl ay / Sl ow         |
|  6         |  6                      |  Sur round Mode        |  Ej ect / Sur round    |
|  Di sc 3 |  Shift + 3            |  Left/ PTY Sel ect   |  Left                |
|  7       |  7                    |  I << / <<           |  << / Tune-          |
|  8       |  8                    |  I << / <<           |  I << / Preset -     |
|  9       |  9                    |  Vol +               |  Vol +               |
|  Di sc 2 |  Shift + 2            |  Ri ght/ PTY Sel ect |  Ri ght              |
|  10      |  Gui de / EPG / - / - |  >> / >>             |  >> / Preset +       |









| Originale                                                                                   | Sostituto                                                                                               |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |
|  Repeat    |  Green / APP / Repeat  |
|  Cancel    |  Exit / Cancel / Clear |
|  Power     |  Power                 |
|  1         |  1                     |
|  2         |  2                     |
|  3         |  3                     |
|  Sleep     |  Sleep / Ti ner        |
|  4         |  4                     |
|  5         |  5                     |
|  6         |  6                     |
|  Di sc 3 |  Shift + 3           |
|  7       |  7                   |
|  8       |  8                   |
|  9       |  9                   |
|  Di sc 2 |  Shift + 2           |
|  10      |  0                   |

| Originale                                                                                                | Sostituto                                                                                                 |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  +10                  |  Gui de / EPG / - / -  |
|  Di sc 1              |  Shift + 1             |
|  FM Mode/ Mute        |  Menu / Home           |
|  L Bal ance           |  Shift + Left          |
|  Bal ance R           |  Shift + Ri ght        |
|  Tape Di recti on     |  Pause / Step / Freeze |
|  Tape Di spl ay       |  Di spl ay / Medi a    |
|  SEA Mode             |  D. Menu / Top         |
|  S. A. Bass           |  Subt itle / EQ        |
|  Pl ay                |  Pl ay / Sl ow         |
|  Up/ PTY Sear ch      |  Up                    |
|  Surround Mode      |  Ej ect / Surround   |
|  Left / PTY Sel ect |  << / Tune-          |
|  Left / PTY Sel ect |  Left                |
|  Left / PTY Sel ect |  I << / Preset-      |
|  Vol +              |  Vol +               |
|  >> / >>            |  >> / Preset +       |









| Originale                                                                                   | Sostituto                                                                                               |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |
|  Repeat    |  Green / APP / Repeat  |
|  Cancel    |  Exit / Cancel / Clear |
|  Power     |  Power                 |
|  1         |  1                     |
|  2         |  2                     |
|  3         |  3                     |
|  Sleep     |  Sleep / Timer         |
|  4         |  4                     |
|  5         |  5                     |
|  6         |  6                     |
|  Disc 3  |  Shift + 3           |
|  7       |  7                   |
|  8       |  8                   |
|  9       |  9                   |
|  Disc 2  |  Shift + 2           |
|  10      |  0                   |

| Originale                                                                                                | Sostituto                                                                                                 |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  +10                  |  Guide / EPG / - / -   |
|  Disc 1               |  Shift + 1             |
|  FM Mode / Mute       |  Menu / Home           |
|  L Balance            |  Shift + Left          |
|  Balance R            |  Shift + Right         |
|  Tape Direction       |  Pause / Step / Freeze |
|  Tape Display         |  Display / Media       |
|  SEA Mode             |  D. Menu / Top         |
|  S. A. Bass           |  Subtitle / EQ         |
|  Play                 |  Play / Slow           |
|  Up / PTY Search      |  Up                    |
|  Surround Mode      |  Eject / Surround    |
|  Left / PTY Select  |  Left                |
|  Vol +              |  Vol +               |
|  Right / PTY Select |  Right               |
|  Vol -              |  Vol -               |
|  Stop               |  Stop / Hold         |





Down/ RDS  
Di spl ay Mbde

## Fade Mut i ng

Down

Mute / Dimmer

## Sostituto







| Originale                                                                                   | Sostituto                                                                                               |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |
|  Repeat    |  Green / APP / Repeat  |
|  Cancel    |  Exit / Cancel / Clear |
|  Power     |  Power                 |
|  1         |  1                     |
|  2         |  2                     |
|  3         |  3                     |
|  Sleep     |  Sleep / Timer         |
|  4         |  4                     |
|  5         |  5                     |
|  6         |  6                     |
|  Disc 3  |  Shift + 3           |
|  7       |  7                   |
|  8       |  8                   |
|  9       |  9                   |
|  Disc 2  |  Shift + 2           |
|  10      |  0                   |

| Originale                                                                                                | Sostituto                                                                                                 |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  +10                  |  Guide / EPG / - / -   |
|  Disc 1               |  Shift + 1             |
|  FM Mode / Mute       |  Menu / Home           |
|  L Balance            |  Shift + Left          |
|  Balance R            |  Shift + Right         |
|  Tape Direction       |  Pause / Step / Freeze |
|  Tape Display         |  Display / Media       |
|  SEA Mode             |  D. Menu / Top         |
|  S. A. Bass           |  Subtitle / EQ         |
|  Play                 |  Play / Slow           |
|  Up / PTY Search      |  Up                    |
|  Surround Mode      |  Eject / Surround    |
|  Left / PTY Select  |  Left                |
|  Left / PTY Select  |  << / Tune-          |
|  Left / PTY Select  |  I << / Preset-      |
|  Vol +              |  Vol +               |
|  Right / PTY Select |  Right               |



