 
 
 
 
 


 
 
 


Originale	Sostituto	Originale	Sostituto
 Play Mode	 Set up / OPT /	 Di sc 1	 Shift + 1
 Repeat	 Green / APP / Repeat	 FM Mode/ Mut e	 Menu / Home
 Cancel	 Exit / Cancel / Clear	 L Bal ance	 Shift + Left
 Power	 Power	 Bal ance R	 Shift + Ri ght
 1	 1	 Tape Di rect i on	 Pause / Step / Freeze
 2	 2	 Tape Di spl ay	 Di spl ay / Medi a
 3	 3	 SEA Mode	 D. Menu / Top
 Sl eep	 Sl eep / Ti ner	 S. A. Bass	 Subt it le / EQ
 4	 4	 Up/ PTY Sear ch	 Up
 5	 5	 Pl ay	 Pl ay / Sl ow
 6	 6	 Surround Mode	 Ej ect / Surround
 Di sc 3	 Shift + 3	 Left / PTY Sel ect	 Left
 7	 7	 I << / <<	 << / Tune-
 8	 8	 I << / <<	 I << / Preset -
 9	 9	 Vol +	 Vol +
 Di sc 2	 Shift + 2	 Ri ght / PTY Sel ect	 Ri ght
 10	 Gui de / EPG / -/-	 >> / >>	 >> / Preset +





 


Originale	Sostituto	Originale	Sostituto
 Play Mode	 Set up / OPT /	 +10	 Gui de / EPG / - / - -
 Repeat	 Green / APP / Repeat	 Di sc 1	 Shift + 1
 Cancel	 Exit / Cancel / Clear	 FM Mode/ Mute	 Menu / Home
 Power	 Power	 L Bal ance	 Shift + Left
 1	 1	 Bal ance R	 Shift + Ri ght
 2	 2	 Tape Di recti on	 Pause / Step / Freeze
 3	 3	 Tape Di spl ay	 Di spl ay / Medi a
 Sl eep	 Sl eep / Ti ner	 SEA Mode	 D. Menu / Top
 4	 4	 S. A. Bass	 Subti tle / EQ
 5	 5	 Pl ay	 Pl ay / Sl ow
 6	 6	 Up/ PTY Sear ch	 Up
 Di sc 3	 Shift + 3	 Surround Mode	 Ej ect / Surround
 7	 7	 I << / <<	 << / Tune-
 8	 8	 Left / PTY Sel ect	 Left
 9	 9	 I << / <<	 I << / Preset-
 Di sc 2	 Shift + 2	 Vol +	 Vol +
 10	 0	 >> / >>	 >> / Preset +

 




 
 
 


Originale	Sostituto	Originale	Sostituto
 Play Mode	 Set up / OPT /	 +10	 Gui de / EPG / - / - -
 Repeat	 Green / APP / Repeat	 Di sc 1	 Shi ft + 1
 Cancel	 Exit / Cancel / Clear	 FM Mode/ Mute	 Menu / Home
 Power	 Power	 L Bal ance	 Shi ft + Left
 1	 1	 Bal ance R	 Shi ft + Ri ght
 2	 2	 Tape Di recti on	 Pause / Step / Freeze
 3	 3	 Tape Di spl ay	 Di spl ay / Medi a
 Sl eep	 Sl eep / Ti ner	 SEA Mode	 D. Menu / Top
 4	 4	 S. A. Bass	 Subti tle / EQ
 5	 5	 Pl ay	 Pl ay / Sl ow
 6	 6	 Up/ PTY Sear ch	 Up
 Di sc 3	 Shi ft + 3	 Sur round Mode	 Ej ect / Sur round
 7	 7	 Left / PTY Sel ect	 Left
 8	 8	 Vol +	 Vol +
 9	 9	 Ri ght / PTY Sel ect	 Ri ght
 Di sc 2	 Shi ft + 2	 Vol -	 Vol -
 10	 0	 St op	 St op / Hol d



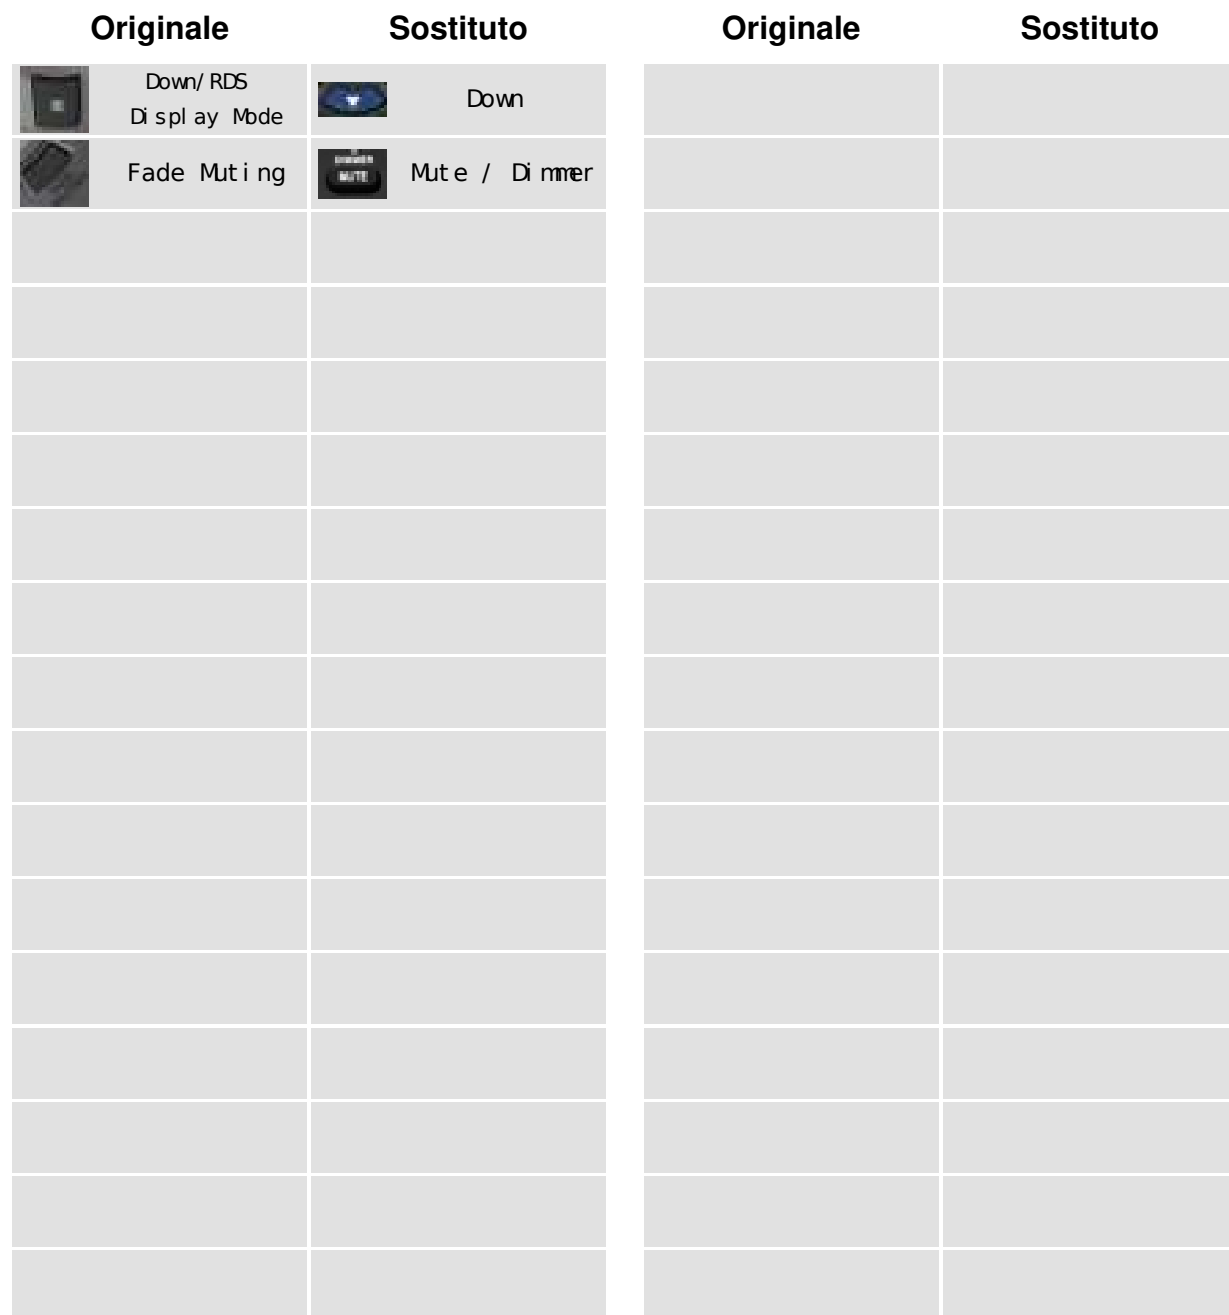



Originale	Sostituto	Originale	Sostituto
 Play Mode	 Set up / OPT /	 +10	 Gui de / EPG / - / - -
 Repeat	 Green / APP / Repeat	 Di sc 1	 Shift + 1
 Cancel	 Exit / Cancel / Clear	 FM Mode/ Mute	 Menu / Home
 Power	 Power	 L Bal ance	 Shift + Left
 1	 1	 Bal ance R	 Shift + Ri ght
 2	 2	 Tape Di recti on	 Pause / Step / Freeze
 3	 3	 Tape Di spl ay	 Di spl ay / Medi a
 Sl eep	 Sl eep / Ti ner	 SEA Mode	 D. Menu / Top
 4	 4	 S. A. Bass	 Subt itle / EQ
 5	 5	 Pl ay	 Pl ay / Sl ow
 6	 6	 Up/ PTY Sear ch	 Up
 Di sc 3	 Shift + 3	 Sur round Mode	 Ej ect / Surround
 7	 7	 Left / PTY Sel ect	 Left
 8	 8	 I << / <<	 << / Tune-
 9	 9	 I << / <<	 I << / Preset-
 Di sc 2	 Shift + 2	 Vol +	 Vol +
 10	 0	 Ri ght / PTY Sel ect	 Ri ght



