 


Digital Piano

USER MANUAL

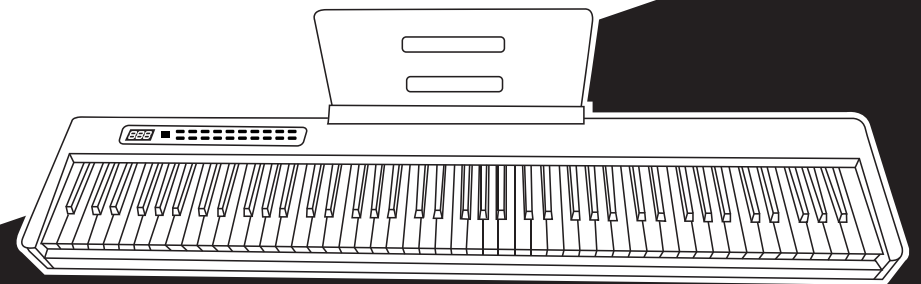

This product is subject to change without prior notice!

Thank you for purchasing this digital piano from our company. This digital piano is elegant and exquisite, is the perfect combination of the latest electronic technology.

◆This instruction manual must be read carefully before using this instrument.

★ Use DREAM audio source

Its core uses the French DREAM top sound source, digital sampling, for your performance to bring realistic listening experience.

★ Standard power keyboard

The 88-key standard power keyboard gives you the real feeling of playing on a grand piano.

 
★ Headphone jack

External headphone jack for easy playing without affecting others.

Special reminder:

This product is an electronic electro-acoustic instrument product, after the power in the speaker (two speakers or one of the speakers, or plug headphones) a little current sound is a normal phenomenon. During use, please stay away from "radio, TV, antenna receiver, router, refrigerator, TV, electrical appliances with motors and other RF electrical interference sources."

Jack operating board

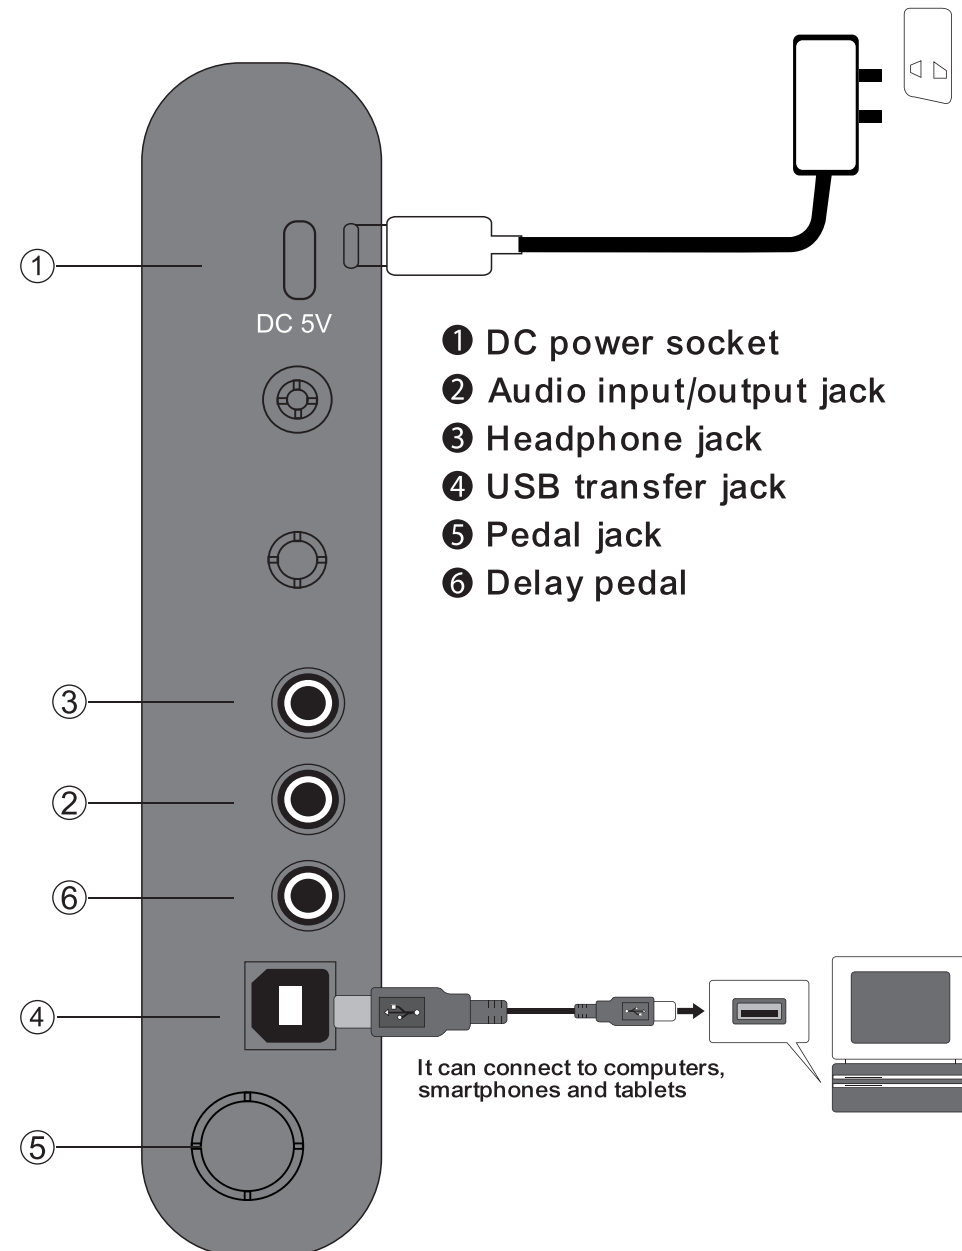



1 Power Cable Connection

1. Connect the power cord according to the diagram when using, one end is inserted into the power socket in the operating board at the bottom of the piano, and the other end is inserted into the 220V household power socket. (figure 1)
2. If you do not use the product for a long time, please unplug the power cord and keep it properly.

2 Audio input/output plug

1. Audio output jack can be connected to large speakers. (figure 2)
2. Audio input jack can connect an external audio source to electric piano for playing. (figure 2)

3 Headphone jack

Connecting the headphones will automatically cut off the output of the keyboard's built-in speakers, making it easy to play without disturbing others. (figure 3)

4 USB transmission interface

 
The USB transmission interface of this digital piano can be connected to the computer. Perform, compose, and store music by learning or playing the keyboard through pre-installed music software on the computer. Edited music and music software built-in accompaniment, which can be connected to the digital piano through the software to play, or played according to the accompaniment music. (figure 4)

5 Pedal connection

Plug the pedal wire end plug into the circular socket at the bottom of the piano, and you can connect the three pedal sound effects! (figure 5)

6 Single pedal connection

Insert a single pedal wire plug into the back of the instrument to delay the pedal jack, playing the keys will produce a delay effect. (Figure 6)

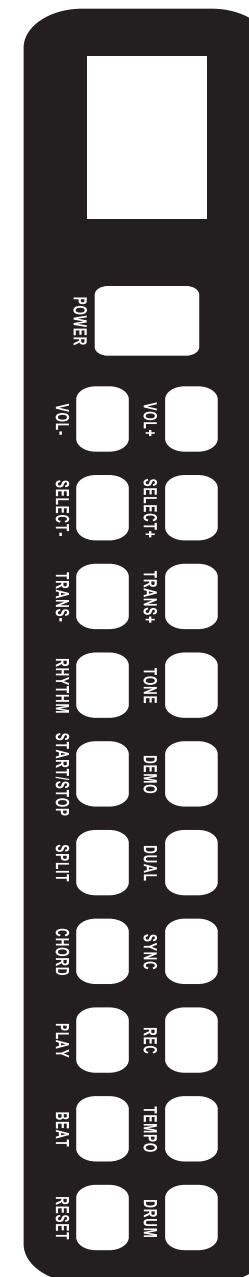

- **Keyboard:** 88 keys standard keys
- **Sound:** 380 sounds (001-380)
- **Rhythm:** 128 rhythms (001-128)
- **Demonstration Songs:** 88 (001-88)
- **Output function:** three digit display.
- **Timbre control:** Double timbre. Double keyboard.
Metronome. Keyboard drums. Shift.
- **Chord Control:** Sync. Single finger.
Polyfingered chords.
- **Recording control:** powerful program recording
playback function.
- **Other functions:** Built-in power supply, automatic
shutdown function.
- **Foot control:** can achieve delay tone, soft tone ,
weak tone function.
- **Other interfaces:** USB interface,
audio input/output interface.
Power port. The headphone jack. Pedal interface.

1 Piano performance

1. Press the "Power" switch to the open position, "Digital display 001" lights up, you can enter the performance state.
 2. Play music on the piano keyboard.
 3. Turn off the power when not in use.
- The processor chip of this product is complex, similar to computer system, sometimes it cannot respond, please turn off the power switch and then open it to work normally.

2 Volume

Press "Volume +" or "Volume -" to increase or decrease the piano volume, please adjust the volume to a satisfactory position.

3 Instrument timbre selection

1. Press the "Tone" button to enter the tone mode.
2. Press "Select +" or "Select -" to select any timbre, and the corresponding timbre number will be displayed digitally.
3. Find the timbre you need in the appendix timbre list. A total of 380 tones.

NOTE! _____

- Whenever you turn on the digital piano, the initial preset is "piano" tone.

4 Rhythm selection

- 1, press the "Rhythm" button to enter the rhythm mode.
2. Press "Select +" or "Select -" to select any rhythm, and the corresponding rhythm number is displayed.
3. Press the rhythm "Start/Stop" button to start playing the selected rhythm.
To stop the rhythm, press Start/Stop again.
4. Find the rhythm you need in the appendix rhythm list. There are 128 different rhythms.



 
5 Beat speed control

1. Press the Speed button and then "Select +" or "Select -" to adjust the speed.
2. Speed control options (20-280). After power-on, the default value is in paragraph 120.
3. Press and hold "Select +" to continuously increase the speed, and press and hold "Select -" to continuously reduce the speed.

6 Chords accompaniment

1. Select the rhythm you want to play, specifically refer to the fourth point "rhythm selection" operation.
2. Press the " Chord " button to enter the chord state.
 - The chords with multiple single fingers are used. If the chords with multiple fingers are played, the piano responds to the chords with multiple fingers. Where the playing method does not conform to the multi-fingered chord, the response is identified by the single-fingered chord.
3. Playing chords can be played on the accompaniment keyboard (1-34 keys from left) according to different fingerings.
4. Press the " Chord " button again to close the chord state.

Automatic accompaniment keyboard

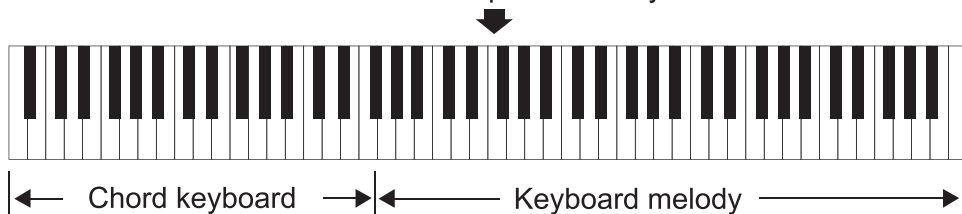

7 Synchronous start

Before starting, first choose the rhythm to use, set the speed value and select the chord accompaniment.

1. In the rhythm state, press the "Sync" button to make it enter the synchronous startup standby state.
2. Play any key, the accompaniment will automatically start playing.
3. To cancel the synchronization state, press the "Start/Stop" button.



8 Shift function

Press "Trans+" or "Trans -" to select different shift (-12 — 12).

9 Metronome function

1. Press the " Beat " button, the metronome function starts, and the number of current beats can be displayed digitally to follow the sound of the beat.
2. Every time you press the Metronome button, the beat will change. There are four beat variations from $\frac{1}{4}$ - $\frac{2}{4}$ - $\frac{3}{4}$ - $\frac{4}{4}$ - stop.

10 Built-in demo

1. Press the " Demo " button to display the number of the current demonstration song and start playing the demonstration song. Press this key again to stop.
2. To enter the demonstration song mode, you can also select different demonstration songs by "Select +" and "Select -".
3. Find the song you need in the appendix song list.

NOTE!

- The product's built-in music library contains 88 songs. The built-in music can be played and enjoyed, or the melody can be followed on the keyboard with the learning function.



 
11 Recording function

1. Keyboard note recording: Press the "Rec" button to enter recording mode and play the keys to enter note recording. Press the Record button again to stop recording.
- Keyboard note recording mode can change the "Tone" to record, can record 5000 notes.
2. Playback: Press the "Play" button to play the recorded notes.

12 Dual keyboard

1. First enter the tone mode and select a musical instrument as the main tone.
2. Press the "Split" button to enter the split tone selection mode.
3. Use the "Select +" button or "Select -" to select another instrument as the split tone.
4. Play notes on the keyboard. At this time, the left and right sides of the keyboard emit corresponding musical instrument sounds.
5. Press the "Split" button again to cancel the keyboard split and return to the normal keyboard state.
- Using the dual keyboard function, you can assign two different timbre (main and split) to each end of the keyboard, so you can play one timbre with your left hand and the other with your right hand for an ensemble effect.

Double keyboard

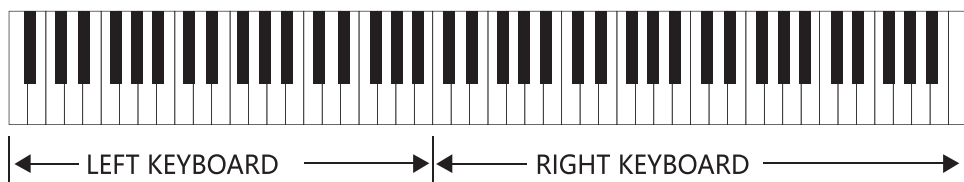

13 Dual tone

1. First enter the tone mode and select a musical instrument as the main tone.
2. Press the "Dual" button to enter the second tone selection mode.
3. Use the "Select +" button or "Select -" to select another instrument as the second tone.
4. Play notes on the keyboard, at this time playing the keyboard can simultaneously emit two corresponding resonant timbre.
5. Press the "Dual" button again to stop the function and return to the normal tone state.
- The use of double tone function can mix two different tone colors together to make a common sound, can be mixed arbitrarily, to create a new tone of musical instrument resonance.

14 Keyboard drums

Press the "Drum" button to turn 88 keys into 88 drums.
Press this key again to exit this function.

15 Reset function

Press "Reset" to restore the function to its initial state.

16 Bluetooth connection

1. Audio Bluetooth: Open the Bluetooth function of the mobile phone, pair the corresponding Bluetooth name, enter the password "8888" Bluetooth connection successfully, you can play music on the piano.
2. Data Bluetooth: Open the mobile phone blue function, pair the corresponding Bluetooth name, and use the music APP of the mobile phone and other devices after the Bluetooth connection is successful. Practice songs on piano games.

17 Automatic shutdown function

No piano, no demonstration songs. Do not play Bluetooth music can achieve 30 minutes of automatic shutdown, you must press the power button to turn on.



TONE LIST:

Number	Instrument	GUITAR	
PIANO		025	GUITAR NYLON 1
001	GRAND PIANO 1	026	GUITAR STEEL 1
002	BRIGHT PIANO 1	027	GUITAR JAZZ 1
003	PIANO ELEC	028	GUITAR CLEAN 1
004	HONKY-TONK	029	GUITAR MUTED 1
005	E PIANO1	030	GUITAR OVRDRV
006	E PIANO2	031	GUITAR DISTRT 1
007	GRAND HARPSICHORD	032	GUITAR HRMNX
008	CLAVI CHORD 1	BASS	
		033	ACOUSTIC BASS 1
GLOCK		034	FINGER BASS 1
009	CELESTA	035	ELECT BASS 1
010	GLOCKENSPIEL 1	036	FRETLS BASS
011	MUSIC BOX 1	037	SLAP BASS 1
012	VIBRAPHONE 1	038	SLAP BASS 2
013	MARIMBA 1	039	SYN BASS 1
014	XYLOPHONE 1	040	SYN BASS 2
015	TUBULR BELLS 1	STRING	
016	DULCIMER 1	041	VIOLIN 1
		042	VIOLA 1
ORGAN		043	CELLO 1
017	HAND ORGAN 1	044	CONTRABASS 1
018	PERCHY ORGAN 1	045	STR TREM 1
019	ROCK ORGAN	046	STR PIZZ
020	CHURCH ORGAN 1	047	HARP 1
021	REED ORGAN 1	048	TIMPANI 1
022	ACCORDN 1	CONCERT	
023	HARMONICA 1	049	STRINGS 1
024	TANGO ACCORDN 1	050	STRINGS 2



051	STR SYN 1	078	SHAKHACHI
052	STR SYN 2	079	WHISTLE 1
053	CHOIR AAHS 1	080	OCARINA
054	VOICE OOHS 1	SYNTH PIPE	
055	VOICE SYN	081	SQR WAVE
056	ORCH HIT 1	082	SAW TOOTH
BRASS		083	CALLIOPE
057	TRUMPT 1	084	CHIFF
058	TROMBONE 1	085	CHARANG
059	TUBA 1	086	VOICE
060	MUTE TPT 1	087	FIFTHS
061	FR HORN 1	088	BASS LEAD
062	BRASS SECT 1	SYNTH VOICE	
063	BRASS SYN 1	089	NEW AGE
064	BRASS SYN 2	090	WARM PAD
PIPE		091	POLY SYNTH
065	SAX SOPRANO	092	CHOIR PAD 1
066	SAX ALTO 1	093	BOW GLASS 1
067	SAX TENOR 1	094	METAL PAD 1
068	SAX BTONE 1	095	HALO PAD 1
069	OBOE 1	096	SWEEP
070	ENG HORN 1	SYNTH EFFECT	
071	BASSON 1	097	RAIN FX
072	CLARINET 1	098	SNDTRK FX
WOODPIPE		099	CRYSTAL FX
073	PICCOLO 1	100	ATMOSPH FX
074	FLUTE 1	101	BRIGHT FX
075	RECORDER 1	102	GOBLIN FX
076	PAN FLUTE	103	ECHO FX
077	BOTTLE BLOWN	104	SCI-FI FX

FOLK SOUND		131	GRAND PIANO4
105	SITAR 1	132	GRAND PIANO /W 1
106	BANJO 1	133	GRAND PIANO /W 2
107	SHAMISEN 1	134	GRAND PIANO /W 3
108	KOTO 1	135	BRIGHTNESS PIANO 1
109	KALIMBA	136	BRIGHTNESS PIANO 2
110	BAGPIPE	137	BRIGHTNESS PIANO 3
111	FIDDLE	138	GRAND PIANO DARK 1
112	SHANAI	139	GRAND PIANO DARK 2
PERCUSSION		140	VELOCITY CROSS PIANO 1
113	TINKLE BELL	141	VELOCITY CROSS PIANO 2
114	AGOGO	142	SOFT GRAND PIANO 1
115	STEEL DRM	143	SOFT GRAND PIANO 2
116	WOODBK	144	SOFT GRAND PIANO 3
117	TAIKO DRM	145	STEREO BRIGHT PIANO
118	MLDY TOM	146	BRIGHT PIANO 2
119	SYNTH DRM	147	BRIGHT PIANO 3
120	REVRS CYM	148	BRIGHT PIANO 4
EFFECT		149	BRIGHT PIANO 5
121	GTR NOISE	150	BRIGHT PIANO /W 1
122	BREATH 1	151	BRIGHT PIANO /W 2
123	SEASHORE	152	SOFT BRIGHT PIANO 1
124	BIRD TWEET 1	153	SOFT BRIGHT PIANO 2
125	TELEPHONE	154	DEEP BRIGHT PIANO
126	HELICOPTER	155	VELOCITY CROSS BRIGHT PIANO
127	APPLAUSE	156	DETUNED E.PIANO 1
128	GUNSHOT 1	157	DETUNED E.PIANO 2
Other timbre		158	DETUNED E.PIANO 3
129	GRAND PIANO2	159	BRIGHT E.PIANO 1
130	GRAND PIANO3	160	BRIGHT E.PIANO 2

161	BRIGHT E.PIANO 3	191	SOFT E.PIANO 4
162	BRIGHT E.PIANO 4	192	HARD E.PIANO 1
163	E.PIANO /W 1	193	HARD E.PIANO 2
164	E.PIANO /W 2	194	SHORT E.PIANO 1
165	E.PIANO /W 3	195	SHORT E.PIANO 2
166	E.PIANO /W 4	196	BRIGHTNESS E.P 1
167	DARK E.PIANO 1	197	BRIGHTNESS E.P 2
168	DARK E.PIANO 2	198	HARPSICHORD 1
169	DARK E.PIANO 3	199	HARPSICHORD 2
170	DARK E.PIANO 4	200	SOFT HARPSICHORD 1
171	SOFT HONKY-TONK 1	201	SOFT HARPSICHORD 2
172	SOFT HONKY-TONK 2	202	BRIGHT HARPSICHORD 1
173	VELOCITY CROSS HONKY-TONK	203	BRIGHT HARPSICHORD 2
174	DARK HONKY-TONK 1	204	DARK HARPSICHORD 1
175	DARK HONKY-TONK 2	205	DARK HARPSICHORD 2
176	HONKY-TONK /W 1	206	HARD HARPSICHORD 1
177	HONKY-TONK /W 2	207	HARD HARPSICHORD 2
178	HONKY-TONK /W 3	208	CLAVI CHORD 2
179	HONKY-TONK /W 4	209	CLAVI CHORD 3
180	SHORT HONKY-TONK 1	210	CLAVI /W
181	SHORT HONKY-TONK 2	211	BRIGHT CLAVI
182	E PIANO 1/W	212	DARK CLAVI
183	E PIANO 2/W	213	PERCHY CLAVI
184	E PIANO 3/W	214	BRIGHT CELESTA
185	E PIANO 4/W	215	SHORT CELESTA
186	E PIANO 5/W	216	PERCHY CELESTA
187	E PIANO 6/W	217	DUET CELESTA
188	SOFT E.PIANO 1	218	CELESTA HARMONIC
189	SOFT E.PIANO 2	219	GLOCKENSPIEL 2
190	SOFT E.PIANO 3	220	GLOCKENSPIEL 3

221	GLOCKENSPIEL 4	251	SLOW XYLOPHONE
222	BRIGHT GLOCKENSPIEL	252	TUBULR BELLS 2
223	DARK GLOCKENSPIEL	253	TUBULR BELLS 3
224	GLOCKENSPIEL /W 1	254	TUBULR BELLS 4
225	GLOCKENSPIEL /W 2	255	SYN TUBULR BELLS
226	MUSIC BOX 2	256	TUBULR BELLS DARK
227	MUSIC BOX 3	257	DULCIMER 2
228	MUSIC BOX 4	258	DULCIMER 3
229	TOY MUSIC BOX	259	SANTUR
230	BRIGHT MUSIC BOX	260	HAND ORGAN 2
231	DARK MUSIC BOX	261	HAND ORGAN 3
232	VIBRAPHONE 2	262	SOFT HAND ORGAN
233	VIBRAPHONE 3	263	BRIGHT SOFT HAMND ORGAN
234	SYN VIBRAPHONE	264	HAMND ORGAN DETUNED
235	HARD VIBRAPHONE	265	PERCHY ORGAN 2
236	VIBRAPHONE /W 1	266	PERCHY ORGAN 3
237	VIBRAPHONE /W 2	267	BRIGHT PERCHY ORGAN
238	VIBRAPHONE SOFT	268	DISTR T PERCHY ORGAN
239	MARIMBA 2	269	ROTART ORGAN
240	MARIMBA /W	270	SLOW ROTART ORGAN
241	DARK MARIMBA	271	1960 ROCK ORGAN
242	BRIGHT MARIMBA	272	1980 ROCK ORGAN
243	DUTED MARIMBA	273	BRIGHT ROCK ORGAN
244	DARK MARIMBA	274	DARK ROCK ORGAN
245	XYLOPHONE 2	275	SOFT ROCK ORGAN
246	XYLOPHONE 3	276	CHURCH ORGAN 2
247	VELOCITY CROSS XYLOPHONE	277	CHURCH ORGAN 3
248	DISTR T XYLOPHONE	278	CHURCH ORGAN 4
249	BRIGHT XYLOPHONE	279	CHURCH ORGAN 5
250	FAST XYLOPHONE	280	CHURCH ORGAN 6

281	CHURCH ORGAN /W 1	311	ROCK ACCORDN
282	CHURCH ORGAN /W 2	312	SWEET ACCORDN
283	BIRGHT CHURCH ORGAN 1	313	DARK ACCORDN
284	BIRGHT CHURCH ORGAN 2	314	FAST ACCORDN
285	DARK CHURCH ORGAN 1	315	SLOW ACCORDN
286	DARK CHURCH ORGAN 2	316	HARMONICA 2
287	SOUL CHURCH ORGAN	317	HARMONICA 3
288	CHURCH ORGAN HARMONIC	318	HARMONICA 4
289	CHURCH ORGAN SLOW	319	HARMONICA 5
290	CHURCH ORGAN FAST	320	SWEET HARMONICA
291	SOFT CHURCH ORGAN	321	DISTR T HARMONICA
292	REED ORGAN 2	322	SLOW HARMONICA
293	REED ORGAN 3	323	FAST HARMONICA
294	REED ORGAN 4	324	BRIGHT HARMONICA
295	REED ORGAN 5	325	DARK HARMONICA
296	BRIGHT REED ORGAN	326	SOFT HARMONICA
297	DARK REED ORGAN	327	HARMONICA /W 1
298	REED ORGAN /W	328	HARMONICA /W 2
299	FAST REED ORGAN	329	HARMONICA MUTED
300	SLOW REED ORGAN	330	TANGO ACCORDN 2
301	SOFT REED ORGAN	331	TANGO ACCORDN 3
302	HARD REED ORGAN	332	1960 TANGO ACCORDN
303	JAZZ REED ORGAN	333	1980 TANGO ACCORDN
304	ACCORDN 2	334	BRIGHT TANGO ACCORDN
305	ACCORDN 3	335	DARK TANGO ACCORDN
306	ACCORDN 4	336	SOFT TANGO ACCORDN
307	ACCORDN 5	337	HARD TANGO ACCORDN
308	DISTR T ACCORDN	338	TANGO ACCORDN /W 1
309	BRIGHT ACCORDN	339	TANGO ACCORDN /W 2
310	ACCORDN HARMONIC	340	SLOW TANGO ACCORDN

341	FAST TANGO ACCORDN	371	FAST GUITAR STEEL
342	GUITAR NYLON 2	372	SLOW GUITAR STEEL
343	GUITAR NYLON 3	373	VELOCITY GUITAR STEEL
344	GUITAR NYLON 4	374	GUITAR STEEL REALSE
345	GUITAR NYLON 5	375	GUITAR STEEL /W 1
346	GUITAR NYLON 6	376	GUITAR STEEL /W 2
347	GUITAR NYLON 7	377	GUITAR JAZZ 2
348	GUITAR NYLON RELEASE	378	GUITAR JAZZ 3
349	VELOCITY CROSS RUITAR	379	GUITAR JAZZ 4
350	DETUNED GUITAR NYLON	380	GUITAR JAZZ 5
351	BIRGHT GUITAR NYLON		
352	DARK GUITAR NYLON		
353	GUITAR NYLON HARMONIC 1		
354	GUITAR NYLON HARMONIC 2		
355	GUITAR NYLON /W 1		
356	GUITAR NYLON /W 2		
357	GUITAR NYLON FAST		
358	GUITAR NYLON SLOW		
359	HARD GUITAR NYLON		
360	SOFT GUITAR NYLON		
361	GUITAR STEEL 2		
362	GUITAR STEEL 3		
363	GUITAR STEEL 4		
364	VELOCITY CROSS GUITAR STEEL		
365	DARK GUITAR STEEL		
366	BRIGHT GUITAR STEEL		
367	GUITAR STEEL HARMONIC 1		
368	GUITAR STEEL HARMONIC 2		
369	HARD GUITAR STEEL		
370	SOFT GUITAR STEEL		

RHYTHM LIST:

Number	Instrument	026	Bossa Nova 1A
8 BEAT		027	Guitar BossaA
001	8 Beat 1A	028	Pop BossaA
002	8 Beat 2A	029	TangoA
003	8 Beat 3A	030	Cha ChaA
004	8 Beat 4A	031	RhumbaA
005	8 Beat HeatA	032	TEX TEXA
006	8 Beat Pop 1A	COUNTRY	
007	8 Beat Pop 2A	033	CountryA
BALLAD		034	Country RockA
008	Ballad 1A	035	Country ShuffleA
009	Ballad 2A	036	Country SwingA
010	Guitar Ballada	037	Country Ballada
011	Organ Ballada	038	Country WaltzA
012	Bluse Ballada	ROCK R&B	
013	Epic Ballada	039	50's RockA
014	Rock Ballada	040	Heavy MetalA
015	Slow Ballada	041	Rock 1A
016	Pop Ballad	042	Rock 2A
017	Electro Pop Ballada	043	Soft RockA
018	Polk Ballada	044	Slow RockA
16 BEAT		045	Hard RockA
019	16 Beat 1A	046	Rock & Roll 1A
020	16 Beat 2A	047	Rock & Roll 2A
021	16 Beat 3A	RHYTHM&BLUES	
022	16 Beat 4A	048	Chicago BluesA
023	16 Beat FunkA	049	Fast GospelA
024	16 Beat Pop A	050	Groove Soula
025	16 Beat Ballada	051	RapA
LATIN		052	GospelSlA

053	BluesA	080	Club DanceA
054	Slow BluesA	JAZZ&SWING	
055	FoxtrotA	081	BoogieA
Disco		082	Funky PopA
056	Disco TropicA	083	Jazz RockA
057	Disco HandsA	084	Swing 1A
058	Two StepA	085	DixielandA
059	Polk PopA	086	Jazz SambaA
060	Waltz 1A	TRADITIONAL	
061	Waltz Pop 1A	087	MarchA
062	Waltz Pop 2A	088	US. MarchA
WORLD MUSIC		089	Samba A
063	RaiA	090	PolkaA
064	Twist 1A	091	Polka OberA
065	Twist 2A	092	TarantellaA
066	Miami PopA	093	Slow WaltzA
067	MotownA	094	Ober WaltzA
068	ReggaeA	PINIST	
069	Swing ReggaeA	095	Piano BalladA
070	MamboA	096	Waltz 2A
071	BeguineA	097	Guitar WaltzA
072	MusetteA	098	2/4 Piano 1A
DANCE		099	3/4 Piano 1A
073	HouseA	100	4/4 Piano 1A
074	Slow FoxA	8 BEAT	
075	Vienna WaltzA	101	8 Beat 1B
076	SalsaA	102	8 Beat 2B
077	DiscoA	103	8 Beat 3B
078	Hip Hop PopA	104	8 Beat 4B
079	Analog PopA	105	8 Beat HeatB

DEMO LIST:

106	8 Beat Pop 1B
107	8 Beat Pop 2B
BALLAD	
108	Ballad 1B
109	Ballad 2B
110	Guitar BalladB
111	Organ BalladB
112	Bluse BalladB
113	Epic BalladB
114	Rock BalladB
115	Slow BalladB
116	Pop BalladB
117	Electro Pop BalladB
118	Polk BalladB
16 BEAT	
119	16 Beat 1B
120	16 Beat 2B
121	16 Beat 3B
122	16 Beat 4B
123	16 Beat FunkB
124	16 Beat Pop B
125	16 Beat BalladB
LATIN	
126	Bossa Nova 1B
127	Guitar BossaB
128	Pop BossaB

Number	SongName
001	MinutWlZ
002	DJ Dance
003	Fountian
004	SpanGirl
005	SonataPn
006	SuperSng
007	LittlBee
008	HorseRac
009	Nocturne
010	TheSpain
011	BusyTran
012	Mexico
013	MozartPn
014	Minuet
015	Nifuma
016	Disco
017	FolkSong
018	Girl Sea
019	LittStar
020	KindeGtn
021	Wahaha
022	Duck&Cik
023	Humorous
024	Joy Song
025	GoingHom
026	Dove
027	Auldlang
028	Moonligh
029	HapyBirh

030	PraiseSng	060	DoReMi
031	Dolly	061	We Happy
032	Market	062	LittlBee
033	Family	063	Russia
034	A cradle	064	Plaster
035	At Home	065	Foison
036	Seasons	066	JingleBe
037	YearsAgo	067	PaperBoy
038	Pigeons	068	Swallow
039	InnerVic	069	New Year
040	Violin	070	Edelweis
041	Swan	071	MoonRivr
042	Musettes	072	Beyer 10
043	GypsyRnd	073	Beyer 20
044	Serenade	074	Beyer 30
045	Polka	075	Beyer 40
046	SoilPull	076	Beyer 50
047	Trout	077	Beyer 60
048	Send-off	078	Beyer 70
049	March	079	Beyer 71
050	ForElise	080	Beyer 72
051	SwaniRiv	081	Beyer 75
052	France	082	Beyer 76
053	Danube	083	Beyer 77
054	Hungary	084	Beyer 78
055	Spaceman	085	Beyer 79
056	Patriot	086	Beyer 80
057	Cuckoo	087	Beyer 90
058	SingKite	088	Beyer 98
059	TongChil		

Do a good job of the product maintenance and protection work, to prolong the service life of the product, reduce the fault has a very important role.

1 Avoid heat, moisture or direct sunlight

Do not overexpose the product to direct sunlight, or place it near air conditioning, or in extremely hot places.

2 Do not use near TV or radio

This product may cause video or audio interference to TV and radio reception. If this happens, the product should be removed from the TV or radio. Do a good job of the product maintenance and protection work, to prolong the service life of the product, reduce the fault has a very important role.

3 Do not use paint, thinner or similar chemicals for cleaning

Clean the product with a soft cloth moistened with a weak aqueous solution and a neutral detergent. Soak the cloth in the solution and wring until it is nearly dry.

4 Do not shake, avoid collision

The product should be carefully handled when moving, and violent vibration and collision are strictly prohibited to avoid damage to the shell or the internal electronic components.



One finger chord table

YAMAHA One finger chord table example

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				



Multifingered chord table

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C#/(Db)								
D								
(D#)/Eb								
E								
F								
F#/(Gb)								
G								
(Gb)/A								
A								
(A#)/Bb								
B								

Multifingered chord table

Chord Type Root	aug	sus4	7sus4	m add9	mM7	7-5	add9
C							
C [♯] /(D [♯])							
D							
(D [♯])/E [♯]							
E							
F							
F [♯] /(G [♯])							
G							
(G [♯])/A [♯]							
A							
(A [♯])/B [♯]							
B							

MIDI Message

Function		Midi Out	Midi In	Remarks
Basic Channel	Default	1	1 ~ 16	
	Changed	1 ~ 16	1 ~ 16	
Mode		Mode3	Mode3	
Note Number		21 ~ 109	21 ~ 109	
Velocity	Note On	V = 1 ~ 127	V = 1 ~ 127	
	Note Off	8nH V = 64	9nH V = 0, 8nH V = XX	XX: 無關
Pitch Bend		X	O	
Control Change	1	X	O	Modulation
	7	X	O	Volume
	10	X	O	Pan
	1	X	O	Expression
	64	O	O	Sustain
	67	O	O	Soft Pedal
	121	X	O	Reset All Controller
	123	X	O	All Sound Off
Program Change		0 ~ 127	0 ~ 127	
Aux Messages	Local On/Off	X	X	
	All notes Off	X	O	
	Active Sense	X	O	
	Reset	X	X	

**Power**

This product can be powered by standard indoor wall sockets, please use only certified power adapters that meet the standard requirements. When not in use temporarily, please turn off the power. When not in use for a long time, please unplug the power cable and keep it properly.

**Mark**

In order to ensure your safe and correct use of the product, to prevent harm to users and others and financial damage, this manual and the product are marked with a series of safety marks. The symbols and their meanings are as follows:

**Warning**

This mark indicates that there is a potential danger of death or serious injury if the mark is ignored and the product is incorrectly operated.

**Attention**

This mark indicates that there is a potential danger of personal injury or other financial damage if the mark is ignored and the product is operated incorrectly.

Sign sample

This triangle flag (\triangle) represents what users should be aware of. (The left example is careful electric shock)



Circular signs (\bigcirc) with slash lines indicate prohibited items. A graphic representation in or next to a sign indicating specific prohibited content. (For the left example, disassembly is prohibited)



Black dots (\bullet) indicate things that must be observed. The icon in this sign represents the content of a specific, subject matter to be complied with. (The left example is that the power plug must be pulled out of the socket)

**Warning****Smoke, smell, overheating**

When this product smoke, smell or overheat, use may lead to fire and electric shock hazard. If the above situation occurs, perform the following operations immediately.

1. Turn off the power.
2. Remove the plug from the power socket.
3. Contact your distributor

The power cord

- Improper use of power cables may cause fire and electric shock. The following precautions must be observed.
 - The special power cord specified for this product must be used.
 - Use an AC power supply whose output voltage is within the rated of the household voltage.
 - Do not overload power sockets and power extension cords.
- Improper handling of power cables, resulting in damage or breakage, may cause fire and electric shock. The following precautions must be observed.
 - Do not place heavy objects or heat the power cord.
 - Do not attempt to modify or excessively bend the power cord.
 - Do not twist or pull the power cord.
 - If the power cable or plug is damaged, replace it with a power cable of the same specification and type.
- Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock.

- Please use the power cord where water will not splash. Water is a hazard of fire and electric shock.

- Do not place vases or any other containers containing water on this product. Water is a hazard of fire and electric shock.

- Do not allow minors to plug or touch the power cord or connecting plate. Minors have no electrical safety knowledge and may cause electric shock.

**Attention**

- Improper use of power cables may cause fire and electric shock. The following precautions must be observed.
 - Do not place the power cord near the furnace or other heat source.
 - Do not pull the power cord when removing it from the power socket. Must hold the plug body.
 - The power cord plug must be inserted into the power socket to the end.
 - Make sure the power supply is switched off before connecting or cutting off the power cord.
 - Unplug the power cord from a wall outlet in the event of a thunderstorm or before traveling or other extended absences.
 - At least once a year, unplug the power cord from the wall outlet and clean the dust that accumulates around the plug.

Do not burn this product

Do not expose the product to fire. Otherwise, wood products will burn and their internal electronic components will explode, resulting in fire and injury risk.

**Plastic bags**

Do not allow anyone to put this product packaging plastic bag on the head or into the mouth, otherwise there is a risk of suffocation, special attention should be paid to families with young children.

**Keep your distance from this product and support**

Climbing on the piano body or its support can cause it to topple or damage, especially for families with young children.

**Put**

Avoid placing the product on uneven surfaces or in any other unstable place. Otherwise, the product will fall, and there is a risk of injury.

**Product movement**

Before removing the product, unplug the power cord plug from the wall outlet and unplug all other cables and connectors. Otherwise, it may lead to wire damage, fire and electric shock risk.

**Clean**

Before cleaning the product, remove the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.

**Interface**

Only specified devices and devices can be connected to the interface of this product. Danger of fire and electric shock when connecting undesignated equipment or devices.

**Water and foreign matter**

Water, other liquids and (metal sheet, etc.) entering the product may cause fire hazard and electric shock.



If the above situation occurs, perform the following operations immediately.

1. Turn off the power.
2. If the power cord is being used for power supply, unplug it from the wall outlet.
3. Contact your dealer.

Dismantlement and transformation

Do not disassemble or modify the product in any way. Otherwise, there is a risk of electric shock, scalding or other personal injury. Delegate all inspections, adjustments and maintenance to your dealer.

**To fall or hit.**

There is danger of fire and electric shock after the product is damaged by falling or strong impact. If the above situation occurs, perform the following operations immediately.



1. Turn off the power.
2. If the power cord is being used for power supply, remove it from the wall outlet.
3. Contact your dealer.

Location choice

Avoid placing the product in the following places. Otherwise there is a risk of fire electric shock.



- A hot or dusty place.
- Kitchen or other smoky area.
- Exposure to direct sunlight, or any other place that will cause high temperature of the product.

Volume

Do not play music at high volume for a long time. Be careful when using headphones. Too high a volume can damage your hearing.

**Weight**

Do not place heavy objects on the product. Otherwise, the top of the product will be too heavy, causing the product to tip over or make the objects on it fall off, which may lead to the risk of injury.

**Proper assembly of bracket**

Improper assembly of the bracket will cause it to tip over, causing the product to fall, which may lead to the risk of injury.



Therefore, assembly must be carried out in accordance with the instructions in the accompanying manual to ensure that the product is properly mounted on its bracket.

Safety warning!

Electrical appliances will be aging after long-term use.

It is recommended to test the products regularly after the one-year warranty period is exceeded.

If there is any abnormal phenomenon, please suspend the use and hand over to professional maintenance personnel to avoid safety accidents!

Please cut off the power after each use!

Attachment list

Name	Number
Power charger	1 PCS
Body	1 PCS
Music stand board	1 PCS
Instructions	1 PCS

Instrument parameters

Keys: 88	Intonation: ≤ 3 the sound
Range: A2 ~ C5	Output power : $\geq 5W \times 2$
Style: Plastic portable piano	Power supply: DC 5V1A 50/60Hz

Troubleshooting

Fault	Possible causes/Solutions
When the power is switched on, a puffing sound is produced	This is a normal phenomenon, please do not worry
When the power is turned on, pressing the keyboard does not make any sound.	Make sure the main volume control is set in the appropriate position. Or check whether there is any other device connected to the earphone output jack, so the built-in speaker system automatically disconnects
Note quality is slightly different from note quality under the same timbre	This is a normal phenomenon, due to the different timbre sampling range and produce different sound quality
When using the duration function, some timbre duration is long, and some timbre duration is short.	This is normal because the duration of the different timbre of the instrument has been set to the maximum length
The volume is too small	Make sure the master volume control is set in the appropriate position
Some MIDI data cannot be transmitted correctly (even when the MIDI cable is properly connected)	This is a normal phenomenon and is related to the initial setting state of the piano
When using mobile phone or mobile phone close to the horn noise phenomenon will occur	Mobile phones can cause interference. To avoid this noise, turn off your mobile phone or use it away from your keyboard
The pitch of the keyboard does not match the position of the keyboard when it is played.	You may turn on the double keyboard or move the function, at this time turn off the double keyboard or move reset to zero; You can also turn off the power switch to restart.
You can't change the tone while playing, and the pitch of the keyboard doesn't match the actual position of the keyboard	You may turn on the double keyboard function, turn off the double keyboard function at this time; You can also turn off the power switch to restart.
Playing demo song sound distortion or discontinuous	The possible reason is that the over-heated circuit self-protection system of the power amplifier is started due to the long time of high-power playback. At this time, it can be recovered by turning down the volume or turning off the power for a period of time
There are two timbre occurring at the same time	The likelihood is you opened double tone function, close double tone function right now can

Note: The equipment has been tested and complies with national safety regulations and EMC and other relevant regulations. Radio communication may cause interference to the equipment, or the equipment may affect radio or TV reception. Users should take one or more of the following measures to correct interference:

- Reposition or replace the receiving antenna.
- Increased direct isolation between device and receiver.
- The receiver connects the device to sockets on different lines.
- Consult dealers or experienced radio/television technicians.

Warning user: Any unreasonable changes or modifications may affect the normal operation of the device.

Records of the warranty

warranty date	Fault and handling methods	Completion date

Product certificate

Product Name: Digital piano

Product Model: _____

Factory Date: _____

Inspector: _____

Warranty card

Dear users:

Thank you for choosing digital piano series products. When you purchase products, please ask the dealer to fill in the date of purchase, product model and stamp the shop seal, and keep this card properly.

Purchase date	
Product model	
Dealer phone	
Dealership chapter	

THE warranty

1. Under normal circumstances, our factory guarantees the products free of charge for one year from the date of purchase.
2. During the warranty period, if there is any damage caused by use, storage, improper or self-disassembly, the material fee shall be charged accordingly.
3. If the warranty period exceeds, the cost shall be charged accordingly.
4. Please contact the dealer directly for repair service.