

# **Quick Installation Guide**

# **DIR-L1900**

High-Performance Mesh Wi-Fi Router



# **PACKAGE CONTENTS**

- DIR-L1900 || High-Performance Mesh Wi-Fi Router
- Power Adapter
- Ethernet Cable
- Ouick Installation Guide
- Ouick Installation Card



## **INSTALLATION**

# OPTION 1

## **D-LINK WI-FI APP SETUP**

1 Download the D-Link Wi-Fi app and launch it.










Tap **Install New Device**. Scan the QR code on the Quick Installation Card. Follow the on-screen instructions to complete the setup. **NOTE:** If you are setting up a second DIR-L1900 for a Mesh Network, see the "**D-Link Wi-Fi Mesh"** section on the back side of this OIG.


>

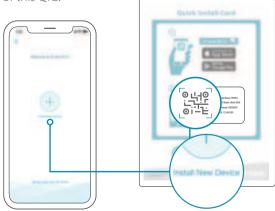


## OPTION 2

## **WEB BROWSER SETUP**

Plug the router into a power source. Make sure that the power button / is on. Wait for the status LED to either flash orange or turn solid white.

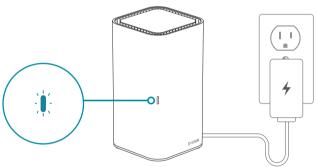

Connect your computer to the Wi-Fi details printed on the Quick Installation Card. Type http://dlinkrouter.local./ into a web browser. You will be asked for your Admin Password. By default this password is "password". Type that in and follow the on-screen instructions to complete the setup.

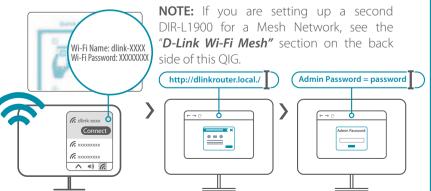



You're all good to go! Once the setup is complete, you can connect your devices using the Wi-Fi name (SSID) and password that you created during the setup. Enjoy the Internet!

# FREQUENTLY ASKED QUESTIONS



### Why can't I access the web-based configuration utility?

Verify that http://dlinkrouter.local./ has been correctly entered into your Web browser. Make sure that you are connected to the correct Wi-Fi Name/SSID and password printed on the Quick Installation Card or that you configured during set up.

#### Why can't I access the Internet?

Ensure that your modem/gateway is powered on. Also ensure that the Ethernet cable is securely connected to both the router and modem. Verify that the status LED is illuminated on your router. If you still cannot access the Internet, power off your modem and router and power them back on, wait until all the LED is lit and try again.

## What if I forgot my Routers's Admin password or want to reset my Router?

1. If you forgot your Admin password or want to reset your router back to the factory default settings, press and hold the reset button on the bottom of the router using a paper clip and release after the status LED turns red.

Note: This process will erase all your settings.

2. Setup your Router using your preferred method.

## **GPL CODE STATEMENT**

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to view the full GPL Code Statement at:

#### https://tsd.dlink.com.tw/GPL

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and

#### Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software. D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LG-PLsource code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

#### Snail Mail:

Attn: GPLSOURCE REQUEST GPLCODE@dlink.com D-Link Systems, Inc. 17595 Mt. Herrmann Street Fountain Valley, CA 92708



# **VOICE ASSISTANTS**



Amazon Alexa Setup for D-Link Wi-Fi https://www.dlink.com/en/alexa



The Google Assistant Setup for D-Link Wi-Fi https://www.dlink.com/en/google-assistant



# **TECHNICAL SUPPORT**

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products.

Canada

1-800-361-5265

http://support.dlink.ca



## **D-LINK WI-FI MESH**

Do you want to expand your network? You easily can pair your High-Performance Mesh Wi-Fi Router (DIR-L1900) with another High-Performance Mesh Wi-Fi Router (DIR-L1900) or with a D-Link Wi-Fi Mesh-enabled range extender like the AC1900 High-Performance Wi-Fi Range Extender (DAP-1950) to create a seamless mesh network that covers every corner of your home.

When pairing a new High-Performance Mesh Wi-Fi Router (DIR-L1900) to an exisiting one, please select "Extender Mode" when asked "How would you like to set up this device?" during the setup process. Note: The first DIR-L1900 you install should be set to "Router Mode".

