

SpecFive Ranger

User Guide

Thank you for ordering your SpecFive Ranger from SpecFive. Here are the instructions to get you connected to your new device and join the mesh.





Button/Switch Configuration:

Power Switch

- Poweron:
 - Toggle oriented away from antennal

Power off:

- Toggle oriented towards antenna

Trackball

- Scrolls through screens
- Note: Press and hold for three seconds while flipping the power switch on to enter DFU mode



Reset Button

- · Single short press with device powered on:
 - Reboots device
- Keyboard:
 - Begin typing to draft a message
 - Press Enter to send a message

Shortcuts:

Shortcut	Function
alt & B	Toggle keyboard backlight on/off.
alt & C	Toggle modifier function. En displayed on screen.
alt & C + M	Disable/Enable notifications.
alt & C + Q	Quit/Cancel (message, canned message, etc.)
alt & C + T	Tab Key (select channel/dm recipient)
alt & C + I	Decrease screen brightness.
alt & C + O	Increase screen brightness.
alt & C + G	Toggle GPS
alt & C + _	Send network ping.



Screen Messages:

· "Fn" Displayed on the screen



GPS is enabled but location has not been found:






· GPS is disabled:



Selector for message recipient activated

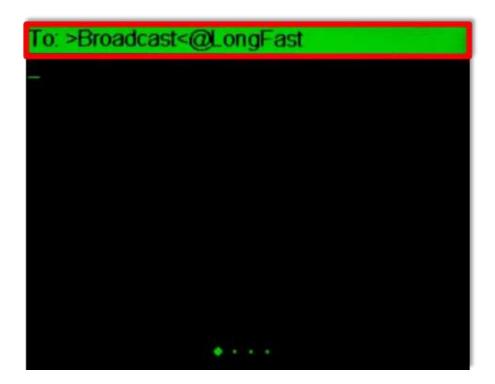



Charging the Device:

 Charging icon should appear in the upper left corner of the screen, shown below, to indicate that the device is powered via usb:



Connecting to the Device via the Meshtastic Mobile App:


 Download the Meshtastic App from the Apple App Store or Google. Play Store




- Ensure your phone has bluetooth enabled.
- 3. Power on the device:
- 4. Connect your new device





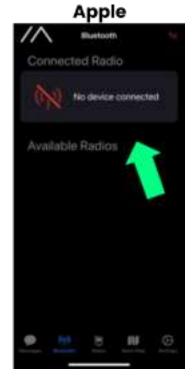



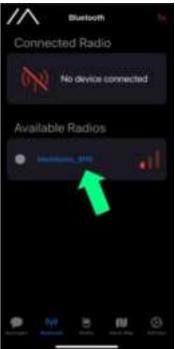

5. Enter the device's pin that is displayed on its screen

You're Good to Go!





Update your device:

- 1. Plug the device into a desktop with power off
- 2. Enter DFU Mode (See Button Configuration section).
- Head to https://flasher.meshtastic.org/.
- 4. Select "T-Deck" under the devices drop-down
- 5. Select your desired firmware and update the device

Other Resources:

- For more information on radio configuration settings, visit https://meshtastic.org/docs/configuration/
- For more information about our products, visit specfive.com