

Stylus Pen C37-R

User Manual

Please carefully use this user manual before using and keep it well for future using.

Compatible with 2018-2024 iPad

iPad Pro 11 inch 3. Gen -2018	A1980/A2031/A1934/A1979
iPad Pro 11 inch 2. Gen -2020	A2238/A2082/A2130/A2231
iPad Pro 11 inch 3. Gen -2021	A2317/A2459/A2301/A2460
iPad Pro 11 inch 4. Gen -2022	A2759/A2453/A2761/A2762
iPad Pro 12 inch 3. Gen -2018	A1976/A2031/A1995/A1991
iPad Pro 12 inch 4. Gen -2020	A2236/A2090/A2232/A2233
iPad Pro 12 inch 5. Gen -2021	A2318/A2454/A2319/A2462
iPad Pro 12 inch 6. Gen -2022	A2484/A2764/A2372/A2765
iPad Air 10.5 inch 3. Gen -2019	A2152/A2153/A2154/A2155
iPad Air 10 inch 4. Gen -2020	A2316/A2322/A2325/A2072
iPad Air 10 inch 5. Gen -2022	A2588/A2592/A2591
iPad Mini 7.9 inch 5. Gen -2019	A2133/A2124/A2126/A2125
iPad Mini 8 inch 6. Gen -2021	A2567/A2568/A2569
iPad 9.7 inch 9. Gen -2018	A1929/A1954
iPad 10.2 inch 7. Gen -2019	A2197/A2200/A2198
iPad 10.2 inch 8. Gen -2020	A2270/A2428/A2429/A2430
iPad 10.2 inch 9. Gen -2021	A2302/A2304/A2303/A2305
iPad 10.9 inch 10. Gen -2022	A2696/A2757/A2777
iPad Air M2 11 inch -2024	A2692/A2693/A2694
iPad Air M2 10 inch -2024	A2698/A2699/A2695
iPad Pro M4 11 inch -2024	A2838/A2837/A3006
iPad Pro M4 13 inch -2024	A2925/A2926/A3007

Not compatible with 2017 and earlier iPads

iPad (1 ~ 5. Gen) -2010~2017	A1219/A1337/A1396/A1395 A1397/A1416/A1430/A1403 A1458/A1459/A1460/A1822 A1823
iPad Mini (1 ~ 4. Gen) -2012~2015	A1432/A1454/A1455/A1489 A1490/A1491/A1599/A1600 A1538/A1550
iPad Air (1 ~ 2. Gen) -2013~2014	A1474/A1475/A1476/A1566 A1567
iPad Pro 9.7 inch -2016	A1673/A1674/A1675/A1701
iPad Pro 10.5 inch -2017	A1709/A1851/A1854/A1652
iPad Pro 12.9 inch (1 ~ 2. Gen) -2015~2017	A1670/A1671/A1821
Other	iPhone, Samsung, Huawei, Microsoft, Surface, Lenovo, Acer, Dell, Xiaomi, other brands

Bluetooth

After linking the Bluetooth
One-click: Open multitasking;
Double-click: Back to home page;
View real-time pencil battery level.

turn on [ipad pen]> bluetooth
Bluetooth name: ipencil

How to add widget to show battery level on ipad?

Screen swipe right from left side>Edit-->Battery>Add widgets

Instructions for use

- The iPad version is no less than 12.2 .
- Open the settings memo-close apple per Graffiti function.
- Turn on settings Bluetooth and turn off the connection of the original apple pen. (after setting above, you can use the product normally.)

*Go to Settings>Apple pencil>Close Only Draw with Apple Pencil

Function

Press the pen switch for 2 seconds, the indicator light will be light on quickly. when you press again, the indicator light will be shut off. The stylus pen standby for 20mins then will be automatically shut off.

Button

Indicator light

Instructions for use

You can change the size of the brush by changing the tilt angle of the pen on the iPad. Please note that not all brush types are tilt-sensitive (e.g. the fountain pen tool). If you have any question during use, please feel free to contact us.
***No pressure sensitivity**

Tilt Sensitivity

No need to worry about wear and tear! (Simply twist the tip for easy removal/installation).

Removable nib for easy replacement. No need to worry about wear and tear! (Simply twist the tip for easy removal/installation).

Palm Rejection

With the palm rejection, you can naturally rest your palm on the iPad when drawing and writing without accidentally operating it.

Charging instruction

- 70 ~100% Green Light
- 20~70% Blue light
- 5~20% Red light (below 5% red light blinking)

Product Specification

Product Name	Stylus Pen(blue tooth style)
Main Functions	Drawing, Writing, Taking Notes, Touchscreen
Materials	Aluminum alloy pen body(POM plastic pen nlp)
Measurement	Φ9.9mm pen body and Φ1.5mm pen nib *168mm
Using Hours	16 hours
Charging Time	15min
Sleeping Protect	20 Mins do not using Pencil will turn off
Product Colors	Multi-colour
Standard Accessories	USB-C to USB-C charging cable
Package	Charging Cable, User Manual

Common Faults & Solutions

Faults	Solutions
Lag, Delay	1. Check that the nib is fitted properly and try again 2. Replace the nib with another one and try again 3. Check that the steel screen protector is not badly damaged or too thick 4. Restart iPad and try again
Cannot write	1. Check that the pen is turned on 2. Check that the pen is compatible with the iPad 3. Check that the app supports the writing function
Won't turn on	4. Check that the iPad is connected to the original pencil. If so, disconnect it 1. Check that the pen is powered off 2. Use the pen in accordance with the user manual

Made in china

2
3
4
5
6
7

Stylus Pen C37-R

Kompatibel mit 2018-2024 iPad

iPad Pro 11 inch 1. Gen.-2018	A1880/A2031/A1934/A1979
iPad Pro 11 inch 2. Gen.-2020	A2234/A2560/A2302/A2331
iPad Pro 11 inch 3. Gen.-2021	A2377/A2459/A2501/A2540/A2560
iPad Pro 11 inch 4. Gen.-2022	A2558/A2435/A2761/A2762
iPad Pro 12 inch 3. Gen.-2018	A1876/A2041/A1958/A1983
iPad Pro 12 inch 4. Gen.-2020	A2294/A2602/A2322/A2331
iPad Pro 12 inch 5. Gen.-2021	A2378/A2461/A2379/A2462
iPad Pro 12 inch 6. Gen.-2022	A2559/A2437/A2763/A2764
iPad Air 10.5 inch 3. Gen.-2019	A2152/A2123/A2153/A2154
iPad Air 10 inch 4. Gen.-2020	A2316/A2322/A2325/A2072
iPad Air 10 inch 5. Gen.-2022	A2588/A2560/A2591
iPad Mini 7.9 inch 5. Gen.-2019	A2133/A2124/A2126/A2125
iPad Mini 8.3 inch 6. Gen.-2021	A2567/A2560/A2569
iPad 9.7 inch 10. Gen.-2018	A1893/A1954
iPad 10.2 inch 7. Gen.-2019	A2197/A2200/A2198
iPad 10.2 inch 8. Gen.-2020	A2270/A2428/A2429/A2430
iPad 10.2 inch 9. Gen.-2021	A2502/A2509/A2503/A2505
iPad 10.9 inch 10. Gen.-2022	A2696/A2757/A2777
iPad Air M2 11 inch.-2024	A2692/A2634/A2604
iPad Air M2 10 inch.-2024	A2698/A2699/A2600
iPad Pro M4 11 inch.-2024	A2638/A2637/A3000
iPad Pro M4 13 inch.-2024	A2625/A2626/A3007

Nicht kompatibel mit 2017 und früheren iPads

iPad (1. - 5. Gen.) 2010-2017	A1129/A1337/A1396/A1393/A1397/A1416/A1430/A1403/A1458/A1459/A1460/A1822/A1823
iPad Mini (1. - 4. Gen.) 2012-2015	A1432/A1454/A1455/A1489/A1490/A1491/A1599/A1600/A1518/A1550
iPad Air (1. - 2. Gen.) 2013-2014	A1474/A1475/A1476/A1566/A1567
iPad Pro 9.7 inch.-2016	A1673/A1674/A1675/A1701/A1709/A1852/A1854/A1652
iPad Pro 12.9 inch (1. - 2. Gen.) 2015-2017	A1676/A1671/A1821
Other	iPhone, Samsung, Huawei, Microsoft, Surface, Lenovo, Acer, Dell, Xiaomi, other brands

Bluetooth
Nach dem Verbinden des Bluetooth
*Ein-Klick: Multitasking öffnen
*Doppel-Klick: Zurück zur Hauptseite
*Batteriestand des iPad-pencil auf dem iPad anzeigen

Benutzerhandbuch
Bitte lesen Sie dieses Benutzerhandbuch vor dem Gebrauch sorgfältig durch und bewahren Sie es für die spätere Verwendung gut auf.

Funktion

2 Sekunden lang auf den Stiftschalter drücken, die Anzeigeleuchte leuchtet schnell auf. Wenn erneut gedrückt wird, erlischt das Licht. iPad Stift hat einen Energiesparmodus, 20 Minuten der Nichtbenutzung automatisch abgeschaltet.

Verwendung
Sie können die Größe des Pinsels ändern, indem Sie den Neigungswinkel des Stifts auf dem iPad ändern. Bitte berücksichtigen Sie dass nicht alle Pinseltypen neigungsempfindlich sind (z. B. der Füllfarbender Werkzeug). Wenn Sie während der Nutzung irgendeine Frage haben, können Sie uns gerne kontaktieren
*Keine Druckempfindlichkeit

Hinweisungsempfindlichkeit

Verwenden Sie das USB-C-Kabel zum Aufladen. Schließen ein Ende an den Stiftanschluss und das andere Ende an einen Computer, einen Adapter oder ein anderes Gerät an.

Gebrauchsanweisung

1. Die iPad-Version ist nicht unter der Version 12.2.
2. Öffnen Sie die Einstellungen memo-close apple per Graffiti-Funktion
3. Bluetooth öffnen und die ursprüngliche Apple Pencil-Verbindung deaktivieren. (nach der Einstellung oben, können Sie das Produkt normal verwenden.)

*Gehen Sie zu Einstellungen> ApplePencil>Nur mitApple Pencil zeichnenschnur

Abnehmbare Feder für einfachen Austausch. Kein Grund zur Sorge über Verschleiß! (Drehen Sie einfach die Spitze, um sie leicht zu entfernen/einzubauen).

2

3

4

5

6

7