

INSTRUCTION MANUAL

[KMT096]

43398188

43398195

43398195\_43398188\_MAN\_Wired Headphones Kids On-Ear\_v1

Artwork Proof Date: 29.04.2024

Number of artboards:1

PAPER:


80gsm

Bright white uncoated paper

PRINT COLOURS:

BLACK

C:0 M:0  
Y:0 K:100

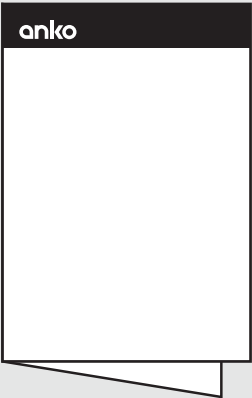

PRINT FINISH:

Back to Back

CHANGE LOG CREST INTERNAL USE ONLY

V:

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.  
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:  
EMAIL: design@crest.com.au

THANK-YOU.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above. from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                          | Contact for Target purchases                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>690 Springvale Road, Mulgrave Vic 3170<br>Customer Service: 1800 124 125 (Australia)<br>or 0800 945 995 (New Zealand)<br>or via Customer Help at kmart.com.au | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>2 Kendall Street, Williams Landing, Vic, 3027<br>Customer Service: 1300 753 567<br>or via Customer Help at target.com.au/help/contact-us |

anko

Over-Ear Wired Kids Headphones

Operating Instructions

- Includes:
- › headphone
- › instruction manual



K: 43-398-188 | T: 69-711-046

MODEL: 43398188

K: 43-398-195 | T: 69-316-340


MODEL: 43398195

WARNING: HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.

ADULT SUPERVISION REQUIRED

Thank you for choosing our Anko headphone/earphone. We hope you enjoy using it.

- Overview:
1. Microphone
2. Call answer and music control button

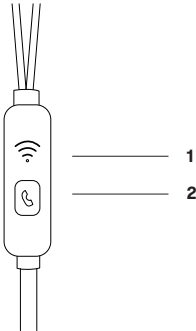

How to use the In-line control functions:

- Answer call with the headphone connected to your device via the 3.5mm headphone socket.
- A. Call Answer
- Answer Call
- Press the call answer/music control button to answer calls on your device.
- Hang Up / End Call
- Hang up during the call, press the call answer/music control button to mute/unmute the microphone, press and hold the button for approx. 1 second to end the phone call.
- Reject Call
- To decline an incoming call, press and hold call answer/music control button for about two seconds

- B. Music Control
- Pause Music
- Press the call answer/music control button once to pause/resume music.
- Next Song
- Press the call answer/music control button twice in quick succession to skip track forward.
- Previous Song
- Press the call answer/music control button 3 times in quick succession to skip track backwards.

- C. Voice Assistant
- Device's voice assistant (Where applicable)
- Press and hold the call answer/music control button for 2 seconds to activate the device's voice assistant (where applicable).

110