 




Original	Recharge	Original	Recharge
 Home/Go	 Menu / Home	 CH+	 CH+ / Page+
 Power	 Power	 Vol-	 Vol-
 TV	 Shift + 1	 Mute	 Mute / Dimmer
 Videos	 Display / Media	 CH-	 CH- / Page-
 Music	 Audio / Lang I/II	 Rec	 Rec / Rec Mode
 Pictures	 Picture / Format	 Stop	 Stop / Hold
 Guide	 Guide / EPG / -/-	 <<	 << / Tune-
 Up	 Up	 Play	 Play / Slow
 Radio	 TV/Radio /	 >>	 >> / Tune+
 Left	 Left	 I<	 I<< / Preset-
 OK	 OK	 Pause	 Pause / Step / Freeze
 Right	 Right	 >I	 >>I / Preset+
 Back/Exit	 Exit / Cancel / Clear	 1	 1
 Down	 Down	 2	 2
 i/Menu	 D.Menu / Top	 3	 3
 Vol+	 Vol+	 4	 4
 Prev Ch	 Fav / Marker / PC	 5	 5





Original	Recharge
 6	 6
 7	 7
 8	 8
 9	 9
 */Text	 Text / Goto
 0	 0
 #/Sub/CC	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge

